

BLACK

wireless mic and stand

Discovery
KIDS™

wireless mic and stand

stage F/X
microphone

To Use Your Microphone:

BATTERY INSTALLATION

- 1- The microphone requires 2 - AAA (LR03, UM4) batteries (not included)
- 2- To remove the battery cover, slide the cover downward and lift the cover off.
- 3- Insert 2 new batteries (AAA size) in accordance with the instructions located in the battery compartment.


Note: When using this wireless microphone, hold the microphone 2 inches (5.08 cm) from your mouth and speak in a normal voice into the top of the microphone.

TO OPERATE

1. Turn wireless microphone trans already been tested and adjusted at the factory (or best results).
2. You can improve the microphone from the holder and weak between 5 and 10 feet (15/24 cm to 30/48 cm) away from the base unit. Your volume will still come out of the speaker on the base unit.
3. For best results, stand 5 to 10 feet (15/24 to 30/48 cm) from the base unit with the antenna facing the base.


IMPORTANT NOTES

- When using the wireless microphone, keep the antenna facing toward the base unit.
- The reception of the microphone may be affected by the environment, e.g., metal structure or the movement of people between the microphone and the base unit. The reception is also affected by the condition of the batteries in the microphone or base unit.
- If the microphone is not used for an extended period, remove the batteries from the unit.
- For best results the manufacturer recommends the use of alkaline batteries.
- To prevent damage, do not expose the set to rain or moisture.
- Modifications not authorized by the manufacturer may void return policy.

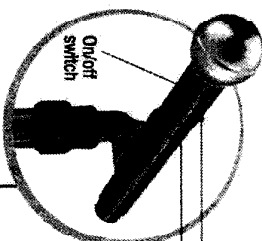

- J - Drum & Cymbal Sounds
- I - Applause

MICROPHONE

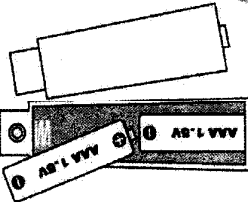

BATTERY REPLACEMENT

[illegible]

**No
cords
attached!**

E - Large Microphone Pole

Microphone
A - Microphone Holder

C - Pole Cap and Holder

B-Small
Microphone Pole

1 - Applause


1. Drum & Cymbal Sounds

F - Speaker

E - Tone Control **H - Base Unit**

To assemble and operate your Stage 111a please follow the instructions below:

1. The Stage FX stand uses 4-AA batteries (included).
 2. The Microphone requires 2-AAA batteries (not included).
 3. The Stage FX requires simple assembly. There are no tools necessary.
- Please see the diagram to show you how to assemble your stage FX.
- A- Insert Large Microphone Pole (3) into the base unit (B).
 - B- Put the pole holder (D) onto the top of the Large Microphone Pole (3) and insert the Small Microphone Pole (9) into the Pole Holder (D). You can adjust the height of the pole by sliding it up or down.
 - C- Put the Pole Cap and Holder (2) onto the Small Microphone Pole (9) and attach the Microphone Holder (4).
 - D- There are 2 sounds. To use these press either (1) or (4) buttons or the two buttons on the microphone.
 - E- Use the On/Off volume control (5) to adjust the sound level and to turn the stage mikes on or off.
 - F- Use the Tone control (6) to change the tone.
6. After you are done using your Stage FX please turn it off.

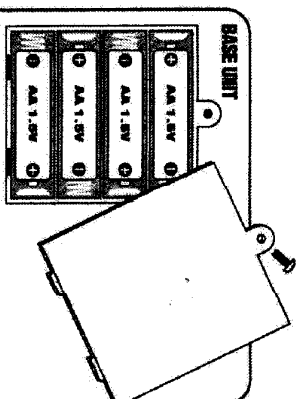

BATTERY REPLACEMENT

[illegible]

For customer service or questions call: 1-800-379-0241

© 2006 Discovery Communications, Inc. All rights reserved. Discovery Kids and the Discovery Kids logo are trademarks of Discovery Communications, Inc. Made in China for The Discovery Channel Store, Inc. Berkeley, CA 94710.