

User Manual



Features:

- Built-in FM transmitter (Line-In Function)

- Output 5V/800Mha power for charging IPOD

- Digital LCD display

- Total 100 Frequencies optional:

88.1, 88.3, 88.5, 88.7, 88.9, 89.1, 89.3, 89.5, 89.7, 89.9, 90.1, 90.3, 90.5, 90.7, 90.9, 91.1, 91.3, 91.5, 91.7, 91.9, 92.1, 92.3, 92.5, 92.7, 92.9, 93.1, 93.3, 93.5, 93.7, 93.9, 94.1, 94.3, 94.5, 94.7, 94.9, 95.1, 95.3, 95.5, 95.7, 95.9, 96.1, 96.3, 96.5, 96.7, 96.9, 97.1, 97.3, 97.5, 97.7, 97.9, 98.1, 98.3, 98.5, 98.7, 98.9, 99.1, 99.3, 99.5, 99.7, 99.9, 100.1, 100.3, 100.5, 100.7, 100.9, 101.1, 101.3, 101.5, 101.7, 101.9, 102.1, 102.3, 102.5, 102.7, 102.9, 103.1, 103.3, 103.5, 103.7, 103.9, 104.1, 104.3, 104.5, 104.7, 104.9, 105.1, 105.3, 105.5, 105.7, 105.9, 106.1, 106.3, 106.5, 106.7, 106.9, 107.1, 107.3, 107.5, 107.7, 107.9

- Fits most cigarette/ 12V sockets

- With infrared remote control

Operating instruction:

1. Plug in this advice into any cigarette lighter or 12V power socket.
2. Tune to your radio to a desired FM frequency, then match that same frequency to this device by using the buttons on the unit or on the remote. HINT: Tune to a frequency with no station for best sound quality results.
3. Using the 2.5mm to 3.5mm audio cable provided, plug the smaller (2.5 mm) jack into this device aux-in on the right side of the unit.
4. Plug the USB cable into the USB port for charging your IPOD or other device;

Set frequency:

1. In the main interface. Press or long press the key “ ” to adjust frequencies;



2. Press the key “M” to enter into memory state, please see below picture:



It can store 10 channels: Channel 0---channel 9. Press key “ ” for adjusting, then press “M” for storing; after about 5 second, it will return to the main interface automatically.

3. Press the key”  ” to stop transmitting and closing the screen. In this state, also have charging function.

Remote control operating instruction:

1. It can choose the channel by press the numeric key directly.

For example, if setup the FM to 87.5MHz, only need to press the numeric key 8,7,5, then press "ENTER" to set to this frequency;

2. Press the key "M" to enter into memory state, you can press " 

adjust the channel and press "M" to store it. But if you want to use the numeric key for adjusting and storing. You should press the key "ENTER" :
For example, If the channel 1 is 89.9, and you want to change it to 107.9, You need press the numeric key 1,0,7,9 then press the key "ENTER" for storing this frequency.

3. The key " " on the remote control has same function with on the transmitter.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC NOTE:

THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.