



nüvi® 3700 series quick start manual



for use with these nüvi models:
3750, 3760, 3790

Getting Started

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

When using your nüvi for the first time, complete the following tasks.

1. Charge your device ([page 2](#)).
2. Mount your nüvi ([page 2](#)).
3. Configure your device ([page 3](#)).
4. Turn on and off the device ([page 4](#)).
5. Acquire satellites ([page 4](#)).
6. Understand the Main menu ([page 5](#)).

Charging Your Device

Charge your device for at least 4 hours before using on battery power.

- Connect the vehicle power cable while it is plugged into your vehicle.
- Connect the micro-B cable while it is plugged into a computer.
- Connect the AC adapter (optional accessory) while it is plugged into a power outlet.

Mounting Your Device


WARNING

This product contains a lithium-ion battery. To prevent the possibility of personal injury or product damage caused by battery exposure to extreme heat, remove the device from the vehicle when exiting or store it out of direct sunlight.


NOTICE

Before mounting the device, see the *Important Safety and Product Information* guide for information about laws pertaining to windshield mounting.

1. Remove the clear plastic from the suction cup.
2. Place the suction cup on the windshield.
3. Flip the lever back toward the windshield.
4. Snap the mount onto the suction cup arm.

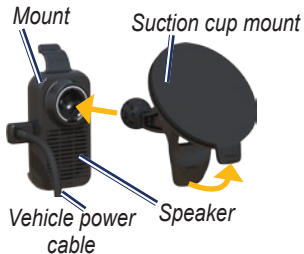

5. Fit the bottom of your device into the mount.
6. Tilt your device back until it snaps into place.

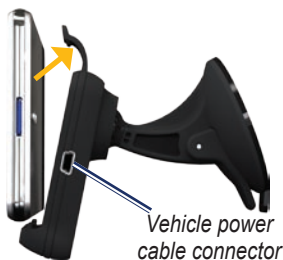

Configuring your Device

1. Plug the vehicle power cable into the mount.
2. Plug the other end of the vehicle power cable into a power outlet in your vehicle.

Your unit should turn on automatically if it is plugged in and the vehicle is running.

3. Follow the on-screen instructions.
4. If you are using a traffic receiver in Europe, connect the external antenna to the traffic receiver and secure it to the windshield using the suction cups.


Front Cover



Turning On and Off the Device

Press the power button to turn the device on and off.

Acquiring Satellites

The  bars indicate satellite strength.

1. Go outdoors to an open area, away from tall buildings and trees.
2. If necessary, turn on your device.

Acquiring satellite signals can take a few minutes. When at least one of the bars is green, your device has acquired satellite signals.

Main Menu



- 1 GPS satellite strength.
- 2 Touch to select a transportation mode.
- 3 Touch to find a destination.
- 4 Touch to view the map.
- 5 Touch to stop a route.
- 6 Touch to detour a route.
- 7 Touch to make a call when connected to a compatible mobile phone. See www.garmin.com/bluetooth for information.
- 8 Touch to adjust the volume.
- 9 Touch to open the menu of tools and settings.

Finding Points of Interest

1. From the Main menu, touch **Where To?** > **Points of Interest**.
2. Select a category and a subcategory, if necessary.
3. Select a destination.
4. Touch **Go!**.

Finding a Place by Spelling the Name


1. From the Main menu, touch **Where To?** > **Points of Interest** > **Spell Name**.
2. Enter the name your destination.
3. Touch **Done**.
4. Select a destination.
5. Touch **Go!**.

Searching Near Another Location

1. From the Main menu, touch **Where To?** > **≡** > **Near**.
2. Select an option.

Following Your Route

Your route is marked with a magenta line on the map. If you depart from the original route, your device recalculates the route. A speed limit icon could appear as you travel on major roadways.

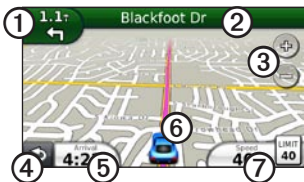


- 1 Touch to view the Next Turn page. If a view of the junctions exists, the Junction View page appears.
- 2 Touch to view the Turn List page.
- 3 Touch to zoom in and out.
- 4 Touch to return to the Main menu.

- 5 Touch to change the data field.
- 6 Touch to view the Where Am I? page.
- 7 Touch to view the Trip Computer page.
- 8 Touch and drag the map to view a different area of the map.


Adding a Stop

Before you can add a stop, you must be navigating a route.

1. Touch  to return to the Main menu.
2. Touch **Where To?**.
3. Search for the extra stop.
4. Select the stop from the search results.
5. Touch **Go!**.
6. Touch **Add to Current Route**.

Taking a Detour

Before you can take a detour, you must be navigating a route.

1. Touch  to return to the Main menu.
2. Touch **Detour**.

If the route you are currently taking is the only reasonable option, the device might not calculate a detour.

Orienting the Screen

Rotate your device to view in horizontal (landscape) or vertical (portrait) mode.



Adjusting the Screen Brightness

1. Touch **Tools** > **Settings** > **Display** > **Brightness**.
2. Touch and move the scroll bar to adjust screen brightness.

About the Transportation Modes



Bicycle



Pedestrian



Automobile

Your device has different transportation modes for navigation. Routing is calculated differently based on your transportation mode. For example, in Pedestrian transportation mode with cityXplorer™ maps loaded, your unit calculates a route that uses a combination of public transit options, such as riding a bus or subway, and

walking. cityXplorer maps are not included with your device.

Go to www.garmin.com to purchase cityXplorer maps.


Changing Your Transportation Mode

1. From the Main menu, touch the transportation mode icon.
2. Select a mode, and touch **Save**.

About Traffic

The FM Traffic Message Channel (TMC) traffic receiver is included in some nüvi 3700 packages. It is built into the vehicle power cable.

The traffic receiver and the nüvi must be in data range of an FM station transmitting TMC data to receive traffic information. You do not need to activate the subscription included with your FM traffic receiver.

If a severe traffic delay occurs on your route, the device automatically recalculates the route. The traffic icon () changes color to indicate the severity of traffic conditions on your route or on the road you are traveling.

Go to www.garmin.com/traffic for more information.

NOTE: Garmin is not responsible for the accuracy of the information.

About Voice Command

NOTE: Voice Command is not available for all languages or regions.

The Voice Command feature is available on some nüvi models. Voice Command allows you to use your device by speaking the words you see on the screen or by speaking certain commands. The Voice Command menu provides a list of available commands to use.

Activating Voice Command

1. Speak **Voice Command**.

The voice command menu appears.

Tips for Using Voice Command

- Talk in a normal voice directed at the device to speak a command exactly as it appears on the screen.
- Respond to voice prompts from the device as needed.
- Speak numbers to enter numbers.
- Speak **Exit** to exit Voice Command.

Navigating with Voice Command

1. Speak your wakeup phrase.
The voice command menu appears.
2. Speak **Find by Name**.

3. Listen for the voice prompt and speak the name of the place.
The device repeats the name of the place as it is searching.
A list of locations appears.
4. Speak the line number of the location you want.
5. Speak **Yes** to navigate to the location, or speak **No** to go back to the list of found locations.

Hands-free Features

Hands-free calling is available on some nüvi models.



Pairing Your Phone

Before you can pair, your phone and the device must be turned on and near each other.

1. Enable the Bluetooth® component on your phone.
2. Touch **Tools > Settings > Bluetooth**.

3. Touch the button below **Bluetooth** > **Enabled** > **OK**.
4. Touch the button below **Phone**.
5. Touch **OK**.
6. Select your phone, and touch **OK**.
7. Enter the Bluetooth PIN (**1234**) for your device in your phone.

Placing and Ending Calls

1. Touch  > **Dial**.
2. Enter the number.
3. Touch **Dial**.
4. Touch  > **End Call** to end a call.


Answering a Call

When you receive a call, the Incoming Call window opens.

1. Touch **Answer**.
TIP: Touch **Ignore** to stop your phone from ringing.
2. Speak normally.

The internal microphone is in the front of the device. Speak normally.

Using the Screen Lock

- Press and quickly release the power button to lock the screen. The device automatically enters sleep mode to conserve battery power.
- To unlock, press and quickly release the power button and double-tap .

Resetting the Device


You can reset your device if it stops functioning.

Press and hold the power button for 10 seconds.

Registering Your Device

1. Go to <http://my.garmin.com>.
2. Follow the on-screen instructions to register your product.
3. Keep the original sales receipt, or a photocopy, in a safe place.

Updating the Software

1. Connect the device to your computer using the USB cable.
2. Double-click  to open the myGarmin Agent™ Web page.
If the AutoPlay menu does not open, or you are on a Mac® computer, go to www.garmin.com/agent.
3. Follow the on-screen instructions.

After you have installed myGarmin Agent, you will be prompted to open myDashboard each time you connect your device to your computer. myDashboard checks for current software updates and provides additional information about your device.

nüMaps Guarantee™

To receive one free map update (if available), register your nüvi at <http://my.garmin.com> within 60 days of acquiring satellites while driving with your nüvi. You are not eligible for the free map update if you register by phone or wait longer than 60 days after the first time you acquire satellites while driving with your nüvi. For more information, go to www.garmin.com/numaps.

More Information

For more information about your device, select **Tools > Help**. You can download the latest version of the owner's manual from www.garmin.com. For information on accessories, go to <http://buy.garmin.com> or contact your Garmin dealer.

Contact Garmin

Contact Garmin Product Support if you have any questions while using your nüvi device. In the USA, go to www.garmin.com/support, or contact Garmin USA by phone at (913) 397.8200 or (800) 800.1020.

In the UK, contact Garmin (Europe) Ltd. by phone at 0808 2380000.

In Europe, go to www.garmin.com/support and click **Contact Support** for in-country support information, or contact Garmin (Europe) Ltd. by phone at +44 (0) 870.8501241.

Garmin®, the Garmin logo, and nüvi® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. cityXplorer™, nüMaps Guarantee™, myGarmin™, and myGarmin Agent™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin. The Bluetooth® word mark and logos are owned by the Bluetooth SIG, Inc., and any use of such name by Garmin is under license. Mac® is a trademark of Apple Computer, Inc., registered in the U.S. and other countries.



© 2010 Garmin Ltd. or its subsidiaries

March 2010

190-01157-01 Rev. A

Printed in Taiwan