

### Label Diagram and Placement



Label is located under cover inside battery compartment.

Text is 4 point font.