

GARMIN®

A03187

Quick Start Manual

2


 




A03187 Quick Start Manual

Getting Started

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.


	Pause and resume
	Next track

	Magnetic dock for remote. Charges the remote and sets the remote user interface to docked mode.
	Power. Select to mute or unmute. Hold to turn the system on or off.
	Home. Select to return to the home screen while the remote is docked.
	Volume down
	Volume up
	Previous track

①	Power key
②	Microphone
③	Volume keys
④	microSD [®] memory card slot
⑤	Headphone jack
⑥	micro USB port

Docking the Remote

The remote provides a touchscreen interface for the system. It can control the system while docked or undocked.

- 1 Place the bottom edge of the remote into the dock.
- 2 Tilt the top of the remote toward the dock until the magnets pull the remote into the correct position.
 - The remote switches to the vehicle profile.
 - The remote home screen switches to docked mode.
 - The dock charges the remote.  in the status bar indicates the battery charge level.

Undocking the Remote

- 1 Tilt the remote toward you by pressing the bottom edge of the remote inward while pulling the top edge of the remote toward you.

This method keeps the bottom of the remote seated in the dock and helps to prevent dropping the remote.
- 2 After the remote releases from the magnet, carefully remove the remote from the mount.



The remote home screen switches to undocked mode.

Home Screen

The remote home screen changes depending on whether the remote is docked or undocked.

While docked ①, the home screen provides quick access to core media and navigation features and restricts access to some features that require significant user interaction.

While undocked ②, the home screen provides access to the app drawer, notifications, and customizable widgets and shortcuts. While undocked, you can swipe left or right to switch home screen pages.


Music	Select to play media (page 4). Available in the app drawer while undocked.
Where To?	Select to find a destination and start a route.
View Map	Select to view navigation instructions or view your location on the map.
 Settings	Select to change the device settings.
Camera	Select to view the backup camera. Available in the app drawer while undocked.
	Select to view all apps and widgets. Available only while undocked.
Date and time	Select to set the time, alarms, or timer.
Phone	Select to place a phone call using hands-free calling. This feature requires a paired phone. Available in the app drawer while undocked.
Status bar	Displays status icons and notification icons. While the device is undocked, swipe up to view notifications and quick settings.


Acquiring GPS Signals

- 1 Turn on the device.
- 2 Wait while the device locates satellites.
- 3 If necessary, go to an open area, away from tall buildings and trees.

 in the status bar indicates the satellite signal strength. When at least half the bars are filled, the device is ready for navigation.

Playing Media

- 1 Select **Music**.
- 2 Select an option to choose a source:
 - While the remote is docked, select a source from the row of icons along the bottom of the screen.
 - While the remote is undocked, select , and select a source.


TIP: Some sources, such as USB or iPod, appear only when a device is connected.
- 3 Select an option to control playback:
 - While the remote is docked, use the media keys on the dock to control playback.
 - While the remote is undocked, use the on-screen media buttons to control playback.
- 4 Select  for more options, such as browsing the media on this source, saving or recalling presets, or changing playback and sound settings (optional).

Playing Media from a USB Device


You can play media from a connected USB flash drive or compatible portable media player.

- 1 Locate the media USB port in your vehicle.
- 2 Connect the USB device to the USB port.
- 3 Select an option:
 - To play media from an Apple® device, select **Music > iPod**.
 - To play media from another portable media player or USB flash drive, select **Music > USB**.

Changing the Radio Station

- 1 From the music player, select **AM** or **FM**.
- 2 Select  to switch between auto and manual tuning mode (optional).

Auto tuning mode automatically finds frequencies with clear broadcast signals. Manual tuning mode allows you to tune a specific frequency.

- 3 Select  or  to tune a radio station or a frequency.

Pairing Your Phone or Media Player

Using Bluetooth® wireless technology, you can pair your phone or portable media player with the dock. This allows you to listen to audio from the phone or media player using the BT source. When pairing a phone, you can also use the system to make hands-free phone calls.

- 1 Place the remote in the dock.
- 2 Place your phone or media player within 3 m (10 ft.) of the dock.
- 3 On the remote, select **Settings > Bluetooth**, and select the **Discoverable** check box.
- 4 On your phone or media player, open the Bluetooth settings, and search for available devices.
- 5 From the list of nearby devices, select the A03187 device.
- 6 Follow the on-screen instructions to complete the pairing process.

SiriusXM® Satellite Radio

Only SiriusXM brings you more of what you love to listen to, all in one place. Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. Welcome to the world of satellite radio. A SiriusXM Vehicle Tuner and subscription are required. For more information, go to www.siriusxm.com.


To learn more about activation or operation of the SiriusXM tuner, see the A03187 Owner's Manual.

Hands-Free Calling

NOTE: While most phones are supported and can be used, it cannot be guaranteed that a particular phone can be used. All features may not be available for your phone.

Using Bluetooth wireless technology, your device can connect to your mobile phone to become a hands-free device. While connected, you can place or receive calls using your device.

Placing a Call

- 1 Select **Phone**.
- 2 Select an option:
 - To dial a number, select **Dialpad**, enter the phone number, and select .
 - To call a recently dialed or received phone number, select **Call Logs**, and select a number.
 - To call a contact from your phone book, select **Contacts**, and select a contact.

Receiving a Call

When you receive a call, select **Answer** or **Decline**.

Navigation

Finding a Location by Category

- 1 Select **Where To?**.
- 2 Select a category, or select **Categories**.
- 3 If necessary, select a subcategory.
- 4 Select a location.

Finding an Address

NOTE: The order of the steps may change depending on the map data loaded on your device.

- 1 Select **Where To?**.
- 2 If necessary, select **Searching near:** to change the search area (page 5).
- 3 Select **Address**.
- 4 Follow the on-screen instructions to enter address information.

- 5 Select the address.

Changing the Search Area

By default, the device searches near your current location. You can also search other areas, such as near your destination, near another city, or along your active route.

- 1 Select **Where To?**.
- 2 Select **Searching near:**.
- 3 Select an option.

Starting a Route

- 1 Select **Where To?**, and search for a location.
- 2 Select a location.
- 3 Select **Go!**.

Adding a Location to a Route

Before you can add a location to your route, you must be navigating a route.

You can add locations to the middle or end of your route. For example, you can add a fuel station as the next destination in your route.

- 1 From the map, select **Where To?**.
- 2 Search for a location.
- 3 Select a location.
- 4 Select **Go! > Add to Active Route**.
- 5 If necessary, drag the points to change the order of the points in the route.
- 6 Select **Done**.

The device recalculates the route to include the added location and guides you to the destinations in order.


Your Route on the Map

As you travel, the device guides you to your destination using voice prompts and information on the map. Instructions for your next turn or exit, or other actions appear across the top of the map.



①	Next action in the route. Indicates the next turn, exit, or other action and the lane in which you should travel, if available.
②	Distance to the next action.
③	Name of the street or exit associated with the next action.
④	Route highlighted on the map.
⑤	Next action in the route. Arrows on the map indicate the location of upcoming actions.
⑥	Vehicle speed.
⑦	Name of the road on which you are traveling.
⑧	Estimated arrival time.
	TIP: You can touch this field to change the information it shows.

Stopping a Route

From the map, select  > Stop.

More Information

Garmin® Support Center

Go to support.garmin.com for help and information, such as product manuals, frequently asked questions, videos, and customer support.

Getting the Owner's Manual

The owner's manual includes instructions for using device features and accessing regulatory information.

Go to garmin.com/manuals/A03187.

Product Updates

On your computer, install Garmin Express™ (www.garmin.com/express).

This provides easy access to these services for Garmin devices:

- Software updates
- Map updates
- Product registration