


GARMIN.

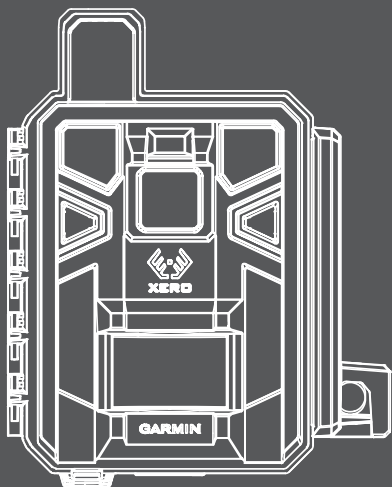

XERO® G1/G1i

Quick Start Manual


## Getting Started

### WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

- 1 Install 12 AA lithium or AA NiMH batteries in the device (page 2).
- 2 Install an SD memory card (page 3).
- 3 Turn on the device and complete the initial setup steps (page 3).
- 4 Mount the device in a suitable location (page 3).
- 5 Arm the camera (page 5).

## Device Overview

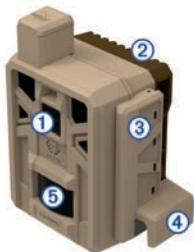

- |   |                               |
|---|-------------------------------|
| ① | Camera lens                   |
| ② | Back plate                    |
| ③ | Door latch                    |
| ④ | Lock mount                    |
| ⑤ | Passive infrared (PIR) sensor |

## Control Panel Overview



① LCD screen	Displays on-screen menus and image previews
② SD card port	Insert an SD card
③ Buttons	Hold OK (PWR) to turn the device on or off Press OK to select a menu option Press ▲, ▼, ◀, or ▶ to move through menu items
④ External power port	Connect an external power cable (sold separately) to extend battery life

## Installing AA Batteries

### NOTICE

Do not use alkaline batteries in this device.

Do not mix battery types and do not mix old and new batteries. Failure to follow this notice could result in reduced battery life, damage to the device, or poor product performance.

The device operates on 12 AA lithium or 12 AA NiMH batteries.

- 1 Open the device door latch.
- 2 Insert 12 AA lithium or 12 AA NiMH batteries into the device, observing polarity.



### Installing a Memory Card

You must install an SD or SDHC memory card to use your device. The camera supports memory cards up to 256 GB. For optimal performance, use a class 10 or better memory card.

- 1 Release the door latch, and open the front cover.
- 2 Insert an SD memory card ① into the SD card port ②.



- 3 Press in the memory card until it clicks.

### Turning the Device On or Off

- 1 To turn on the device, press and hold **PWR**.
- 2 To turn off the device, hold **PWR** for 3 sec.

## Setup Overview

### NOTICE

Some jurisdictions may prohibit recording audio and video or may require that all parties have knowledge of the recording and provide consent before you record audio or video. It is your responsibility to know and comply with all applicable laws and regulations in jurisdictions where you plan to use this device, including laws and regulations related to hunting, privacy, and use of security cameras or trail cameras.

The first time you turn on your device, it walks you through initial setup, pairing a smartphone, and setting up satellite communications.

**NOTE:** Satellite communication features are not available on all camera models.

### Xero® G App

The Xero G app allows you to transfer photos from your camera, view scouting reports, and configure camera settings. You can download the Xero G app from the app store on your smartphone.

**NOTE:** Some app features are not available for all camera models.

### Camera Placement Considerations

For best results, you should follow these camera placement considerations.

- You should select a location where the camera lens and PIR sensor have a clear view of the observation area and are not obstructed by leaves, brush, or other environmental factors.
- You should select a location where observation targets are likely to pass across the sensor's field of view and within 18 m (20 yd.) of the camera.
- If you are observing a trail, you should position the camera at a 45 degree angle to the trail.

- You should position the camera so the camera lens and PIR sensor face away from the rising or setting sun.
- You should test the mounting location before you permanently mount the camera.

### Mounting the Device

You can mount the device to a tree using the included strap.

- 1 Select a suitable location to mount your device.
- 2 Route the mounting strap ① through the large slot ② in the back plate.



- 3 Insert the strap through the front of the clamp and pull it tight.



### Securing the Device with Lag Bolts

You can use the included lag bolts to secure the device to a tree or solid surface.

- 1 Strap the device to a tree and position it for the best view.
- 2 Press the release button ①, and slide the camera off of the back plate.



- 3 Using a  $\frac{3}{8}$  in. wrench or socket, secure the back plate to the tree using the included lag bolts ②.

**NOTE:** Do not overtighten the lag bolts.



- 4 Remove the strap.

### Locking the Device

You can secure the device using a padlock or a cable lock. This can help prevent someone from accessing the device or its controls.

Insert a padlock or cable lock through the latch, the device housing, and the back plate.



## Arming the Camera

- 1 Select **SET UP & ARM**.
- 2 Follow the on-screen instructions to set up your camera configuration.

## Xero AI Models

When you arm your camera, you can select an AI model for the type of animal you are looking for. The Xero G1 camera analyzes photos and identifies the photos that contain the specified animal. When you connect your camera to the Xero G app, you can view detailed reports about the identified animals.

**NOTE:** Lighting, distance, and other environmental factors may affect how the camera identifies animals. If the camera is unable to identify an animal, the photo or video is listed as unknown.

## Viewing Photos and Videos

You can view your photos and recorded videos on the device screen. You can also download photos and videos to your connected smartphone using the Xero G app.

- 1 From the main menu, select **GALLERY**.
- 2 Select an option:
  - To view a list of photos taken during the day, select **DAY**.
  - To view a list of photos taken at night, select **NIGHT**.
- 3 Select a photo or video.

## Device Information

### Device Specifications

Battery type	Replaceable 1.5 V AA lithium Rechargeable 1.2 V AA NiMH
External power input	From 12 to 15 V using the external power cable (sold separately)
Operating temperature range	From -30° to 55°C (from -22° to 131°F)
Storage temperature range	From -40° to 85°C (from -40° to 185°F)
Water rating	IEC 60529 IPX8 <sup>1</sup>
Wireless frequency (Xero G1)	2.4 GHz @ 18.1 dBm maximum
Wireless frequency (Xero G1i)	2.4 GHz @ 18.1 dBm maximum 1.6 GHz @ 13.3 dBm maximum

## Viewing E-label Regulatory and Compliance Information

The label for this device is provided electronically. The e-label may provide regulatory information, such as identification numbers provided by the FCC or regional compliance markings, as well as applicable product and licensing information.

- 1 From the settings menu, select **DEVICE**.
- 2 Select **ABOUT**.
- 3 Select **REGULATORY INFO**.

<sup>1</sup> The device withstands exposure to water of up to 3 m (10 ft.) for 24 hours. For more information, go to [garmin.com/waterrating](http://garmin.com/waterrating).

## Getting the Owner's Manual

Go to [garmin.com/manuals/XeroG1](http://garmin.com/manuals/XeroG1).

## Getting More Information

You can find more information about this product on the Garmin® website.

- Go to [support.garmin.com](http://support.garmin.com) for additional manuals, articles, and software updates.
- Go to [buy.garmin.com](http://buy.garmin.com), or contact your Garmin dealer for information about optional accessories and replacement parts.

## Product Updates

On your computer, install Garmin Express™ ([www.garmin.com/express](http://www.garmin.com/express)).

This provides easy access to these services for Garmin devices:

- Software updates
- Product registration



[support.garmin.com](https://support.garmin.com)

© 2022 Garmin Ltd. or its subsidiaries

Garmin®, the Garmin logo, and Xero® are trademarks of Garmin Ltd. or its subsidiaries, registered in the USA and other countries. Garmin Express™ is a trademark of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

Other trademarks and trade names are those of their respective owners.



Printed in Taiwan  
December 2021  
190-02648-90\_0A

