

Getting Started

△ WARNING

See the Important Safety and Product Information guide in the product box for product warnings and other important information.

Device Overview

Internal antenna

- ② Keys
- (3) Micro-USB port (under weather cap)
- protective cap)
- 5 Power key
- 6 Mounting screw

Keys



Select to scroll through menus, pages, and settings.



Select to cancel or return to the previous page.

2

Quick Start Manual

OK	Select to choose an
	option or to
	acknowledge a
	message.
	From the home page,
	select to open the main
	menu
	OK

*	Bluetooth® technology status
7	Charging battery
8	Charging complete

Turning On the Device Hold (b.

Status Icons

•	Sending and receiving data
∱!	Unable to send and receive data
1	Tracking enabled

Activating the Device

Before you can use your device, you must activate it.

- Create an account, and
 - select a subscription at explore.garmin.com
 - Tum on the device.
- Follow the on-screen instructions.

- 4 When prompted, go outdoors to an open area with a clear view of the sky.
 5 We're while the decide.
 - Wait while the device communicates with the network.

NOTE: It may take up to 20 minutes to activate your device. The device must send and receive several messages, which takes longer than sending a single message during

Network Your device requires a clear view of the sky to transmit

regular use.

messages and track points over the network. Without a clear view of the sky, your device attempts to send the information until it acquires signals.

TIP: For the best connection, attach the device to a backpack or to your upper body.

Pairing Your Mobile Device

You must pair your device with your mobile device to use Bluetooth features

- From the app store on your mobile device, install and open the app.
- Place the device and your mobile device within 3 m (10 ft.) of each other
- From the main menu select Setup > Bluetooth > Pair Device
- Follow the instructions in the app to complete the pairing and setup process.

After the devices are paired, they connect automatically when they are turned on and within range.

Testing the Device You should test the device outdoors before using it on a trip to ensure your subscription is active.

> From the main menu select Utilities > Test Service > OK

Wait while the device sends a test message. When you receive a confirmation message, your device is ready to LISE

Messages

Your device sends and receives text

messages using the network.

Sending a Preset Message

Preset messages are messages that you created at explore.garmin.com. Preset messages have predefined text and recipients.

from the main menu,

select Send Preset.

2 Choose a preset message, and select Send.

Quick Start Manual

1	Lift the protective cap ① from the button ②.	service. Your reply lets the service know that you are capable of interacting with them.
2	Hold the button. 3 Wait	
	The device sends a default message.	
4	Reply to the confirmation message from the	
Qu	ick Start Manual	7

Tracking

Tracking records your path. When you start tracking, your device logs your location and updates the track line at the specified log interval. Your device records track points and transmits them over the satellite network at the specified send interval.

Starting Tracking

From the main menu, select **Start Tracking**.

Device Information

Support and Updates

Go to explore.garmin.com for easy access to these services for devices

- Product registration
- · Firmware updates
- Data uploads and syncing your device with your account

Getting the Owner's Manual

The owner's manual includes instructions for using device features and accessing regulatory information.

Go to garmin.com /manuals/.

Charging the Device

NOTICE

To prevent corrosion, thoroughly dry the USB port,

the weather cap, and the surrounding area before charging or connecting to a computer.

NOTE: The device does not charge when it is outside the approved temperature range (page 10).

Lift the weather cap 1.

- Plug the small end of the power cable into the USB port ② on the device.
- 3 Plug the other end of the power cable into an appropriate power source.
- **4** Charge the device completely.

Specifications

Operating temperature range	From -20 to 60 C (from -4 to 140 F)
Charging temperature range	From 0 to 45 C (from 32 to 113 F

Battery Information

The actual battery life depends on your device settings, such as the tracking and message checking intervals.

Battery Life	Mode		Battery Life	Mode	
Up to 30 hr.	10-minute tracking send interval and 1- second log interval			emarks of Garmin Ltd. ries, registered in the r countries. These ay not be used press permission of word mark and ed by the Bluetooth	
Up to 50 hr.	Default mode with 10-minute tracking send interval and 5- minute log interval	USA and othe trademarks m without the ex Garmin. The Bluetooth logos are owr			
Up to 20 days	Extended tracking mode with 30-minute tracking send interval	SIG, Inc. and any use of sucl marks by Garmin is under lic is a registered trademark of.		nin is under license.	

	trademarks and trade names are those of their respective owners.			
	12		Quick Start Manual	
		I		