## **GARMIN**.

# EDGE® 130 PLUS

**Owner's Manual** 

#### © 2020 Garmin Ltd. or its subsidiaries

All rights reserved. Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Garmin. Garmin reserves the right to change or improve its products and to make changes in the content of this manual without obligation to notify any person or organization of such changes or improvements. Go to www.garmin.com for current updates and supplemental information concerning the use of this product.

### Introduction

#### 

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

## Viewing E-label Regulatory and Compliance Information

The label for this device is provided electronically. The e-label may provide regulatory information, such as identification numbers provided by the FCC or regional compliance markings, as well as applicable product and licensing information.

- 1 Hold .
- 2 Select System > About.
- 3 Select 🗸 .

## **Device Information**

#### **Edge 130 Plus Specifications**

Battery type	Rechargeable, built-in lithium-ion battery
Battery life	Up to 15 hr.
Operating temperature range	From -20° to 60°C (from -4° to 140°F)
Charging temperature range	From 0° to 45°C (from 32° to 113°F)
Wireless frequency	2.4 GHz @ 5.6 dBm nominal
Water rating	IEC 60529 IPX7*

\*The device withstands incidental exposure to water of up to 1 m for up to 30 min. For more information, go to www.garmin.com /waterrating.

# support.garmin.com

