

GARMIN.

Quick Start Manual

Introduction

WARNING

See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Device Overview

- ① **UP** : Hold to turn the device on and off.
Press to scroll through menus and settings. During play, press to scroll through hazards, layups, and doglegs.
- ② **DOWN**: Press to scroll through menus and settings. During play, press to scroll through hazards, layups, and doglegs.
- ③ **OK**: Press to start.
Press to choose menu options and acknowledge messages. During play, press to access in-round features.
- ④ **BACK**: Press to return to the previous screen.

Getting Started

When using your device the first time, you should complete these tasks to set it up and get to know the basic features.

- 1 Hold  to turn on the device (page 2).
- 2 Answer the device prompts about your preferred language and units of measure.
- 3 Pair your smartphone (page 3).
Pairing your smartphone gives you access to scorecard syncing, course updates, live scoring on the Garmin app, software updates, and more.
- 4 Charge the device completely so that you have enough charge for a round (page 3).

Pairing Your Smartphone

To use the connected features of the device, it must be paired directly through the Garmin app, instead of from the Bluetooth® settings on your smartphone.

- 1 From the app store on your smartphone, install and open the Garmin app.
- 2 From the device, press **OK**, and select **Settings > Pair Phone**.
- 3 From the  or  menu in the app, select **Garmin Devices > Add Device**, and follow the instructions in the app to complete the pairing process.

Charging the Device

WARNING

This device contains a lithium-ion battery. See the *Important Safety and Product Information* guide in the product box for product warnings and other important information.

Hole View

The device shows the current hole you are playing, and automatically transitions when you move to a new hole.

NOTE: Because pin locations change, the device calculates the distance to the front, middle, and back, but not the actual location.

- ①: Current number.
- ②: Distances to the front, middle, and back.
: Approximate view. You can
- ③ move (page 5).
:
- ④

Menu

During a round, you can press **OK** to access additional features in the menu.

Change: Allows you to manually change.

Move Flag: Allows you to move the location

to get a more precise distance measurement.

Measure Shot: Allows you to measure the distance.

Scorecard: Opens the scorecard for the round.

Sunrise/Sunset: Shows the sunrise, sunset, and twilight times for the current day.

End Round: Ends the current round.

Measuring a Shot

1 While playing, press **OK**.

2 Select **Measure Shot**.

3 Walk.

TIP: You can press **DOWN** to reset the measurement.

Viewing Course Features

You can view distances to course features, such as hazards.

While playing press **UP** or **DOWN** to scroll through the features.

①: For large hazards, the distances to the front and back of the hazard appear on the screen. For small hazards, only the distance to the front of the hazard appears. For the distance to the feature appears.

②: The feature type appears on the screen.

Keeping Score

When scoring is enabled, you are prompted to enter your score. You can adjust the score manually at any time during a game.

- 1 While playing, press **OK**.
- 2 Select an option:
 - If scoring is not enabled, select **Start Scoring**.
 - If scoring is enabled, select **Scorecard**.
- 3 If necessary, press **UP** or **DOWN** to select a hole, and press **OK**.
- 4 Press **UP** or **DOWN** to set the score, and press **OK**.

Device Information

Specifications

Operating temperature range: From -20° to 60°C (from -4° to 140°F)

Charging temperature range: From 0° to 45°C (from 32° to 113°F)

Wireless frequency/protocol: 2.4 GHz @ 4.16 dBm maximum

Product Updates

On your computer, install Garmin Express™ (www.garmin.com/express). On your smartphone, install the Garmin app.

This provides easy access to these services for Garmin® devices:

- Software updates
- Data uploads to Garmin
- Product registration

Getting the Owner's Manual

The owner's manual includes instructions for using device features and accessing regulatory information.

Go to garmin.com/manuals/.

Restarting Your Device

- 1 Press and hold  until the device turns off.
- 2 Press  to turn on the device.