


Operation steps:

1. Set up the SW and cp2102 driver correctly
2. Link the RF receiver to meter correctly
3. Open up the SW, select the serial according to RF receiver and click “connect”
4. Open up the meter, hold “” button to power on the data transmission
5. Operate the SW and check the test data from the meter