


Dell Chromebook 11

Quick Start Guide

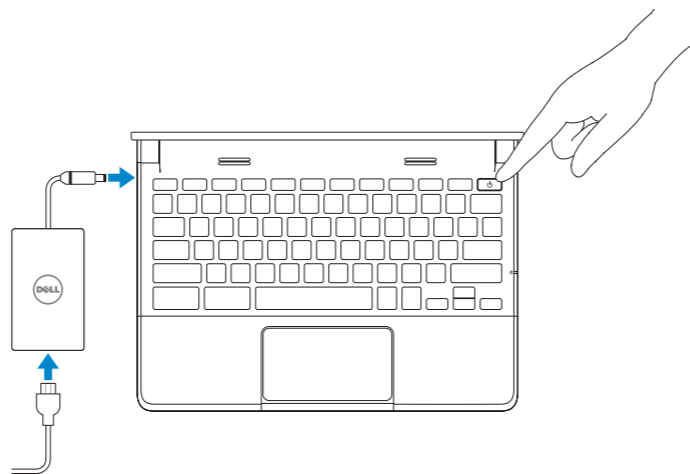


1 Connect the power adapter and turn on your computer




2 Finish Chromebook setup



Connect to your network

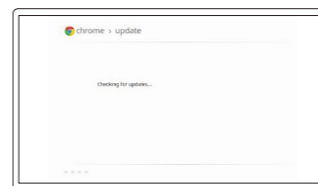


Wait for update to finish

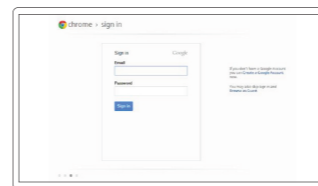

Sign in to your Google account or create a new account


NOTE: Your computer will restart after Google update.

3 Register Chromebook

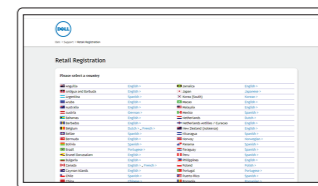


dell.com/support/registration

4 Explore resources


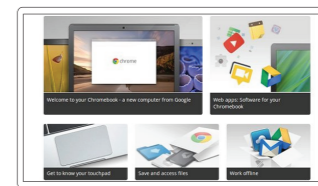


Get started

Insert SIM card (on WWAN models only)

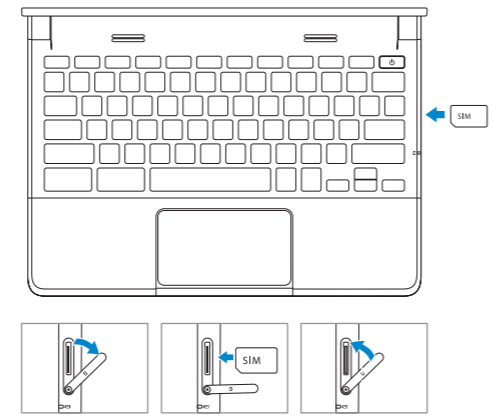

Features

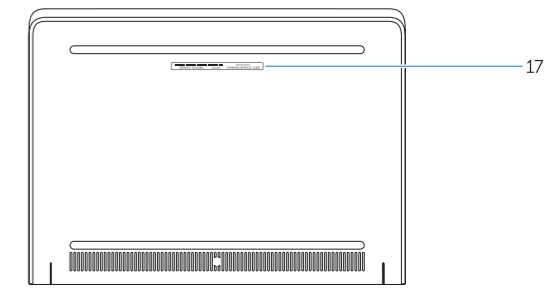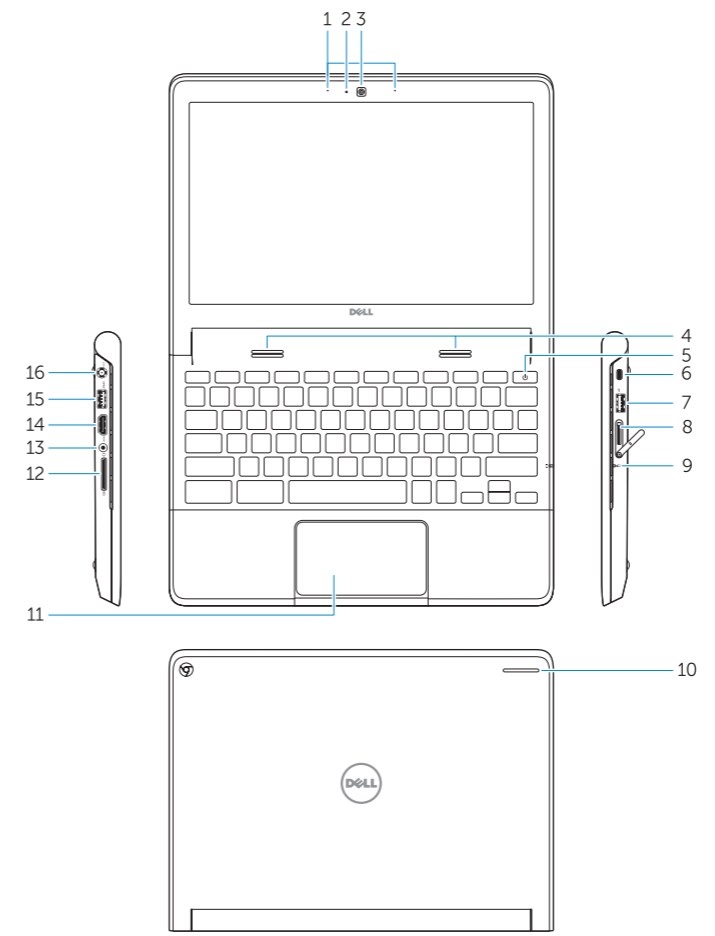

- | | |
|--------------------------|---------------------------------------|
| 1. Microphones | 11. Touchpad |
| 2. Camera-status light | 12. Memory card reader |
| 3. Camera | 13. Headset connector |
| 4. Speakers | 14. HDMI connector |
| 5. Power button | 15. USB 3.0 connector with PowerShare |
| 6. Security lock slot | 16. Power connector |
| 7. USB 2.0 connector | 17. Service-tag label |
| 8. SIM reader (optional) | |
| 9. Battery-status light | |
| 10. Activity light | |



For details on your Dell Limited Hardware Warranty and any service contracts you purchased (as detailed in your invoice), please visit the links below:
 Dell Limited Hardware Warranty: www.dell.com/warranty
 Dell Consumer Service Contracts: www.dell.com/servicecontracts
Production info:
Use for DAO only