this will become second nature. towards or away from you. With practice, you may find that moving left moves Flitt were sitting inside Flitt. So, if you rotate, The orientation of the controls are as if you

tor any slight drift. there are fine tune buttons to compensate one direction and hold. For indoor flight, right. If you want to rotate constantly, swipe let go. To rotate, swipe the screen left or control, make small movements and then control the position of Flitt. For easiest slide bar, and left/right swipe area to Use the directional control stick, altitude



sent over your chosen service.

Controls

flight (for iOS) or after (for Android), your pictures will be share 2. Next, take pictures or videos as you fly. During your When ready to fly, first select either instant share 1 or instant

take another picture. You'll be prompted to sign in to your the main screen and select the instant share button and then to use and how you want to add a caption. Then go back to to Settings and choose which social media service you want social media quickly. You can set this up before you fly. Go This feature loads your pictures or videos to your tavorite

Instant Share

HI3Sh

Emergency Landing use high (H) speed to fly fast. indoors. It you have plenty of room to fly, Use low (L) or medium (M) speeds Push this icon to adjust your flight speed.

video, select the video To start recording a Speed Selector

Video Record

the square icon.

icon. To stop, push

slider in small movements. For framing up and down, use the altitude you can easily frame your perfect shot! open screen area. This rotates Flitt so that screen from side to side by swiping the You can move the image you see on the

Frame your subject

то таке. the camera will see the picture you want swiping the screen. This rotates Flitt so be moved to the left or the right by the Flitt camera sees. The image can This part of your screen shows you what

Screen Gesture Swipe Control

you want to take in a burst. then choose the number of pictures the camera icon. Choose Burst, and Multi-picture Burst: Push and "hold" timer and then either 35 or 105. and "hold" the camera icon. Choose your mobile device. Self-Timer: Push or the up/down volume button on Single shot: Press the camera icon

Camera



- Adult supervision required.
- Always install the propeller guards before flying.
- Calibrate the Flitt accelerometers before each flying session.
- Do not touch the spinning propellers.
- Keep your face and body as well as all spectators away from the propellers.
- Stay clear of buildings, high voltage wires, trees, shrubbery or groups of people.
- Don't fly in bad weather conditions, such as in high wind, rain, or snow.
- Operating Temperature Range: 32°F to 104°F (0°C to 40°C).
- Always keep Flitt in your line of sight.
- Maintain a safe pilot-to-device distance while flying.
- Flitt is not a toy. If not operated correctly, it could possibly cause injury to you or spectators and damage to property.
- Do not alter or modify, as doing so may make it unsafe or unflyable.
- You must check the operation of Flitt before every flight to insure that it has remained structurally sound.

FITC Quick Start Guide



See setup and Flying instructions inside. flittcamera.com

Battery Precautions

The Flitt is equipped with a rechargeable 3.7V Lithium Polymer (LiPo) battery. Please pay attention to the following cautions for safe use:




- KEEP OUT OF REACH OF CHILDREN.
- LiPo batteries must be recycled or disposed of properly.
- Do not use this product if the Flitt was severely crashed and the battery possibly damaged.
- Never disassemble, puncture or modify the Flitt battery.
- Always turn off Flitt power after each use.
- Only charge using a USB 5.0V 2A max power supply.
- Do not charge inside your car.
- Do not leave unattended while charging.
- Allow Flitt to cool for 30 minutes before recharging. • Always place Flitt on a fireproof surface while
- charging. • Keep away from combustible materials while
- charging.
- Unplug the charger immediately if it or the battery becomes hot! However, it is normal for the charger and battery to get warm. Disconnect from the charger and quickly move to a fireproof location if the battery begins to get hot or smoke!
- Keep a supply of sand accessible when charging. Dumping sand on the battery will extinguish a LiPo chemical fire.
- Always disconnect the charger after charging is complete.


1: Charge the battery

Unlock the battery.

Grip the battery from the sides and push up.

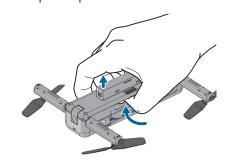


Plug the charger into any standard USB power source.

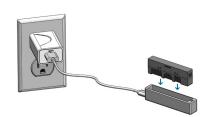


The LED will be solid while charging. The LED will flash when finished. Always disconnect when finished.

Insert the battery and lock in place.

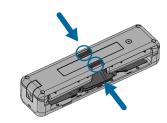

2: Download the app

Search the app store for "Flitt."

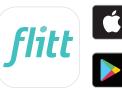




Apple and the Apple logo are trademarks of Apple Inc. registered in the U.S. and other countries.

App Store is a service mark of Apple Inc. Android and Google Play are trademarks of Google Inc.


3: Turn on

Push the power button and hold for a few seconds until the LED stays on.

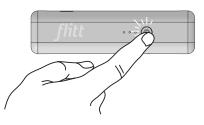


4: Open the arms

Open the arms fully.

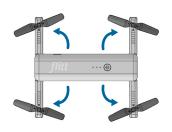

5: Attach the propeller guards

Install a prop guard into the end of each arm. Match A guards to A arms and B guards to B arms.

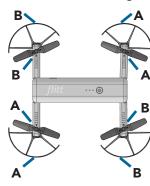

6: Connect your phone

Go to Wi-Fi Settings on your phone and look for the network Flitt-***** Connect and enter Password: 12345678




7: Open the app

Watch the slide show to learn about the controls and features.



1: Get Ready.

Position Flitt on a level surface with the camera facing you.

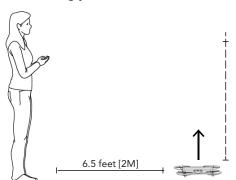

In settings, you can set the camera to face away from you to capture scenery.

Push "unlock" and hold for 2 seconds




Calibrate the sensors if prompted.




Push "Take off" when green. For your safety, Flitt will re-lock after five seconds to prevent unintentional takeoffs.

2: Controls

Move slider to change altitude.

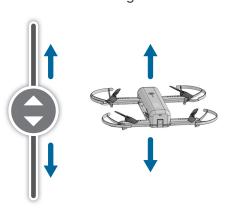

Move controls in the direction you want to travel.

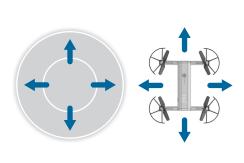

We recommend recalibrating the sensors after a hard landing or crash. Access this feature through the settings menu.

3: Land




To land immediately, push **EMERGENCY**

4: Power off

Push and hold until the LED turns off.

It's easiest to fold up Flitt starting with the back arms first. Now head out to your next photo shoot!

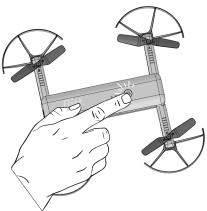

FCC Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation

ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of The FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
 This transmitter must not be co-located or operating in conjunction with any other anienna or transmitter.
 This equipment should be installed and operated with minimum distance 20cm between the radiator's your body.

(1) l'appareil ne doit pas produire de brouillage, et

ISEDC Radiation Exposure Statement:

- This equipment complies with ISEDC RF radiation exposure limits set forth for an uncontrolled environment.
 This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
 This equipment should be installed and operated with minimum distance 20cm between the radiator's your body.
- Cet appareil est conforme aux limites d'exposition de rayonnement RF ISEDC établiespour un environnement
 Cetémetteur ne doit pas être co-implanté oufonctionner en conjonction avec toute autreantenne ou transmetteur
- non controlé.

 Cet équipement doit être installé et utiliséavec une distance minimale de 20cm entre leradiateur & votre corps