

1 Photo documentation of the EUT

1.1 External views:

LF antenna position (the left car side is identical to the right) – red square



LF antenna position (near gear shift – red square)



LF antenna position (trunk; behind the back seat) – red square



Front view – LF antenna



Rear view – LF antenna



Side view – LF antenna



Side view – LF antenna



Connector view – LF antenna



Window antenna (at the left car side only) – RF antenna





Front view / label view



Rear view

