



Engineering, Inc.
5969 Robinson Avenue
Riverside, CA 92503-8620
www.dnbenginc.com

Federal Communications Commission

19 Sep 2002

Exhibit G : Users Manual

FCC Confirmation Number : EA846123
FCC ID: JBWTXFM5
Date of Submission: 19 Sep 2002

To Whom It May Concern,

Please review the attached information concerning the above referenced application and let me know if you require any corrections or additional information.

Thank you for your time and consideration in this matter.

C.L. Payne III
DNB Engineering, Inc.
Manager, Riverside Facility
5969 Robinson Avenue
Riverside, CA 92503-8620
(909) 637-2630
Fx: (909) 637-2704
E-mail: Les@dnbenginc.com



FM 2-WAY TRANSMITTER

Transmitter Operation

- 1 - ARM/DISARM/PANIC Button** - To arm or disarm the system, press button 1. To activate the panic feature, press button 1 and hold for three seconds.
- 2 - START Button** - To start the vehicle, press and hold button 2 for two seconds. To shut down the vehicle, press and hold button 2 for two seconds.
- 3 - TRUNK Button** - To activate the trunk output, press and button 3 for two seconds.
- 4 - AUXILIARY 2 Output** - To activate the Aux. 2 output, press and hold button 4 for two seconds.
- 5 - CONFIRMATION Button** - To check current status of the system, press buttons 2 & 3. The current status of the system will be displayed & illuminated on the transmitter.

Transmitter Indications



Arm -
The display will show and the animated icon to confirm arming. Lights will flash once.




Shock Sensor -
The display will show Shock and flash the animated icon to indicate shock sensor triggering.



Disarm -
The display will show and the animated to confirm disarming. Lights will flash twice.



Door -
If a door is opened while the system is armed, the display will show .

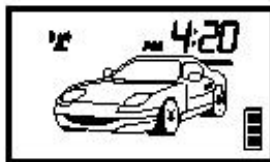

Trunk -
The display will show and flash this icon opening to confirm.



Hood -
If the hood or trunk is opened while the system is armed, the icon will show and the lights will flash.



Warn Away -
If the warning stage is triggered, the icon will flash.




Panic -
The display will show when the Arm/Disarm button is held to enter the Panic mode.

Transmitter Indications Continued





Start -

The display  will indicate the ignition is turned on and the engine is going to crank.




Engine Run -

When the engine starts and continues to run, the  icon will be displayed, and the  icon will remain displayed.



Valet Mode -

The display will show **--U** to confirm entering the Valet mode.

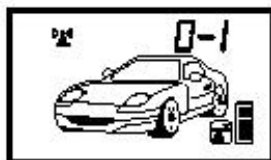


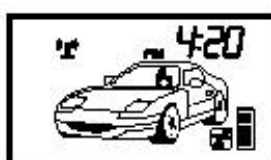
Aux. 2 Output -

The display will show **0-1** to confirm the Auxiliary 2 Output.




Lock (Valet) -

If the doors are locked with the transmitter in Valet mode, the display will show  to confirm locking.




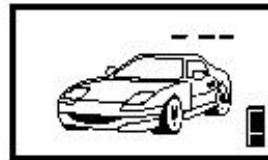
Unlock (Valet) -

If the doors are unlocked with the transmitter in Valet mode, the display will show the  icon to confirm unlock.



Low Battery -

When the transmitter battery needs replacement, the display will flash the  icon.




Set Clock -

Press and hold buttons 2 & 3 for 2 seconds. The transmitter will beep twice and the display will show **---**. Change hour by pressing button 2; change minute by pressing button 3. Press button #5 (Confirm Status) to set. The transmitter will play a tune to indicate new time is set.

Continue to hold buttons 2 & 3 to:



Set Alarm Clock -

Press and hold buttons 2 & 3 until the transmitter beeps three times and the alarm clock icon () appears. Confirm the same way as setting clock.


Turning Off Alarm Clock -

Press and hold buttons 2 & 3 until the transmitter beeps three times and the alarm clock icon appears. Press transmitter button 1. The icon will disappear and the alarm will be turned off.

Continue to hold buttons 2 & 3 to:



Set Start Timer -

Press and hold buttons 2 & 3 until the transmitter beeps four times and the fan icon () appears. Set the start timer the same way as setting the clock. The fan icon will remain displayed when set.

Turning Off Start Timer -

Press and hold buttons 2 & 3 until the transmitter beeps four times and the alarm clock icon appears. Press transmitter button 1. The icon will disappear and the alarm will be turned off.