

### 9. ALARM ON/OFF SELECTION

① IN CURRENT TIME/STARTING STAGE, PUSH **□** BUTTON FIVE TIMES  
AT THIS TIME, YOU CAN CHANGE DIGITS WITH **□** BUTTON AND CAN ADJUST THEM  
AFTER STARTING STAGE, IF YOU PUSH **□** BUTTON, ALARM WILL BE ON AND CURRENT  
TIME/STARTING STAGE WILL BE DISPLAYED  
(IN POWER OFF OR AUTOMATIC POWER ON/OFF, YOU CAN ALSO DO IT.)

② IN THE FIG. 1, IF YOU PUSH **□** BUTTON ONCE MORE AND PUSH **□** BUTTON,  
ALARM WILL BE OFF AND CURRENT TIME/STARTING STAGE WILL BE DISPLAYED  
-- IN ALARM, YOU CAN HEAR SLEEP SOUND FOR 30 SECONDS  
-- IF YOU WANT TO STOP ALARMS, PUSH ANY BUTTON ON YOUR PAGER.

- 13 -


### 11. OTHER MAIN DISPLAYS

① LOW VOLTAGE ALARMING  
(SHORT ALERTING SOUND/VIBRATION PER 60 MINS.)  
-- PLEASE CHANGE BATTERY TO NEW ONE

② DUPLICATE MESSAGE RECEIVING  
-- THE LATEST RECEIVED TIME,  
ADDRESS AND CALL TIME  
(A,B,C AND D) ARE DISPLAYED

③ DUPLICATE MESSAGE LOCKING  
-- REPLY MESSAGE  
-- CALL INFORMATION  
-- CALL INFORMATION  
-- CALL INFORMATION

- 17 -

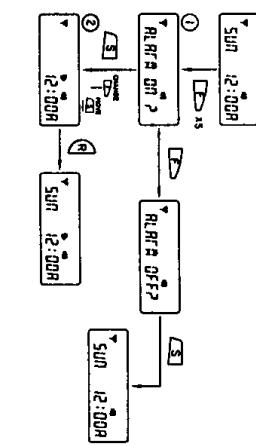

- 14 -


① IF YOU PUSH **□** BUTTON ONE TIME, SELECTION CONDITION WILL BE AUTOMATIC POWER ON/OFF  
② IN THE FIG. 2, YOU CAN CHANGE DIGITS WITH **□** BUTTON AND CAN AMEND THEM WITH **□** BUTTON BY MOVING AFTER AMENDMENT. IF YOU PUSH **□** BUTTON AUTOMATIC POWER ON/OFF CONDITION WILL BE SELECTED AND CURRENT TIME IS STARTING STAGE WILL BE DISPLAYED  
EXAMPLE: IN CASE YOU WANT TO SELECT TIME LIKE THE FIG. 2, POWER WILL TURN OFF AT TWELVE O'CLOCK, NIGHT AND TURN ON AT SIX O'CLOCK  
-- WHEN YOU REVERSE BATTERY, PUSH THE BATTERY LOCKING TAB BACK SIDE OF THE PAGER TO ARROW DIRECTION AS FIG. 1  
④ SLIDE THE BATTERY DOOR UNTIL IT IS COMPLETELY FREE FROM THE HOUSING AND THE BATTERY IS EXPOSED AS FIG. 2  
⑤ ORIENT NEW AAA SIZE BATTERY SO THAT THE '+' AND '-' MARKING MATCH THE DIRECTION OF THE POLARITY MARKING EMBOSSED ON THE BATTERY COMPARTMENT AS FIG. 3 AND INSERT NEW BATTERY  
⑥ ALIGN THE GROOVES ON THE BATTERY DOOR WITH THE GROOVES ON THE FRONT AND BACK HOUSING SLIDE THE BATTERY DOOR UNTIL IT IS FULLY CLOSED AND POSITIVE CLICK IS HEARD

- 15 -

### 12. HOW TO REPLACE BATTERY

① DURING REPLACING BATTERY, ALL UNLOCKING MESSAGES SHOULD BE CLEARED  
-- SO REPLACE BATTERY AFTER "LOCKING" NECESSARY MESSAGES  
② WILL COME OUT AND TOW BATTERY WILL BE SHOWN ON LCD  
IN THIS TIME, REPLACE BATTERY AT ONCE  
③ WHEN YOU REVERSE BATTERY, PUSH THE BATTERY LOCKING TAB BACK SIDE OF THE PAGER TO ARROW DIRECTION AS FIG. 1  
④ SLIDE THE BATTERY DOOR UNTIL IT IS COMPLETELY FREE FROM THE HOUSING AND THE BATTERY IS EXPOSED AS FIG. 2  
⑤ ORIENT NEW AAA SIZE BATTERY SO THAT THE '+' AND '-' MARKING MATCH THE DIRECTION OF THE POLARITY MARKING EMBOSSED ON THE BATTERY COMPARTMENT AS FIG. 3 AND INSERT NEW BATTERY  
⑥ ALIGN THE GROOVES ON THE BATTERY DOOR WITH THE GROOVES ON THE FRONT AND BACK HOUSING SLIDE THE BATTERY DOOR UNTIL IT IS FULLY CLOSED AND POSITIVE CLICK IS HEARD

- 19 -

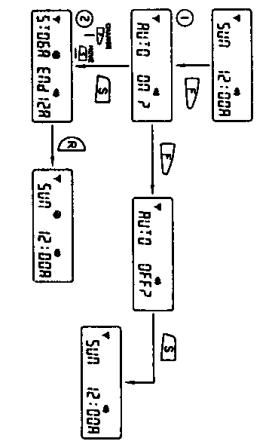

- 16 -

## OPERATION MANUAL

### NUMERIC

### DISPLAY PAGER

Model SH-780

FCC: Compliance Statements  
Section 15.19 Labelling  
requirements.  
Compliance with section 15.19  
part (A) and (#5).  
This device complies with Part 15  
of the FCC Rules. Operation is  
subject to the conditions that this  
device does not cause harmful

 
MEMO

MEMO

MEMO



## 1. FUNCTION OF THE BUTTONS




① (READ BUTTON) FOR READING MESSAGES AND  
UNLOCKING INDIVIDUAL MESSAGE CLEARING

② (FUNCTION BUTTON) FOR SELECTING MENU/CHANGING  
AND SELECTING INDIVIDUAL MESSAGE CLEARING

③ (SELECTION BUTTON) FOR SELECTING FUNCTIONS,  
MOVING AND OPERATING LAMPS

## 2. ICONS DESCRIPTION ON LCD

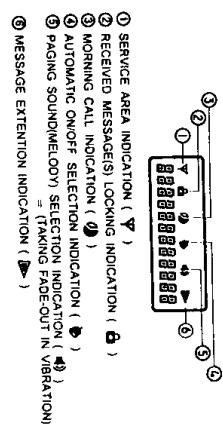

① CURRENT TIME/STARTING STAGE DISPLAY

② VIBRATION/PAGING SOUND SELECTION DISPLAY

③ POWER ON/OFF SELECTION DISPLAY

④ AUTOMATIC POWER ON SELECTION DISPLAY

⑤ AUTOMATIC POWER OFF SELECTION DISPLAY

⑥ TIME AND A DAY OF THE WEEK SELECTION DISPLAY

① SET: TIME?

② ALARM ON SELECTION DISPLAY

③ RINGER ON?

④ RINGER OFF?

⑤ TIME AND A DAY OF THE WEEK SELECTION DISPLAY

⑥ SET: TIME?

⑦ ALARM OFF SELECTION DISPLAY

⑧ RINGER OFF?

⑨ AUTOMATIC POWER OFF SELECTION DISPLAY

## 3. FUNCTION SELECTION AND DISPLAY IN SEQUENCE

① CURRENT TIME/STARTING STAGE DISPLAY

② VIBRATION/PAGING SOUND SELECTION DISPLAY

③ POWER ON/OFF SELECTION DISPLAY

④ AUTOMATIC POWER ON SELECTION DISPLAY

⑤ AUTOMATIC POWER OFF SELECTION DISPLAY

⑥ TIME AND A DAY OF THE WEEK SELECTION DISPLAY

① SET: TIME?

② ALARM ON SELECTION DISPLAY

③ RINGER ON?

④ RINGER OFF?

⑤ TIME AND A DAY OF THE WEEK SELECTION DISPLAY


⑥ SET: TIME?

⑦ ALARM OFF SELECTION DISPLAY

⑧ RINGER OFF?

⑨ AUTOMATIC POWER OFF SELECTION DISPLAY

## 4. VIBRATION/SILENT/MELODY 1 /MELODY 2 SELECTION

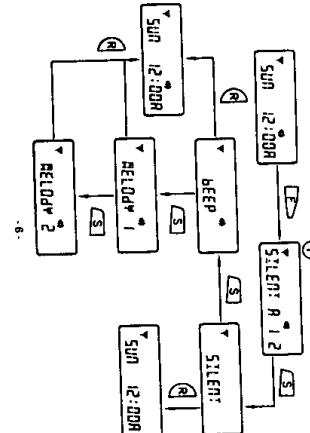

① CURRENT TIME/STARTING STAGE: PUSH  $\square$  BUTTON ONE TIME. IF YOU PUSH  $\square$  FOR A FEW SECONDS, IF YOU PUSH  $\square$  SELECTED AND CURRENT TIME/STARTING STAGE WILL BE DISPLAYED

② IN THE FIG. 1, IF YOU PUSH  $\square$  BUTTON TWO TIMES, "SILENT" WILL BE DISPLAYED ON LCD AND YOU CAN HEAR BEEP SOUND AND CURRENT TIME/STARTING STAGE WILL BE DISPLAYED AS PAGING SOUND

③ IN THE FIG. 1, IF YOU PUSH  $\square$  BUTTON THREE TIMES, "MELODY 1" WILL BE DISPLAYED


④ IN THE FIG. 1, IF YOU PUSH  $\square$  BUTTON FOUR TIMES, "MELODY 2" WILL BE DISPLAYED

⑤ IN THE FIG. 1, IF YOU PUSH  $\square$  BUTTON FIVE TIMES, "MELODY 1" WILL BE DISPLAYED

⑥ IN THE FIG. 1, IF YOU PUSH  $\square$  BUTTON SIX TIMES, "MELODY 2" WILL BE DISPLAYED

⑦ IN THE FIG. 1, IF YOU PUSH  $\square$  BUTTON SEVEN TIMES, "SILENT" WILL BE DISPLAYED

## 5. POWER ON/OFF SELECTION

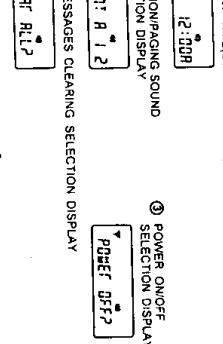


① IN THE CURRENT TIME/STARTING STAGE, PUSH  $\square$  BUTTON TWO TIMES

② IF YOU PUSH  $\square$  BUTTON ONE TIME, POWER TURNS OFF (AT THIS TIME, PAGER CAN'T RECEIVE MESSAGE AND TIME ONLY WILL BE DISPLAYED)

③ TO TURN POWER ON, PUSH  $\square$  BUTTON IN THE FIG. 3 (POWER OFF AND DISPLAY WILL BE RETURNED TO CURRENT TIME/STARTING STAGE)

## 6. MESSAGE CHECKING (LOCKING/UNLOCKING/INDIVIDUAL CLEARING)

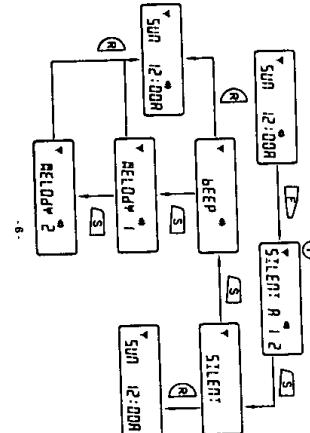

① IN CURRENT TIME/STARTING STAGE, IF YOU PUSH  $\square$  BUTTON ONE TIME, RECEIVED TIME ADDRESS AND CALL TYPE OF THE MESSAGE WILL BE DISPLAYED


② IN THE FIG. 1, IF YOU PUSH  $\square$  BUTTON ONE TIME, THE RECEIVED MESSAGE WILL BE DISPLAYED AND THE MESSAGE WILL BE EXTENDED OVER 15 DIGITS

③ IN THE FIG. 1, IF YOU PUSH  $\square$  BUTTON ONE TIME, MESSAGE LENGTH FOR OVER TWO SECONDS CONTINUOUSLY DISPLAYED AT THIS TIME, THE NEXT MESSAGE WILL BE DISPLAYED AS PAGED SOUND

④ IN THE FIG. 1, IF YOU PUSH  $\square$  BUTTON ONE MORE TIME, LOCKING WILL BE RELEASED AND THE RECEIVED MESSAGE WILL BE STORED. AT THIS TIME, IF YOU PUSH  $\square$  AND  $\square$  SEVEN SECONDS, ALL MESSAGES WILL BE CLEARED AND IF YOU PUSH  $\square$  FOR OVER TWO SECONDS, MESSAGE WILL BE CLEARED AND IF YOU PUSH  $\square$  THE NEXT MESSAGE WILL BE DISPLAYED

⑤ AFTER CHECKING ALL RECEIVED MESSAGES, IF YOU PUSH  $\square$  BUTTON, YOU CAN HEAR BEEP SOUND AND CURRENT TIME/STARTING STAGE WILL BE DISPLAYED

## 7. ALL MESSAGES CLEARING (EXCEPTING THE LOCKED MESSAGE)

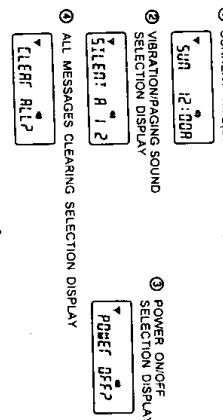


① IN THE CURRENT TIME/STARTING STAGE, PUSH  $\square$  BUTTON THREE TIMES (IN THE FIG. 1, IF YOU PUSH  $\square$  BUTTON ONE TIME, ALL RECEIVED MESSAGES WILL BE CLEARED, AND CURRENT TIME/STARTING STAGE WILL BE DISPLAYED AS PAGED SOUND)

② IN THE FIG. 1, IF YOU PUSH  $\square$  BUTTON ONE TIME IN THE FIG. 2, A DAY OF THE WEEK WILL BE BLINKING, AND CURRENT TIME/STARTING STAGE WILL BE DISPLAYED AS PAGED SOUND

③ AFTER ADJUSTMENT IF YOU PUSH  $\square$  BUTTON, THE WEEK WILL BE DISPLAYED

## 8. A DAY OF THE WEEK AND TIME ADJUSTMENT

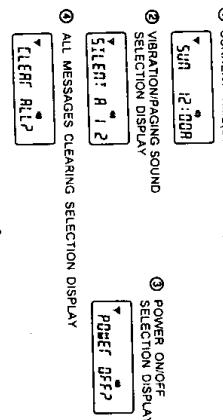


① PUSH  $\square$  BUTTON FOUR TIMES IN CURRENT TIME/STARTING STAGE

② IF YOU PUSH  $\square$  BUTTON ONE TIME IN THE FIG. 1, A DAY OF THE WEEK WILL BE SET, AND CURRENT TIME/STARTING STAGE WILL BE DISPLAYED AS PAGED SOUND

③ AT THIS TIME, YOU CAN CHANGE DIGITS WITH  $\square$  BUTTON AND CAN ADJUST DISPLAY WITH  $\square$  BUTTON BY MOVING

④ AFTER ADJUSTMENT IF YOU PUSH  $\square$  BUTTON, THE WEEK WILL BE DISPLAYED

## 9. TIME AND A DAY OF THE WEEK SELECTION DISPLAY

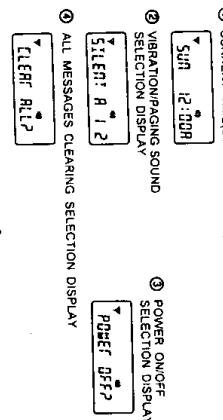

① SET: TIME?

② SET: TIME?

③ SET: TIME?

④ SET: TIME?

⑤ SET: TIME?


⑥ SET: TIME?

⑦ SET: TIME?

⑧ SET: TIME?

⑨ SET: TIME?

## 10. ALARM ON/OFF SELECTION DISPLAY

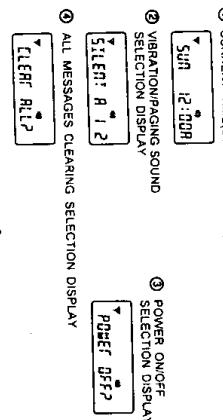

① SET: RINGER?

② SET: RINGER?

③ SET: RINGER?

④ SET: RINGER?

⑤ SET: RINGER?


⑥ SET: RINGER?

⑦ SET: RINGER?

⑧ SET: RINGER?

⑨ SET: RINGER?

## 11. RINGER ON/OFF SELECTION DISPLAY

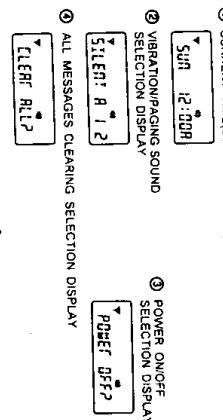

① RINGER ON?

② RINGER ON?

③ RINGER ON?

④ RINGER ON?

⑤ RINGER ON?


⑥ RINGER ON?

⑦ RINGER ON?

⑧ RINGER ON?

⑨ RINGER ON?

## 12. AUTOMATIC POWER ON/OFF SELECTION DISPLAY

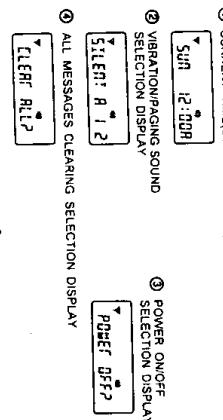

① AUTO POWER ON?

② AUTO POWER ON?

③ AUTO POWER ON?

④ AUTO POWER ON?

⑤ AUTO POWER ON?


⑥ AUTO POWER ON?

⑦ AUTO POWER ON?

⑧ AUTO POWER ON?

⑨ AUTO POWER ON?

## 13. POWER ON/OFF SELECTION DISPLAY

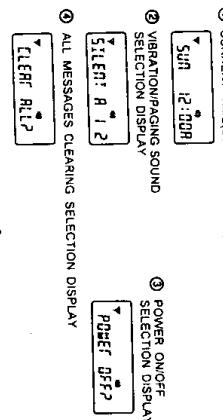

① POWER ON?

② POWER ON?

③ POWER ON?

④ POWER ON?

⑤ POWER ON?


⑥ POWER ON?

⑦ POWER ON?

⑧ POWER ON?

⑨ POWER ON?

## 14. VIBRATION/PAGING SOUND SELECTION DISPLAY

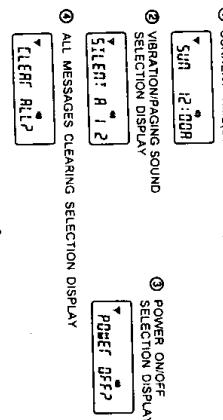

① VIBRATION/PAGING SOUND

② VIBRATION/PAGING SOUND

③ VIBRATION/PAGING SOUND

④ VIBRATION/PAGING SOUND

⑤ VIBRATION/PAGING SOUND


⑥ VIBRATION/PAGING SOUND

⑦ VIBRATION/PAGING SOUND

⑧ VIBRATION/PAGING SOUND

⑨ VIBRATION/PAGING SOUND

## 15. MESSAGE EXTENTION SELECTION DISPLAY

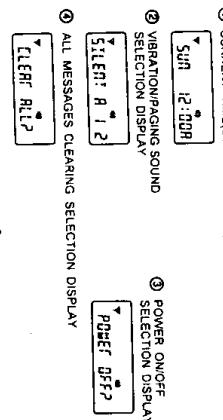

① MESSAGE EXTENTION

② MESSAGE EXTENTION

③ MESSAGE EXTENTION

④ MESSAGE EXTENTION

⑤ MESSAGE EXTENTION


⑥ MESSAGE EXTENTION

⑦ MESSAGE EXTENTION

⑧ MESSAGE EXTENTION

⑨ MESSAGE EXTENTION

## 16. SILENT/MELODY 1 /MELODY 2 SELECTION DISPLAY

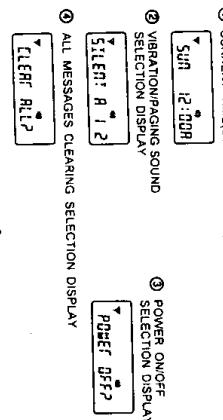

① SILENT/MELODY 1

② SILENT/MELODY 1

③ SILENT/MELODY 1

④ SILENT/MELODY 1

⑤ SILENT/MELODY 1


⑥ SILENT/MELODY 1

⑦ SILENT/MELODY 1

⑧ SILENT/MELODY 1

⑨ SILENT/MELODY 1

## 17. POWER ON/OFF SELECTION DISPLAY

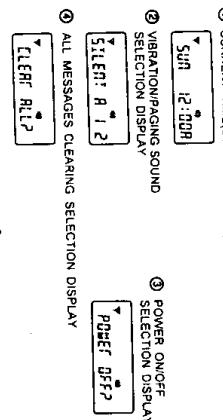

① POWER ON/OFF

② POWER ON/OFF

③ POWER ON/OFF

④ POWER ON/OFF

⑤ POWER ON/OFF


⑥ POWER ON/OFF

⑦ POWER ON/OFF

⑧ POWER ON/OFF

⑨ POWER ON/OFF

## 18. ALARM ON/OFF SELECTION DISPLAY

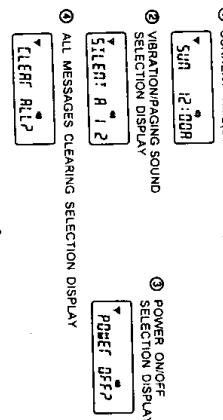

① RINGER ON/OFF

② RINGER ON/OFF

③ RINGER ON/OFF

④ RINGER ON/OFF

⑤ RINGER ON/OFF


⑥ RINGER ON/OFF

⑦ RINGER ON/OFF

⑧ RINGER ON/OFF

⑨ RINGER ON/OFF

## 19. RINGER ON/OFF SELECTION DISPLAY

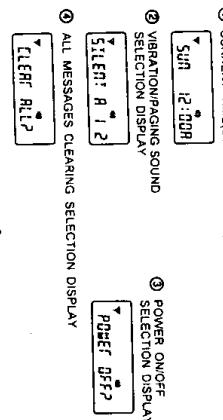

① RINGER ON/OFF

② RINGER ON/OFF

③ RINGER ON/OFF

④ RINGER ON/OFF

⑤ RINGER ON/OFF


⑥ RINGER ON/OFF

⑦ RINGER ON/OFF

⑧ RINGER ON/OFF

⑨ RINGER ON/OFF

## 20. AUTOMATIC POWER ON/OFF SELECTION DISPLAY

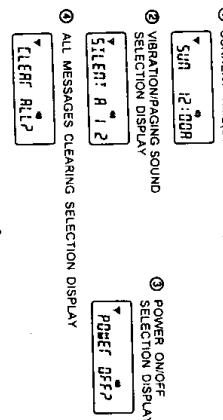

① AUTO POWER ON/OFF

② AUTO POWER ON/OFF

③ AUTO POWER ON/OFF

④ AUTO POWER ON/OFF

⑤ AUTO POWER ON/OFF


⑥ AUTO POWER ON/OFF

⑦ AUTO POWER ON/OFF

⑧ AUTO POWER ON/OFF

⑨ AUTO POWER ON/OFF

## 21. POWER ON/OFF SELECTION DISPLAY

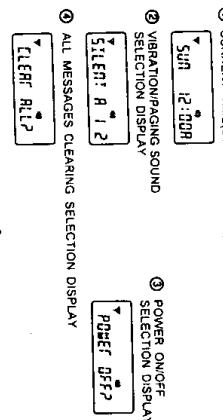

① POWER ON/OFF

② POWER ON/OFF

③ POWER ON/OFF

④ POWER ON/OFF

⑤ POWER ON/OFF


⑥ POWER ON/OFF

⑦ POWER ON/OFF

⑧ POWER ON/OFF

⑨ POWER ON/OFF

## 22. VIBRATION/PAGING SOUND SELECTION DISPLAY

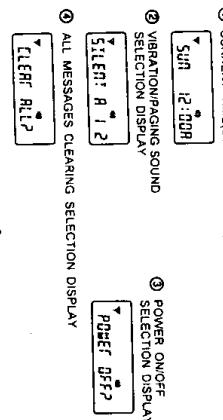

① VIBRATION/PAGING SOUND

② VIBRATION/PAGING SOUND

③ VIBRATION/PAGING SOUND

④ VIBRATION/PAGING SOUND

⑤ VIBRATION/PAGING SOUND


⑥ VIBRATION/PAGING SOUND

⑦ VIBRATION/PAGING SOUND

⑧ VIBRATION/PAGING SOUND

⑨ VIBRATION/PAGING SOUND

## 23. MESSAGE EXTENTION SELECTION DISPLAY

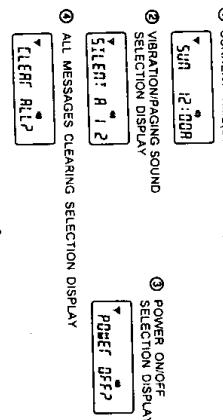

① MESSAGE EXTENTION

② MESSAGE EXTENTION

③ MESSAGE EXTENTION

④ MESSAGE EXTENTION

⑤ MESSAGE EXTENTION


⑥ MESSAGE EXTENTION

⑦ MESSAGE EXTENTION

⑧ MESSAGE EXTENTION

⑨ MESSAGE EXTENTION

## 24. SILENT/MELODY 1 /MELODY 2 SELECTION DISPLAY

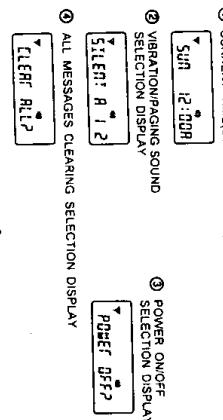

① SILENT/MELODY 1

② SILENT/MELODY 1

③ SILENT/MELODY 1

④ SILENT/MELODY 1

⑤ SILENT/MELODY 1


⑥ SILENT/MELODY 1

⑦ SILENT/MELODY 1

⑧ SILENT/MELODY 1

⑨ SILENT/MELODY 1

## 25. POWER ON/OFF SELECTION DISPLAY

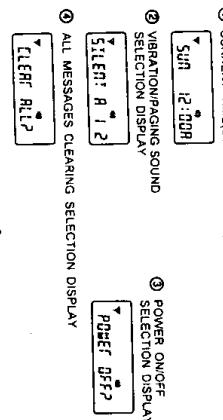

① POWER ON/OFF

② POWER ON/OFF

③ POWER ON/OFF

④ POWER ON/OFF

⑤ POWER ON/OFF


⑥ POWER ON/OFF

⑦ POWER ON/OFF

⑧ POWER ON/OFF

⑨ POWER ON/OFF

## 26. ALARM ON/OFF SELECTION DISPLAY

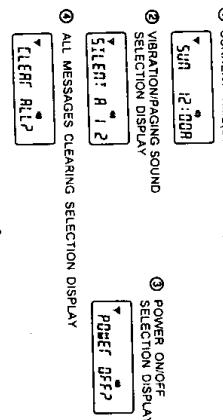

① RINGER ON/OFF

② RINGER ON/OFF

③ RINGER ON/OFF

④ RINGER ON/OFF

⑤ RINGER ON/OFF


⑥ RINGER ON/OFF

⑦ RINGER ON/OFF

⑧ RINGER ON/OFF

⑨ RINGER ON/OFF

## 27. RINGER ON/OFF SELECTION DISPLAY

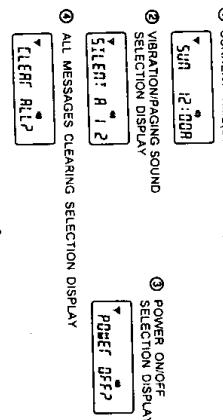

① RINGER ON/OFF

② RINGER ON/OFF

③ RINGER ON/OFF

④ RINGER ON/OFF

⑤ RINGER ON/OFF


⑥ RINGER ON/OFF

⑦ RINGER ON/OFF

⑧ RINGER ON/OFF

⑨ RINGER ON/OFF

## 28. AUTOMATIC POWER ON/OFF SELECTION DISPLAY

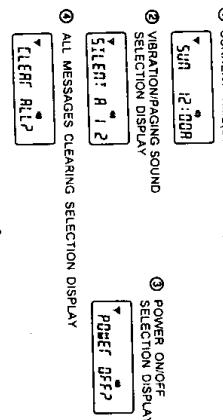

① AUTO POWER ON/OFF

② AUTO POWER ON/OFF

③ AUTO POWER ON/OFF

④ AUTO POWER ON/OFF

⑤ AUTO POWER ON/OFF


⑥ AUTO POWER ON/OFF

⑦ AUTO POWER ON/OFF

⑧ AUTO POWER ON/OFF

⑨ AUTO POWER ON/OFF

## 29. POWER ON/OFF SELECTION DISPLAY

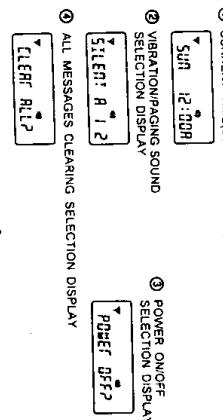

① POWER ON/OFF

② POWER ON/OFF

③ POWER ON/OFF

④ POWER ON/OFF

⑤ POWER ON/OFF


⑥ POWER ON/OFF

⑦ POWER ON/OFF

⑧ POWER ON/OFF

⑨ POWER ON/OFF

## 30. VIBRATION/PAGING SOUND SELECTION DISPLAY

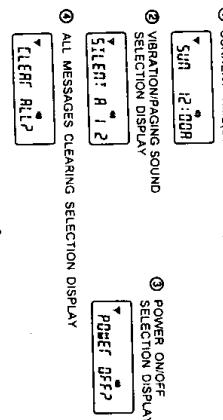

① VIBRATION/PAGING SOUND

② VIBRATION/PAGING SOUND

③ VIBRATION/PAGING SOUND

④ VIBRATION/PAGING SOUND

⑤ VIBRATION/PAGING SOUND


⑥ VIBRATION/PAGING SOUND

⑦ VIBRATION/PAGING SOUND

⑧ VIBRATION/PAGING SOUND

⑨ VIBRATION/PAGING SOUND

## 31. MESSAGE EXTENTION SELECTION DISPLAY

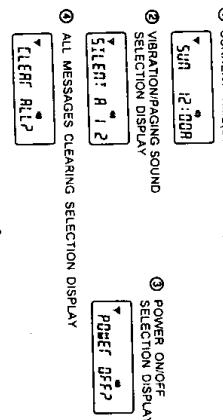

① MESSAGE EXTENTION

② MESSAGE EXTENTION

③ MESSAGE EXTENTION

④ MESSAGE EXTENTION

⑤ MESSAGE EXTENTION


⑥ MESSAGE EXTENTION

⑦ MESSAGE EXTENTION

⑧ MESSAGE EXTENTION

⑨ MESSAGE EXTENTION

## 32. SILENT/MELODY 1 /MELODY 2 SELECTION DISPLAY

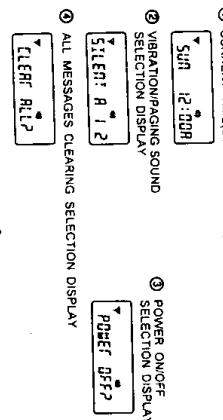

① SILENT/MELODY 1

② SILENT/MELODY 1

③ SILENT/MELODY 1

④ SILENT/MELODY 1

⑤ SILENT/MELODY 1


⑥ SILENT/MELODY 1

⑦ SILENT/MELODY 1

⑧ SILENT/MELODY 1

⑨ SILENT/MELODY 1

## 33. POWER ON/OFF SELECTION DISPLAY

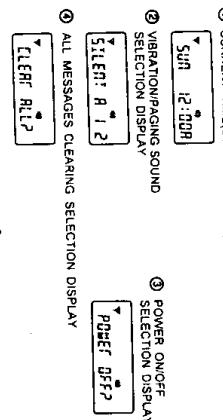

① POWER ON/OFF

② POWER ON/OFF

③ POWER ON/OFF

④ POWER ON/OFF

⑤ POWER ON/OFF


⑥ POWER ON/OFF

⑦ POWER ON/OFF

⑧ POWER ON/OFF

⑨ POWER ON/OFF

## 34. ALARM ON/OFF SELECTION DISPLAY

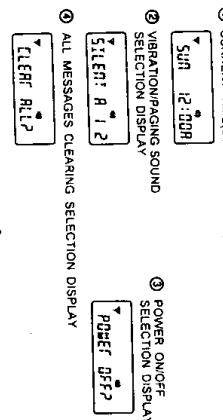

① RINGER ON/OFF

② RINGER ON/OFF

③ RINGER ON/OFF

④ RINGER ON/OFF

⑤ RINGER ON/OFF


⑥ RINGER ON/OFF

⑦ RINGER ON/OFF

⑧ RINGER ON/OFF

⑨ RINGER ON/OFF

## 35. RINGER ON/OFF SELECTION DISPLAY

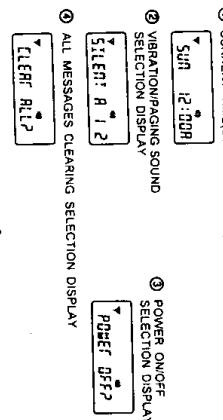

① RINGER ON/OFF

② RINGER ON/OFF

③ RINGER ON/OFF

④ RINGER ON/OFF

⑤ RINGER ON/OFF


⑥ RINGER ON/OFF

⑦ RINGER ON/OFF

⑧ RINGER ON/OFF

⑨ RINGER ON/OFF

## 36. AUTOMATIC POWER ON/OFF SELECTION DISPLAY

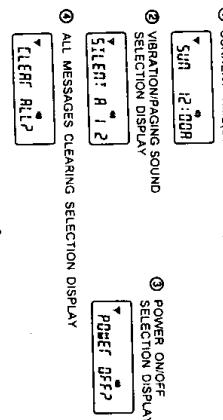

① AUTO POWER ON/OFF

② AUTO POWER ON/OFF

③ AUTO POWER ON/OFF

④ AUTO POWER ON/OFF

⑤ AUTO POWER ON/OFF


⑥ AUTO POWER ON/OFF

⑦ AUTO POWER ON/OFF

⑧ AUTO POWER ON/OFF

⑨ AUTO POWER ON/OFF

## 37. POWER ON/OFF SELECTION DISPLAY

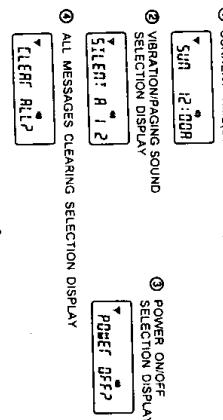

① POWER ON/OFF

② POWER ON/OFF

③ POWER ON/OFF

④ POWER ON/OFF

⑤ POWER ON/OFF


⑥ POWER ON/OFF

⑦ POWER ON/OFF

⑧ POWER ON/OFF

⑨ POWER ON/OFF

## 38. VIBRATION/PAGING SOUND SELECTION DISPLAY

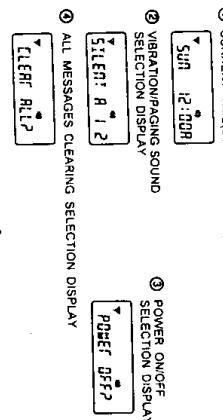

① VIBRATION/PAGING SOUND

② VIBRATION/PAGING SOUND

③ VIBRATION/PAGING SOUND

④ VIBRATION/PAGING SOUND

⑤ VIBRATION/PAGING SOUND


⑥ VIBRATION/PAGING SOUND

⑦ VIBRATION/PAGING SOUND

⑧ VIBRATION/PAGING SOUND

⑨ VIBRATION/PAGING SOUND

## 39. MESSAGE EXTENTION SELECTION DISPLAY

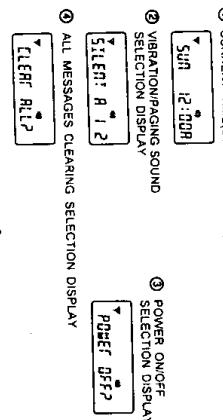

① MESSAGE EXTENTION

② MESSAGE EXTENTION

③ MESSAGE EXTENTION

④ MESSAGE EXTENTION

⑤ MESSAGE EXTENTION


⑥ MESSAGE EXTENTION

⑦ MESSAGE EXTENTION

⑧ MESSAGE EXTENTION

⑨ MESSAGE EXTENTION

## 40. SILENT/MELODY 1 /MELODY 2 SELECTION DISPLAY

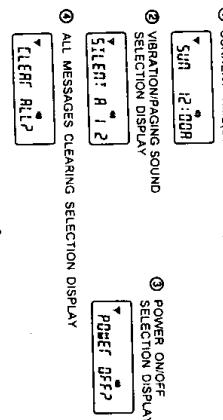

① SILENT/MELODY 1

② SILENT/MELODY 1

③ SILENT/MELODY 1

④ SILENT/MELODY 1

⑤ SILENT/MELODY 1


⑥ SILENT/MELODY 1

⑦ SILENT/MELODY 1

⑧ SILENT/MELODY 1

⑨ SILENT/MELODY 1

## 41. POWER ON/OFF SELECTION DISPLAY

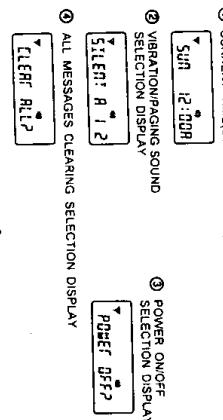

① POWER ON/OFF

② POWER ON/OFF

③ POWER ON/OFF

④ POWER ON/OFF

⑤ POWER ON/OFF


⑥ POWER ON/OFF

⑦ POWER ON/OFF

⑧ POWER ON/OFF

⑨ POWER ON/OFF

## 42. ALARM ON/OFF SELECTION DISPLAY

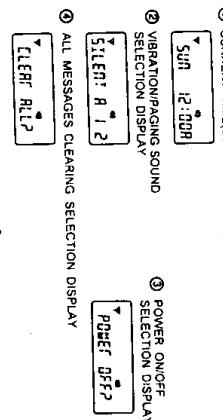

① RINGER ON/OFF

② RINGER ON/OFF

③ RINGER ON/OFF

④ RINGER ON/OFF

⑤ RINGER ON/OFF


⑥ RINGER ON/OFF

⑦ RINGER ON/OFF

⑧ RINGER ON/OFF

⑨ RINGER ON/OFF

## 43. RINGER ON/OFF SELECTION DISPLAY

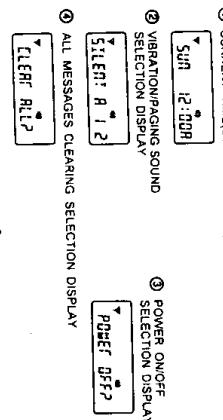

① RINGER ON/OFF

② RINGER ON/OFF

③ RINGER ON/OFF

④ RINGER ON/OFF

⑤ RINGER ON/OFF


⑥ RINGER ON/OFF

⑦ RINGER ON/OFF

⑧ RINGER ON/OFF

⑨ RINGER ON/OFF

## 44. AUTOMATIC POWER ON/OFF SELECTION DISPLAY

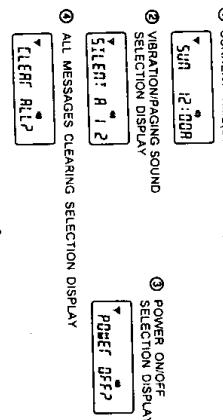

① AUTO POWER ON/OFF

② AUTO POWER ON/OFF

③ AUTO POWER ON/OFF

④ AUTO POWER ON/OFF

⑤ AUTO POWER ON/OFF


⑥ AUTO POWER ON/OFF

⑦ AUTO POWER ON/OFF

⑧ AUTO POWER ON/OFF

⑨ AUTO POWER ON/OFF

## 45. POWER ON/OFF SELECTION DISPLAY

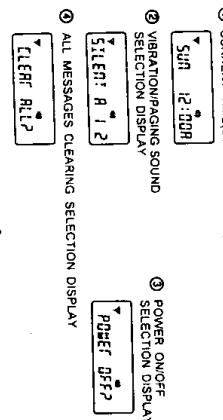

① POWER ON/OFF

② POWER ON/OFF

③ POWER ON/OFF

④ POWER ON/OFF

⑤ POWER ON/OFF


⑥ POWER ON/OFF

⑦ POWER ON/OFF

⑧ POWER ON/OFF

⑨ POWER ON/OFF

## 46. VIBRATION/PAGING SOUND SELECTION DISPLAY

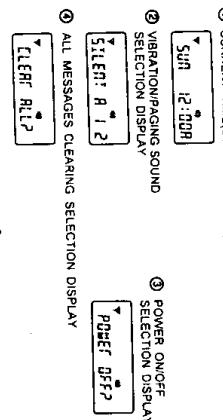

① VIBRATION/PAGING SOUND

② VIBRATION/PAGING SOUND

③ VIBRATION/PAGING SOUND

④ VIBRATION/PAGING SOUND

⑤ VIBRATION/PAGING SOUND


⑥ VIBRATION/PAGING SOUND

⑦ VIBRATION/PAGING SOUND

⑧ VIBRATION/PAGING SOUND

⑨ VIBRATION/PAGING SOUND

## 47. MESSAGE EXTENTION SELECTION DISPLAY

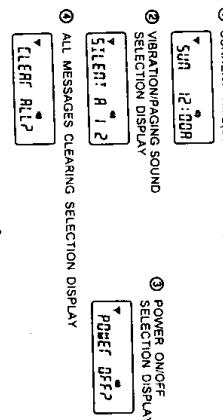

① MESSAGE EXTENTION

② MESSAGE EXTENTION

③ MESSAGE EXTENTION

④ MESSAGE EXTENTION</