

***EXHIBIT C***

***User Manual***

## FEATURES

1. High sensitivity cardioid capsule for your professional use.
2. Special noise absorption parts inside the barrels, which eliminate switch shock noise and handling noise.
3. Frequency with quartz locked control.
4. Easy-opening battery compartment for quick battery replacement. Powered by one 9V battery.
5. Low battery LED indicator.

## SPECIFICATION


- ★ RF Power Output
  - ★ Spurious Emissions
  - ★ Antenna
  - ★ Pre-Emphasis
  - ★ Microphone Element
  - ★ Battery
  - ★ Current Consumption
  - ★ Battery life
  - ★ Dimensions
  - ★ Weight
- : 30mW. (MAX.)
  - : 40 dB below carrier minimum;
  - : 50 dB, typical.
  - : Built in
  - : 50  $\mu$ S.
  - : Handheld Mic.: Electret Condenser Unit.
  - : The Clip Mic.: Electret Condenser Unit.
  - : Standard 9V battery.
  - : About 25mA.
  - : Over 8 hours continuous operation.
  - : Handheld Mic: 52(D)  $\times$  247(L)/mm.
  - : The Clip Mic: 106(L)  $\times$  71(W)  $\times$  26(H)/mm
  - : Handheld Mic: Approx. 224gs (W/Battery)
  - : The Clip Mic: Approx. 175gs (W/Battery)

## OPERATION


1. Open the battery holder in anticlockwise direction.
2. Insert a 9V battery into the battery holder according to polarity (+) and (-) indication marked on the battery house.
3. Fit battery housing back in clockwise direction.
4. Push the power switch to "ON", the LED indicator will flash to indicate the carrier frequency is sending out. The microphone is operating.
5. Push the power button to "OFF" when mic is not used. And remove the battery in microphone is not used for a long time, this will prevent any damage a defective "leaking" battery may cause.
6. Switch, the power "ON", the LED indicator is flashing that means power supply is normal. If the LED indicator is still on light that means the battery is in need of replacement. If no flashing, it must be no battery in there or battery is not properly inserted.

## HAND HELD MICROPHONE

1. Screen Head
2. Low Battery Led Indicator
3. Power Switch
4. Mic Housing
5. Battery Cover

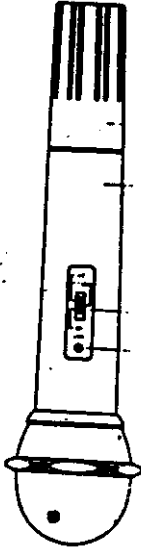

## TIE CLIP MICROPHONE

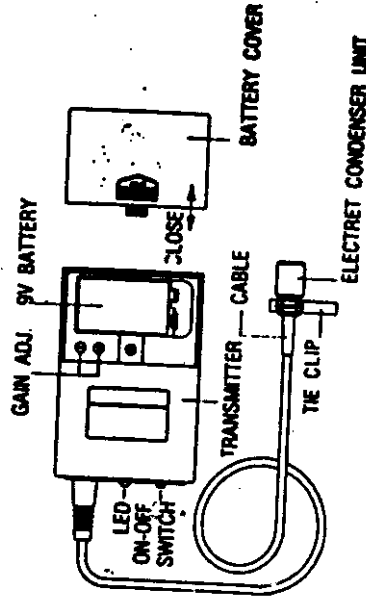

## NOTE:

THE WIRELESS HANDHELD OR LAVALIER MICROPHONE, TWO OR ABOVE WIRELESS MICROPHONE WHICH TRANSMIT AT THE SAME FREQUENCY CAN NOT BE USED AT THE SAME TIME & AREA.

## TROUBLE SHOOTING

Please take the time to read this manual, before asking after service. And checking follow points, if it also have unusual things, please contact with purchasing store. We are sincerely to serve for you.

1. Before connecting and operating the unit, check the voltage setting conforms to the voltage available in your area.
2. If the LED indicator is still on light that means power supply is in need of replacement. Please replace one new 9V battery and be sure the polarity (+) (-) of battery is connected properly.
3. Signal dropouts and noise may be suddenly encountered by interruption from outside, too long distance between microphone and receiver or battery in low power. In such a case, adjust receiver antenna or change new battery.
4. Do not drop the microphone on a hard concrete floor, nor strike the microphone head front with a fist or fingers, nor blow a breath strongly into the microphone head front.
5. Remove the battery in microphone is not used for a long time. This will prevent any damage a defective "leaking" battery may cause.