

EXHIBIT C

User Manual

MICROPHONE

VHF HIGH BAND


WIRELESS MICROPHONE SYSTEM

INSTRUMENT BELT PACK TRANSMITTER OPERATION

1. Open the battery door by sliding towards the arrow.
2. Insert a 9V battery into the battery holder according to polarity(+)and(-) indication marked on the battery housing.
3. Slide the battery door back on until it locks.
4. Push the power switch to the "ON" position. The LED will illuminate RED. If the LED indicator does not go on at all, it indicates that the battery is either dead or not properly inserted. Check the battery positions and try again. If the LED does not go on, change the battery.
5. If your wireless system is not going to be used for an extended length of time, removing the battery will prevent leakage and damage.

INSTRUMENT BELT PACK TRANSMITTER

1. LED
2. ON/OFF Switch
3. Heavy duty strain relief
4. 1/4" coax cable
5. Input plug for guitar or bass input
6. Battery Cover

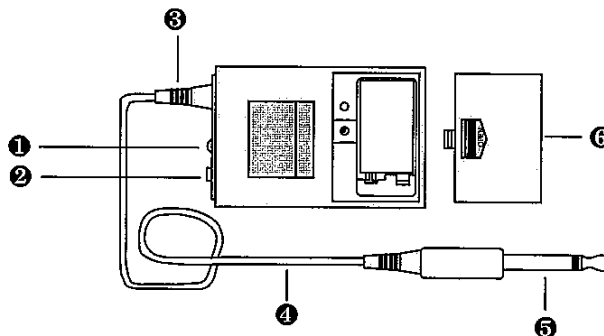

NOTE

THE WIRELESS INSTRUMENT BELT PACK TRANSMITTER, TWO OR ABOVE WIRELESS MICROPHONE WHICH TRANSMIT AT THE SAME FREQUENCY CAN NOT BE USED AT THE SAME TIME & AREA.

TROUBLE SHOOTING:

- Please take the time to read this manual, before asking after service. And checking following points. If it also has unusual things, please contact with purchasing store. We are sincerely to serve for you.
1. Before connecting and operating the unit, check the voltage setting conforms to the voltage available in your area.
 2. If the LED indicator is still on light that means power supply is in need of replacement. Please replace one new 9V battery and be sure the polarity (+)(-) of battery is connected properly.
 3. Signal dropouts and noise may be suddenly encountered by interruption from out side, too long distance between microphone and receiver or battery in low power. In such a case, adjust receiver antenna or change new battery.
 4. Do not drop the microphone on a hard concrete floor, nor strike the microphone head front with a fist or fingers, nor blow a breath strongly into the microphone head front.
 5. Remove the battery in microphone if not used for a long time. This will prevent any damage a defective "leaking" batter may cause.