

The EUT is a frequency modulation Transmitter / Wireless Microphone with following features :

Operation Frequency Range: 174MHz to 216MHz. Type of emission is 180KF3E for headset.

1. To adjust GT/MT Switch, and Gain Control, Simply push down both snap locks on the sides of battery cover and flip it backwards to expose the adjustment panel.
2. Before power on, ascertain if same channel was set up for both receiver and microphone. If not adjust to same channel accordingly.
3. The LED indicator flashes briefly when power on indicating normal battery status. If not flash occurs it has either no battery, the battery is drained or installed incorrectly. Change accordingly.
4. Plug the microphone connector into the input jack and tighten the connector screw by clockwise direction.