

***EXHIBIT C***

***User Manual***


## LAVALIER BELT PACK TRANSMITTER OPERATION

1. Open the battery door by sliding towards the arrow.
2. Insert a 9V battery into the battery holder according to polarity(+)and(-) indication marked on the battery housing.
3. Slide the battery door back on until it locks.
4. Push the power switch to the "ON" position. The LED will illuminate RED. If the LED indicator does not go on at all, it indicates that the battery is either dead or not properly inserted. Check the battery positioning and try again. If the LED does not go on, change the battery.
5. The lavalier mic clip should be placed as high as possible in a vertical line with your mouth. This is only a suggested position.
6. To adjust the sensitivity of the mic, remove the battery door and place a small screwdriver in the hole marked mic. slowly turn the screwdriver and speak into the mic until the volume is okay.
7. The lavalier wire is the transmit antenna. Do not roll up, coil or shorten during use. This cable must be kept as straight as possible.
8. If your wireless system is not going to be used for ant extended length of time, removing the battery will prevent leakage and damage.

## TRANSMITTER DESCRIPTION

1. Power on/off switch
2. Power on LED indicator
3. Heavy duty strain relief
4. 1/4" coax cable
5. Lavalier mic clip
6. 9V battery compartment

\* Comes complete with foam wind screen, tie clip and leather belt pack case.

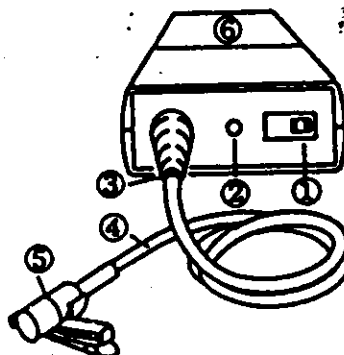

## ▶ TRANSMITTER MICROPHONE SPECIFICATIONS

• RF Power Output	:30mW. (MAX).
• Spurious Emissions	:40 dB below carrier minimum; 50 dB typical.
• Antenna	:Built in.
• Pre-Emphasis	:50µS.
• Microphone Element	:Unidirectional dynamic microphone.
• Battery	:Standard 9V battery.
• Current consumption	:About 25mA
• Battery life	:Over 8 hours continuous operation.
• Dimensions	: f 62[D] x 246[L]mm.
• Weight	:188gs.