

The bodypack transmitter operates in UHF band frequency with PLL synthesized control. UHF 16 or 64 preprogrammed selectable frequencies to avoid interference. Uni-directional condenser capsules with different characters for various choices. Use 1.5V x 2 AA size dry or rechargeable batteries for low operating cost.