


### Label


The label material is PVC with a permanent adhesive.

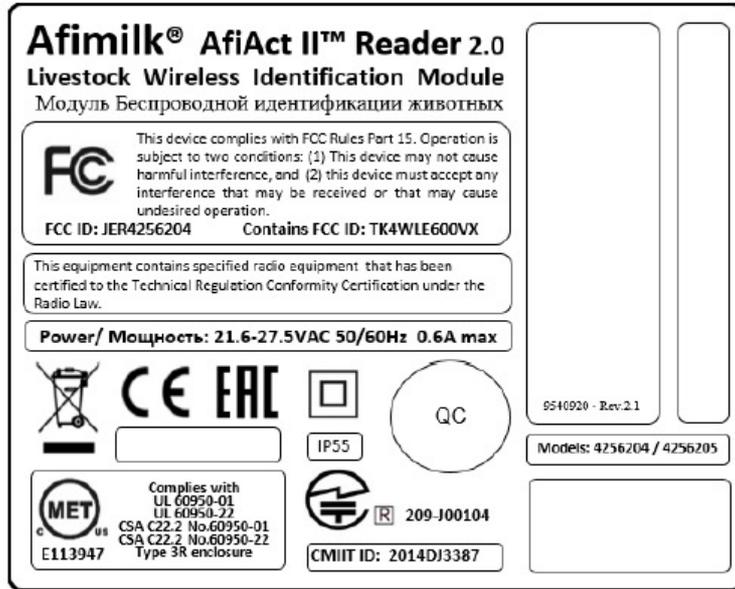

### Label location

Label with **FCC ID:JER4256204** will be located at the rear side panel of the reader as shown on the next page.

- 2.32. Place the rear panel on front cover.
- 2.33. Stick Permit Label p/n 9540920 on rear panel. See picture
- 2.34. Stick serial number p/n 9000600 in suitable place on Permit Label. See picture
- 2.35. Stick part number p/n 9000601 in suitable place on Permit Label. See picture
- 2.36. Fasten the rear panel to the front panel with 14 screw's p/n 9020941. Insert the screws into the bosses and fix with single rotation of screw. Then tighten the screws to 0.95Nm using the diagonally opposite method.
- 2.37. Connect reader bracket p/n 5001028 and close with 4 screw's p/n 9020701.  
Closing torque 0.95Nm
- 2.38. Roll the power cable to a diameter of 8~11 cm and fasten using 2 Plastic wire ties p/n.9000452
- 2.39. Test functions according to document number: 4256204-TDe.

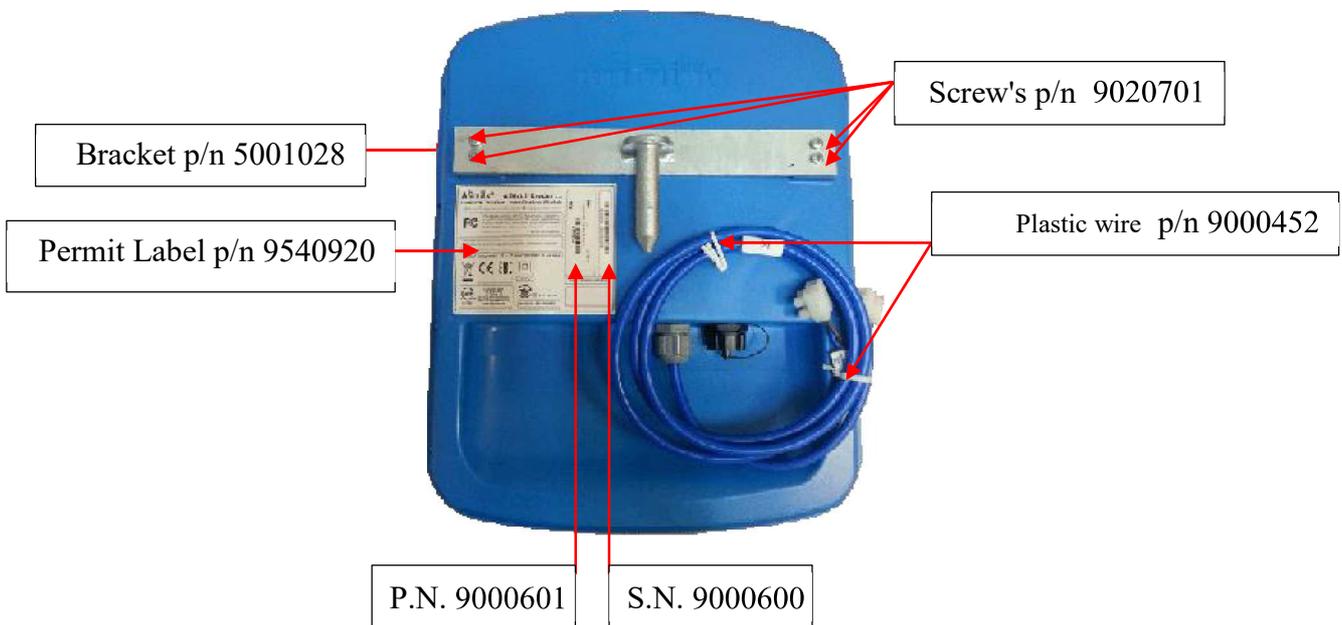

|                                                                                                                                                |                                                             |                                               |                   |             |              |             |
|------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------|-----------------------------------------------|-------------------|-------------|--------------|-------------|
| <b>FILE NAME:</b><br>S:\ENG\PROJ\ELEC\FILES\4256204_5\4256204-PSe_V01.docx                                                                     |                                                             | <b>NO.</b>                                    | <b>CHANGE NO.</b> | <b>REV</b>  | <b>SIGN.</b> | <b>DATE</b> |
| <b>ADDITIONAL DETAILS:</b><br>4256205                                                                                                          |                                                             | 1                                             |                   | 01          | Meir         | 09.06.16    |
| <b>PAGE NO: 9</b>   <b>OF:9</b>                                                                                                                | <b>SUBJECT:</b><br>AfiAct II reader V2.0, 916MHz final assy |                                               |                   |             |              |             |
| <b>DOC NO.:</b><br>4256204-PSe                                                                                                                 |                                                             | <b>THIS ASSEMBLY:</b><br>Assembly instruction |                   | <b>NAME</b> | <b>SIGN.</b> | <b>DATE</b> |
| <b>MOTHER</b>                                                                                                                                  |                                                             | <b>EDIT:</b>                                  |                   | Meir        |              | 5.5.16      |
|                                                                                                                                                | <b>CONFIRM:</b>                                             |                                               | Ron               | Ron         | 26.06.16     |             |
| <b>This document is Afimilk property, and must not be copied delivered or shown to any third party without a written consent from Afimilk.</b> |                                                             |                                               |                   |             |              |             |