

Professional UHF Wireless Systems

Installation and Operation

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

This device complies with INDUSTRY CANADA R.S.S. 210, en conformité avec IC: RSS-210/CNRT10. Operation is subject to the following conditions: 1) This device may not cause harmful interference and 2) this device must accept any interference received, including interference which may cause undesired operation.

CAUTION! Electrical shock can result from removal of the receiver cover. Refer servicing to qualified service personnel. No user-serviceable parts inside. Do not expose to rain or moisture.

The circuits inside the receiver and transmitter have been precisely adjusted for optimum performance and compliance with federal regulations. Do not attempt to open the receiver or transmitter. To do so will void the warranty, and may cause improper operation.

Individuals with implanted cardiac pacemakers or AICD devices: Please see notice on back cover.

Introduction

Thank you for choosing an Audio-Technica professional wireless system. You have chosen one of our most reliable products, one that has been tested and approved by thousands of other satisfied customers who have chosen our products because of their quality, performance and reliability. This Audio-Technica wireless microphone system is the successful result of years of design and manufacturing experience.

This professional wireless system includes a receiver and either a body-pack or a handheld transmitter on a specific crystal-controlled frequency.

The receiver features true diversity reception. Two antennas feed two completely independent RF sections on the same frequency; automatic logic circuitry continuously compares and selects the superior received signal, providing better sound quality and reducing the possibility of interference and dropouts. The receiver is made to be mounted in a standard 19" rack (1U).

The versatile UniPak™ body-pack transmitter has both low- and high-impedance inputs plus a bias connection, for use with dynamic and electret condenser microphones, as well as Hi-Z instrument pickups. Both the handheld and UniPak transmitters use internal 9-volt batteries and have Off/Standby/On switches, battery condition indicators, and battery-save switches.

Please note that in multiple-system applications there must be a transmitter-receiver combination on a *separate* frequency for each input desired (only one transmitter for each receiver). Operating frequency information will be found on page 7.

Receiver Installation

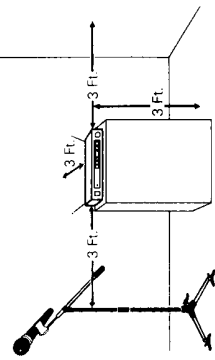


Fig. A Receiver Location

Location
For best operation the receiver should be at least 3 ft. above the ground and at least 3 ft. away from a wall or metal surface to minimize reflections. The transmitter should also be at least 3 ft. away from the receiver, as shown in Figure A.

Keep antennas away from noise sources such as motors, automobiles, and neon lights, as well as large metal objects.

Output Connections
There are two audio outputs on the back of the receiver: balanced (220 mV) and unbalanced (350 mV). Use shielded audio cable for the connection between the receiver and the mixer. If the input of the mixer is a 1/4" jack, connect a cable from the 1/4" unbalanced audio output on the back of the receiver to the mixer. If the input of the mixer is an XLR-type input, connect a cable from the balanced XLR-type audio output on the back of the receiver to the mixer.

The two isolated audio outputs permit simultaneous feeds to both unbalanced and balanced inputs. For example, both a guitar amp and a mixer can be driven by the receiver.

Antennas
Attach the antennas to the antenna input jacks. The antennas are normally positioned in the shape of a "V" (45° from vertical) for best reception (Fig. A).

The optional accessory ATW-RA1 rack-mount antenna kit brings antenna inputs to the front of the receiver.

Power Connections
Connect the included AD1205A AC adapter to the DC power input on the back of the receiver. Then plug the adapter into a standard 120 volt 60 Hz AC power outlet.

Receiver Controls and Functions

Fig. B Receiver Front Panel


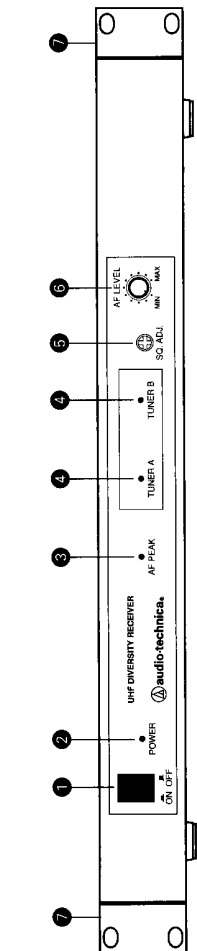


Fig. C Receiver Rear Panel

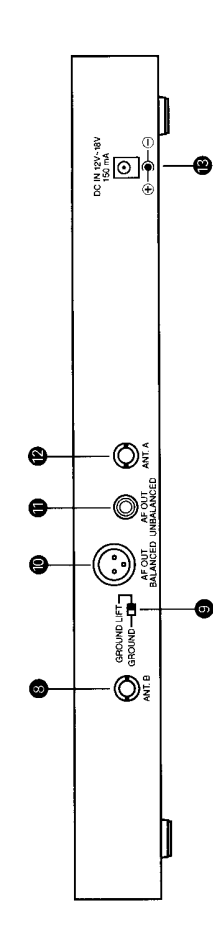

Front Panel Controls and Functions (Fig. B)

- POWER SWITCH:** Press switch on, and the "Power" indicator will light.
- POWER INDICATOR:**
- AF PEAK INDICATOR:** Indicates when maximum transmitter modulation without distortion has been reached.
- TUNER OPERATION INDICATORS:** Indicate which tuner has the better reception and is in operation.
- SQUELCH CONTROL:** Adjusts level of noise-muting circuit (preset at factory but can be adjusted as circumstances warrant).
- AF LEVEL CONTROL:** Adjusts the level at both audio output jacks. Does not affect AF Peak indicator.
- MOUNTING ADAPTERS:** For mounting the receiver in any standard 19" rack. Attach to receiver with screws supplied.

Rear Panel Controls and Functions (Fig. C)

- TUNER "B": ANTENNA JACK:** Antenna connector for an antenna cable.
- GROUND LIFT SWITCH:** Disconnects the ground pin of the balanced output (10) from ground. Normally, the switch should be to the left (ground connected). If hum caused by a ground loop occurs, slide switch to the right.
- BALANCED AUDIO OUTPUT JACK:** XLRW-type connector. A standard 2-conductor shielded cable can be used to connect the receiver output to a balanced aux-level input on a mixer.
- UNBALANCED AUDIO OUTPUT JACK:** 1/4" phone jack. Can be connected to an unbalanced aux-level input of a mixer or tape recorder.
- TUNER "A": ANTENNA JACK:** Antenna connector for an antenna cable.
- DC POWER INPUT:** For the provided AD1205A AC adapter, or other 12-18V DC source. (Receiver requires 150 mA.)

Check the frequency of the system against the chart on page 7 to ensure you have the proper frequency for your area. Operating frequency is shown on the back panel of the receiver and on the transmitter.

Turn down the AF Level control of the receiver as well as the mixer. Switch on the receiver only. Do not switch on the transmitter yet.

Receiver On
The power indicator will light up.

Transmitter On
The transmitters have a 3-position power switch. When the switch is set to "Standby," the transmitter produces RF with no audio signal. When the switch is "On," the transmitter produces both RF and audio. With the switch "Off," there is minimum noise output due to a special A-I muting system.

Receiver Squelch
The squelch control on the front panel of the receiver is preset at the factory, but can be adjusted if you must use the system in an area with considerable RF interference. If there is audio output from the receiver when your transmitter is off, adjust the squelch control so the system will receive the signal from your transmitter but "squell" or eliminate the unwanted background RF noise. This adjustment can cause a reduction in useable range of the wireless transmitter, so set the control to the lowest position that reliably mutes the unwanted RF signals.

Input Level Adjustment
Input trimmer controls in the transmitters enable you to use microphones or guitars with different sensitivities, or to adjust for different acoustic levels.

CAUTION! The small trimmer controls are delicate; use only the supplied screwdriver. Do not force the trimmers beyond their normal 180° range of rotation.

 
Return the screwdriver to its storage clip when not in use.

Battery Selection
An alkaline 9-volt battery is recommended.

UniPak™ Transmitter Battery Installation
1. Slide off the battery cover as shown in Figure D.

2. Carefully insert a fresh 9-volt alkaline battery, observing correct polarity as marked inside the battery compartment. The transmitter housing is designed to prevent incorrect installation of the battery. Do not force the battery in.

3. Replace the battery cover (Fig. E).






Battery Condition Indicator
The red battery condition indicator (Fig. H/I) should light strongly with a fresh battery. As the battery weakens, the indicator will grow dimmer. When the indicator becomes very dim or goes out, there is little life left in the battery. Replace it at once for continued operation of the transmitter.

Battery-Save Switch
All transmitters feature battery-save switches (Fig. D/F). As supplied, the switch is set in the "H" (high) position for maximum range. Switching to the "L" (low) position increases battery life by reducing power. (Note: Effective range decreases when the switch is set at the "L" position.)

Fig. H
Power Switch Off/Standby/On
Battery Condition Indicator



 
 
 
Fig. I
BATT. STBY ON OFF
Power Switch On/Standby/Off
Battery Condition Indicator



Handheld Transmitter Battery Installation
1. While holding the upper part of the transmitter body just below the ball-screen, unscrew the lower body cover and slide it downward to expose the battery compartment.

2. Lift the white "battery keeper" arm, and insert a 9V battery. Be certain to observe correct polarity as marked inside the battery compartment (Fig. F). The transmitter housing is designed to prevent incorrect installation of the battery. Do not force the battery in.

     3. Replace the lower body cover. Do not overtighten.



Adjusting Input Levels - UniPak Transmitter
Slide the battery cover off the top part of transmitter and remove the screwdriver from its clip (Fig. D). Gently turn the "MT" (mic trimmer) and "GT" (guitar trimmer) controls to their full counter-clockwise positions.

Microphone: Adjusting input level
While speaking/singing into the microphone at typically-loud levels, carefully turn the MT control clockwise while watching the receiver's AF Peak indicator. Increase the MT control setting until the AF Peak indicator lights. This indicates that maximum transmitter modulation without significant distortion has been reached. (When using a guitar, return the MT control setting to minimum.)

Guitar/Instrument: Adjusting input level
While playing at typically-loud levels, carefully turn the GT control clockwise while watching the receiver's AF Peak indicator. Increase the GT control setting until the AF Peak indicator lights. This indicates that maximum transmitter modulation without significant distortion has been reached. (When using a microphone, return the GT control setting to minimum.)

Adjusting Input Level - Handheld Transmitter
Unscrew the lower body cover and slide it downward, exposing the screwdriver and gain trimmer (Fig. G). Remove the screwdriver and gently turn the gain trimmer control to its full counter-clockwise position.

While speaking/singing into the microphone at typically-loud levels, carefully turn the trimmer control clockwise while watching the receiver's AF Peak indicator. Increase the control setting until the AF Peak indicator lights. This indicates that maximum transmitter modulation without significant distortion has been reached.

Return the screwdriver to its clip and close and secure the lower body. (Make certain that the white "battery keeper" arm is inside the body.) No further transmitter gain adjustments should be needed, as long as the acoustic input does not change significantly.

Use only fresh alkaline batteries. Do not use "general purpose" (carbon-zinc) batteries.

Position the receiver so that it has the fewest possible obstructions between it and the normal location of the transmitter. Line-of-sight is best.

The transmitter and the receiver should be as close together as conveniently possible, but no closer together than three feet.

The receiver antennas should be in the open and away from any metal. If in a rack, leave the unit on top or angle antennas outward away from the metal rack.

A receiver cannot receive signals from two transmitters at the same time.

In the UniPak transmitter, the "MT" or "GT" input control not in use should be set to minimum.

For best operation, adjust the guitar or mic trimmer only until the maximum output lights the AF Peak indicator (don't overmodulate).

Position the receiver so that it has the fewest possible obstructions between it and the normal location of the transmitter. Line-of-sight is best.

The transmitter and the receiver should be as close together as conveniently possible, but no closer together than three feet.

The receiver antennas should be in the open and away from any metal. If in a rack, leave the unit on top or angle antennas outward away from the metal rack.

A receiver cannot receive signals from two transmitters at the same time.

In the UniPak transmitter, the "MT" or "GT" input control not in use should be set to minimum.

For best operation, adjust the guitar or mic trimmer only until the maximum output lights the AF Peak indicator (don't overmodulate).

Use only fresh alkaline batteries. Do not use "general purpose" (carbon-zinc) batteries.

Position the receiver so that it has the fewest possible obstructions between it and the normal location of the transmitter. Line-of-sight is best.

The transmitter and the receiver should be as close together as conveniently possible, but no closer together than three feet.

The receiver antennas should be in the open and away from any metal. If in a rack, leave the unit on top or angle antennas outward away from the metal rack.

A receiver cannot receive signals from two transmitters at the same time.

In the UniPak transmitter, the "MT" or "GT" input control not in use should be set to minimum.

For best operation, adjust the guitar or mic trimmer only until the maximum output lights the AF Peak indicator (don't overmodulate).

Specifications

OVERALL SYSTEM

Operating Frequency	UHF band, 732 MHz to 746 MHz (U.S. and Canada); 944 MHz to 952 MHz (U.S. only)
Frequency Stability	<0.005%
Modulation Mode	FM
Maximum Deviation	±15 kHz
Operating Range	200' minimum
Operating Temperature Range	40° F (4° C) to 110° F (43° C)
Frequency Response	100 Hz to 15 kHz

RECEIVER

Receiving System	Dual independent receivers, automatic-switching diversity reception
Image Rejection	45 dB minimum
Signal-to-noise Ratio	85 dB minimum at 10 kHz deviation (IIC-weighted)
Total Harmonic Distortion	≤1% (10 kHz deviation at 1 kHz)
Audio Output	520 µV for 60 dB S/N (IEC-weighted)
Unbalanced	350 mV (at 1 kHz, ±10 kHz deviation, 10k ohm load)
Balanced	220 mV (at 1 kHz, ±10 kHz deviation, 10k ohm load)
Output Connectors	1/2" phone jack
Unbalanced	XRIM-type
Balanced	12-18V DC, 150 mA
Power Supply	16.93" (430.0 mm) W x 1.92" (48.8 mm) H x 7.28" (186.0 mm) D
Dimensions	5.5 lbs (2.5 kg)
Weight	Two antennas, rack mount adapters, AD705A-AC adapter
Accessories Included	

Optional System Accessories

MICROPHONES AND CABLES

AT829cW	AT829 miniature cardioid condenser microphone only, terminated for use with UniPak transmitter. Includes clothing clip and windscreen.
MT830cW	MT830B subminiature omnidirectional condenser microphone only, terminated for use with UniPak transmitter. Includes clothing clip and windscreen.
MT830cW/TH	"Theater" model, same as MT830cW except beige color mic and cable for concealment.
AT831cW	AT831B miniature cardioid condenser microphone only, terminated for use with UniPak transmitter. Includes clothing clip and windscreen.
AT851cW	AT851B surface-mount wide range hemi-cardioid condenser microphone only, terminated for use with UniPak transmitter.
AT867AM1cW	AT867AM1A 19' gooseneck cardioid microphone only, terminated for use with UniPak transmitter. Mounts to 1/2"-27 thread. Includes windscreen.
ATM35cW	ATM35 high-intensity cardioid condenser microphone only, terminated for use with UniPak transmitter. Includes AT8418 clip-on instrument mount.
ATM73cW	ATM73A headworn cardioid condenser microphone only, terminated for use with UniPak transmitter.
ATM75cW	ATM75A headworn cardioid condenser microphone only, terminated for use with UniPak transmitter. Includes windscreen and cable clip.
PRO 8HCcW	PRO 8HCx headworn hypercardioid dynamic microphone, terminated for use with UniPak transmitter. Includes windscreen and cable clip.

Frequency Selection

Each transmitter/receiver system operates on a single factory-aligned, crystal-controlled frequency. Available frequencies are shown in the chart below. Frequencies in the 732-746 MHz band are useable in the U.S. and Canada; 944-952 MHz frequencies are approved for use only in the U.S.

- Because the 732-746 MHz frequencies are shared with TV broadcasting, frequency selection is partially dependent upon which TV broadcast channels are in operation **where the wireless system is to be used.**
- Operating frequency is specified by a three-character code, such as "57V," in addition to the actual frequency in MHz. The frequency of each transmitter appears on a label on the outside of the unit. The frequency of each receiver appears on a label on the back of the unit and the frequency of each system appears on the outer carton. For future reference, please record them in the space provided below.

Wireless Operating Frequencies

RF Interference

If you encounter receiving interference (from other than an operating TV station), often it can be eliminated by adjusting the receiver's squelch control, as described on page 5.

Please note that wireless frequencies are shared with other radio services. According to Federal Communications Commission regulations, "Wireless microphone operations are unprotected from interference from other licensed operations within the band. If any interference is received by any Government or non-Government operation, the wireless microphone must cease operation..."

If you need assistance with operation or frequency selection, please contact your dealer or the A-T professional division. Extensive wireless information also is available on the A-T Web site at www.audio-technica.com.

System Operating Frequencies

UHF TV Band (732-746 MHz)

Freq. Code	Freq. (MHz)
57R	732.660
57V	733.660
58G	735.960
58K	736.660
58L	737.000
59K	742.700
59Q	744.100
59R	744.850
59S	745.200

- For use only where there is no TV Channel 57.
- For use only where there is no TV Channel 58.
- For use only where there is no TV Channel 59.

900 MHz Band (944-952 MHz)

Freq. Code	Freq. (MHz)
44C	944.100
44Q	944.700
45A	945.000
47C	947.100
47E	947.700
48N	948.800
48S	949.800
50L	950.500
51M	951.550
51U	951.900

Aside from the TV channel restrictions above, multi-channel systems may combine up to all 20 frequencies. Due to the unique conditions encountered in any complex system, the following guidelines may be helpful:

- Use the Low-power transmitter setting to reduce the possibility of interference.
- Maintain the maximum possible spacing between transmitters and receivers, and between transmitters.
- 1900 Series operating frequencies have been selected for optimum compatibility. However, all sources of 700-900 MHz RF energy (other manufacturers' wireless systems, 900 MHz cordless phones, etc.) can affect the overall performance of the multi-mic system in ways which cannot be predicted. Only on-site trials with all RF equipment in operation can determine the overall system functionality.

For future reference, please record your system information here (the serial numbers appear inside the battery compartment of each transmitter, and on the bottom of each receiver):

Operating Frequency _____ MHz
 Receiver Frequency _____ MHz
 Receiver Model _____
 Transmitter Model _____
 Serial Number _____
 Serial Number _____

1900 Series Professional UHF Wireless Systems

ATW-1951 UniPak™ Transmitter System

ATW-1952 Handheld Dynamic Microphone System

Installation and Operation

One-Year Limited Warranty

Audio-Technica professional wireless systems purchased in the U.S.A. are warranted for one year from date of purchase by Audio-Technica U.S., Inc. (ATUS) to be free of defects in materials and workmanship. In event of such defect, product will be repaired promptly without charge or, at our option, replaced with a new product of equal or superior value. ATUS will not be held responsible for damage or degradation of equipment resulting from the use of the product. A **LTLS** (Limited Transferability) warranty is provided for the product. **A LTLS** is a limited warranty that covers the product against damage or failure to use product in accordance with the instructions. This warranty is void in the event of unauthorized repair or modification, or removal or defacing of the product labeling.

For return approval and shipping information, contact the Service Dept., Audio-Technica U.S., Inc., 1221 Commerce Drive, Stow, Ohio 44224. Except to the extent precluded by applicable state law, **ATUS will have no liability for any consequential, incidental, or special damages. Any warranty of merchantability or fitness for particular purpose expires when the warranty expires.**

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

Outside the U.S.A., please contact your local dealer for warranty details.

Notice to individuals with implanted cardiac pacemakers or AICD devices:

Any source of RF (radio frequency) energy may interfere with normal functioning of the implanted device. All wireless microphones have low-power transmitters (less than 0.05 watts output) which are unlikely to cause difficulty, especially if they are at least a few inches away. However, since a "body-pack" mic transmitter typically is placed against the body, we suggest attaching it at the belt, rather than in a shirt pocket where it may be immediately adjacent to the medical device. Note also that any medical-device disruption will cease when the RF transmitting source is turned off. Please contact your physician or medical-device provider if you have any questions, or experience any problems with the use of this or any other RF equipment.



audio-technica.

Audio-Technica U.S., Inc., 1221 Commerce Drive, Stow, Ohio 44224 330/686-2600 www.audio-technica.com

PS1085 ©1998 Audio-Technica U.S., Inc. Printed in U.S.A.



audio-technica®