

ATH-TWX9

Wireless Headphones

User Manual

Model Name: ATH-TWX9

FCC ID:JFZTWX9L

IC :1752B-TWX9L

Safety precautions

Although this product was designed to be used safely, failing to use it correctly may result in an accident. To ensure safety, observe all warnings and cautions while using the product.

Cautions for the headphones

- Do not use the product near medical equipment. Radio waves may affect cardiac pacemakers and medical electronic equipment. Do not use the product inside medical facilities.
- When using the product in aircraft, follow airline instructions.
- Do not use the product near automatic control devices such as automatic doors and fire alarms. Radio waves may affect electronic equipment and cause accidents due to malfunction.
- Do not disassemble, modify or attempt to repair the product to avoid electric shock, malfunction or fire.
- Do not subject the product to strong impact to avoid electric shock, malfunction or fire.
- Do not handle the product with wet hands to avoid electric shock or injury.
- Disconnect the product from a device if the product begins to malfunction, producing smoke, odor, heat, unwanted noise or showing other signs of damage. In such a case, contact your local Audio-Technica dealer.
- Do not allow the product to get wet to avoid electric shock or malfunction.
- Do not put foreign matter such as combustible materials, metal, or liquid in the product.
- Do not cover the product with a cloth to avoid fire or injury by overheating.
- Follow applicable laws regarding mobile phone and headphone use if using headphones while driving.
- Do not use the product in places where the inability to hear ambient sound presents a serious risk (such as at railroad crossings, train stations, and construction sites).
- The product effectively shields external sound, so you may not hear sound around you clearly while wearing the product. Adjust the volume to a level where you can still hear background sound and monitor the area around you while listening to music.
- Store the product out of the reach of small children.
- To prevent damage to your hearing, do not raise the volume too high. Listening to loud sound for an extended period may cause temporary or permanent hearing loss.



- Discontinue use if skin irritation results from direct contact with the product.
- If you begin to feel unwell while using the product, discontinue use immediately.
- When removing the product from your ears, check to make sure the eartips are still attached to the main unit. If the eartips become lodged in your ears and you are unable to remove them, consult a physician at once.
- If you develop an itch from wearing the product, discontinue use.

Cautions for charging case

- Do not disassemble, modify or attempt to repair the product to avoid electric shock, malfunction or fire.
- Do not subject the product to strong impact to avoid electric shock, malfunction or fire.
- Do not handle the product with wet hands to avoid electric shock or injury.
- Disconnect the product from a device if the product begins to malfunction, producing smoke, odor, heat, unwanted noise or showing other signs of damage. In such a case, contact your local Audio-Technica dealer.
- Do not allow the product to get wet to avoid electric shock or malfunction.
- Do not put foreign matter such as combustible materials, metal, or liquid in the product.
- Do not cover the product with a cloth to avoid fire or injury by overheating.
- When charging, make sure to use the included USB charging cable.
- Do not charge with devices that have quick-charge functionality (with a voltage of 5 V or more). Doing so may cause the product to malfunction.
- Do not store the product in direct sunlight, near heating devices, or in hot, humid, or dusty places because such storage could cause malfunction or defect.
- Do not put the product close to fire because that could cause deformation or malfunction.
- Do not use benzine, paint thinners and electrical contact cleaner, etc. because use of such material could cause deformation or malfunction.

Cautions for rechargeable battery

The headphones and charging case are equipped with a rechargeable battery (lithium-ion battery).

- If battery fluid gets into eyes, do not rub them. Rinse thoroughly with clean water such as tap water and consult a doctor immediately.
- If battery fluid leaks, do not touch fluid with bare hands. If fluid remains inside the product, it may cause malfunction. If battery fluid leaks, contact your local Audio-Technica dealer.
 - If fluid gets in your mouth, gargle thoroughly with clean water such as tap water and consult a doctor immediately.
 - If your skin or clothing comes in contact with fluid, immediately wash the affected skin or clothing with water. If you experience skin irritation, consult a doctor.
- To avoid leakage, generation of heat or explosion:
 - Never heat, disassemble or modify the battery, nor dispose of it in a fire.
 - Do not attempt to pierce with a nail, hit with a hammer or step on the battery.
 - Do not drop the product or subject it to strong impact.
 - Do not get the battery wet.
- Do not use, leave or store the battery in the following places:
 - Area exposed to direct sunlight or high temperatures and humidity
 - Inside of a car under the blazing sun
 - Near heat sources such as heat registers
- Charge only with the included USB cable to avoid malfunction or fire.

- The internal rechargeable battery of this product cannot be replaced by the user. The battery may have reached the end of its service life if the usage time becomes significantly shorter even after the battery has been fully charged. If this is the case, the battery needs to be repaired. Contact your local Audio-Technica dealer for repair details.
- When the product is disposed of, the built-in rechargeable battery needs to be discarded properly. Contact your local Audio-Technica dealer to learn how to properly dispose of the battery.

For customers in the USA

FCC Notice

Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter used in other systems.

RF Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines. This equipment has very low levels of RF energy that is deemed to comply without testing of specific absorption rate (SAR).

Contact:

Responsible Company: Audio-Technica U.S., Inc.
Address: 1221 Commerce Drive, Stow, Ohio 44224, USA
Tel: 330-686-2600

For customers in Canada

ISED statement

CAN ICES-3 (B)/NMB-3(B)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s).

Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

This device complies with RSS-102 radiation exposure limits set forth for an uncontrolled environment.

Notes on use

- Be sure to read the connected device's user manual before use.
- Audio-Technica will not be liable in any way for any loss of data in the unlikely event that such losses should occur while using the product.
- On public transportation or in other public places, keep the volume low so as not to disturb other people.
- Minimize the volume on your device before connecting the product.
- When using the product in a dry environment, you may feel a tingling sensation in your ears. This is caused by static electricity accumulated on your body, not by product malfunction.
- Do not subject the product to strong impact.
- Do not store the product in direct sunlight, near heating devices, or in hot, humid, or dusty places. Additionally, do not allow the product to get wet.
- When the product is used for a long time, the product may become discolored due to ultraviolet light (especially direct sunlight) and wear.
- If the charging case is placed in a bag while the USB charging cable is still connected, the USB charging cable may become caught, severed, or broken.
- Make sure to hold the plug when connecting and disconnecting the USB charging cable. The USB charging cable may become severed or an accident may occur if you pull on the cable itself.
- When you are not using the USB charging cable, disconnect it from the charging case.
- Do not charge the battery if the terminal of the USB charging cable is bent, loose, or damaged. Doing so may cause heat generation, smoke emission, fire or electric shock.
- When you are not using the product, store it in the included charging case.
- If you use eartips other than those included, the headphones may not fit into the charging case, or may not charge. Be sure to use the included eartips.
- When using the product, select the eartips that fit your ears best, and wear the product securely.
- This product can be used to talk on the phone only when using a mobile telephone network. Support for telephony apps that use a mobile data network is not guaranteed.
- If you use the product near an electronic device or transmitter (such as a mobile phone), unwanted noise may be heard. In this case, move the product away from the TV or radio antenna.
- If you use the product near a TV or radio antenna, noise may be seen or heard in the television or radio signal. In this case, move the product away from the TV or radio antenna.
- To protect the built-in rechargeable battery, charge it at least once every 6 months. If too much time passes between charges, the life of the rechargeable battery may be reduced, or the rechargeable battery may no longer be able to be charged.
- Do not charge the product if water or foreign matter is inside the battery jack or USB charging cable. Doing so may cause corrosion, heat generation, smoke, fire, or other malfunction or electric shock in the battery jack or USB charging cable.
- Charge the product in a well-ventilated place (10 to 35°C (50 to 95°F)) away from direct sunlight. Otherwise, the battery may deteriorate, possibly resulting in shorter periods of continuous use or may fail to charge.
- If the headphones are wet, wipe them with a dry cloth before placing them in the charging case. The charging case is not water-resistant (drip-proof). Do not charge the product if the headphones are wet.

- The hear-through function of the product allows you to hear the sounds around you through the built-in microphone. Occasionally it may be difficult to hear surrounding sound depending on the volume of the music, etc. that you are playing. In this case, turn down the volume of the music.
- Depending on your surroundings, the ambient sounds may be difficult to hear even when using the product's hear-through function. Do not use the product in places that are dangerous if you cannot hear the surrounding sounds, such as places with heavy traffic.
- Operate the touch sensor with one finger. Operating with a sharp-tipped object, such as a ballpoint pen or pencil, may result not only in incorrect operation, but also damage to the touch sensor.
- Do not touch the touch sensor with your fingertips. Doing so may cause your fingernail to break.
- If the product does not operate at all or as intended when touched, check to make sure that your other fingers, parts of your hand, or clothing items are not in contact when touching. Also, the product may not operate correctly if you are wearing gloves or if your fingertips are too dry.
- The product may not operate correctly if the touch sensor is dirty from sweat. Remove the dirt before operating the product.

About the active noise-cancelling function

The product is designed to use its built-in microphone to pick up noise from the surrounding environment (noise from vehicles, noise from air conditioners, etc.) and to cancel out that noise by producing sounds in negative phase. This results in a reduction in the sounds in your environment.

- The noise-canceling function of this product is mainly effective against noise in the lower frequency range, but not all noise will be eliminated.
- Depending on the type of noise (or in quiet locations), you may not notice the noisecancelling effect.
- The noise-cancelling effect may vary or a bleep (howling) may occur depending on how you wear the product. In these cases, take off the product and put the product in your ears again correctly.
- To maximize the noise-cancelling effect, select the eartips that offer the best sound insulation for each side to block surrounding sound, and insert the headphones into the ears correctly.
- When you use the product in a train or a vehicle such as bus or truck, noise may be heard depending on rail/street conditions.

About water-resistant (drip-proof) performance

- The water-resistant (drip-proof) specification of this product applies only to the headphones, not the charging case.
- Although the headphones have water-resistant (drip-proof) capabilities equivalent to IPX4, the part where the sound comes from is not water-resistant (drip-proof).
- The water-resistant (drip-proof) performance is designed to protect the headphones if they get wet from rain, etc. (equivalent to IPX4). JIS/IEC protection grade IPX4 means that the product is protected against exposure to flying water from all directions.
- The headphones cannot be used underwater.
- The headphones cannot be used in hot and humid places, such as bathrooms.
- The headphones are not waterproof. Submerging them in water may cause damage.
- The headphones may not function properly if they become wet. Wipe the headphones with a dry cloth, shake them multiple times to remove any excess water, and allow the headphones to dry thoroughly before use.


About nano UV sterilization function

Put the headphones in the charging case, close the cover, and after a while, the nano UV LED will automatically sterilize the headphones.

- The nano UV LED sterilization function of this product is performed only when the cover of the charging case is closed so that the nano UV LED cannot be seen directly.
- If the headphones are not properly attached to the charging case, the nano UV LED will not sterilize the headphones.
- It is not possible to sterilize anything other than headphones. Do not put anything other than headphones in the charging case.
- During sterilization, the indicator on the charging case will flash purple. Do not open the cover of the charging case while the indicator is flashing purple.
- If you notice anything unusual such as the nano UV LED glowing when the charging case cover is not closed due to a malfunction of the charging case, stop using the product immediately and ask your dealer or our service center for repair.

For a more comfortable Bluetooth communication experience


The effective communication range of this product varies depending on obstructions and radio wave conditions. For a more enjoyable experience, please use the product as close as possible to the Bluetooth device. To minimize noise and sound disruptions, avoid placing your body or other obstacles between the product's antenna and the Bluetooth device.

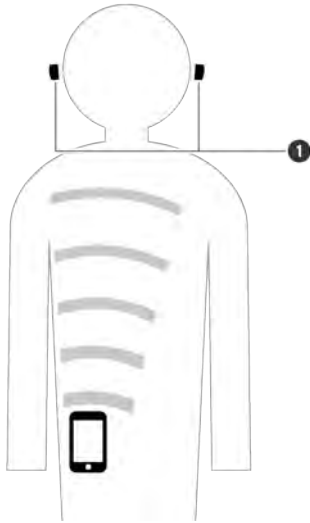

❶ Antenna

Part names and functions

Headphones

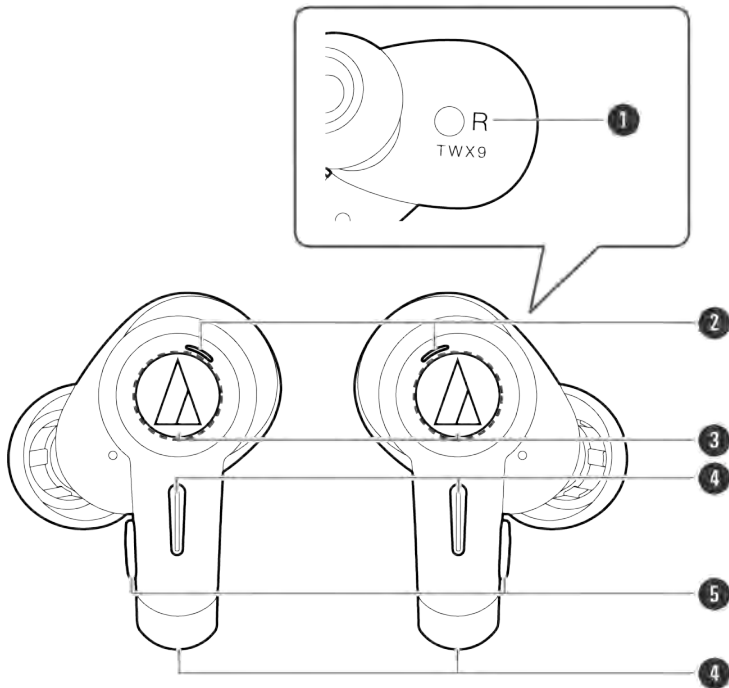

❶ L/R (left/right) indicator

❷ indicator lamp

Display the operating status and battery level of the headphones.

❸ Touch sensor


Use to operate specific functions such as turning on/off the hear-through function or quick hear-through function.

❹ Microphone

❺ Multifunction button

Use to play/pause music and answer phone calls. It also adjusts the volume.

Charging case

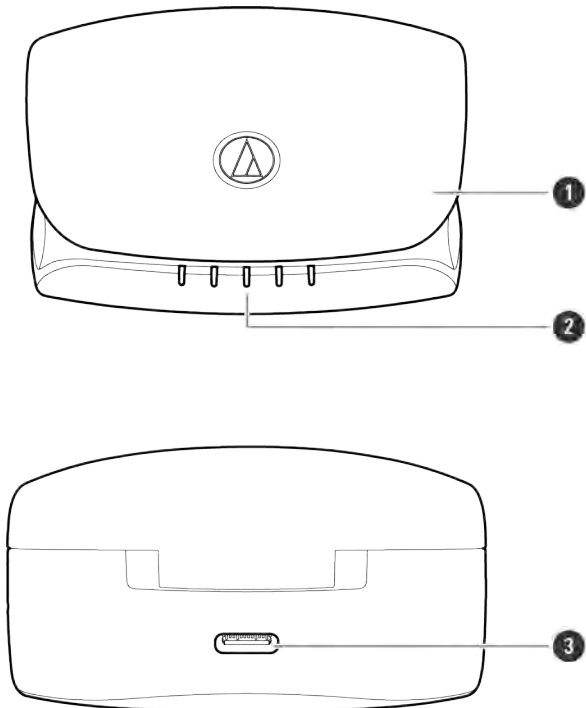

1 Cover


2 Charge indicator

Light/flashes when charging the charging case. It also displays the remaining battery life of the charging case/headphones.

3 Battery jack

Use to connect the included USB charging cable and charge the product.

Accessories

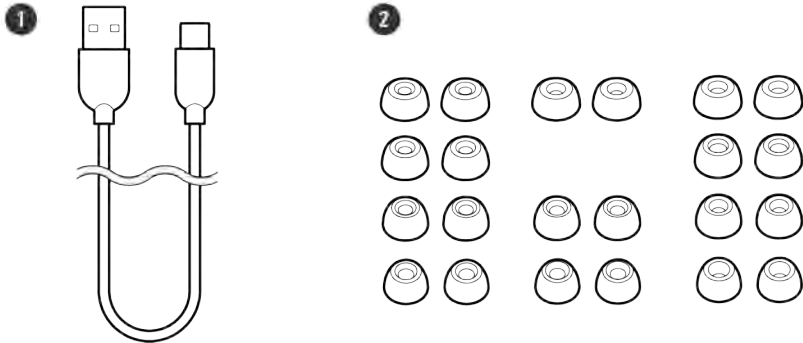


❶ USB charging cable (30 cm, USB Type-A / USB Type-C)

❷ Eartips (XS, S, M, L)

At the time of purchase, the M-size eartips are attached to the product.

Types of eartips

This product is available in three different conduit lengths (Short, Standard, and Long) as well as eartip sizes. Please check the fit and choose the eartip that best suits your ears.

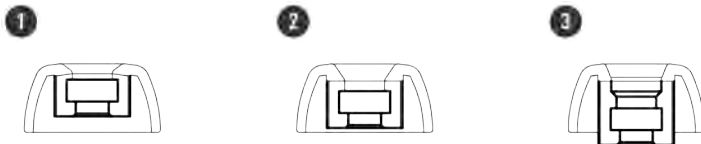

❶ Short

❷ Standard

❸ Long

Note

- You can check the size of the eartip (XS, S, M, or L) by the number of dots on the eartip.
- You can check the size of the eartip conduit by its color.

Charging the battery

Fully charge the battery when using for the first time.


When the rechargeable battery is running low, the voice guidance will play the message “Low battery”, and the indicator lamp will flash in red. Charge the battery as soon as possible.

It takes about 2.5 hours to fully charge the headphones, and about 2.5 hours to fully charge the charging case. (Charging times may vary depending on usage conditions.)

Charge the product in a well-ventilated place (10 to 35°C (50 to 95°F)) away from direct sunlight. Otherwise, the battery may deteriorate, possibly resulting in shorter periods of continuous use or may fail to charge.


Charging the headphones and charging case

- 1 Connect the included USB charging cable (USB Type-C side) to the battery jack.
 - The included USB charging cable is designed for exclusive use with the product. Do not use any other USB charging cable.
 - When inserting the USB charging cable into the USB port or battery jack, insert it directly (horizontally).

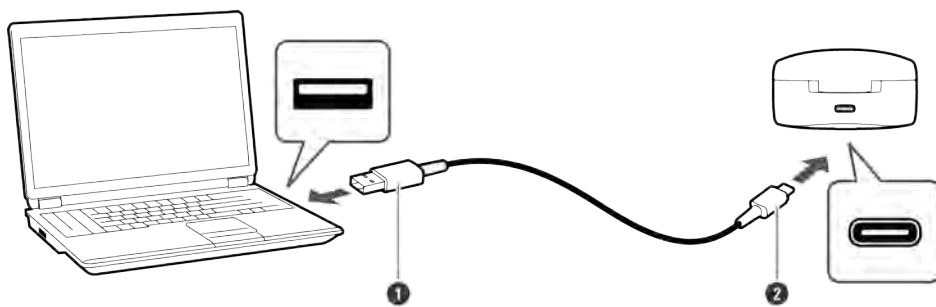


- ❶ USB Type-A
- ❷ USB Type-C

- 2 Place the headphones in the charging case.

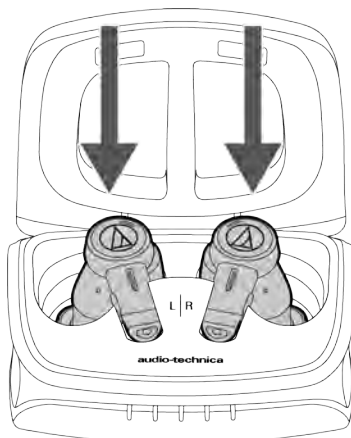

- 3** Connect the included USB charging cable (USB Type-A side) to the computer to start charging.
- While charging, the four charging indicator lamps light/flash as follows. (It may take several seconds for the charging indicator lamps to light.)

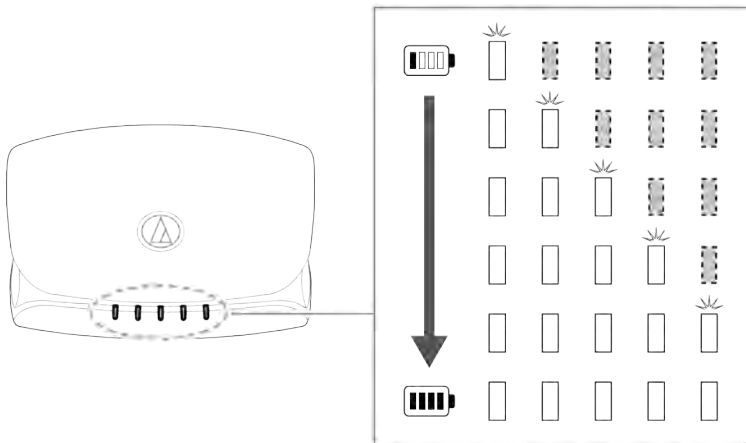

Indicator lamps	Status
Flashes/lights in white (The 5 charging indicator lamps light or flash according to the battery level.)	Charging
Lights in white for 7 seconds, and then turns off	Charging complete
Five indicators flashing fast red	Charging error ^[1]

[1] The charging case or headphones may be hot. Allow the temperature of the product to cool sufficiently before charging in a well-ventilated place (10 to 35°C (50 to 95°F)) away from direct sunlight.

- 4** When charging is complete, disconnect the USB charging cable (USB Type-A side) from the computer.


- 5** Disconnect the charging USB cable (USB Type-C side) from the product's battery jack.

Caution	<ul style="list-style-type: none"> • When charging, make sure to use the included USB charging cable. The product may not charge with cables other than the included USB charging cable. • Always make sure the headphones are not wet before charging. The headphones may not operate correctly or may not turn on if they are wet. Wipe the headphones with a dry cloth, shake them multiple times to remove any excess water, and allow the headphones to dry thoroughly before use.
----------------	---

Charging headphones without the USB charging cable

A rechargeable battery is built into the charging case. If you have charged the charging case, you can charge the headphones without using the USB charging cable.

- 1 Place the headphones in the charging case.
 - While charging, the indicator lamps light as follows. (It may take several seconds for the indicator lamps to light.)

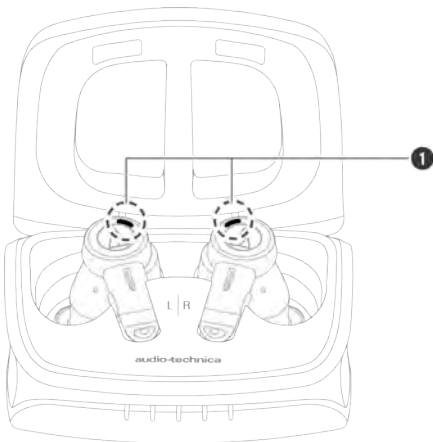

1 indicator

Indicator lamps	Status
Lights in white	Charging
Off	Charging complete / Charging case battery has no power

Checking the battery level of the charging case/headphones

When the cover of the charging case is opened/closed, five charging indicators light up to indicate the remaining battery life of the charging case/headphones.

- 1** Open the cover of the charging case.
 - The remaining battery life of the headphones is indicated by a blue light. The number of charge indicators indicates the remaining battery power.

- 2** Close the cover of the charging case.
 - The remaining battery capacity of the charging case is indicated by a white light. The number of charge indicators indicates the remaining battery power.


Wireless charging

- You can use a commercially available Qi standard wireless charger for wireless charging.
- Close the lid of the charging case and place the charging case on the wireless charger to charge. During charging, the charging indicator lights up and flashes in green.
- Also, please check the instruction manual of the wireless charger when charging.
- Maximum receiver power: 2.5 W

Power supply ON/OFF

Turning on the product

- 1 Remove the headphones from the charging case.

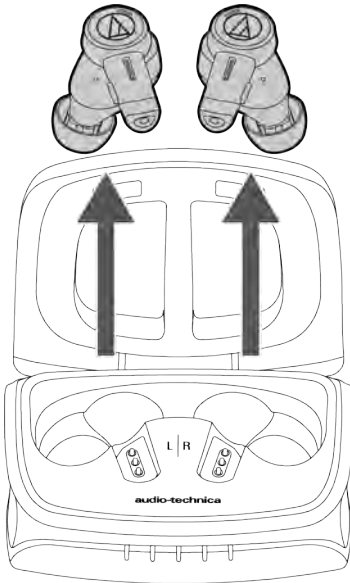


- » The power will turn on automatically, and the indicator lamps will light in white and then flash. Voice guidance is played.

Note

- Press and hold (for about 4 seconds) the multifunction buttons to turn the power on manually.
- It may take several seconds for the indicator lamps to light.
- For more information on the types of voice guidances, please refer to "About Voice Guidance" (p. **XX**).

Turning off the product

- 1 Place the headphones in the charging case.

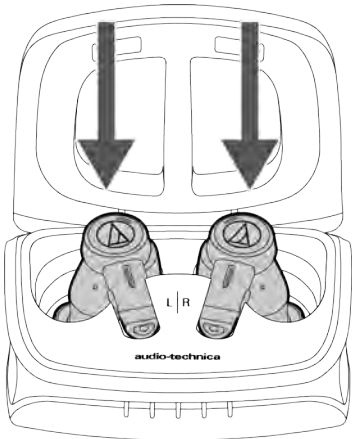

- » The power will turn off automatically.

Note

- Press and hold (for about 4 seconds) the multifunction buttons to turn off the power manually.
-


Connecting via Bluetooth

To connect the product to a Bluetooth device, the product needs to pair (register) with the device.

Pairing a Bluetooth device

- Read the user manual for the Bluetooth device.
- Place the Bluetooth device within 1 m (3.3') of the product to perform pairing correctly.
- Wear the product to hear voice guidance during pairing.

- 1** Remove the headphones (L (left) and R (right)) from the charging case.
 - The indicator lamps will light in white, and then flash.

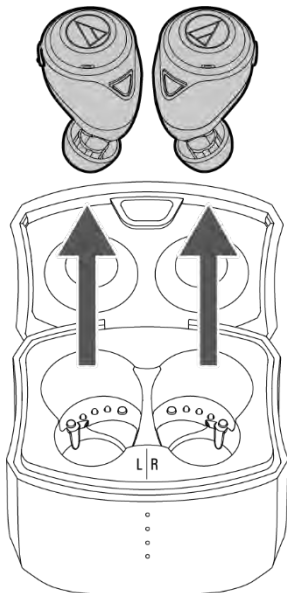


- 2** Use your Bluetooth device to begin the pairing process and search for the product. When searching for this product, "ATH-TWX9" will be displayed in the Bluetooth device.

- For information about using your Bluetooth device, refer to the device's user manual.

- 3** Select "ATH-TWX9" and register it as a Bluetooth device to be connected.

- Some devices may ask for a passkey. In this case, enter "0000". The passkey may also be called a passcode, PIN code, PIN number, or password.

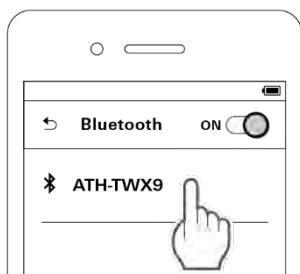

» The voice guidance will play the message “Bluetooth connected”, and the indicator lamp will flash slowly in white. This indicates pairing was successfully completed.


About pairing

When connecting a new Bluetooth device, you need to pair it with the product. Once the Bluetooth device and the product are paired, you do not need to pair them again. The product supports multipairing, in which a connection history is saved. However, in the following cases you will need to pair again even if the Bluetooth device was paired once:

- If the product is deleted from the Bluetooth device’s connection history.
- If the product is sent out for repair.
- If the product is reset.

Wearing the product

Insert the side of the product marked "L" (left) into the left ear and the side marked "R" (right) into the right ear.

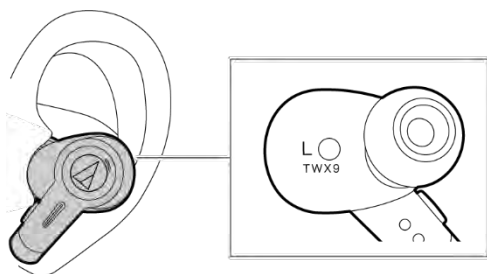

Ear detection function

The product has a built-in sensor. The sensor detects when the product is removed from or inserted into the ear, and automatically performs operations during music playback.


Unlocking

When removing the headphones from of the charging case, the multifunction buttons and touch sensors are locked to prevent erroneous operations. The built-in sensors detect when the headphones are inserted into the ears to enable button and touch operations.

Operations during music playback

When removing the headphones from your ears, music is paused automatically. Music playback will resume when the headphones are inserted into the ears again.

- Use the headphones or the Bluetooth device to first begin music playback.
- When both headphones are inserted into the ears, removing one or both headphones will pause the music. Music playback resumes when both headphones are inserted into the ears again.
- Music playback does not automatically resume if only one headphone is inserted into an ear. Use the Bluetooth device for operation in such cases.

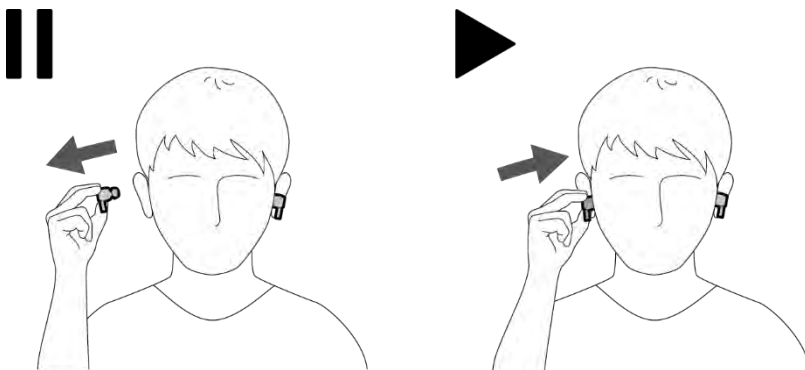

Caution


- When using the headphones, check that the indicator lamps are flashing (ready to use), and then insert the headphones properly into your ears.
- The ear detection function may not work if the headphones are not inserted properly.

Turning ear detection function on/off

Our smartphone app can be used to turn the ear detection function on and off. When the function is turned off, the multifunction buttons and touch sensors will remain unlocked, enabling button and touch operations without having to insert the headphones into your ears.

Touch sensors

The product has touch sensors. When performing operations, touch the sensors using the pad of your finger, not the fingertip.

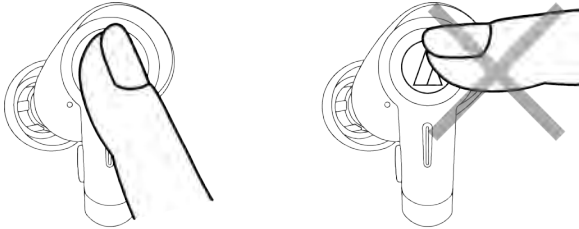

Caution

- Operate the touch sensor with one finger. Operating with a sharp-tipped object, such as a ballpoint pen or pencil, may result not only in incorrect operation, but also damage to the touch sensor.
- Do not touch the touch sensor with your fingertips. Doing so may cause your fingernail to break.
- If the product does not operate at all or as intended when touched, check to make sure that your other fingers, parts of your hand, or clothing items are not in contact when touching. Also, the product may not operate correctly if you are wearing gloves or if your fingertips are too dry.
- The product may not operate correctly if the touch sensor is dirty from sweat. Remove the dirt before operating the product.

Using the product


The product can use Bluetooth wireless technology to connect to your device and play music, receive phone calls, etc. Use the product for whichever of these purposes suits your needs. Note that Audio-Technica cannot guarantee the operation of displays, such as the battery level display, or applications via Bluetooth devices.

Listening to music

To connect for the first time, pair the product and your device via Bluetooth wireless technology. If you have already paired the product and your Bluetooth device, turn on the Bluetooth device's Bluetooth connection before turning on the product.

Use your Bluetooth device to start playback, referring to the device's user manual as necessary.

- 1** Remove the headphones from the charging case and place them in your ears.
- 2** Start playback on your Bluetooth device.
- 3** Press the multifunction button on the L (left) side headphone once or twice in a row to adjust the volume (up or down).

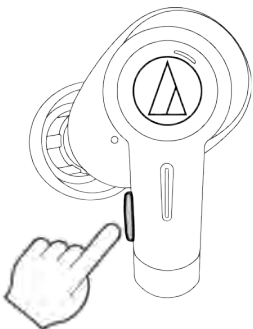


- 4** To pause music, press the multifunction button on the R (right) side headphone.
 - Playback will be started or paused with every press.

Note

- Listening to music is also possible with only one headphone by removing only one side from the charging case and putting it in your ear. When you use only one headphone, some functions are not available depending on which side is worn. Use the Bluetooth device for operation in such cases.

R (right) side headphone multifunction-button operation

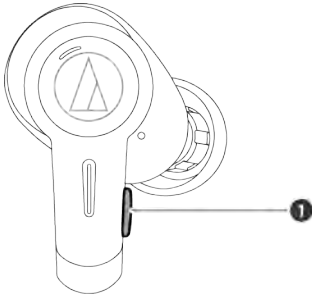


① Multifunction button

Operation	Function
Press	Starts or pauses playback.
Press (twice)	Plays the next track.
Press (three times)	Plays the previous track / returns to the start of the track.

- The controls explained above may not be available on some smartphones.

L (left) side headphone multifunction-button operation

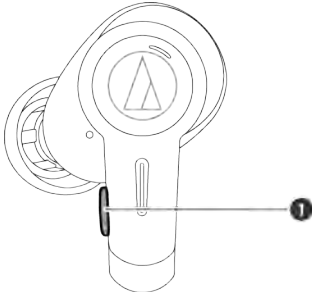

① Multifunction button

Operation	Function
Press	Increases the volume by 1 level. ^{[1][2]}
Press (twice)	Decreases the volume by 1 level. ^{[1][2]}

[1] A beep is heard each time the volume is increased/decreased by 1 level.


[2] The volume control of some Bluetooth devices may not work well with the product.

- The controls explained above may not be available on some smartphones.

Talking on the phone

If your Bluetooth device supports telephone features, you can use the product to talk on the phone.

- 1** Remove the headphones from the charging case and place them in your ears.
- 2** Make/receive calls with your Bluetooth device.
 - When your Bluetooth device receives a phone call, the product sounds a ringtone.
 - If a call is received while you are listening to music, music playback is paused.
- 3** To answer an incoming call, briefly press the multifunction button on the headphone (L (left) or R (right) side).
 - You can respond with either the left or right headphone operation.
- 4** Press the multifunction button on the L (left) side headphone once or twice in a row to adjust the volume (up or down).

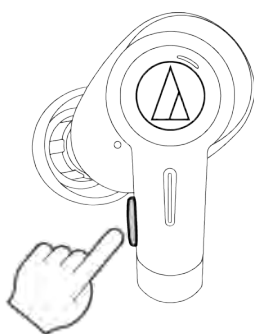


- 5** To end a call, press and hold (about 2 seconds) the multi-function button on the L (left) or R (right) side of the headphone.
 - Calls can be ended from either the L (left) or R (right) side headphone.
 - If the call was received while listening to music, playback is resumed.
 - Music playback may not be resumed on some Bluetooth devices. In this case, music playback must be started manually.

Note


- Making/receiving calls is also possible with only one headphone by removing only one side from the charging case and putting it in your ear. When you use only one headphone, some functions are not available depending on which side is worn. Use the Bluetooth device for operation in such cases.

Notes for talking on the phone

When talking on the phone, make sure the tips of the headphones (microphones) are angled toward your mouth as shown in the figure. If the headphones are not oriented correctly, your voice may be too quiet for others to hear.

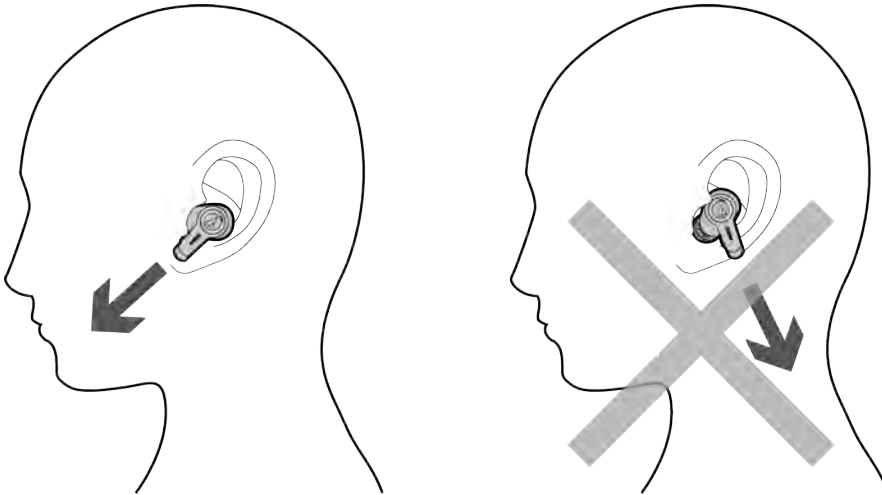

R (right) side headphone multifunction-button operation

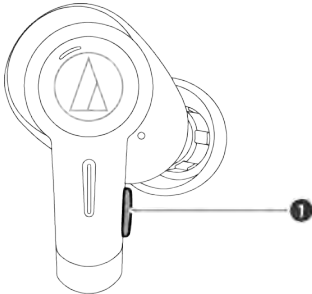


① Multifunction button

Operation	Function
Press	Receiving a call: Answers the call.
Press (twice)	Mutes the microphone. [1]
Press and hold (about 2 seconds)	Receiving a call: Rejects the call. Making a call: Cancels the call. During a call: Ends the call.

[1] The mute operation using the multifunction button only mutes the headphones and does not activate the mute function on the Bluetooth device.

- The controls explained above may not be available on some smartphones.

L (left) side headphone multifunction-button operation

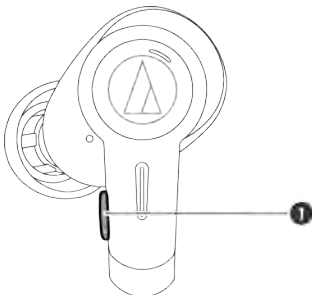

① Multifunction button

Operation	Function
Press	Receiving a call: Answers the call. During a call: Increases the call volume by 1 level.
Press (twice)	During a call: The call volume is reduced by one level.
Press and hold (about 2 seconds)	Receiving a call: Rejects the call. Making a call: Cancels the call. During a call: Ends the call.

- The controls explained above may not be available on some smartphones.

Quick hear-through function

This function allows you to import external sounds. The volume of music being played back decreases automatically. It is useful for when you want to listen to public transportation announcements or people's voices.

- 1 Short-press the multi-function button on the headphone (L (left) side) three times in succession.
- » Each time you operate the camera, the Quick Hear Through function is toggled on and off.

Caution

- Depending on your surroundings, the ambient sounds may be difficult to hear even when using the quick hear-through function. Do not use the product in places that are dangerous if you cannot hear the surrounding sounds, such as places with heavy traffic.
- When the quick hear-through function is turned on, do not cover the microphone with your hand. If you do so, a loud sound (howling) will be emitted, and it may adversely affect your hearing ability.

Ambience control

The product includes an ambience control function for switching between the noise-cancelling function and hear-through function. Switches in the order of noise cancelling function (default), OFF, and hear-through function.

- 1 Short-press the touch sensor part of the headphone (L (left) side) twice in succession.
- » Each time you operate the unit, it switches in the order of noise canceling function (default), OFF, and hear-through function.

Noise-cancelling function

The microphone built into the product detects ambient noise and outputs a sound-cancelling signal to effectively reduce noise. When you turn on the product, noise-cancelling turns on automatically.

Hear-through function

This function allows you to hear surrounding sound via the built-in microphone while you listen to music.

Caution

- Occasionally it may be difficult to hear surrounding sound depending on the volume of the music, etc. that you are playing. In this case, turn down the volume of the music.
- Depending on your surroundings, the ambient sounds may be difficult to hear even when using the product's hear-through function. Do not use the product in places that are dangerous if you cannot hear the surrounding sounds, such as places with heavy traffic.
- When the hear-through function is turned ON, do not cover the microphone with your hand. If you do so, a loud sound (howling) will be emitted, and it may adversely affect your hearing ability.

Optimizing the noise canceling function

The headphones measure the ambient noise level and automatically select the best noise cancelling characteristics.

- 1 Touch and hold (about 3 seconds) the touch sensor on the L (left) side headphone.
- » It will start measuring the ambient noise level, and when finished, it will automatically select the best noise cancelling characteristics.

Speech recognition feature

Activation of the speech recognition feature (such as Google Assistant or Siri) may be possible depending on your device.

- 1 Touch and hold (about 2 seconds) the touch sensor on the R (right) side headphone.
- » Activates the speech recognition feature (such as Google Assistant or Siri).

Auto power off function

The product automatically turns off after 5 minutes of not being connected to a device. The product also automatically turns off after 30 minutes in the "Waiting to be connected" status.

App for smartphones

You can use Audio-Technica's app for smartphones for more convenient use of the product.

<https://app.at-globalsupport.com>



CONNECT App
iOS, Android

Indicator lamp display

Pairing

Status	Indicator lamp display pattern
Searching for devices	○ - ○ - ○ . . . Flashing white (gradually lighting up)

Connecting

Status	Indicator lamp display pattern
Waiting to be connected	○○----○○----○○ . . . Flashing white (twice) in 4-second intervals
Connecting	○----○----○ . . . Flashing white in 5-second intervals
Music is playing	-----... Off

Battery level

Status	Indicator lamp display pattern
Battery level is low	White in the pairing or connection status turns red.

Voice guidance



The product plays English voice guidance in the following situations.

Situation	Voice guidance
Power is turned on	Voice guidance varies depending on the battery level. Battery level high Battery level medium Battery level low
Bluetooth is connected	Bluetooth connected
Bluetooth is disconnected	Bluetooth disconnected
Noise cancelling function ON Ambience control	Noise-cancelling
Hear-through function on Ambience control	Hear-through
Off (ambience control)	Off
Noise canceling optimization measurement started	Calibration start
Music is played	Play
Music is paused	Pause
Battery level is low	Low battery

Cleaning

Get into the habit of regularly cleaning the product to ensure that it will last for a long time. Do not use alcohol, paint thinners, or other solvents for cleaning purposes.

- Wipe any dirt off the headphones and charging case with a dry cloth. The headphones may not operate correctly or may not turn on if they are wet. Wipe the headphones with a dry cloth, shake them multiple times to remove any excess water, and allow the headphones to dry thoroughly before use.
- If sweat or other moisture gets on the battery jack of the charging case or the charging terminal of the headphones, wipe it off immediately. Failure to do so may result in a malfunction due to corrosion.
- Natural oils from the skin are particularly likely to build up on the eartip attachment parts (see figure). If these areas are not cleaned, the eartips can become detached. Clean them regularly. Do not touch the areas where sound is produced as they are delicate. Doing so may result in malfunction.
- If any moisture remains in the holes near the microphones (see figure), place the headphones on a dry cloth and shake several times to remove any moisture, and then allow the headphones to dry thoroughly before use.
- Wipe away any perspiration or dirt from the USB charging cable with a dry cloth immediately after use. Failure to clean the cable may cause it to deteriorate and harden over time, resulting in malfunction.
- If the USB terminal of the charging cable is dirty, wipe it off with a dry cloth.
- Clean the eartips by removing them from the headphones and manually cleaning them with a diluted mild detergent. After cleaning, dry before using again.

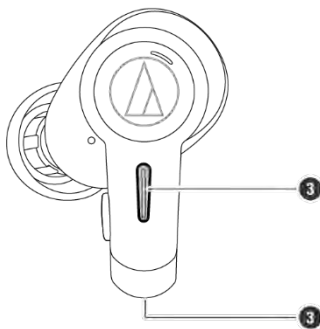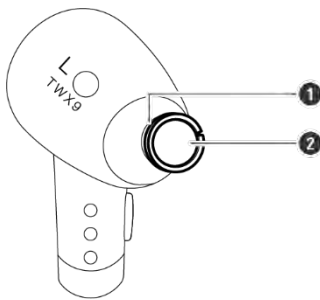

- ❶ Eartip attachment part
- ❷ Sound reproduction part
- ❸ Microphone

Caution

- If the product will not be used for an extended period of time, store it in a well-ventilated place free from high temperatures and humidity.


Eartips

Eartip sizes

The product includes silicone eartips in 4 sizes (XS, S, M, and L). At the time of purchase, the M-size silicone eartips are attached. To ensure the best sound quality, select the eartip size that is best suited for you, and adjust the eartips inside your ears for a snug fit. It may be difficult to hear bass sounds if the eartips do not fit snugly in your ears.

Replacing the eartips

Remove the old eartip and attach the new eartip by pushing it onto the headphone at an angle. Push firmly on the eartip so that the inside of the eartip expands, and push the eartip onto the post as far as it will go.

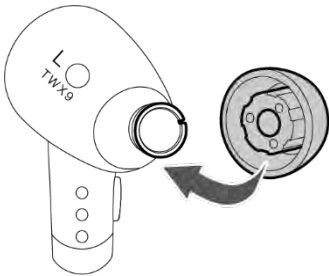

Note

- Eartips are consumable parts that degrade through storage and use. If the eartips are loose and easily removed or if they appear to have degraded, purchase replacements.

Caution

- Periodically remove and clean the eartips as they become dirty easily. Using dirty eartips may cause the headphones themselves to become dirty, resulting in deteriorated sound quality.
- When reattaching eartips that were previously removed, be sure to check that they are securely attached. Injury or illness may occur if the eartips become detached and are left inside the ear.

Forced pairing mode / reset

If the product does not connect to a device (forced pairing mode)

If pairing cannot be cancelled or is not successful, you can use forced pairing mode to perform pairing again.

- 1** About 5 seconds after both headphones (L (left) and R (right) sides) are placed in the charging case (with battery remaining), touch and hold (about 6 seconds) the touch sensors of both headphones.
- 2** When the indicator lamps on both headphones light in red, remove the headphones from the charging case.
» The product will switch to the “searching for devices” (pairing mode) state and you will be able to pair with your desired Bluetooth device.

If the product operates abnormally (reset)

Reset the product.

- 1** About 5 seconds after both headphones (L (left) and R (right) sides) are placed in the charging case (with battery remaining), touch the touch sensors of both headphones twice in a row.
- 2** Verify that the indicator lamps on both headphones flash white, and then touch and hold (at least 6 seconds) the touch sensor on both headphones while in the charging case.
 - Make sure the indicator lamps on both headphones light in red and then turn white before releasing your fingers.
» Reset is complete.
- 3** Remove the product from the list of registered devices on your Bluetooth device.
- 4** Remove the headphones from the charging case again and perform pairing.

Note

- If the procedure cannot be completed as expected, remove the headphones from the charging case again and repeat the procedure from the beginning.
-

Troubleshooting

? Power is not supplied

- Charge the product.

? Unable to pair

- Confirm that the Bluetooth device communicates using Ver. 2.1+EDR or higher.
- Place the product and the Bluetooth device within 1 m (3.3') of each other.
- Set the profiles for the Bluetooth device. For procedures on how to set profiles, refer to the Bluetooth device's user manual.
- Remove the pairing information for the Bluetooth device then pair the product with this device again.
- Place the headphones in the charging case and close the cover, then remove the headphones and perform the operation again.
- Make sure you are not connected to any other previously connected Bluetooth device. If so, disconnect the product using the previously connected Bluetooth device, and then select the product on the Bluetooth device being connected to. Use forced pairing mode if you are unable to disconnect from a previously connected Bluetooth device. For details, see "When the connection to this product does not work (forced pairing mode)" (p. **XX**).
- Reset the product if it cannot be unpaired, connected, or does not operate as expected even after trying all other solutions. For more information, see "When the Product is Not Operating Properly (Reset)" (p. **xx**).

? No sound is heard / Sound is faint

- Turn on the power of the product and the Bluetooth device.
- Turn up the volume on the product and the Bluetooth device.
- Make sure that the product and Bluetooth device are connected by the A2DP (or audio connection).
- Disable pairing for the product and the Bluetooth device, then pair the product with this device again.
- Move away from obstacles between the product and the Bluetooth device, such as people, metal, or walls, and place the product and device closer together.
- Switch the sound output of the Bluetooth device to the product.
- Check whether the quick hear-through function is turned on/off. If the quick hear-through function is on, the volume of music being played back will decrease automatically. Short-press the multi-function button on the headphone (L (left) side) three times in a row to turn the quick hear-through function on and off.

? Sound only comes out of one headphone

- Make sure there is battery level remaining.
- Place the headphones in the charging case and close the cover, then remove the headphones and perform the operation again.

? Sound is distorted / Noise is heard / Sound cuts out

- Turn down the volume on the product and the Bluetooth device.
- Keep the product away from devices that emit radio waves such as microwaves and wireless routers.
- Keep the product away from TVs, radios, and devices with built-in tuners. These devices can also be affected by the product.
- Turn off the equalizer settings of the Bluetooth device.
- Remove obstacles between the product and the Bluetooth device and place them closer together. For more details, see "To enjoy Bluetooth communication more comfortably" (p. xx).
- You may be able to improve the connection status by switching the connection codec to SBC. You can change it with our smartphone app. If you are using a connected device such as a smartphone or audio player that can change the connection codec, you may be able to set to SBC on that connected device. For details about the setting procedure, refer to the user manual of your connected device.
- The noise-cancelling effect may vary or a bleep (howling) may occur depending on how you wear the product. In these cases, take off the product and put the product in your ears again correctly.

? Cannot hear the voice of the caller / Voice of the caller is too quiet

- Turn on the power of the product and the Bluetooth device.
- Turn up the volume on the product and the Bluetooth device.
- Confirm that the product and Bluetooth device are connected via HFP (or phone connection).
- Disable pairing for the product and the Bluetooth device, then pair the product with this device again.
- Switch the sound output of the Bluetooth device to the product.

? Charging case cannot be charged

- Securely connect the included USB charging cable and charge the product.
- The charging case or headphones may be hot. Allow the temperature of the product to cool sufficiently before charging in a well-ventilated place (10 to 35°C (50 to 95°F)) away from direct sunlight.

? Headphones cannot be charged

- Make sure that the product is placed in the charging case correctly.
- Make sure to close the charging case cover when charging.
- Charge the charging case.
- Wipe dirt off the charging terminal with a dry cloth.
- The charging case or headphones may be hot. Allow the temperature of the product to cool sufficiently before charging in a well-ventilated place (10 to 35°C (50 to 95°F)) away from direct sunlight.

Note

- For details about how to operate your Bluetooth device, refer to the device's user manual.
-

Specifications

Headphones

Type	Dynamic
Driver	5.8 mm
Sensitivity	102 dB/mW
Frequency response	10 to 40,000 Hz
Impedance	16 ohms

Microphone

Type	MEMS type
Polar pattern	Omnidirectional
Sensitivity	-38 dB(1V/Pa, at 1 kHz)
Frequency response	100 to 16,000 Hz

Communication specifications

Communication system	Bluetooth version 5.2
Maximum RF output	10 mW EIRP
Maximum communication range	Line of sight - approx. 10 m (33')
Frequency band	2.402 GHz to 2.480 GHz
Modulation method	GFSK, Pi/4DQPSK, 8DPSK
Spread spectrum method	FHSS
Compatible Bluetooth profiles	A2DP, AVRCP, HFP
Supported codec	Qualcomm® aptX™ adaptive audio, Qualcomm® aptX™ audio, AAC, SBC
Supported content protection method	SCMS-T
Supported sample rates	44.1kHz, 48kHz, 96kHz ^[1]
Supported bit rates	16bit, 24bit ^[2]
Transmission band	10 Hz to 47,000 Hz (Qualcomm® Snapdragon Sound 96kHz sampling) 20 Hz to 20,000 Hz

Other

Power supply	Headphones: DC 3.85 V lithium ion battery Charging case: DC 3.85 V lithium polymer battery
Charging time	Headphones: About 2.5 hours ^[3] Charging case: About 2.5 hours (USB charging) ^[3] , About 5 hours (wireless charging) ^[3]
Operating time	Continuous transmission time (music playback): Max approx. 6.0 hours ^[3] (headphones) Max approx. 18.5 hours ^[3] (when used with charging case)
Weight	Headphones: Approx. 5.4 g (0.2 oz) (L side), approx. 5.4 g (0.2 oz) (R side) Charging case: Approx. 55.9 g (2.0 oz)
Water-resistant (drip-proof) performance	IPX4 ^[4]
Operating temperature	5°C to 40°C (41°F to 104°F)
Accessories	USB charging cable (30 cm (12")), USB Type-A / USB Type-C), Eartips Short (XS, S, M, L) , Standard (XS, S, M, L) , Long (XS, S, M, L)
Sold separately	Eartips

[1] When using Qualcomm® Snapdragon Sound

[2] When using Qualcomm® Snapdragon Sound and Qualcomm® aptX adaptive audio

[3] The figures above depend on operating conditions.

[4] Headphones only.

- For product improvement, the product is subject to modification without notice.

Trademarks

- **Bluetooth®**. word mark and logo are registered trademarks and are the property of Bluetooth SIG, Inc. These marks and logos are used by Audio-Technica Corporation under license. Other trademarks and trade names are those of their respective owners.
- USB Type-C™ is a trademark of USB Implementers Forum.
- Google Play is a trademark of Google LLC.
- Qualcomm Snapdragon Sound, Qualcomm aptX, Qualcomm cVc and Qualcomm TrueWireless are products of Qualcomm Technologies, Inc. and/or its subsidiaries.
Qualcomm, Snapdragon, Snapdragon Sound and Qualcomm TrueWireless are trademarks of Qualcomm Incorporated, registered in the United States and other countries. aptX and cVc are trademarks of Qualcomm Technologies International, Ltd., registered in the United States and other countries.




English **Battery disposal**

Your product contains batteries covered by the European Directive, which cannot be disposed of with normal household waste.


When disposing the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.

The correct disposal of batteries helps prevent potentially negative consequences on the environment and human health.




Deutsch **Batterieentsorgung**

Ihr Produkt enthält Batterien, die durch die europäische Richtlinie abgedeckt sind und die nicht gemeinsam mit dem normalen Haushaltsabfall entsorgt werden dürfen. Wenden Sie sich bitte bei der Entsorgung der Batterien an Ihre kommunalen Behörden oder den Händler und fragen Sie nach der Art und Weise der ordnungsgemäßen Entsorgung. Die ordnungsgemäße Entsorgung der Batterien hilft dabei, die potenziell negativen Auswirkungen auf die Umgebung und menschliche Gesundheit zu vermeiden.




Français **Mise au rebut des piles**

Votre produit contient des piles relevant de la directive européenne et qui ne peuvent pas être jetées avec les ordures ménagères. Lorsque vous mettez des piles au rebut, veuillez contacter les autorités locales ou votre revendeur afin de connaître la procédure d'élimination à suivre. L'élimination correcte des piles aide à éviter les conséquences potentiellement négatives sur l'environnement et la santé humaine.




Nederlands **Batterij weggoien**

Uw product bevat batterijen die overeenkomstig met de Europese richtlijn, niet bij het gewone huishoudelijke afval mogen. Voor het weggoien van de batterijen neemt u contact op met de plaatselijke autoriteiten of dealer en vraag informatie over de correcte wijze om deze producten weg te gooien. Door het juist weggoien van batterijen worden negatieve gevolgen voor het milieu en de volksgezondheid mogelijk voorkomen.




Dansk **Bortskaffelse af batterier**

Dit produkt indeholder batterier, der er omfattet af EU-direktiv, som ikke kan bortskaffes sammen med almindeligt husholdningsaffald. Ved bortskaffelse af batterier skal du kontakte de lokale myndigheder eller den lokale forhandler og spørge efter den korrekte bortskaffelsesmetode. Korrekt bortskaffelse af batterier er med til at forhindre potentielt negativ påvirkning af miljøet og menneskers sundhed.



Svenska **Batterikassering**


Produkten innehåller batterier som följer EU-direktivet och kan inte kasseras med normalt hushållsavfall. Vid kassering av batterier, kontakta dina lokala myndigheter eller återförsäljare och fråga efter rätt metod för avfallshantering. Korrekt kassering av batterier bidrar till att förhindra potentiellt negativa konsekvenser för miljön och människors hälsa.



本説明文は、ヨーロッパ(電池回収システム)にかかわる案内です。
本说明书是关于欧洲电池回收体系的指南。
본 설명 문장은 유럽 전지 회수 시스템에 관련된 안내입니다.


Español **Desecho de las baterías**

Su producto contiene baterías cubiertas por la Directiva Europea que no podrán desecharse junto con los residuos domésticos normales. Al desechar las baterías, póngase en contacto con su distribuidor o autoridades locales y solicite información sobre el método correcto de desecho. Desechar correctamente las baterías ayuda a prevenir consecuencias potencialmente negativas para el medio ambiente y la salud humana.




Português **Descarte de pilhas**

O produto contém pilhas abrangidas pela Diretiva Europeia, que não podem ser descartadas juntamente com o lixo doméstico. Ao descartar as baterias, contacte as autoridades locais ou o revendedor e peça informações sobre o método de descarte correto. O descarte correto das pilhas ajuda a evitar consequências potencialmente negativas para o ambiente e para a saúde humana.




Italiano **Smaltimento delle batterie**

Il prodotto contiene batterie che rientrano nella Direttiva Europea, le quali non possono essere smaltite con i normali rifiuti domestici. Quando si smaltiscono le batterie, contattare le autorità locali o il rivenditore e chiedere informazioni sul metodo di smaltimento corretto. Il corretto smaltimento delle batterie contribuisce a prevenire potenziali conseguenze negative per l'ambiente e la salute umana.




Język polski **Utylizacja baterii**

Produkt zawiera baterie opisane w treści Dyrektywy Unii Europejskiej, których nie można utylizować z pozostałymi odpadami domowymi. W celu utylizacji baterii należy skontaktować się z lokalnymi władzami lub sprzedawcą i zapytać o właściwy sposób utylizacji. Prawidłowa utylizacja baterii pomaga zapobiegać potencjalnie negatywnym skutkom dla środowiska i zdrowia człowieka.



Русский **Утилизация батарей**

Ваш продукт оборудован батареями, на которые распространяется директива Европейского Союза, их нельзя утилизировать вместе с бытовым мусором. При утилизации батарей, пожалуйста, свяжитесь с местными властями или дилером и узнайте подходящий способ утилизации. Надлежащая утилизация батарей поможет предотвратить возможные негативные последствия для окружающей среды и здоровья человека.



Suomi **Paristojen hävittäminen**

Tuotteesi sisältää eurooppalaisen direktiivin alaisia paristoja, joita ei voi hävittää tavallisen kotitalousjätteen mukana. Kun hävität paristoja, ota yhteyttä paikallisiin viranomaisiin tai jälleenmyyjään ja kysy asianmukaiseen hävittämiseen liittyviä tietoja. Paristojen asianmukainen hävittäminen auttaa ehkäisemään mahdollisia kielteisiä vaikutuksia ympäristöön ja ihmisten terveyteen.



