

GSM Mobile Phone

User Manual

NUQLEO

Model Name:QM-G2GRQ1BK

FCC ID: JJMU280

1 SECURITY MEASURES 1

1. 1 SAFETY PRECAUTIONS	1
1. 2 USE OF THE ENVIRONMENT	1
1. 3 FAIR USE	1
1. 4 ACCESSORIES AND BATTERIES.....	1
1. 5 DATA BACKUP.....	2

2 GETTING USED..... 2

2. 1 HOW TO INSTALL THE BATTERY	2
2. 2 HOW TO REMOVE THE BATTERY.....	2
2. 3 HOW TO CHARGE THE BATTERY.....	2
2. 4 HOW TO INSTALL & REMOVE THE SIM CARD.....	2

3 IME 3**4 MAKE & RECEIVE CALLS 3**

4. 1 MAKE A CALL	3
4. 2 MAKE AN EMERGENCY CALL	4

4.3 INTERNATIONAL CALLS.....	4
4.4 ANSWER THE CALL.....	4
4.5 ADJUST THE VOLUME	4
4.6 TALK HANDS-FREE.....	5
4.7 CALL WAITING.....	5
4.8 CALL OPTIONS	5

5 USER PROFILES.....5

6 SETTINGS7

6.1 DUAL SIM SWITCH	7
6.2 DUAL SIM SETTINGS.....	7
6.3 PEN CALIBRATION.....	7
6.4 PHONE SETTINGS.....	7
6.5 NETWORK SETTINGS	8
6.6 SECURITY SETTINGS	8
6.7 CONNECTIVITY	9
6.8 RESTORE FACTORY SETTINGS.....	9
6.9 SHORTCUTS	9

7 PHONEBOOK**10**

7.1 CONTACTS LIST	10
7.2 OPTIONS MENU	11

8 CALL CENTER**12**

8.1 CALL HISTORY	12
8.1.1 <i>All calls:</i>	12
8.1.2 <i>Dialed calls:</i>	12
8.1.3 <i>Missed calls:</i>	12
8.1.4 <i>Received calls:</i>	12
8.2 CALL SETTINGS	13
8.2.1 <i>SIM call settings:</i>	13
8.2.2 <i>Advanced setting:</i>	14

9 MESSAGES**15**

9.1 WRITE MESSAGES.....	15
9.2 INBOX.....	16
9.3 DRAFTS.....	16
9.4 OUTBOX.....	16

9.5 SENT MESSAGES	16
9.6 EMAIL	16
9.7 BROADCAST MESSAGES	16
9.8 TEMPLATES	17
9.9 MESSAGES SETTINGS	17
9.9.1 <i>Text message:</i>	17
9.9.2 <i>Multimedia message:</i>	18
9.9.3 <i>Service message:</i>	18

10 AUDIO PLAYER.....18

11 EMAIL.....19

12 WLAN.....19

13 SERVICES.....19

13.1 HOMEPAGE	20
13.2 BOOKMARK	20
13.3 SEARCH OR INPUT URL	20
13.4 LAST WEB ADDRESS	20

13.5 RECENT PAGES	20
13.6 SETTING	20
14 CAMERA	20
15 CALENDAR.....	21
16 VIDEO RECORDER	21
17 BLUETOOTH.....	22
18 MOBILE TV	23
19 FM RADIO.....	23
20 ALARM	24
21 VIDEO PLAYER.....	24
22 IMAGE VIEWER.....	25

23 TWITTER	25
24 Y!M	25
25 JAVA.....	25
25. 1 JAVA	25
25. 2 JAVA CONFIG.....	26
26 FACE BOOK	26
27 MSN	26
28 EBUDDY	26
29 WORLD CLOCK	26
30 FUN&GAME	26
30. 1 JAVA	26
30. 2 JAVA CONFIG.....	26
30. 3 Y!M.....	26

30.4 FACE BOOK	27
31 CALCULATOR.....	27
32 STOPWATCH	27
33 SOUND RECORDER	27
34 FILE MANAGER.....	27
35 PEN CALIBRATION.....	28
36 CURRENCY CONVERTER.....	28
37 EBOOK READER.....	28
38 RESTORE FACTORY SETTINGS.....	29
39 TASKS	29
40 SECURITY SETTINGS.....	30

41 MAINTENANCE AND HELP 30

41. 1 MAINTENANCE AND REPAIR	30
41. 2 MAINTENANCE OF THE BATTERY	31
41. 3 HELP.....	32

1 Security measures

1.1 Safety Precautions

- ❖ When mobile Phone use is prohibited or the use may cause interference or danger, please do not turn on it, and turn off the automatic startup function.
- ❖ Please read and follow the simple rules to prevent dangerous and illegal use.

1.2 Use of the environment

- ❖ When you take a plane the phone should be turned off, wireless devices may cause interference in aircraft.
- ❖ In the hospital should be powered off, the phone may make some medical equipment (such as pacemakers, hearing aids, etc.) have an impact.
- ❖ At gas stations, oil depots, chemical plants, where blasting operations or near flammable materials and chemicals areas, do not use the phone.
- ❖ Do not use mobile phones while driving, before using, you should stop your car.

1.3 Fair Use

- ❖ Just use your phone in the normal position.
- ❖ When you connect it to other devices, please read the instructions for detailed and safety actions, do not connect incompatible products.
- ❖ Only qualified personnel can install and repair the phone.

1.4 Accessories and batteries

- ❖ Use only the specified batteries and accessories.
- ❖ The use of any unauthorized accessories may affect the

phone's performance, even lead to physical danger or in violation of state on the relevant provisions of communication terminal products.

1.5 Data Backup

◊ Please note that back up all important data, so as to avoid loss.

2 Getting used

2.1 How to install the battery

◊ Open the back cover.
◊ Insert the battery into the battery slot.
◊ Close the phone cover.

2.2 How to remove the battery

◊ Open the back cover.
◊ Remove the battery from the battery slot.

Note: We recommend first off and then remove the battery to avoid loss of data in mobile phones.

2.3 How to charge the battery

◊ Plug one end of the charger to the phone charging port, the other end into a household power outlet. **Note: This machine can be connected to a computer USB port to charge.**
◊ When charging the battery level indicator on the screen icon was dynamic display, until the battery is full up.
◊ After charging, disconnect the power, then unplug the charger, so that the charger no-load.

2.4 How to install & remove the SIM card

The machine supports two SIM cards. Before doing the following, make sure the phone is turned off and no charging.

- ❖ Open the back cover, remove the battery.
- ❖ Make the golden contacts of the SIM card face down, Card gap facing the slot gap, and then put into it.
- ❖ Install the battery and close the battery cover.
- ❖ SIM card's removal and installation steps are in reverse.

3 IME

This phone supports multiple languages input. The IME can be alternated by pressing the “ctrl” key in the edit interface. Then press the corresponding keys in the keyboard to input.

4 Make & receive calls

4.1 make a call

- ❖ Enter the phone number in the standby screen, press the dial key with the selected SIM card to make calls.
- ❖ When to input, press the right function key to delete the number.
- ❖ During the call press the end key to end the call.
You can also choose from a number of direct contacts to allocate;
- ❖ Press the right function key in the standby screen enter the phone number screen, and press the navigation key to select to dial the number.
- ❖ Press dial key to call the selected number.

Directly in the call log can also call:

- ❖ In the idle screen press the dial button to enter the call log.
- ❖ Press the navigation up and down keys to select the number

to dial.

- ◊ Pressing the dial keys will make the call.

4.2 Make an emergency call

Within the GSM system, you can make an emergency call. When making an emergency call, please do not arbitrarily terminate the call. Phone without a SIM card can still make emergency calls.

- ◊ Enter the emergency number.

Press dial keys to make an emergency call.

Note: As with any mobile phone, due to the network coverage reasons or wireless signal transmission case, may not support the characteristics of the mobile phones, Some networks do not even support the 112 emergency call service. Thus, for particularly critical communications (eg medical emergencies), should not rely solely on mobile phones. Please check with your local network operator and reconciliation.

4.3 International calls

- ◊ In the idle screen press "+" key then in turn enter the country code, area code and telephone number.

Press dial key to make international calls.

Note: International dialing code of some networks is not "+" sign, please be discretion.

4.4 Answer the call

- ◊ If there have an incoming call, press the dial key to answer the phone, hang up the keys to reject a call.

- ◊ press the hang up key to end the call.

4.5 adjust the volume

During the call you can press the joystick's left and right

to adjust the volume.

4.6 Talk hands-free

During the call you can press the “ok” key directly to opened or closed hands-free.

4.7 Call waiting

Conference call feature requires opening Call Waiting, If the network supports call waiting and you start this feature, During a call when there are new calls you will hear the call waiting tone, you can answer or reject the new call. Enter the “call waiting” feature to enable or disable call waiting.

4.8 Call options

In the state of calling, press the left function key to enter the call option.

In call option, You are able to maintain / restore, end the call, establish a new call, visit call logs, calls records, SMS, sound recording, DTMF(dual-tone multifrequency) and other operations.

5 User profiles

The phone provides a few profiles: general, silent, meeting, outdoor and my style. Select it , click left keys and you can choose to activate, customize or reset the mode. Select “activate” and you activate the associated function. Select “reset” and you restore the profile to default mode. Select “customize” and you set associated function below:

❖**Alert type:** Able to set the alert type(alert way: ring,

vibrate, silent, vibrate then ring)

✧**Ring type:** Able to set ring type(alert way: repeat, ascending, beep once).

✧**SIM 1 incoming call:** Able to set ringtone of SIM 1 incoming call.

✧**SIM 2 incoming call:** Able to set ringtone of SIM 2 incoming call.

✧**Ringtone volume:** Able to adjust the ringtone volume by pressing the left and right navigation buttons or side key.

✧**SIM 1 message:** Able to set ringtone of SIM 1 message.

✧**SIM 2 message:** Able to set ringtone of SIM 2 message.

✧**Message volume:** Able to adjust the message volume by pressing the left and right navigative buttons or side key.

✧**Keypad:** Able to set the sound of keypad to be “silent”, “click”, “tone”.

✧**Keypad volume:** Able to adjust the keypad volume by pressing the left and right navigative buttons or side key.

❖ **Power on:** Set the tone when the phone is being powered on.

❖ **Power off:** Set the tone when the phone is being shut down.

❖ **System alert:** Set the system alert on or off.

6 Settings

6.1 Dual SIM switch

Able to choose “manually selected by user” or “automatically decided by SIM cards” .

6.2 Dual SIM settings

Able to choose “Dual SIM open”, “Only SIM1 open” or “Only SIM2 open” .

6.3 Pen calibration

This is used to calibrate the touch screen accuracy.

6.4 Phone settings

❖ **Time and date:** Set the time, date and local city and its format.

❖ **Schedule power on/off:** Set up automatic open/shutdown of the time and switch. Open the automatic shutdown function, when the time is out the phone will automatic turn on/off.

❖ **Language:** Set the language the phone displays.

❖ **Pref. input method:** Set fuzzy tone, hand to set the pace, handwritten font size, and font color handwritten.

❖ **Encoding:** Setting the way of encoding.

- ❖ **Display:** Setting “Wallpaper” . “Screen saver” , “Power on display” , “Power off display” and the switch of the display of time and date.
- ❖ **Auto update time:** Able to update the current time. **Note: this function depends on the operator.**
- ❖ **Flight mode:** Setting the phone to be the common mode or the flight mode.
- ❖ **UART setting:** Setting the default UART of the phone.
- ❖ **Misc.setting:** Setting the lightness of the background light of LCD.

6.5 Network settings

Setting to choose the network by hands or automatically.

6.6 Security settings

- ❖ **SIM card security:** This function can open or close the password lock. PIN number need to be input to power on the phone after it being locked. Remarks: SIM card would be locked after 3 times mistaking the PIN number, and then PUK number is necessary to unlock it.
- ❖ **Phone security:** Open this function, when boot you need to input password, the default password is 1234.

- ❖ **Auto keypad lock:** Setting the waiting time of auto keypad lock. The keypad will be locked automatically after the set time has passed in the standby interface without any operation.
- ❖ **Certificate manager:** You can view the mobile phone of the relevant certificate.

6.7 Connectivity

❖**Bluetooth:** 1. **Power:** Setting the power of Bluetooth.

2. **Visibility:** Setting the visibility of Bluetooth. When it's off, other phones can't search this phone though it has opened Bluetooth.

3. **My device:** Searching the devices which has turned on Bluetooth nearby.

4. **Search audio device:** Searching Bluetooth earphone nearby.

5. **My name:** The name shows on other phones when Bluetooth is on and the phone is searched.

6. **Advanced:** Setting the audio path and the position of storage and check the Bluetooth address.

❖**Data service:** Can open or close service.

6.8 Restore factory settings

This function will be used for some settings which need restore the default Settings. Choose the item and input factory password for confirmation (factory password is 1122), the related parameters will return to factory Settings.

6.9 Shortcuts

After entering according to options can carry out the following operations:

❖**Add:** Add shortcut keys

- ❖ **Edit:** The editors have to add shortcut keys
- ❖ **Delete:** Delete the shortcuts
- ❖ **Delete all:** Delete all shortcuts
- ❖ **Change order:** Moves the selected shortcut key position

7 Phonebook

This feature can view and manage the telephone number information in the machine and in the SIM card.

7.1 Contacts List

- ❖ Press the right function key in the standby screen to access Contacts.
- ❖ Contacts list is displayed by default for all phonebook records in mobile phone and SIM card., you can press "options" to enter the menu, then select "Contacts Settings -> preferred storage location" to re-set the display of the phone book..
- ❖ In the list interface you can do the following:
 - Select "Add Contact" you can add a SIM card or phone number;
 - Press the navigation key to check the records;
 - Press the number keys by the first letter to find telephone numbers;
 - Press dial keys will call the current number ;
 - Press the left function key to access the Options menu, and perform the corresponding function through the menu;
 - Press the OK key to view the current record for more information.
 - Press left and right arrow keys to view the different groups of contacts. You may establish new groups, check

the members in the groups and set the groups, such as edit group names, set ring bells, set call images.

7.2 Options menu

In the Contacts Options menu you can do the following:

◆ **View:** check the detail of the current contact number.

◆ **Sending text message:** Sending messages to the current number.

◆ **Sending multimedia message:** Sending multimedia message to the current number.

◆ **Call:** Dial the current number; or make an IP phone call.

◆ **Edit:** Edit the detail of the current number.

◆ **Delete:** delete the current number.

◆ **Copy:** Copy the current number.

◆ **Move:** Move the current number.

◆ **Send business card:** Send the detail of the current number by means of SMS, MMS, Bluetooth.

◆ **Add to blacklist:** Add the current number to the blacklist.

◆ **Mark several:** select the current or multiple contacts.

◆ **Phonebook settings:** Able to take operations below:

1、**Preferred storage:** Choose the preferred position of storage.

2、**Speed dial:** Turn on “speed dial” and set the number. Speed dial is available by pressing the corresponding key in the standby interface for a longtime.

3、**My number:** Add the number of the phone in case to check.

4、**Extra number:** Owner numbers, fixed dial, SOS numbers may be set

5、Memory status: Memory status of SIM card and the phone can be checked.

6、Copy contacts: The numbers can be copied to SIM card from the phone or to the phone from SIM card.

7、Move contacts: The numbers can be moved to SIM card from the phone or to the phone from SIM card.

8、Delete all contacts: All numbers in the phone or in SIM card can be deleted.

8 Call center

8.1 Call history

This function records related call records. Enter call records, choose a SIM card, you can see the SIM card related calling records options.

8.1.1 All calls:

This function records the number or name recently dialed, missed, received and rejected. Press “ok” key to see the options from the list. The options that can be chosen are “view”, “call”, “send text message”, “send multimedia message”, “save to phonebook”, “add to blacklist”, “edit before call”, “delete”, “advanced”.

8.1.2 Dialed calls:

This function records the number or name recently called. for Operattions please reference Missed calls.

8.1.3 Missed calls:

This function records the number or name recently missed. for Operattions please reference Missed calls.

8.1.4 Received calls:

This function records the number or name recently received.
for Operattions please reference Missed calls.

8.2 Call settings

8.2.1 SIM call settings:

❖ **Call ID:** Note: This function depends on the network operator. Please consult the local network operator for more detail.

Set by network: Hide or send the phone ID to the receiver in condition of the network default setting when calling.

Hide ID: Hide the phone ID to the receiver when calling.

Send ID: Send the phone ID to the receiver when calling.

❖ **Call waiting:** Set the status to be activated, deactivated, query status. Note: This function depends on the network operator. Please ask the local network operator for more detail.

❖ **Call divert:** The options are “Divert all voice calls”, “Divert if unreachable”, “Divert if no answer”, “Divert if busy”, “Divert all data calls”, “Cancel all diverts”. Note: This function depends on the network operator. Please ask the local network operator for more detail.

❖ **Call barring:** The options are “All voice calls”, “International voice calls”, “International voice calls except to home”, “All voice calls”, “Voice calls when roaming”, “Cancel all”,

“Change barring password” . Note: This function depends on the network operator. Please ask the local network operator for more detail.

- ◆**Line switching:** Able to switch line 1 or line 2.
- ◆**Group list:** Able to set group list. Note: This function depends on the network operator. Please ask the local network operator for more detail.

8.2.2 Advanced setting:

- ◆**Blacklist:** Able to open or close the blacklist and set the numbers of the blacklist.
- ◆**Whitelist:** Able to open or close the whitelist and set the numbers of the whitelist.
- ◆**Auto radial:** Able to open or close the function of auto radial. When it’s on, the phone shall redial automatically after you failed dialing.
- ◆**Call time display:** The call time will display when calling if it’s on.
- ◆**Call time reminder:** You will be reminded when the call time reaches the time set before if it’s on.
- ◆**Auto quick end:** The call will end when the call time reaches the time set before if it’s on.
- ◆**Reject by SMS:** After it’s on, you may choose to reject by SMS when being called.
- ◆**Connect notice:** After it’s on, reminding sound will be heard when making a call.
- ◆**Answer mode:** Able to set answer the call by pressing any key or auto answer when headset mode.

9 Messages

9.1 Write messages

Txt message:

- ❖ Enter the interface of the message editing , input the message content, and press the left function key to access the options menu;
- ❖ Select "Options" to enter the menu where you can select "Send, insert commonly used statement, insert contact information, insert emoticons, save messages" and other options
- ❖ Select "Send" or press the OK key to enter the number inputting interface:
 - Input number: input the recipient number directly;
 - Add from Phonebook: enter the phonebook to select recipients.
- ❖ Enter the recipient number and then press the OK button to send text messages.

Multimedia message:

- ❖ Only when the network operator support, you can use this feature. And only the phone with compatible multimedia message features can receive and display properly.
- ❖ Enter the edit screen, press the left function button to enter the option menu.
- ❖ Able to choose "send to", "input method", "add picture", "add picture", "add sound", "add video", "add subject", "preview MMS", "slide option",

“advanced” , “save to drafts” .

9.2 Inbox

❖ Inbox storage and manage the received messages.
Enter the selected Inbox, press the navigation key to select text, and press the OK key to read its contents.

❖ Press the left function key to access the Options menu, you can restore, delete, forward, call, lock, mark, sort and so on.

9.3 Drafts

❖ When edit a sms which saved as a draft message can be for viewing and management, operation in this feature , please refer to the Inbox.

9.4 Outbox

❖ Outbox storage and manage the messages being sent and failed being sent. Please refer to the Inbox.

9.5 Sent messages

❖ Sent messages storage and manage the messages sent and stored. Please refer to the Inbox.

9.6 Email

❖ Create account can send and receive email.

9.7 Broadcast messages

❖ community radio is a one-way message service which the consultation service center provide for the user in the system , such as weather and traffic services. the community radio

Received will automatically be displayed in the standby screen, you can direct press the hang-up key cleared. For details, please consulting operator.

9.8 Templates

❖ The phone presets numbers of the unit commonly used phrases, you can edit, delete, or take the phrase as the content of messages.

9.9 Messages settings

9.9.1 Text message:

❖SIM

- **Profile settings:** setting the number of the SMS center
- **Validity period:** setting SMS validity period
- **Message type:** setting the type of SMS
- **Delivery report:** setting the switch of SMS report
- **Reply path:** setting the switch of reply path
- **Preferred connection:** setting a preferred connection of the SMS

- **Voice Mail server:** Each SIM card can be set two voice mail number in the settings, press the “1” key for a longtime to make available to listen to dial voice mail number voice messages. This function should be supported by the network operator.

❖ **Memory status:** The memory status of SIM card and the phone are visible.

❖ **Save sent message:** setting the switch of the storage of sent messages.

❖ **Preferred storage:** setting the preferred position of the storage of SMS.

9.9.2 Multimedia message:

Data account: setting data account

Common setting: able to check and set the status of “sending”, “retrieval”, “preferred storage”, “memory status”

9.9.3 Service message:

Setting the switch of availability to receive the service message.

10 Audio player

Into the music play interface, can undertake the following operation:

- ◆ **OK key:** Play / Pause
- ◆ **navigation up key:** Set single repetition, all repeated or not to repeat
- ◆ **navigation down key:** Set the play in sequence or random play
- ◆ **navigation left, right:** Press switch to front, after a song, long press to fast-forward rewind
- ◆ ***key:** Decrease volume
- ◆ **#key:** Increase volume

- ◆ **left function keys:** Access list, The list of songs by up and down navigation keys to move the cursor, According to the options you can perform the following operations
 - 1、Play: The currently selected songs.
 - 2、Details: You can view the selected songs specific information.
 - 3、Refresh list: The song list refresh.
 - 4、Settings: The list auto gen, repeat, shuffle, background play set.

11 Email

Create account can send and receive email.

12 WLAN

This function enable to search the WLAN nearby. Then the net can be connected with this connective point.

Ad Hoc function is supported but not able to operate on non-US frequencies.

13 Services

The internetwork is the application platform which wireless communication combine with with Internet ,it can make you get plentiful Internet information resources and electronic commerce application by phone.

Note:

1. Your Internet service provider may not support the certain functions, in order to guarantee the normal operation of the browser line, please confirm your SIM card has support the Internet service.

2. when you browse the web, it will costs related flow fee, the expenses please enquiry local operators.

13.1 Homepage

The choice will be directly connected to home page which you set in advance or the default.

13.2 Bookmark

Choosing a bookmark can visit the website which was set by the bookmark. You can reserve the commonly used web site in the favorites. Specific operation is as follows:

Add new bookmark: choose to add new bookmark, preserve after enter a new bookmark address and name.

13.3 Search or input URL

Input the words to search or the website address to browse.

13.4 Last web address

Click to visit the last browsed website.

13.5 Recent pages

Record your visited web addresses before.

13.6 Setting

Able to set the homepage of the browser, configuration files, data account, browser setting, favorite, security.

14 Camera

Enter camera preview interface from main menu, press Upper / lower key to adjust focal length, the press key "OK" to start shooting.

❖ Enter into options menu with pressing left function key and you can do below concerned settings:

◆ **EV:** Set the exposure compensation.

- ◆ **Switch to:** Can choose photo album, video recorder and use front camera.
- ◆ **Capture mode:** Able to set “normal” or “continuous shot” .
- ◆ **Scene mode:** Able to set “auto” or “night” .
- ◆ **Image size:** The image size can be set as “wallpaper” , “VGA” .
- ◆ **Self-timer:** Can choose to delay time for taking photos or delay off camera.
- ◆ **White balance:** Auto, daylight, tungsten, fluorescent, cloudy, incandescent.
- ◆ **Effects:** Normal, grayscale, sepia, sepia green, sepia blue, color invert.
- ◆ **Adv. settings:** This option is about the operations of the storage position of the images, image qualities, contrast, shutter sound, anti-flicker, restore default.

15 Calendar

- ❖ In the main interface of calendar, press left or right key of navigation keys to switch switch year and month.
- ❖ Press the “options” to enter menu, you can view the same day/all (task), add event, jump to a specified date, deal with weekly/monthly check , turn on or off the lunar switch and so on.

16 Video recorder

- ❖ Into the camera interface, the press key “OK” to start shooting.

❖ Enter into options menu with pressing left function key and you can do below concerned settings:

- ◆ **EV:** Set EV.
- ◆ **Switch to:** Switch between front and back camera.
- ◆ **Scene Mode:** Normal and Night.
- ◆ **White Balance:** Auto, Daylight, Tungsten, Fluorescent, Cloudy, Incandescent.
- ◆ **Effects:** Normal, Sepia, Sepia green, Sepia blue, Color invert.
- ◆ **Record Limit:** Unlimited, 15s, 30s or 60s.
- ◆ **Adv. settings:** For setting and operation to Storage location, Video quality ,contrast, Anti-flicker, Restore default.

17 Bluetooth

1. **Power:** Setting the power of Bluetooth.
2. **Visibility:** Setting the visibility of Bluetooth. When it's off, other phones can't search this phone though it has opened Bluetooth.
3. **My device:** Searching the devices which has turned on Bluetooth nearby.
4. **Search audio device:** Searching Bluetooth earphone nearby.
5. **My name:** The name shows on other phones when Bluetooth is on and the phone is searched.

6. Advanced: Setting the audio path and the position of storage and check the Bluetooth address.

18 Mobile TV

Enter Mobile TV and search the effective channel to watch.

The channels can be changed by the “up” and “down” button in the channel list. Press the side key to change the volume.

Press the left function button to choose “Play”, “Update”, “Rename”, “Delete”.

19 FM radio

❖ The phone has FM Radio function for listening broadcast, but the function is available only with the earphone inserting.

Enter the radio interface, enter into next channel with pressing the left key and the right key for entering into the previous one, and up key for smart search, and down key for radio ON/OFF, there are below options when press left soft key:

- ❖ Channel List: For compiling channel name and rate.
- ❖ Manual Input: For inputting rate manually .
- ❖ Auto Search: For searching channels automatically and saving the searched channels into Channel List.

❖ **Settings:** For setting radio concirned parameters.

❖ **Record:** Showing the recorded sounds.

20 Alarm

you can set 5 alarm clocks, which support ring when shutdown.

❖ Enter the alarm function, choose a clock, and press left key to enter editing interface.

❖ Press up or down of navigation key to choose seting items, Press left or right of navigation keys, or use a digital keyboard to modify, and press the right key to save the settings.

21 Video player

Access to the video interface list, press up and down navigation keys to select the video, press the left button can carry out the following operations:

- ◆ **Play:** The selected video playback
- ◆ **Send:** Via multimedia message or Bluetooth transmission
- ◆ **Rename:** The selected video rename
- ◆ **Delete:** Delete the selected video

Select the play into the video playing interface, can carry out the following operations:

- ◆ **OK key:** Play / Pause
- ◆ **navigation up key:** Full screen
- ◆ **navigation down key:** Stop the current broadcast
- ◆ **navigation left, right:** Fast forward or rewind

- ◆ ***key:** Decrease volume
- ◆ **#key:** Increase volume
- ◆ **eft function keys:** Set whether automatic repeat

22 Image viewer

In [image viewer] interface, press the [option] can undertake the following function:

- ◆ **View:** Able to view the selected image.
- ◆ **Image information:** Review images for details.
- ◆ **Browse style:** Able to choose list style or matrix style.
- ◆ **Send:** Send the image by the means of Bluetooth or MMS.
- ◆ **Use as:** Set the pictures selected as “Wallpaper”, “Screen saver”, “Power on display”, “Power off display” or “Caller picture”.
- ◆ **rename:** Change the name of the selected pictures.
- ◆ **Delete:** Delete the selected pictures.
- ◆ **Sort by:** Sort the images by there names, types, times or sizes.
- ◆ **Delete all files:** Delete all pictures.
- ◆ **Storage:** Set the default path of picture storage.

23 Twitter

This machine with Twitter for users.

24 Y!M

This machine with Y!M for users.

25 Java

25.1 Java

There are connections of facebook, TinyTwitter, ebuddy in Java. They are available after being download.

25.2 Java Config

The configuration of Java was configured in this option.

26 Face Book

This machine with Face Book for users.

27 MSN

This machine with MSN for users.

28 Ebuddy

This machine with Ebuddy for users.

29 World clock

You can view the world of time through the navigation key. Press the left button to enter it, you can set the daylight saving time switch.

30 Fun&Game

30.1 Java

There are connections of facebook, TinyTwitter, ebuddy in Java. They are available after being download.

30.2 Java Config

The configuration of Java was configured in this option.

30.3 Y!M

This machine with Y!M for users.

30.4 Face Book

This machine with Face Book for users.

31 Calculator

Calculator can execute addition, subtraction, multiplication, division, and four fundamental operations of arithmetic.

- ❖ Press numeric keys to input the numbers. and the navigation key input, +, -, x.
- ❖ Right function keys can delete datas.
- ❖ "OK" key caculate results.

32 Stopwatch

This machine with Stopwatch for users.

33 Sound recorder

Press the "up" key to record, "left" and "right" key to change the audio file, the "down" key to play the selected audio file.

Pressing the left function key for options, and recording, playing, append, renaming, deleting, list, setting, using, sending are available.

34 File manager

File management features provide file management functions in the phone or in the T cards storage device . Enter file

management, there will be the current storage device list.

- ❖ In the list, the phone and T card can be formatted and all data will be deleted.
- ❖ Click "OK" key enters the selected folder;
- ❖ Press left function key to enter options, you can perform the following operations:
 - ◆ **Open:** open the current file.
 - ◆ **Send:** send the selected file by Bluetooth or MMS.
 - ◆ **New folder:** build a new folder in the current storage device.
 - ◆ **Rename:** rename the current file.
 - ◆ **Delete:** delete the selected folders, this function for system folders is unavailable.
 - ◆ **Sort by:** according to folder name, date, size, sorting, type.
 - ◆ **Mark several:** mark for single or multiple folders.
 - ◆ **Copy:** copy the file into a certain document.
 - ◆ **Move:** move the file into a certain document.
 - ◆ **Delete all files:** delete all the files.
 - ◆ **Details:** check the related information of the folder.

35 Pen calibration

This is used to calibrate the touch screen accuracy.

36 Currency converter

This function can be performed according to the ratio of conversion.

37 Ebook reader

Ebooks whose formats are txt can be read. **Note: Txt files**

should be stored under T card' s Ebook menu or in the phone.

❖ When entering the reader, the files stored in the phone or T card are list in the interface. The options “open Ebook”, “global settings”, “book informations”, “delete”, “delete all files”, “sort by”, “help” are able to be operated. Among them, “global settings” has functions to set font size, scroll type, scroll speed and the storage position. ❖ When reading, press the left function key to enter the menu. “Full screen on”, “find”, “jump to”, “add bookmark”, “go to bookmark”, “delete bookmark”, “auto scroll on”, “close” .

38 Restore factory settings

This function will be used for some settings which need restore the default Settings. Choose the item and input factory password for confirmation (factory password is 1122), the related parameters will return to factory Settings.

39 Tasks

Tasks can be established.

❖ When adding new tasks, press the “up” and “down” key to choose the the object to set. Press the navigation keys or the number keys to modify and the right function key to save the settings.
❖ Task list interface has options as “view”, “add”, “edit”, “delete”, “delete overdue”, “delete all”, “jump to date”, “view uncompleted”, “send vCalendar”, “save as file” .

40 Security settings

- ❖ **SIM card security:** This function can open or close the password lock. PIN number need to be input to power on the phone after it being locked. Remarks: SIM card would be locked after 3 times mistaking the PIN number, and then PUK number is necessary to unlock it.
- ❖ **Phone security:** Open this function, when boot you need to input password, the default password is 1234.

❖ **Auto keypad lock:** Setting the waiting time of auto keypad lock. The keypad will be locked automatically after the set time has passed in the standby interface without any operation.

❖ **certificate manager:** You can view the mobile phone of the relevant certificate.

41 Maintenance and help

41.1 Maintenance and repair

The phone is designed excellent, by understanding this cell phone's maintenance and repair, you can use safe and effective in a long time:

- ❖ Please put your mobile and accessories where children can't touch.
- ❖ Please keep the cell phone dry. Rain, moisture and liquid contain minerals, so will corrode phone's circuit .
- ❖ Please don't put the phone on messy, dirty place.
- ❖ Please do not use mobile phone or keep in high temperature .

High temperature can shorten the life of the electronic components, damage to the battery, and make some plastic part deformed or melt.

❖ Please do not use mobile phone or keep in low temperature . When the phone is in normal temperature, moisture in the phone internal may coagulate, which will cause the damage of the circuit board.

❖ Do not disassemble the mobile phone, casual treatment may be damaged cell phone.

❖ Please avoid falling, beating and vibrating mobile phone, inappropriate outside force may damage mobile phone's circuit .

❖ Do not use chemical solvents or cleaner to clean mobile phone. To clean mobile phone, please use the soft cotton fabrics stained with water or neuter soap to brush cell phone .

❖ Please use the original manufacturer's recommended accessories.

❖ If the phone or its parts is out of order, please look for professional maintenance to repair your phone.

41.2 Maintenance of the battery

❖ New battery can achieve the best performance after two or three full charge and discharge.

❖ Batteries can be charged and discharged hundreds of times, but will ultimately be ineffective. When the talk and standby time is significantly short, you need to purchase a new battery.

❖ When the charger is not using, please cut off power supply. Don't connect battery to the charger more than a

week, because excessive charge will shorten the battery life.

- ❖ if the phone is no used in a long time, please keep charging at least 20 minutes or more before used again.
- ❖ To make the battery life as long as possible, you can discharge the battery by turning on until turning off automatic . Don't try to use other unauthorized method to discharge.
- ❖ When the battery is low, and can only keep a few minutes of talk time, mobile phone will make sound warnings. when the battery is used up, phone will automatic shut down .
- ❖ If battery is used more than one and a half years, you'd better replace batteries. don't abandon used batteries and just give it to local recovery site .

41.3 help

If someting abnormal happened when you use the phone, please solve refer to the table below , if there is still some questions, please contact network operator.

abnormalities	causes	solution
---------------	--------	----------

Receiving signal adverse	1. use mobile phones in the signal receiving bad areas . Such as tall buildings or basement near 2. In a dense period, the line call is in congestion which cannot be calling. 3. Away from the network operator's base station	If you are in the building, please move to the nearby window. If the signal is very weak, please move into the open place Try to avoid
Echo or noise	1. The network operator's poor trunks caused 2. call line of some places is in bad	You can request network operators to provide the service area chart. Hang up and dial again, trunks' choice may exchange for good lines.
can't be turned on	The battery is exhausted	To recharge the battery
Standby time becomes short	1. Standby time have something to do with network operators' system setting. The same cell phone is used in different networks, standby time may not the same.	In the signal receiving bad areas, please temporarily shut down

	<p>2. The battery wears, and the performance will be gradually reduced after using a few years</p>	Replace new battery
	<p>3. When couldn't get a signal, phone will continue to launch to look for the base station, which will use a lot of battery, and cause standby time short.</p>	Move to area of good signals or shutdown for the moment
No network service	1. The SIM card is invalid	Contact with network operators
	2. Not in a service area	Check the network operator's service area
	3. Weak signal	Move to the window or choose another service network
SIM card can't use	1. SIM card is damaged	Back to network operators for inspecting
	2. SIM card is not installed properly.	To properly installed the SIM card
	3. SIM card contacts is not clean	wipe the contacts with a clean cloth

Can't send SMS	Not open this service or no input text message center number	contact with network operators, and set the SMS center number
Can't call or can't answer the phone	Call limit has set	Close call limit
PIN error	Input wrong PIN code three times	Contact with network operators
Battery don't charge	1. The battery or battery charger is damaged 2. The cell phone is 5 degrees Celsius temperature below or above 40 degrees centigrade. 3. Contact undesirable	1. Replace new battery or charger 2. Adjust charging environment 3. Check if the joint connectiont is good, Keep charging more than 20 minutes
the data can't be input in the phone book	the phone book is full	Delete parts of this phone book
Unable to set some function	Network operators do not provide this function	Contact with network operators

(Note: if someting abnormal happened with the phone, please refer to the table above for solutions. if problems still exist, please contact with network operator or the machine

manufacturer . Text and images in the instructions leaflet is only for reference, please in kind prevail) About the statement conforming to «the pollution's control measures of electronic products»

According to the national «the pollution's control measures of electronic products» (Ministry of Information Industry's 39th order), the following part lists the name and content of toxic/or harmful substances which the products may contain.

Poisonous and harmful substances' name and the content is in the list below						
Parts name	Poisonous and harmful substances or elements					
	lead (Pb)	mercury (Hg)	cadmium (Cd)	Hexavalent chromium (Cr ⁶⁺)	Many bromine biphenyl (PBB)	(PBDE)
Shell components */ key	○	○	○	×	○	○
display screen	○	○	○	○	○	○
Circuit board components **	×	○	○	○	○	○
battery	○	×	○	○	○	○

battery charger	×	○	○	○	○	○
headset	×	○	○	○	○	○
External signal connections	○	○	○	○	○	○
Packaging materials	○	○	○	○	○	○

*: Shell components include base/face case, lens, stopper, decoration.

**: Circuit board components include printed circuit board and its components, such as the parts of the resistor, capacitor, inductor, integrated circuit, connectors, ceramic piezo, horn, motor, camera etc.

○: to indicate the content of poisonous and harmful material in all the parts of the homogeneous material is less than that ordered in « the poisonous and harmful materia's limited content in the electronic products» .

×: to indicate the content of poisonous and harmful material in all the parts of the homogeneous material is more than that ordered in « the poisonous and harmful materia's limited content in the electronic products» .

Note: mobile phone's accessories take the actual configuration as standard .

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 86-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters.

Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies.

The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna.

If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the

back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both

U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use.

Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 1.5cm is 0.878 W/kg, next to the head is 0.471W/kg. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C and 50°C , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Ad Hoc function is supported but not able to operate on non-US frequencies.

In order to comply with RF exposure requirements for Wi-Fi, a minimum distance of 2.5 cm would be better maintained between the antenna and all persons