






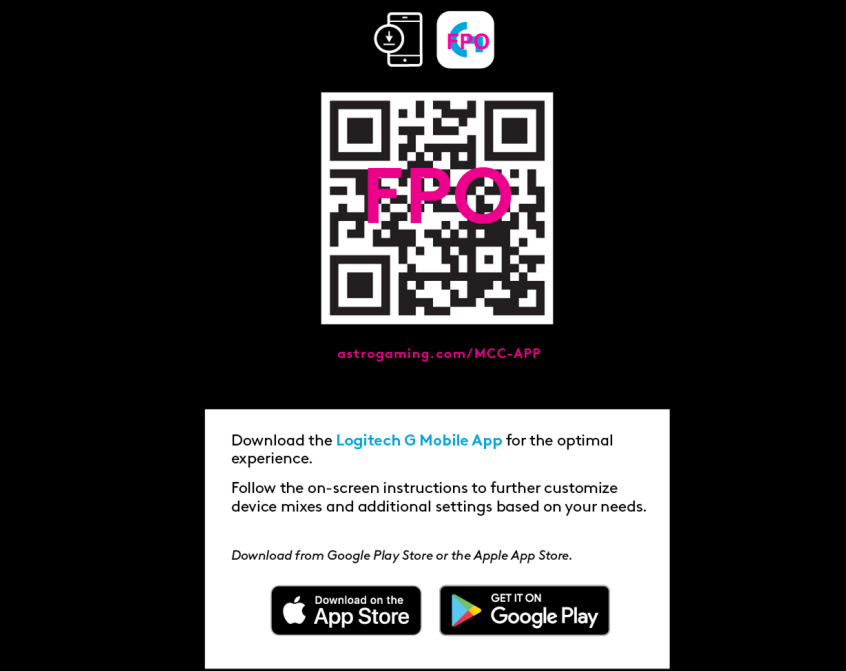
PRODUCT GUIDE ASTRO A30 WIRELESS | 4



- 1 USB-C Port
- 2 3.5 mm Audio Port
- 3 Multi-function Control
- 4 Mute Switch
- 5 Power
- 6 Customizable Speaker Tags
- 7 Integrated Microphone
- 8 Detachable Boom Microphone

■ ENGLISH

DOWNLOAD THE APP ASTRO A30 WIRELESS | 5



[astrogaming.com/MCC-APP](https://astrogaming.com/MCC-APP)

Download the [Logitech G Mobile App](#) for the optimal experience.

Follow the on-screen instructions to further customize device mixes and additional settings based on your needs.

*Download from Google Play Store or the Apple App Store.*

Download on the  
 **App Store**

GET IT ON  
 **Google Play**

■ ENGLISH

POWER ON/OFF

ASTRO A30 WIRELESS | 6



1 Power On

Press and hold the Power button for 3 seconds when the headset is off. You will hear a tone to indicate the power is on.


2 Power Off

Press and hold the Power button for 3 seconds when the headset is on.

ENGLISH

BLUETOOTH CONNECTION

ASTRO A30 WIRELESS | 7

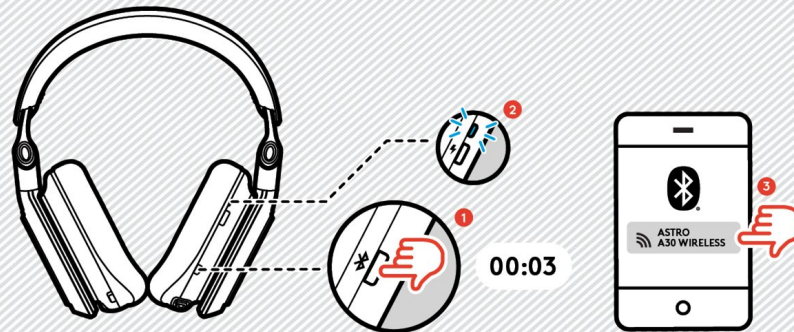


Make sure your A30 is powered on and within 30 feet of the device it's pairing to.

- 1 Press and hold the Bluetooth button for 3 seconds to enter pairing mode.
- 2 The LED will blink blue and a tone will indicate your A30 has entered pairing mode.
- 3 From your device, select your A30 from the Bluetooth device list.

ENGLISH

LIGHTSPEED CONNECTION

ASTRO A30 WIRELESS | 8

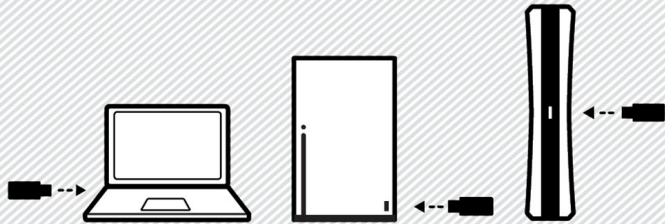

Connect to your PC, Mac, or console with LIGHTSPEED Wireless Technology. Your A30 is pre-paired with the transmitter for easy setup.

- 1 Plug the included USB Wireless Transmitter into your device.

ENGLISH

WIRED CONNECTION

ASTRO A30 WIRELESS | 9



Use your A30 in wired mode with the included 1.5m cable.


- 1 Plug the cable into your A30 3.5mm jack and into your device.

ENGLISH

OPTION 1

VOICE, MUTE, GAME & VOICE BALANCE

ASTRO A30 WIRELESS | 10

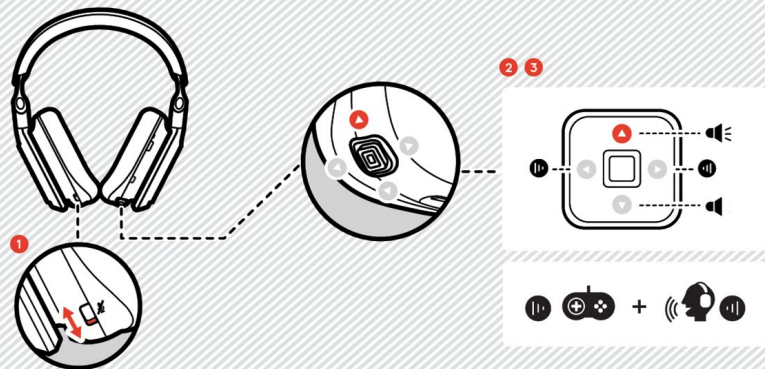

1 Mute/Unmute

Toggle to mute on/mute off, you will hear a tone when you mute on/off. When muted, you will see a red indicator.

2 Volume Control

Control your volume using the joystick.

To increase volume, move the joystick up. At max volume, you will hear a tone.

To decrease volume, move the joystick down. At min volume, you will hear a tone.

3 Game & Voice Balance

Adjust balance between Game & Voice using the joystick.

To balance towards Game and lower Voice, move the joystick left. You will hear a tone when it reaches max and a tone when it reaches the mid-point window.


To balance towards Voice and lower Game, move the joystick right. You will hear a tone when it reaches max and a tone when it reaches the mid-point window.

ENGLISH

OPTION 2

VOICE, MUTE, GAME & VOICE BALANCE

ASTRO A30 WIRELESS | 11

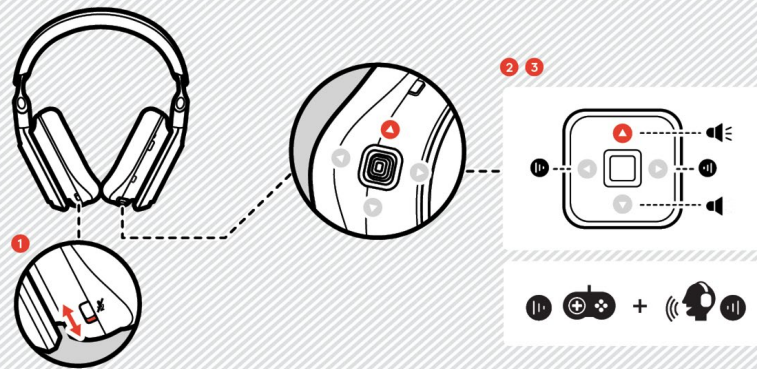

1 Mute/Unmute

Toggle to mute on/mute off, you will hear a tone when you mute on/off. When muted, you will see a red indicator.

2 Volume Control

Control your volume using the joystick.

To increase volume, move the joystick up. At max volume, you will hear a tone.

To decrease volume, move the joystick down. At min volume, you will hear a tone.

3 Game & Voice Balance

Adjust balance between Game & Voice using the joystick.

To balance towards Game and lower Voice, move the joystick left. You will hear a tone when it reaches max and a tone when it reaches the mid-point window.

To balance towards Voice and lower Game, move the joystick right. You will hear a tone when it reaches max and a tone when it reaches the mid-point window.

ENGLISH

MOBILE SPECIFIC CONTROLS

ASTRO A30 WIRELESS | 12



When using your A30 with your mobile phone, additional features are enabled via the joystick.


- 1 Calls**  
To answer or hang up a call, press the joystick in. To reject calls, hold the joystick in.
- 2 When Listening to Music**  
Press the joystick to play and pause. Double press to move to the next track. You will hear a tone.

- 3 Smart Assistant**  
Triple press to go back and replay track. You will hear a tone. To trigger your device's Smart Assistant, when not on a call, hold the joystick in for 3 seconds

■ ENGLISH

BATTERY

ASTRO A30 WIRELESS | 13

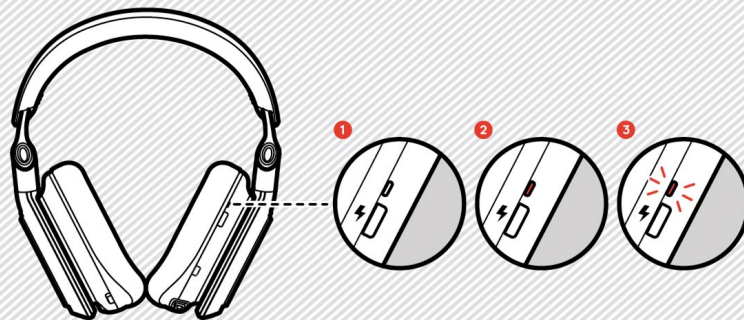


- 1** Battery above 20% will show a solid white LED.
- 2** When battery hits 20% you will hear a SOS tone. Battery between 10% to 20% will show a solid red LED.
- 3** Battery below 10% will blink red LED and you will hear a tone every 3 minutes until it shuts down.

■ ENGLISH

TRANSMITTER LED BEHAVIOR

ASTRO A30 WIRELESS | 14

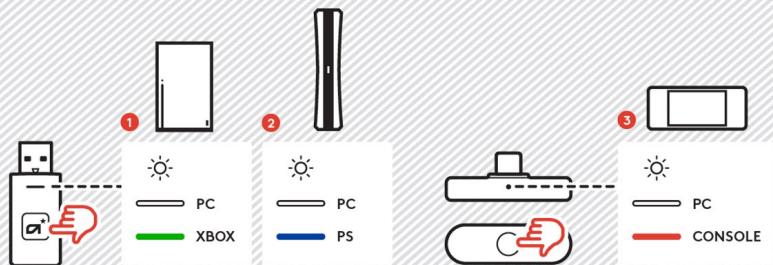


- 1 When using your Xbox A30, your transmitter LED will show green when in console mode, and white when in PC mode
- 2 When using your Playstation A30, your transmitter LED will show blue when in console mode, and white when in PC mode
- 3 When using your A30 with the USB-C transmitter, your transmitter LED will show red in console mode, and white when in PC mode

■ ENGLISH

MICROPHONE

ASTRO A30 WIRELESS | 15

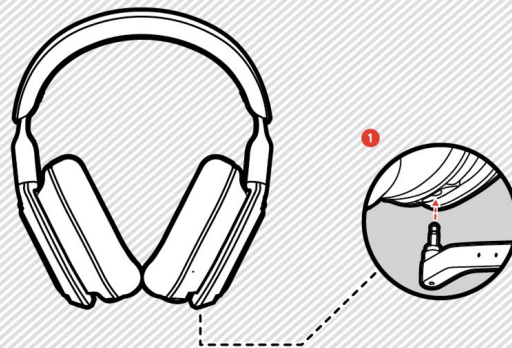

Your A30 comes with two microphones, an internal microphone and a detachable boom microphone.

- 1 To attach the boom microphone, insert it in the bottom of your A30.


When your A30 is powered on, your mic will default to the boom microphone. When your boom microphone is removed, your internal microphone will be used.

■ ENGLISH



TWO ICON OPTIONS

SLEEP MODE ASTRO A30 WIRELESS | 16



Your A30 senses motion to intelligently conserve power. The A30 will go into Sleep Mode if left unattended for 15 minutes, this timer can be adjusted or turned off using the Mobile App.

1 To wake, tap any button on the headset, you will hear a tone.

If the A30 remains in Sleep Mode for over 1 hour, the headset will shutdown completely.

■ ENGLISH



2022 Logitech, Logi and the Logitech Logo are trademarks or registered trademarks of Logitech Europe S.A. and/or its affiliates in the U.S. and other countries. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

WEB-621-XXXXXX 002