

Safety Information



AC POWERED PRODUCTS: IMPORTANT SAFETY INFORMATION

CAUTION ELECTRIC SHOCK HAZARD

- Do not use this apparatus near water.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not push objects into apparatus vents or slots because fire or electric shock hazards could result.
- Maintain a minimum distance of at least 6 inches around apparatus for sufficient ventilation.
- Ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table clothes, curtains, etc.
- No naked (open) flame sources, such as lighted candles, should be placed on or near the apparatus.
- Place apparatus in a stable location so it will not fall causing product damage or bodily harm.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized plug. A polarized plug has two blades with one wider than the other. The wide blade is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- The apparatus shall be disconnected from the mains by unplugging the power cord of the apparatus from the AC mains receptacle.
- The socket-outlet shall be installed near the equipment and shall be easily accessible.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

UL Safety: Your product has been UL tested. It should only be used with other UL listed devices.

FCC

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

Radio Frequency Interference Requirements- Canada

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la NMB-003 du Canada.

Radio Transmitters

This device complies with RSS 210 of Industry & Science Canada. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Label Marking: The Term "IC:" before the radio certification only signifies that Industry Canada technical specifications were met.

Logitech compliance

For additional compliance information, go to <http://www.logitech.com/compliance>.

[EN] Use of this product is authorized in the following countries:

[FR] L'utilisation de ce produit est autorisée dans les pays suivants:

[DE] Verbrauch dieses Produktes wird in den folgenden Ländern autorisiert:

AT, CY, BE, BGR*, DK, UK, FI, FR**, DE, GR, HU, IE, LU, NL, PT, ES, SE, IS, LI, NO, CH, CZ, PL, RO, SK, SI, EE, LV, LT, MT

[EN] * General license require for outdoor use; ** For indoor use only

[FR] * Permis général requis pour l'usage extérieur; ** Pour l'usage d'intérieur seulement

[DE] * Allgemeine Lizenz erfordert für im Freigebrauch; ** Für nur Innengebrauch

Battery warning

Caution: risk of explosion and personal injury if batteries are replaced by incorrect type. Do not open, mutilate, or expose to conducting materials (metal), moisture, liquid, fire, or heat (above 54° C or 130° F). Doing so may cause batteries to leak or explode, resulting in personal injury. Dispose of spent, leaking, or damaged batteries according to manufacturer instructions and local laws. Do not use or charge batteries (lithium-ion rechargeables) if leaking, discolored, or deformed. Do not mix battery types. Do not charge alkaline batteries. Do not leave rechargeable batteries discharged or unused for extended periods. Battery life varies with usage. When replacing, remove all spent batteries, and do not mix old batteries with new. When device is not in use for extended periods, remove batteries to avoid leakage and store away from children in a cool, dry place at room temperature.

AC adaptor warning

Caution electric shock hazard! Warning: to reduce risk of electric shock, do not expose AC adaptor to rain, moisture, liquid, or heat sources (e.g., radiators, heat registers, stoves, amplifiers, etc.) For indoor use only. Do not use any other AC adapter with product. Do not use a damaged AC adapter or attempt to repair one. Inspect AC adapter regularly for cable, plug, or casing damage.

Operating and storage conditions

Operating Conditions: 0.0 ~ +40.0(degree C), 10~90% (Non-condensing)

Non-Operating Conditions: -40.0 ~ +70.0 (degree C), 10~95%(Excluding rain)

accompanying your product and on the web at www.logitech.com/contactus.



Logitech®

Squeezebox™ Duet

Network Music System

Thank you!

Thank you for purchasing a Logitech® Squeezebox™ Duet network music system. We hope you have as much fun using Squeezebox Duet as we did creating it for you.

The Squeezebox Duet includes a multi-room controller and one receiver, allowing you to listen to the music you love in one room. You can add additional Squeezebox family players to other rooms in your home so you can listen to different music in each room or to synchronize players to hear the same music in every room.

This Quick Start Guide helps you install the Squeezebox Duet in a home that includes an 802.11 (Wi-Fi) network and a computer system where your music is stored. If you have a different setup (e.g., a wired Ethernet network with no Wi-Fi access point or your music is stored on a NAS drive, you can find detailed installation instructions for other configurations in the Squeezebox Duet User Guide. An electronic version of this Guide is included when you install SqueezeCenter. You may also download it from www.logitech.com/support:

- Click **Downloads + Parts**.
- Select **Speakers + Audio** for product type.
- Select **Squeezebox Duet**.

1

Package contents and product features

Squeezebox Duet includes:

- Logitech® Squeezebox™ Duet controller
- Logitech® Squeezebox™ Duet receiver with AC adapter
- Charging station for controller with AC adapter
- Rechargeable Li-ion battery pack for controller
- Gold-plated RCA stereo cables for receiver
- Quick Start Guide

Getting to know the Squeezebox Duet controller

Please take a moment to familiarize yourself with the controls of the Squeezebox Duet controller. This multi-room, WiFi-based controller allows you to browse your music collection, select the perfect mix of music, and control it all from the palm of your hand. You will need to know the controls and their positions to make installation smooth and easy.

Controls

- A. The Scroll Wheel allows you to move up and down through lists.
- B. Press the Center button to open a menu, song, album, artist, or genre.

- C. Press Add to add a song, album, artist, or genre to the current playlist.
- D. Press Play to play a song, album, artist, or genre.
- E. Press Back to move back one menu.
- F. Press Home to go to the top level menu. Press Home again for the **Now Playing** screen.
- G. Use the Volume Up and Down keys to control volume.
- H. REW, Pause, and FWD control the playback of your music.



2

Charge the Li-ion battery pack

1. Fit the adapter onto the AC adapter plug of the charging station. Make sure the adapter snaps into place.
2. Plug the AC adapter into an electrical outlet.
3. Insert the Li-ion battery pack into the controller:
 - Remove the battery cover on the back of the controller. Use your thumbs to press down on the battery cover, and then slide it toward the bottom of the unit.
 - Insert the battery pack, making sure the **This Side Up** label faces up and reads correctly.
 - Place the battery pack end--marked with three arrows--into the battery slot first.
 - Replace the battery door, fitting the tabs on the door into the slots on the controller.
 - Slide the battery door up toward the top of the controller so it locks into place.
4. Place the controller into the charging station. The controller powers on and the battery pack begins charging. It may take up to four hours to charge the battery pack fully. However, you do not need a full charge to set up the controller.

3

Acquire your network settings

If you can connect your computer to a Wi-Fi network, you should have little difficulty setting up Squeezebox Duet. Gathering information about your network now will make it easier to set up the Squeezebox Duet network music system.

Network name (SSID): _____

Security Key: _____

If your network is secured, you will need to enter the security key when you set up the controller. It is important that you know the type of network security your access point uses, and that you have the security key ready before you start. More information on Wi-Fi networking can be found in the Squeezebox Duet User Guide. If you are not sure about your network security setup, contact your ISP or the company that installed your Wi-Fi router. To find your network settings, do one of the following:

Windows®: Click Start > Run, type **cmd** and press **Enter**. In the DOS window, type **ipconfig** and press **Enter**.

Macintosh® OS X: Go to System Preferences > Network. Under the **Show:** drop-down, pick the network interface you are using, and then click **TCP/IP**. Your IP address is displayed.

Linux: Open up a shell and type **ifconfig** and press **Enter**.

4

Create an online account and download software

Set up a SqueezeNetwork™ account

SqueezeNetwork is a free, Internet-based service provided by Logitech. It allows you to connect to a wide variety of services, including Internet radio guides and music services, like Rhapsody or Pandora Radio. You can even store your own music collection in an online music locker so you can listen even when your computer is turned off.

To get the most from your Squeezebox Duet, we recommend that you set up an account by visiting www.squeezenetwork.com and using the sign-up wizard. If you already have an account, simply log on.

Download and install SqueezeCenter™

SqueezeCenter is the application you run on a computer connected to your local network to deliver your music collection to the Squeezebox players in your home.

After you complete the sign-up process at www.squeezenetwork.com, you are asked to download SqueezeCenter. Select the correct version for your computer's operating system (e.g., Windows, Macintosh OS X, or Linux), and download the software, saving it to a location you can find easily, like your desktop.

Once the download is complete, double-click on the file and follow the on-screen directions for installing SqueezeCenter. When you are finished, SqueezeCenter is ready to deliver music to your network music system.



5

Connect the receiver

1. Fit the adapter onto the AC adapter plug of the receiver, making sure the adapter snaps into place.
2. Plug the AC adapter into an electrical outlet, and then insert the barrel plug into the receiver. The LED on the front of the receiver should blink red, indicating that the receiver is powered up, but is not yet programmed for your network.
3. Connect your stereo or powered speakers to the receiver, using the supplied color-coded, gold-plated RCA cables, which can be used with nearly any stereo or powered speaker system. You can also connect the receiver to a DAC via the SP/DIF connector, using your own optical or coaxial cable.



© 2008 Logitech. All rights reserved. Logitech, the Logitech logo, and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice. Apple, Mac, and Macintosh are trademarks of Apple Inc., registered in the U.S. and other countries.

620-000583.003

6

Connect the controller and set up the receiver

1. Remove the controller from the charging station.
2. Follow the on-screen instructions displayed on the controller's LCD. These instructions tell you how to connect the controller to your computer network, using the network name (SSID) and security key you recorded in step 2.
3. Once the controller is connected to your network, it will automatically look for the receiver so you can set the receiver up. You should see the screen shown here.



The number on the controller's LCD screen is the MAC address (unique network address) of your receiver. You may confirm this by looking at the label on the bottom of the receiver where the MAC address is printed.

1. Press the Center button on the controller. After a few moments, the LED on the receiver should change colors. (These colors indicate different steps in the configuration and connection process. A complete list of the colors can be found in the Squeezebox Duet User Guide.)
2. On the controller's LCD, you are asked to select a music source. Unless you have multiple instances of SqueezeCenter running on your network, you should see just one local music source listed, along with SqueezeNetwork.
3. Scroll to your listed music source using the controller's Scroll Wheel, and press the Center button to select your music source. The LED on the receiver should change to white.

Tip: If you do not see a local music source and you are sure SqueezeCenter is installed and running, you may have a firewall that is blocking access. For assistance, refer to the Troubleshooting section in the Squeezebox Duet User Guide or go on-line at www.logitech.com/support. Click the Troubleshooting button, select the **wireless music systems**, and follow the on-screen instructions.

7

Play music!

1. Make sure your stereo or speakers are turned on and ready to play.
2. Use the Scroll Wheel on the controller to navigate to **My Music**, and then press the Center button.
3. Scroll to **Album** and press the Center button.
4. Scroll to your favorite album and press Play.

What's next?

You can obtain additional information about Squeezebox Duet by reading the Squeezebox Duet User Guide. The SqueezeCenter, our music server application, includes extensive online documentation that you can access by clicking the ? icon. Finally, you can visit www.slimdevices.com, where you will be able to participate in our active online forums, obtain a wide range of user-contributed information from our wiki, as well as download plug-ins—called Extras—to add new features and functions to SqueezeCenter and your network music system.

Getting help

If you run into trouble during installation, you have a variety of options for obtaining expert assistance:

- An extensive list of frequently asked questions can be found at www.logitech.com/support. Click the Troubleshooting button, select the **wireless music systems**, and follow the on-screen instructions.
- Telephone support is available Monday through Friday, from 8:00 a.m. to 7:00 p.m., Pacific time, at the following numbers:
+1 (877) 887-8889 (Toll-free in North America)
+1 (646) 454-3237 (For all other countries)
- Email our support team. Visit www.logitech.com/support and select **Email Support** to fill out our online email form. You will receive a reply within one business day.

Safety



Important safety information:

CAUTION ELECTRIC SHOCK HAZARD!

- 1) Follow all instructions.
- 2) Do not use apparatus near water.
- 3) Clean only with a dry cloth.
- 4) Install in accordance with the manufacturer's instructions.
- 5) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE.

Protect your hearing: listening advice to avoid hearing damage

High volume causes permanent hearing loss. The louder the volume, the less time is required before your hearing could be affected. To establish a safe volume level: 1) Start your equipment with the volume control at its lowest setting. 2) Slowly increase the sound until you can hear it comfortably and clearly, and without distortion. 3) Avoid setting the volume at a level that prevents you from hearing conversation and back-ground noise in your environment. 4) After you have established a comfortable sound level, don't change it! 5) If you experience ringing in your ears, discomfort, or muffled speech, reduce the volume or stop listening and have your hearing checked.

Battery warning

Caution: risk of explosion and personal injury if batteries are replaced by incorrect type. Do not open, mutilate, or expose to conducting materials (metal), moisture, liquid, fire, or heat (above 54° C or 130° F). Doing so may cause batteries to leak or explode, resulting in personal injury. Dispose of spent, leaking,

or damaged batteries according to manufacturer instructions and local laws. Do not use or charge batteries (lithium-ion rechargeables) if leaking, discolored, or deformed. Do not mix battery types. Do not charge alkaline batteries. Do not leave rechargeable batteries discharged or unused for extended periods. Battery life varies with usage. When replacing, remove all spent batteries, and do not mix old batteries with new. When device is not in use for extended periods, remove batteries to avoid leakage and store away from children in a cool, dry place at room temperature.

AC adapter warning
Caution electric shock hazard! Warning: to reduce risk of electric shock, do not expose AC adapter to rain, moisture, liquid, or heat sources (e.g., radiators, heat registers, stoves, amplifiers, etc.) For indoor use only. Do not use any other AC adapter with product. Do not use a damaged AC adapter or attempt to repair one. Inspect AC adapter regularly for cable, plug, or casing damage.

NRTL safety

Your product is NRTL tested. Use it only with NRTL tested devices.

FCC

This digital device complies with the limits set for a Class B digital device, pursuant to Part 15 of the FCC Rules, and it also complies with Class B limits as specified in standards ICES-003.

Logitech compliance

For additional compliance information, go to <http://www.logitech.com/compliance>.

Logitech hardware product limited warranty

Logitech warrants that your Logitech hardware product shall be free from defects in material and workmanship for two (2) years, beginning from the date of purchase. Except where prohibited by applicable law, this warranty is nontransferable and is limited to the original purchaser. This warranty gives you specific legal rights, and you may also have other rights that vary under local laws.

Remedies

Logitech's entire liability and your exclusive remedy for any product warranty claim shall be, at Logitech's option, (1) to repair the hardware; or (2) to refund the price paid. Logitech may, at its discretion, choose to replace the hardware or such other place as Logitech may deem appropriate. Shipping and handling charges may apply except where prohibited by applicable law. Logitech may, at its discretion, use new or refurbished or used parts in good working condition to repair or replace any hardware product. Any replacement hardware product will be warranted for the remainder of the original warranty period or thirty (30) days, whichever is longer or for any additional period of time that may be applicable in your jurisdiction.

The warranty does not cover problems or damage resulting from (1) accident, abuse, misapplication, or any unauthorized repair, modification or disassembly; (2) improper use, operation or maintenance; usage not in accordance with product instructions or connection to improper voltage supply; or (3) use of consumables, such as replacement batteries, not supplied by Logitech, except where such restriction is prohibited by applicable law.

How to obtain warranty support

Before submitting a warranty claim, we recommend you visit the support section at www.logitech.com for technical assistance. Valid warranty claims are generally processed through the point of purchase during the first thirty (30) days after purchase; however, this period of time may vary depending on where you purchased your product - please check with Logitech or the retailer where you purchased your product for details. *Warranty

claims that cannot be processed through the point of purchase and any other product related questions should be addressed directly to Logitech. The address and customer service contact information for Logitech can be found in the documentation accompanying your product, and on the web at www.logitech.com/contactus.

Limitation of liability

LOGITECH SHALL NOT BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOSS OF PROFITS, REVENUE OR DATA (WHETHER DIRECT OR INDIRECT) OR COMMERCIAL LOSS FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON YOUR PRODUCT EVEN IF LOGITECH HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Some jurisdictions do not allow the exclusion or limitation of special, indirect, incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Duration of implied warranties

EXCEPT TO THE EXTENT PROVIDED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OR OTHER BASIS OF LIABILITY ARISING OUT OF THIS HARDWARE PRODUCT IS LIMITED IN ACCORDANCE WITH THE DURATION OF THE APPLICABLE LIMITED WARRANTY PERIOD FOR YOUR PRODUCT. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

National statutory rights

Consumers have legal rights under applicable national legislation governing the sale of consumer goods. Such rights are not affected by the Warranties in this Limited Warranty.

No other warranties

No Logitech dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

Logitech address

Logitech, Inc., 6505 Kaiser Drive, Fremont, California 94555, U.S.A.