

Federal Communications Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Statement

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device.

© 2008 Logitech. All rights reserved. Logitech, the Logitech logo and other Logitech marks are owned by Logitech and may be registered. All other trademarks are the property of their respective owners. Logitech assumes no responsibility for any errors that may appear in this manual. Information contained herein is subject to change without notice.

© 2008 Logitech. Tous droits réservés. Logitech, le logo Logitech et les autres marques Logitech sont la propriété exclusive de Logitech et sont susceptibles de être des marques déposées. Toutes les autres marques sont la propriété exclusive de leurs détenteurs respectifs. Logitech décline toute responsabilité en ce qui concerne des erreurs ou des informations erronées dans le présent document pouvant faire l'objet de modifications sans avis préalable.

620-801955.002

English

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Deutsch

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Fransés

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Italiano

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Español

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

 
Português

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.



Nederlands

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Svenska

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Dansk

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Norsk

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Suomi

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

Português

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

EMĀġĠĠ

1. MIC connection-off button. Press to disconnect from MIC. Press 2 seconds to turn off MIC. The MIC enters sleep mode after 30 minutes of inactivity, or after 15 minutes when game console is turned off (or requests no input from MIC) or when receiver base connection with game console.

2. MIC connect/battery life LED. Blinks green = working connection. Solid green = connection made. Blinks red = low battery power.

3. Receiver connect button. Press to connect with MIC.

4. Receiver LED. Blinks green = working connection. Solid green = connection made.

www.logitech.com/support

België / Belgique	Dutch: +32 (0)2 2004 64 40 French: +32 (0)2 200 64 40	Russia	+7 (495) 641 34 00
Česká republika	+420 239 000 315	Slovenia	+386 (0)2 761 81 10 +386 (0)2 761 80 36 +386 (0)2 761 80 29
Danmark	+45 38 32 31 20	South Africa	0800 881 889
Deutschland	+49 (0)89 51 709 427	Spain	+34 (91) 275 45 88
España	+34 (91) 275 45 88	Sweden	+46 (08) 750 632 83
France	+33 (0)1 59 32 31 21	Taiwan	Check website
Grčka	+352 (0)2 200 84 23	Turkey	Check website
India	+91 (0)21 48 39 31	United Arab Emirates	800 441 4294
Indonesia	+62 (0)21 74 88 83	United Kingdom	+44 (0)20 324 34 36
Nederland	+31 (0)20 209 94 33	Europeen Mkt. Serv. & Assistentie	English: +41 (0)22 761 80 25 French: +41 (0)22 761 80 25
Norge	+47 (0)24 159 979	Poland	+48 (0)22 883 54 02
Österreich	+43 (0)1 200 891 026	Portugal	+351 (21) 415 50 36
Polka	+48 (22) 883 54 02	Eastern Europe	English: +1 (822) 761 40 25
Portugal	+351 (21) 415 50 36	China	1280 020 5458
United States	+1 (650) 452 5200	Latin America	+51 31 444 6381
Australia	+61 (0)2 951 2314	Mexico	001 800 979 9979
Brazil	+55 (0)61 401 473		
Canada	+1 (416) 684 5441		

Region	Local Office Address	Local Office Phone
Logitech For Earth Ltd 羅技無線麥克風有限公司	Unit 4, No. 121, Sec. 4, Taichung Rd., Taichung, Taiwan Tel: +886 (0)4 2211 1188 Fax: +886 (0)4 2211 1189 E-Mail: service@logitech.com	☎ 002202 1200 8888 ☎ 002202 1200 8889 ☎ 002202 1200 8890
Logitech Singapore Pte Ltd	1 Raffles Quay #09-03/04 Raffles Quay #09-03/04 Singapore 049902 ☎ 65422 5051 ☎ 65422 5052 ☎ 65422 5053	☎ 800 66 1111 (24 hours English/Chinese) ☎ +65 6 2254 1844 (By Message, Taiwan, Malaysia, Philippines) ☎ Monday - Friday, 9am - 6pm
罗技(香港)有限公司 上海分公司	上海中環區 1 號香港中環 911 號 ☎ 852 2517 1188 ☎ 852 2517 1189 ☎ 852 2517 1189 ☎ 852 2517 1189	☎ 800 622 0328 (國粵語中文熱線) ☎ 852 2517 1188 (粵語) ☎ 852 2517 1189 (國語)
罗技(北京)有限公司 罗技(北京)有限公司	北京中環區 1 號香港中環 911 號 ☎ 852 2517 1188 ☎ 852 2517 1189 ☎ 852 2517 1189 ☎ 852 2517 1189	☎ 800 622 0328 (國粵語中文熱線) ☎ 852 2517 1188 (粵語) ☎ 852 2517 1189 (國語)
Logitech Australia Computer Peripherals Pty Ltd.	Unit 10/11, Fairway Way, Berrima NSW 2570, Australia ☎ 61 (0) 2570 8000 ☎ 61 (0) 2570 8001 ☎ 61 (0) 2570 8002	☎ Australia: 1800 333 334 (24 hour) ☎ Monday - Friday, 9am - 5pm (AEST) ☎ New Zealand: 0800 545 454 (24 hour) ☎ Monday - Friday, 9am - 5pm (Auckland Time)
Logitech Electronic India Pvt Ltd	MCC House, 5th Floor, 6th Row C-2, Kirti Khand Complex, Bandra East, Mumbai 400 051, India ☎ 91 (0)20 2007 1100 ☎ 91 (0)20 2007 1101 ☎ 91 (0)20 2007 1102	☎ 022 680 000 111 (24 hours) ☎ Monday - Friday, 9:30am - 6:30pm (IST)
World Wide Web: http://www.logitech.com	FTP: ftp://ftp.logitech.com/pub	

Technical Help
Logitech Co., Ltd.
76760 Logitech Center, Ashburn,
VA 20147, USA
Tel: 01 800 540 6800
Fax: 01 571 761 6400
Monday - Friday
9:00am - 10:00pm, 1:00pm - 5:00pm

Quickstart guide
Guide de démarrage rapide



Logitech®
Wireless Microphone