

SONY

Wireless BUZZ™ Buzzers Instruction Manual

Wireless Game Controller

E-X5E-16(Receiver) & C-X50001 (Game Controller)



Wireless BUZZ™ Buzzers Instruction Manual

Wireless BUZZ!™ Buzzers Instruction Manual

Before using this product, carefully read this manual and retain it for future reference. These Wireless BUZZ!™ Buzzers are designed for use with the PlayStation®2 console and the PLAYSTATION®3 system.

Product Contents



- Four Wireless BUZZ!™ Buzzers.
- One USB receiver with receiver cap.
- One drawstring bag

WARNING

To avoid potential electric shock or starting a fire, do not expose this product to rain or moisture.

Safety

This product has been designed with the highest concern for safety. However, any electrical device, if used improperly, has the potential for causing fire, electric shock or personal injury. To ensure accident-free operation, be sure to follow these guidelines:

- Observe all warnings, precautions and instructions.
- Do not use the product if it functions in an abnormal manner.
- This product contains small parts, which, if removed, may be a choking hazard to children.

Use and Handling


- Do not expose the product to high temperatures, high humidity or direct sunlight.
- Operate in an environment where temperatures range between 41°F and 95°F.
- Do not allow liquid or small particles to get into the product.
- Do not put heavy objects on the product.
- Never disassemble or modify the product.
- Do not throw or drop the product, or physically damage it in any way.
- Do not touch the product's metal parts or insert foreign objects into its USB connector.

Cleaning the Wireless BUZZ!™ Buzzers

Dust may build up on the product after an extended period of time.

- Before cleaning the product, disconnect it from the PlayStation®2 console or the PLAYSTATION®3 system for safety.
- Wipe the product's surface with a soft, dry cloth.
- The product should be cleaned by an adult, or cleaned under close adult supervision.
- Do not use a moistened cloth to clean the product as water may cause it to malfunction.
- Do not use benzene, paint thinner or other chemicals as these may damage the product.
- When using a commercially available cleaning cloth, follow the instructions supplied with it.

Connecting the Wireless BUZZ!™ Buzzers

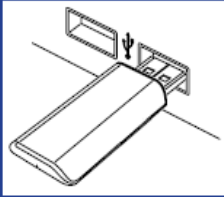

USB receiver

- Remove the receiver cap from the USB receiver and insert its USB connector into any USB connector on the front of the PlayStation®2 console or the PLAYSTATION®3 system.
- Turn on the PlayStation®2 console or the PLAYSTATION®3 system.



Wireless BUZZ!™ Buzzers

- Before using a BUZZ!™ Buzzer, carefully remove its battery cover and insert two AA alkaline batteries.

Pairing the Wireless BUZZ!™ Buzzers

These Wireless BUZZ!™ Buzzers have already been paired with the supplied USB receiver. If a replacement BUZZ!™ Buzzer is introduced, all four Wireless BUZZ!™ Buzzers must be paired with the USB receiver again.

- The USB receiver will pair with a maximum of four Wireless BUZZ!™ Buzzers. To play with five to eight Wireless BUZZ!™ Buzzers, a second USB receiver is required.

Using the Wireless BUZZ!™ Buzzers

When turned on, ensure that the Wireless BUZZ!™ Buzzers are within approximately 10 metres of the PlayStation®2 console or the PLAYSTATION®3 system. The usage and function of the product may vary depending on the software in use. See the appropriate software manual for details.

Troubleshooting

If you experience any difficulties while using the product, please call the appropriate PlayStation® customer service number which can be found:

- within every PlayStation®2 and PLAYSTATION®3 format software manual; and
- on our website at playstation.com

Specifications

Interface (USB receiver and PS2™/PS3™)	USB type 2.0
Interface (BUZZ!™ Buzzer and USB receiver)	RF 2.4GHz, GFSK
USB connector (USB receiver and PS2™/PS3™)	USB type 2.0
USB connector (BUZZ!™ Buzzer and USB receiver)	RF 2.4GHz, GFSK
Power consumption (USB receiver)	Max. 100mA @ 5V
Power consumption (BUZZ!™ Buzzer)	Max. 100mA @ 3V
BUZZ!™ Buzzer dimensions (approx.)	13.8 x 5.4 x 4 cm
USB receiver dimensions (approx.)	58 x 1.2 x 9 cm
Total weight (approx.)	319g (without AA batteries)
Operation temperature	0 ° – 40 °

NOTE:

Federal Communication Commission Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules . These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Statement

This device complies with RSS-210 of the Industry Canada Rules. Operation is subject to the following two conditions:

- 1) this device may not cause interference and
- 2) this device must accept any interference, including interference that may cause undesired operation of the device