


ARRÊTEZ LE COURANT

UP

AV 470-3156B

DESCONECTE LA CORRIENTE



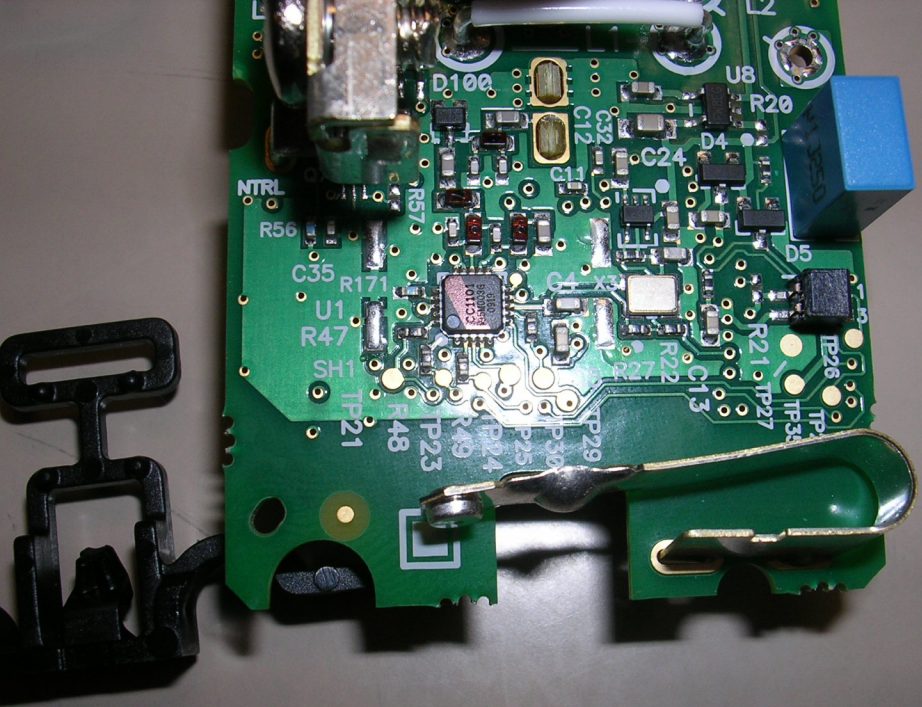

NTRL

R56

C35

R171

U1

R47

SH1

TP21

F48

TP23

R49

TP24

TP25

TP29

TP30

TP33

TP34

TP35

C13

R27

R22

R21

TP27

TP26

TP33

TP34

TP35

C24

D4

R20

U8

D100

C32

C12

C11


D5

TP26

TP33

TP34

TP35

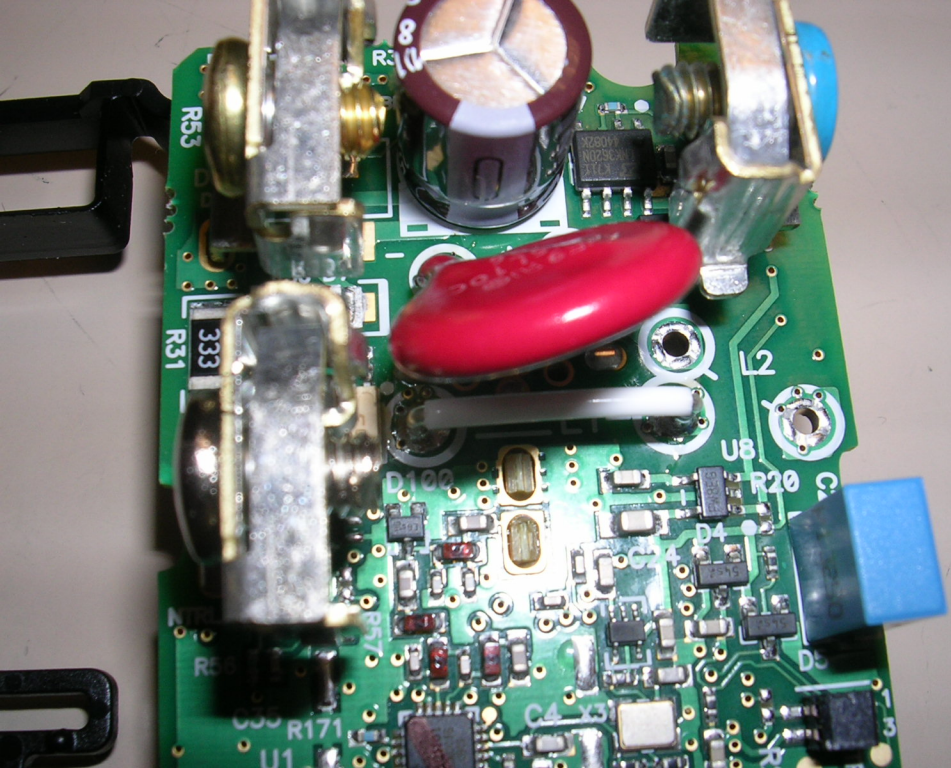

470-2967-A
LUTRON
ELECTRONICS

F

