



Photograph 1. Card encoder located next to card flipper

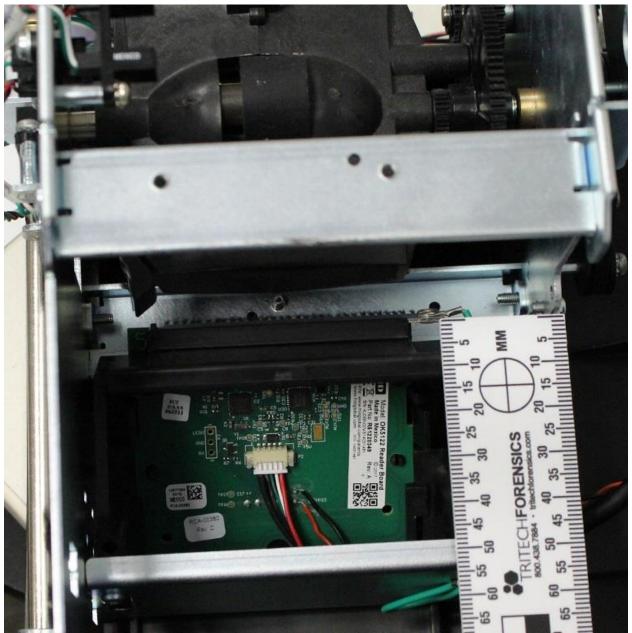


Photograph 2. Card encoder radio in card flipper module

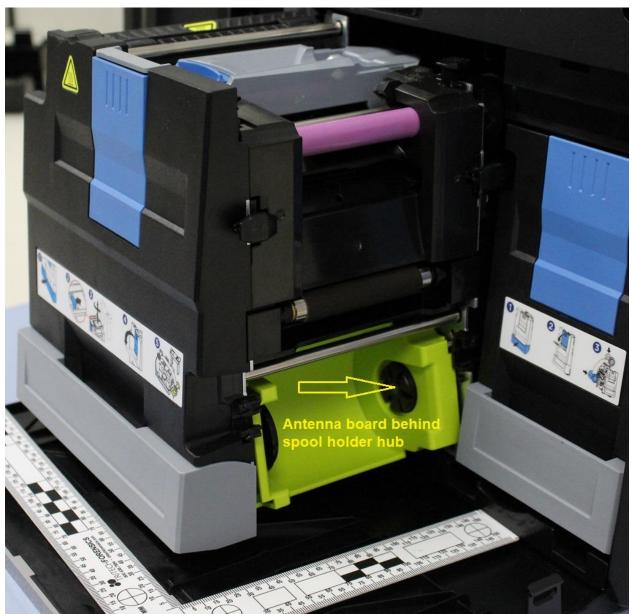


Photograph 3. Film spool antenna location





Photograph 4. Front door open and flipper module door open

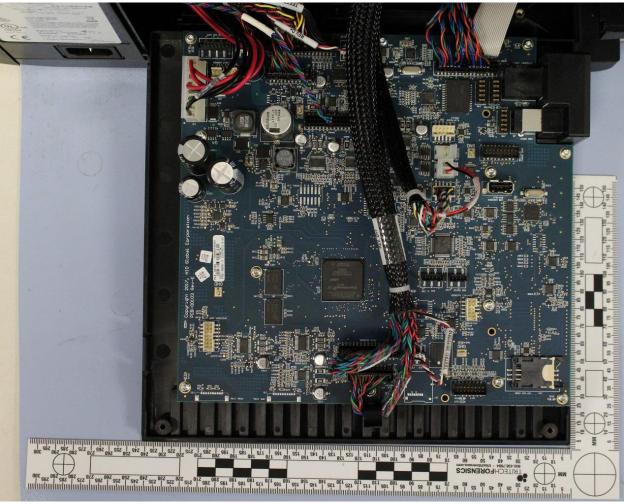

Photograph 5. Printer main board

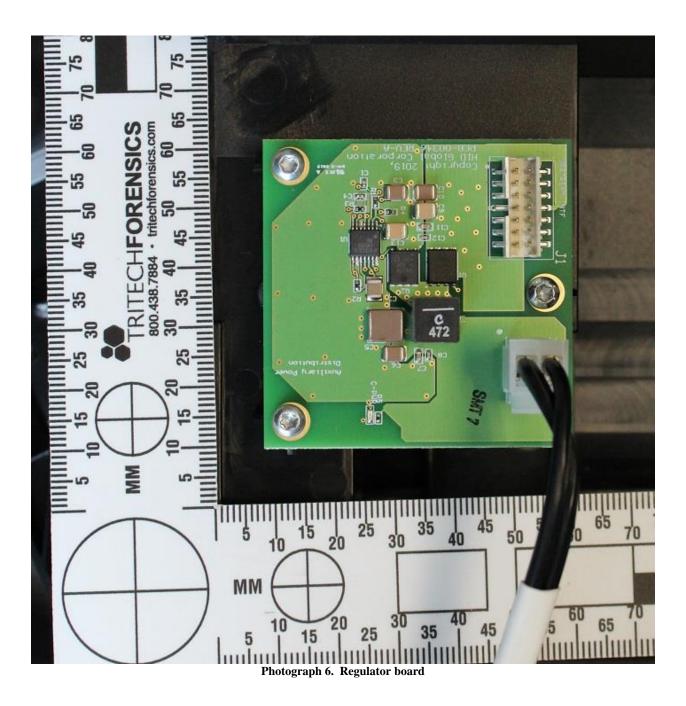

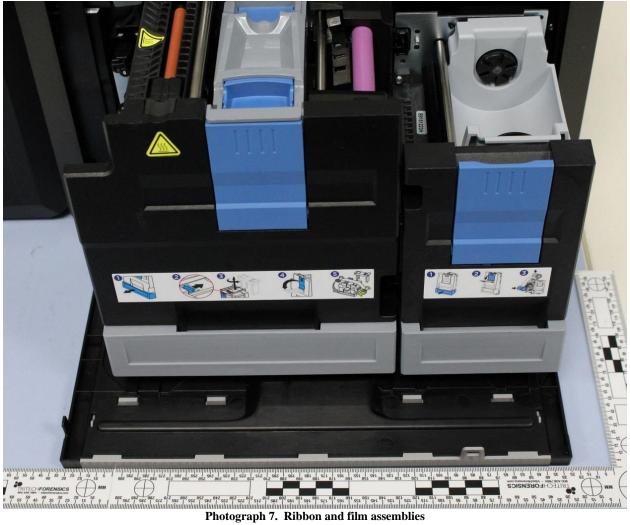

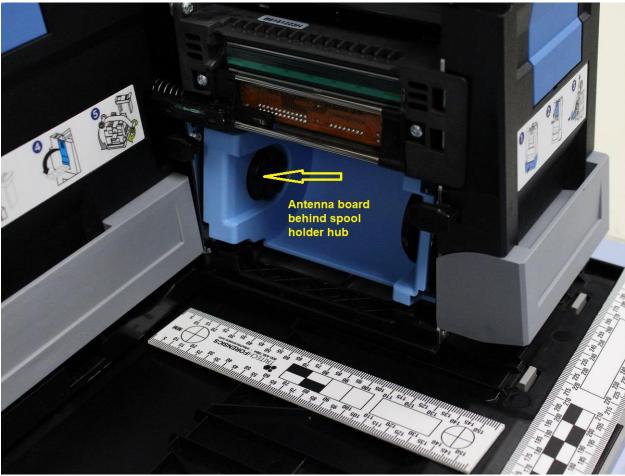

Photograph 8. Ribbon spool antenna location



