
INSTALLATION



PREPARING

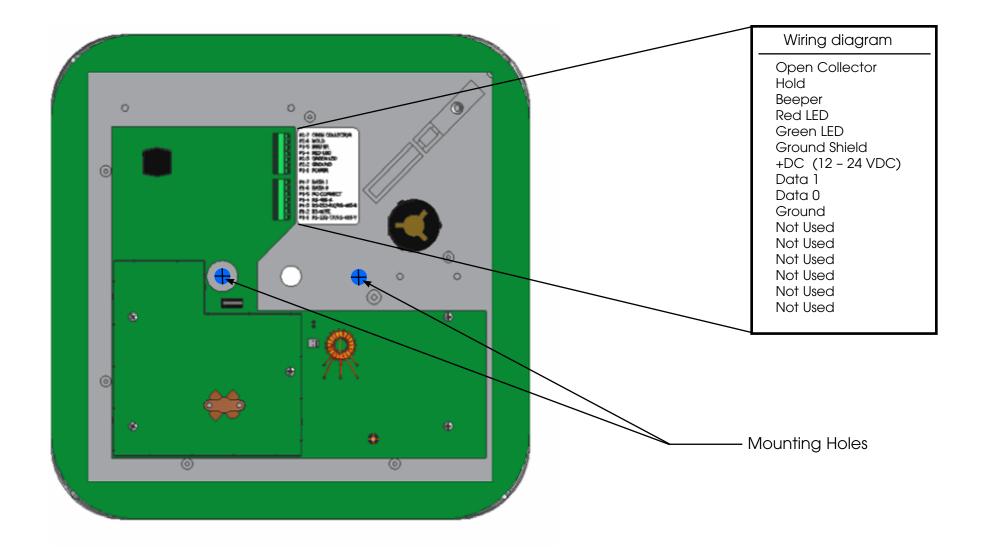

ð

V

TESTING


2 ASSEMBLY AND DISASSEMBLY

1

Ľ






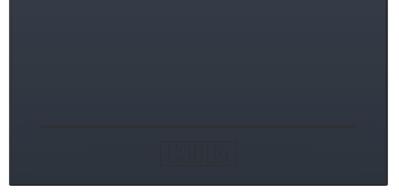



R90 · Long Range Reader

TAMPER SWITCH

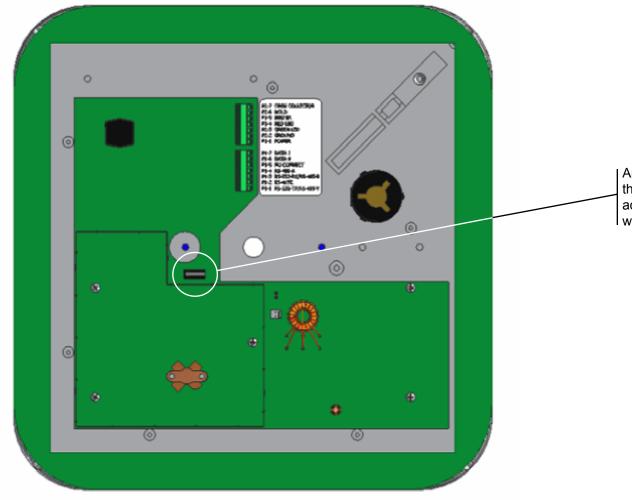

An on board tamper switch is wired through the "I'm Alive" feature and if active, the standard supervisory signal will stop if the cover is removed.

5 **OPTIONAL FEATURES**

tel:

fax:

- Open Collector Output controls an external device operating in Host Mode only. See iCLASS Application Note for details.
- Configuration Options Configure LED, Speaker, and other features. See How To Order Guide or iCLASS Application Note for details.
- Hold Input when asserted, this line either buffers a card or disables a card read until released, as configured.



PARTS

- 1 reader
- 1 Installation Manual
- 4 #8 Philips self taping screws
- 4 #8 Spanner security screws

icclass by Hid **HID Corporation** 9292 Jeronimo Road Irvine, California SGS 92618-1905 USA () +1 (949) 598-1600 U.S. (800) 237-7769 +1 (949) 598-1690 email: tech@hidcorp.com www.hidcorp.com