

DRAFT

COLORADO TIME SYSTEMS

WIRELESS MICROPHONE

User Manual

DRAFT

COLORADO TIME SYSTEMS

WIRELESS MICROPHONE

OPERATION AND CONTROLS

Receiver

Squelch

- To adjust squelch, rotate the squelch knob counter-clockwise until a loud rushing sound is heard at the speakers, then slowly turn the knob clock-wise until the rushing sound no longer heard.

Channel Select

- Allows the user to select 1 of 8 available channels, as needed.

NOTE: The receiver and transmitter must be set to the same the channel for proper operation.

- In the event that 2 separate wireless microphones are being used at the same location, the following condition needs to be met to ensure proper operation of both units.
- Each receiver/transmitter pair will need to be at a minimum of 2 channels away from each other, in order to prevent interference.

EXAMPLE: RXR/TXR #1 is set for Channel 4; RXR/TXR #2 can be set to any channel, with the exception of Channels 3 and 5.

RX IND

- Provides a visual indication that the receiver and transmitter are set to the same channels, and that the receiver is receiving a signal from the transmitter.

Receiver Location

- The receiver should be placed in a location that allows for the least obstructions between the receiver and transmitter.
- The antenna should be positioned vertically, when the receiver is in use.

DRAFT

COLORADO TIME SYSTEMS

WIRELESS MICROPHONE

Transmitter

LOW BATT

- Provides a visual indication that the transmitter battery is getting low.
- To check the battery level, press the PTT button of the microphone. If the LED lights up, it is recommended that the battery be replaced. Battery level is okay if LED blinks when the PTT button is released.

Channel Select

- Allows the user to select 1 of 8 available channels, as needed.

NOTE: The receiver and transmitter must be set to the same the channel for proper operation.

- In the event that 2 separate wireless microphones are being used at the same location, the following condition needs to be met to ensure proper operation of both units.
- Each receiver/transmitter pair will need to be at a minimum of 2 channels away from each other, in order to prevent interference.
- **EXAMPLE:** RXR/TXR #1 is set for Channel 4; RXR/TXR #2 can be set to any channel, with the exception of Channels 3 and 5.

Microphone

- Operates the same as the standard M-25.

Description	Part #
Wireless Conversion Kit	CMPSS-K
Receiver Wireless	RXR
Transmitter Wireless	TXR
Receiver Cable CMP-SS	CMP-RX10 CMP-RX25 CMP-RX50


DRAFT

COLORADO TIME SYSTEMS


WIRELESS MICROPHONE

FCC Label locations:

TXR: Right hand side of back panel.

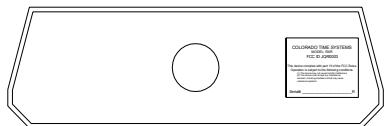

TXR: Under the battery in battery compartment

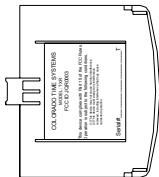

FCC Compliance Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Unauthorized modifications or changes made to this device not expressly approved by the party responsible for compliance voids the users authority to operate the equipment.