

FM Transmitter
& Wired Remote
User Manual

CM782AGA CM782BGA
CM782AGB CM782BGB

Welcome

FEDERAL COMMUNICATIONS COMMISSION INTERFERENCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the equipment.

FCC RF Radiation Exposure Statement

 
This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

FM Transmitter


The FM Transmitter is a wired remote control, with FM transmitter function, for the BenQ Joybee Digital Audio player which not only functions as a remote control but also as a radio transceiver that can be used for music broadcast functions.

Touring the FM Transmitter


Front View

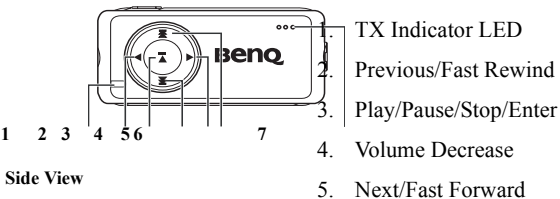

Side View

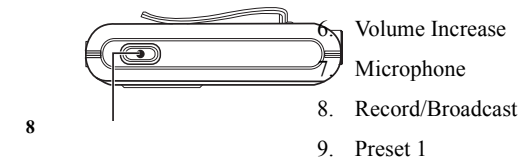 

Rear View

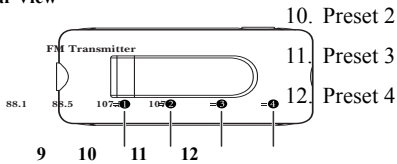 

TX Indicator LED (Button 1)

1. Blinks when receiving a signal in mode and when recording voice.
2. Lights up when broadcasting music in Music Share mode.





Record/Broadcast (Button 8)

 
 
 
 
1. Press to start recording.
2. Press again to stop recording.
3. Press and hold for 2 seconds to enable Music Share (Broadcast) mode.
4. Press and hold again for 2 seconds to disable Music Share mode.

Broadcasting Music Using the FM Transmitter



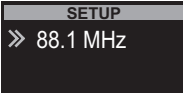
When connected to the Joybee MP3 player, the FM Transmitter can broadcast your music files to any FM radio in range. Broadcast mode only works when the FM Transmitter is connected to the Joybee.

Follow these steps to broadcast your music files using the Joybee.

1. Turn on the Joybee.
2. Press the MODE button repeatedly to switch to SETUP mode.
3. Use the |◀◀ or ▶▶| keys to select the **Music Share** option.
4. Press  /  to confirm your selection.
5. Use the |◀◀ or ▶▶| keys to select the **On** option.
6. Press  /  to confirm your selection.
7. Use the |◀◀ or ▶▶| keys to change the frequency of the transmission.
8. The Joybee switches to MP3 mode.
9. Press the MODE key to exit broadcasting mode.



Broadcasting on the Preset Radio Stations

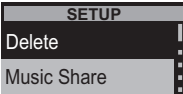 
1. Turn on the Joybee.
2. Press the MODE button repeatedly to switch to SETUP mode.
3. Use the ◀◀ or ▶▶ keys to select the **Music Share** option.A screenshot of a radio's display screen. At the top, the word "SETUP" is displayed in a grey bar. Below it, two menu options are visible: "Delete" and "Music Share". The "Music Share" option is highlighted with a grey background, and a vertical line of dots is visible on the right side of the screen.
4. Press ⏻/▶▶ to confirm your selection.
5. Use the ◀◀ or ▶▶ keys to select the **On** option.A screenshot of a radio's display screen. At the top, the word "SETUP" is displayed in a grey bar. Below it, two menu options are visible: "On" and "Off". The "On" option is highlighted with a grey background, and a vertical line of dots is visible on the right side of the screen.
6. Press ⏻/▶▶ to confirm your selection.
7. Press and hold the ⏻/▶▶ and the ▶▶ keys for 2 seconds to enter the preset frequency mode and use the ◀◀ or ▶▶ keys to select a specific preset frequency for broadcast.A screenshot of a radio's display screen. At the top, the word "SETUP" is displayed in a grey bar. Below it, the text "88.1 MHz" is displayed, preceded by two right-pointing arrows (»). A vertical line of dots is visible on the right side of the screen.
8. The LED will light once to signal it is on preset 1, twice for preset 2, three times for preset 3 and 4 times for preset 4.
9. Press the ●REC key. The current track is broadcast on the selected frequency.
10. Press and hold the ●REC key for 2 seconds to end the broadcast.
11. Press the MODE key to exit the preset radio mode.

Wired Remote

The Wired Remote for the Joybee player controls certain functions of the player as shown in the diagram below.


Touring the Wired Remote

Front View

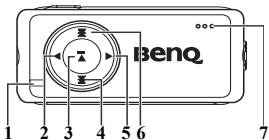


1. TX Indicator LED
2. Previous/Fast Rewind
3. Play/Pause/Stop Enter
4. Volume Decrease
5. Next/Fast Forward
6. Volume Increase
7. Microphone
8. Record/Broadcast

 Side View

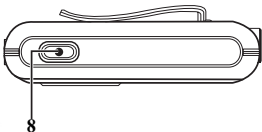

Rear View

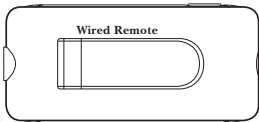 

TX Indicator LED (Button 1)

1. Blinks when recording voice.
2. Lights up when broadcasting music in Music Share mode.

Record/Broadcast (Button 8)

1. Press to start recording.
2. Press again to stop recording.
3. Press and hold for 2 seconds to enable Music Share (Broadcast) mode.
4. Press and hold again for 2 seconds to disable Music Share mode.