

Figure 5
Signal Port of the EUT



Figure 6
Inside Configuration of the EUT



Figure 7
Inside Configuration of the EUT

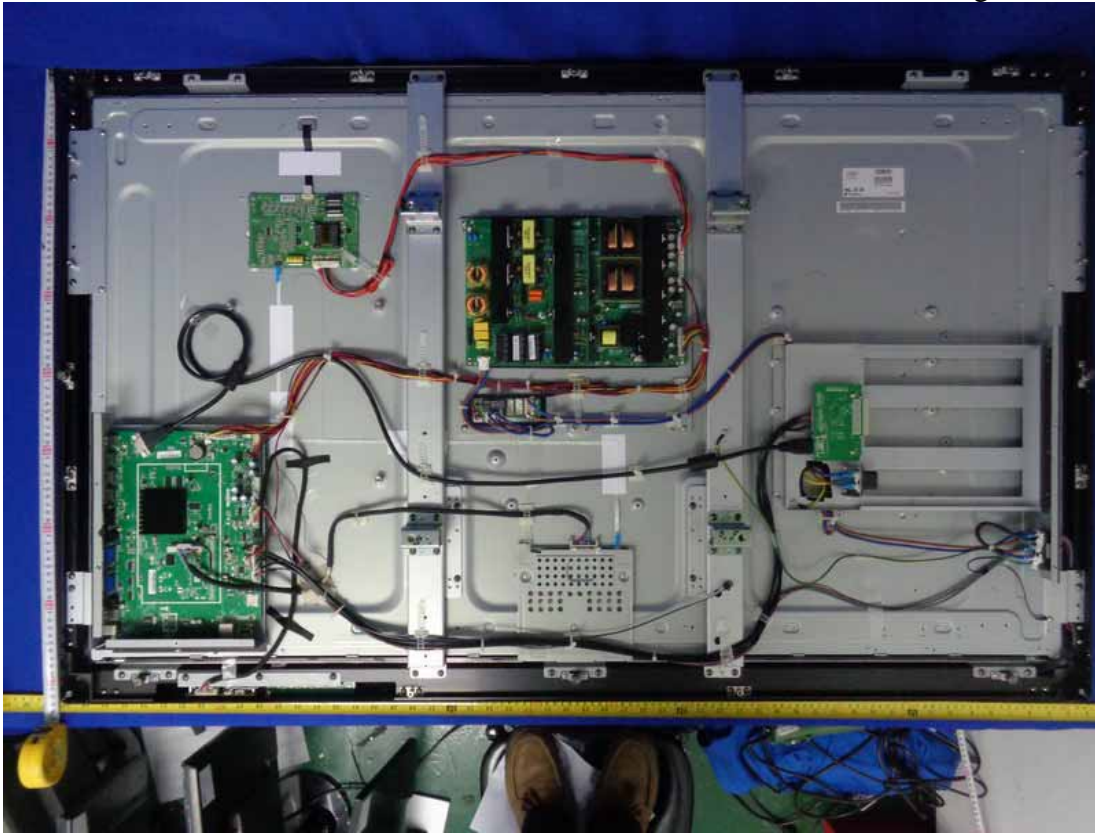


Figure 8
Label of LCD Panel



Figure 9
Inside Configuration of the EUT



Figure 10
Inside Configuration of the EUT

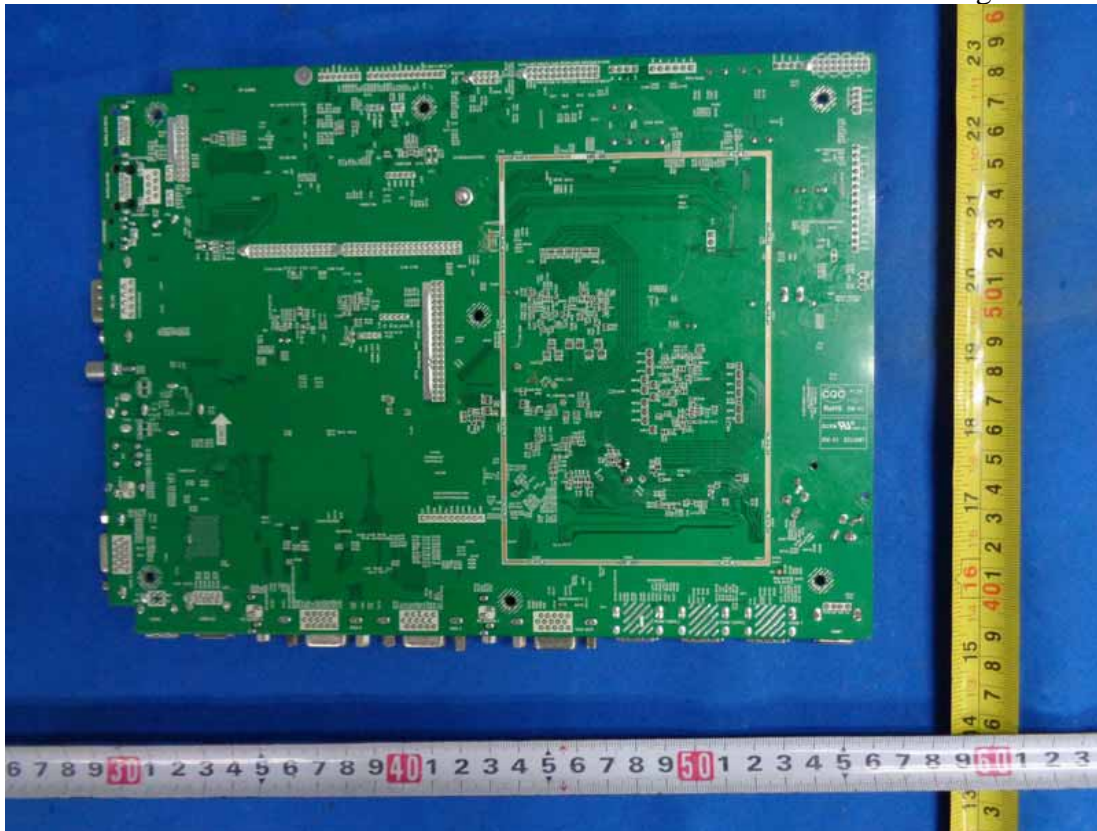


Figure 11
Inside Configuration of the EUT

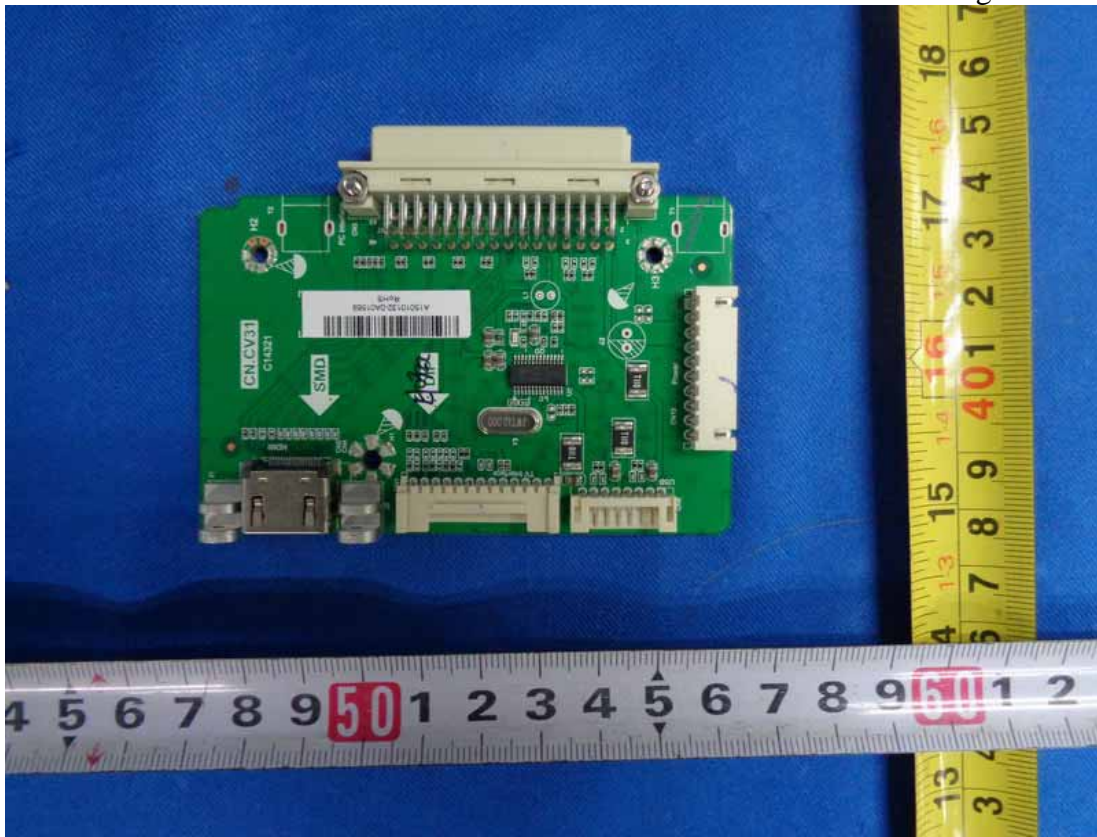


Figure 12
Inside Configuration of the EUT

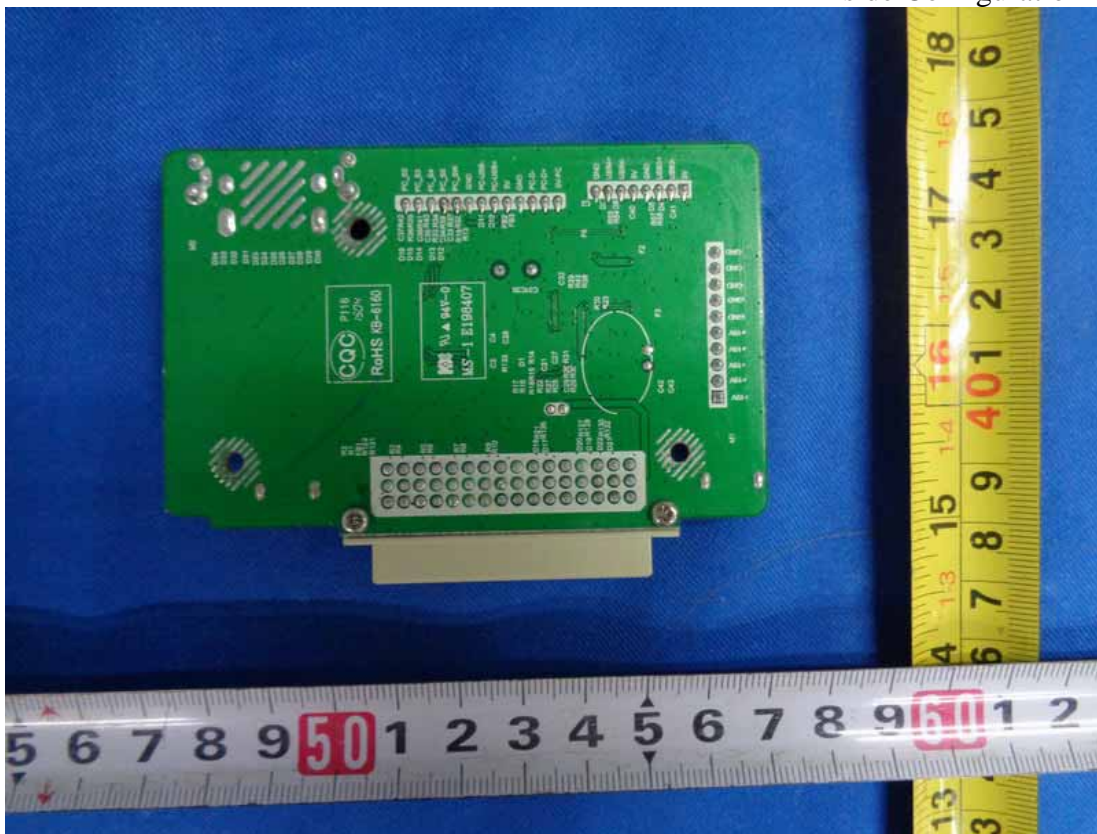


Figure 13
Inside Configuration of the EUT



Figure 14
Inside Configuration of the EUT

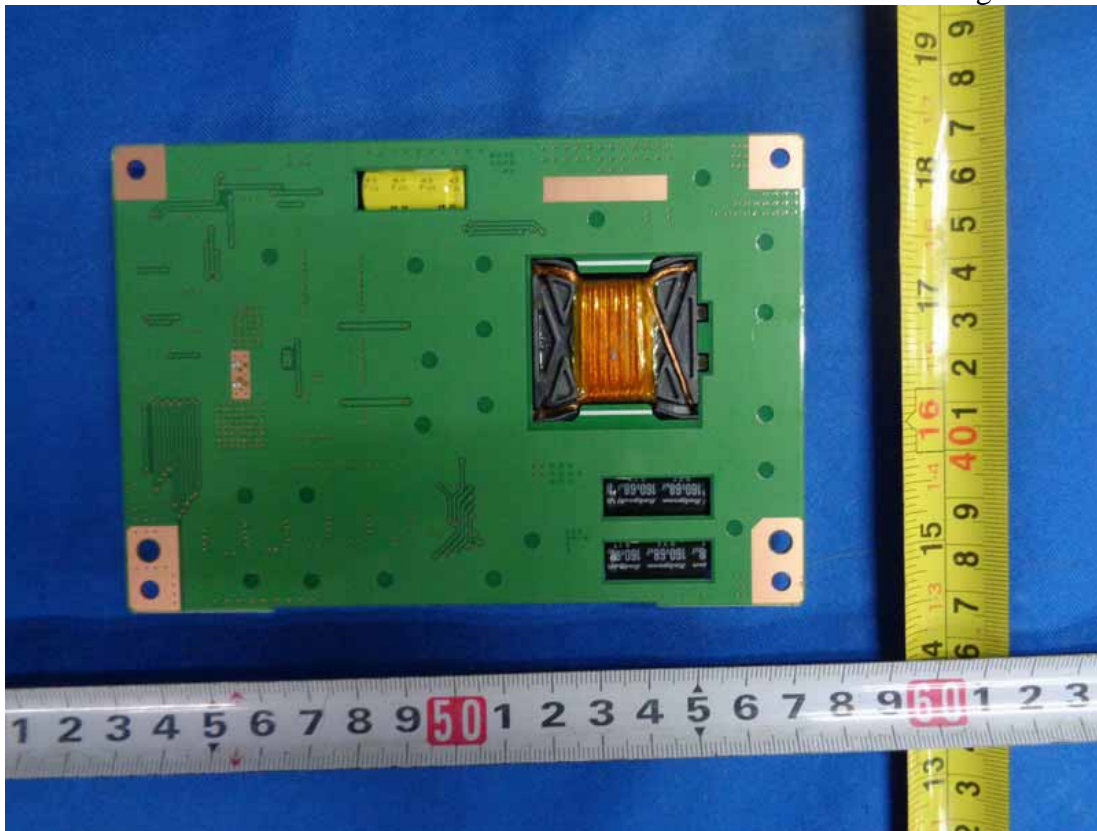


Figure 15
Inside Configuration of the EUT



Figure 16
Inside Configuration of the EUT

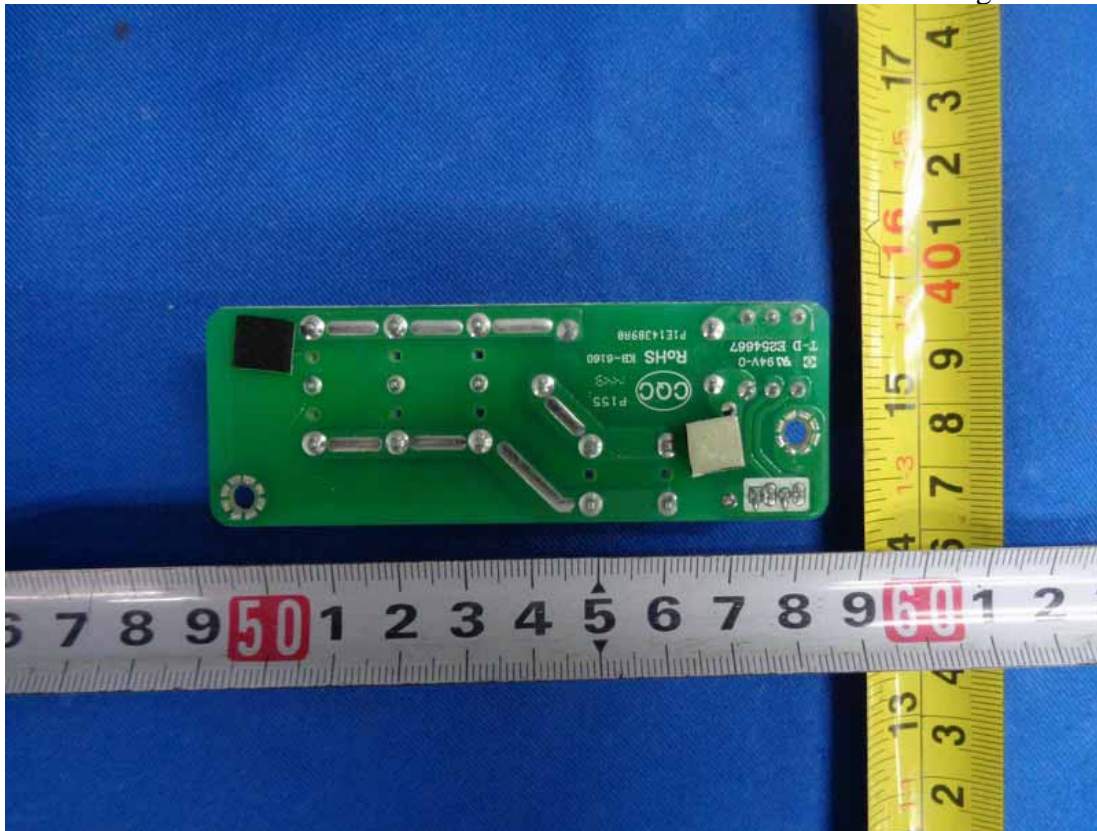


Figure 17
Inside Configuration of the EUT

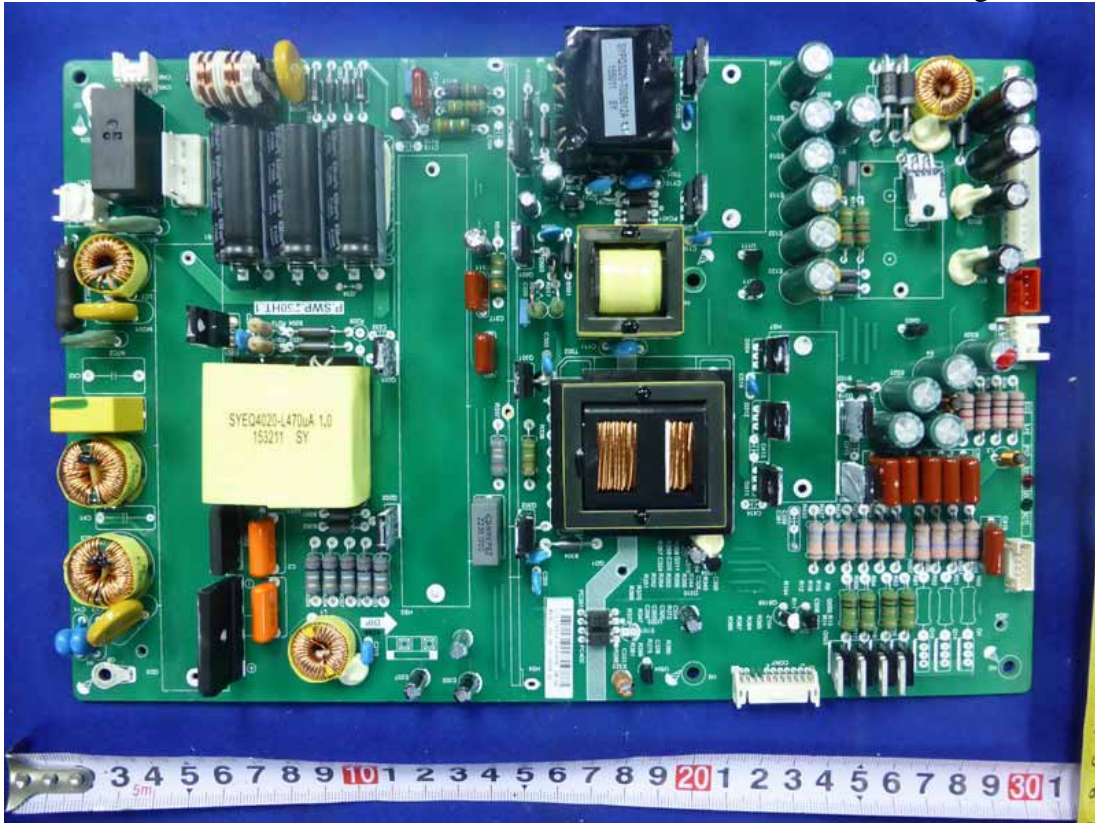


Figure 18
Inside Configuration of the EUT

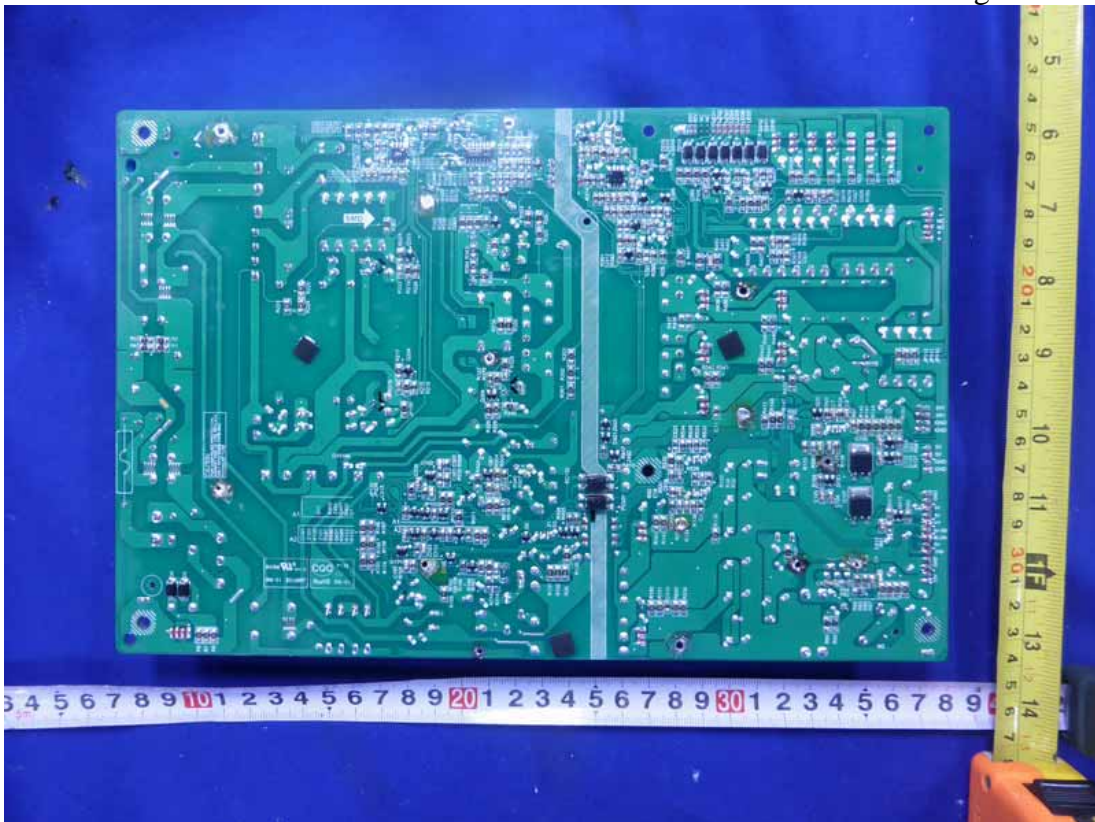


Figure 19
Inside Configuration of the EUT

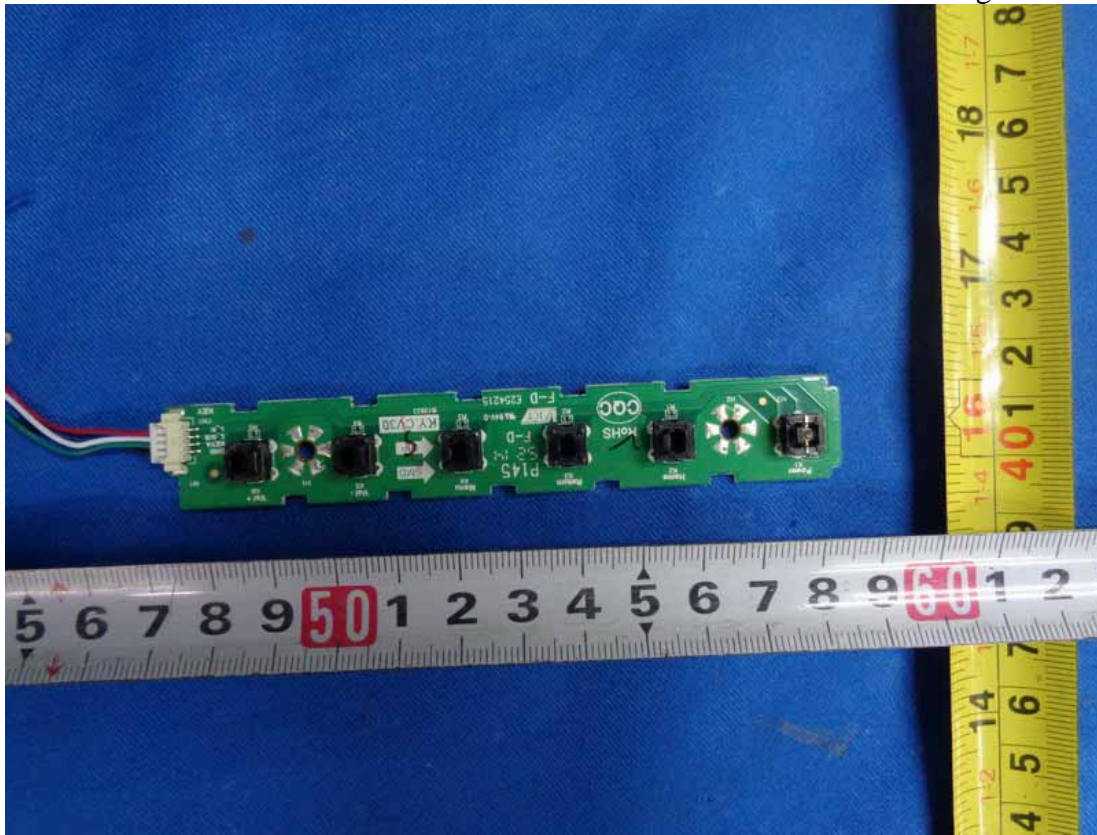


Figure 20
Inside Configuration of the EUT



Figure 21
Inside Configuration of the EUT



Figure 22
Inside Configuration of the EUT

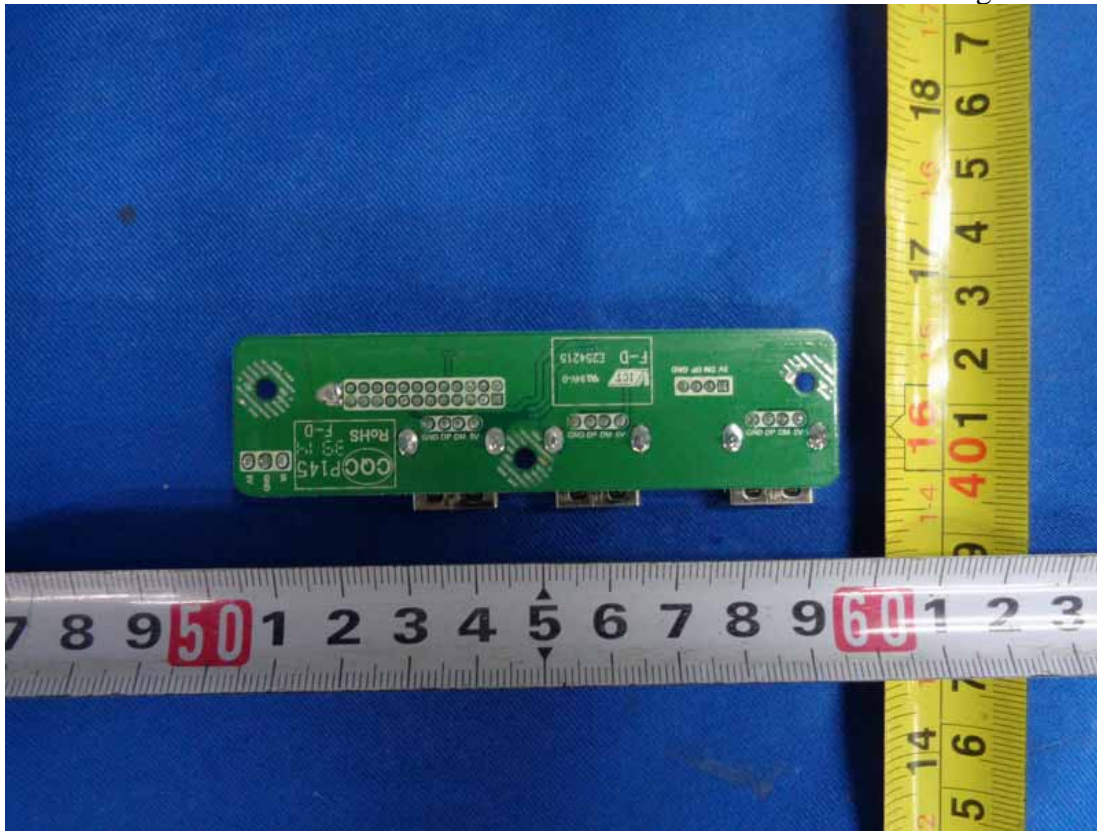


Figure 23
Inside Configuration of the EUT

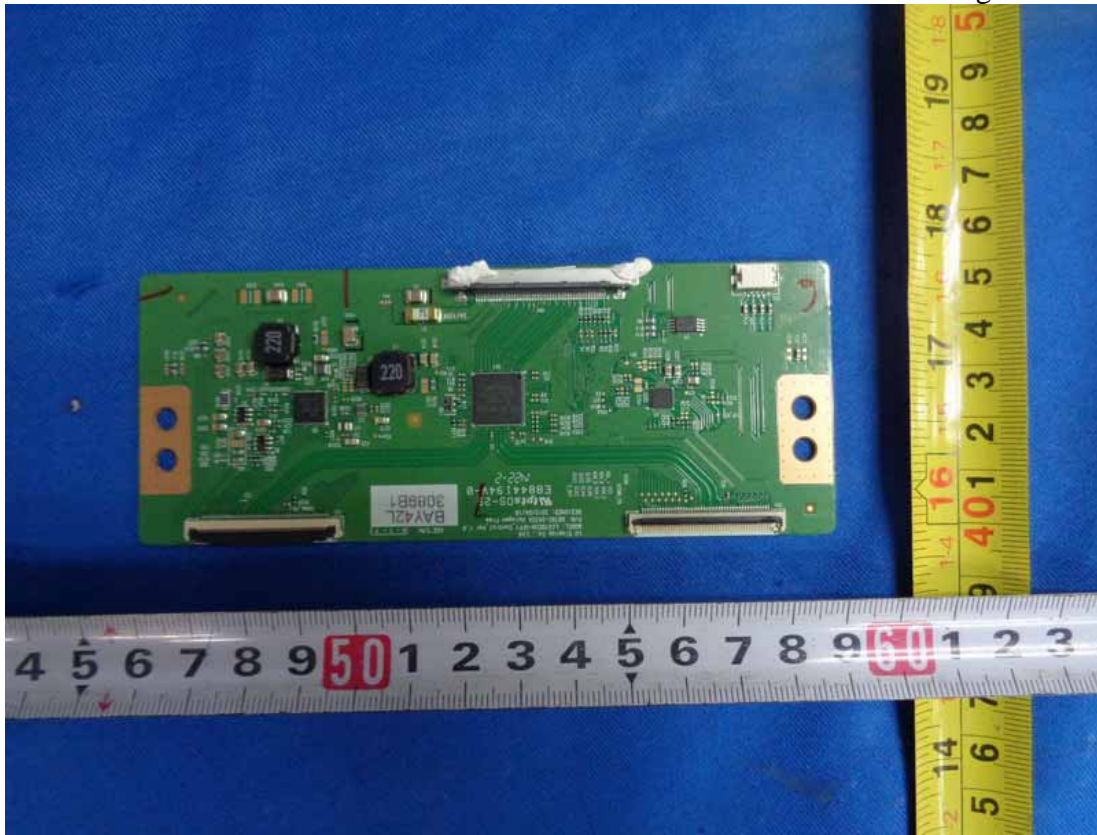


Figure 24
Inside Configuration of the EUT

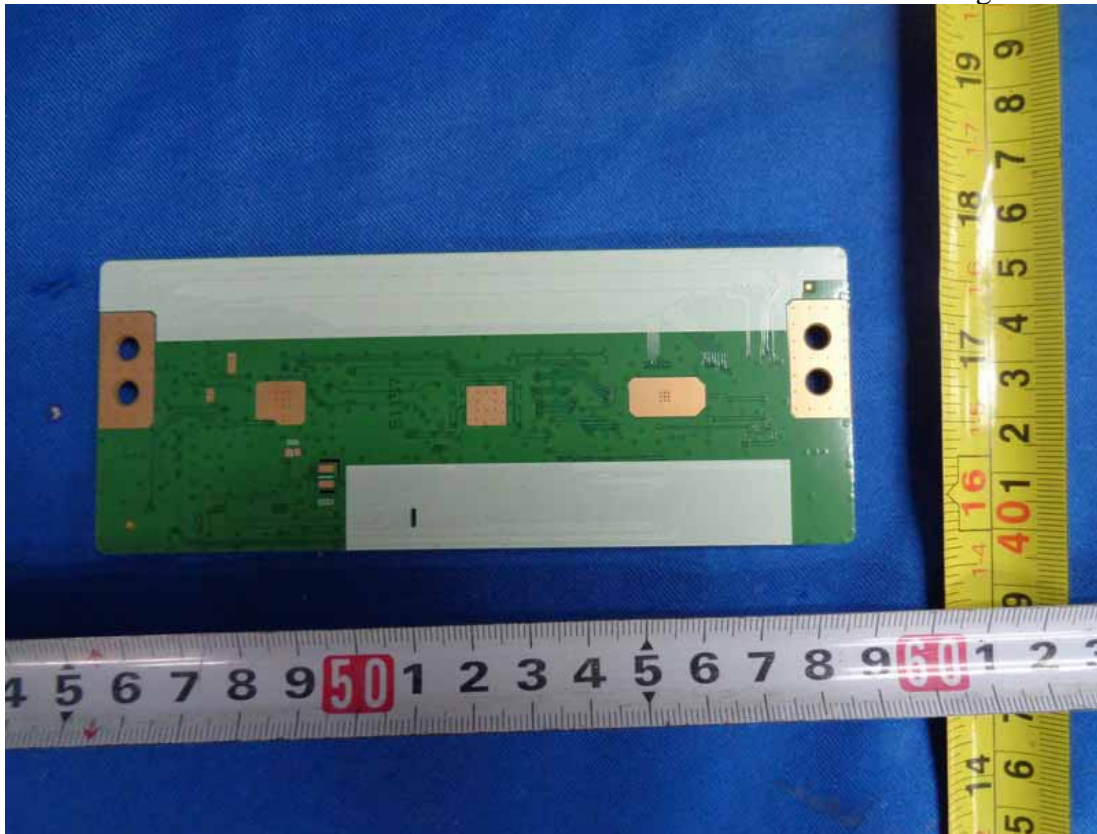


Figure 25
Speaker



Figure 26
Speaker



Figure 27
Remote



Figure 28
Remote



Figure 29
5.0m VGA Cable



Figure 30
5.0m USB Cable



Figure 31
5.0m Audio Cable

