


EZFinder

EZFinder helps to search for files in the memory and in external storage of Android system.

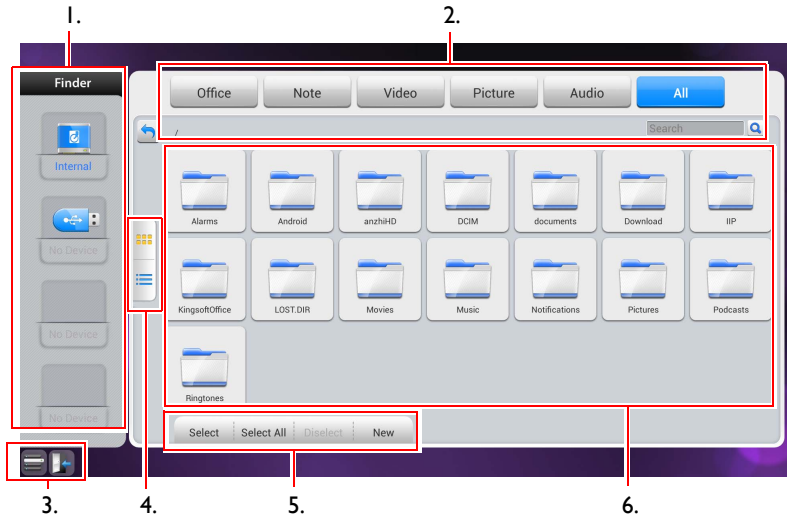


Item	Function	Description
1	Storage device	Click to pop up submenu (background change/save).
2	File type filter	Click to highlight the desired file type to display.
3	Menu/exit	Click with the touch pen to pop up menu options or exit file browsing.
4	File arrangement	Arrange files with icons or a list.
5	File operation	Perform operations such as select/delete/crate/copy/cut.
6	Main display area	Display files of corresponding type in memory card.

Multimedia files such as images, audios, and videos can be played by directly tapping on the file icon.

Image


Select the image file you want to play and perform the functions as provided on the screen according to your needs

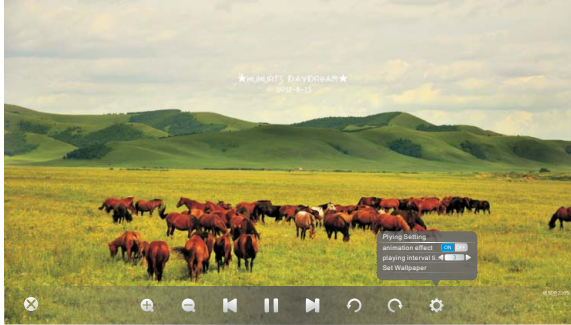







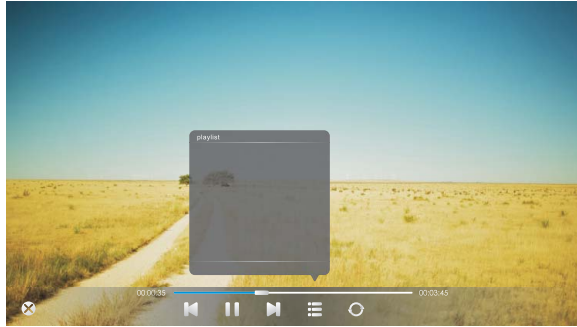

Icon	Function
	Close the current playback.
	Magnify the current image.
	Shrink the current image.
	Play the previous image.
	Play/pause the current playback.
	Play the next image.
	Counterclockwisely rotate the current image.
	Clockwisely rotate the current image.
	Set the animation effect and playing interval for images being played, and set the current image as the wallpaper.

Audio

Select the audio file you want to play and perform the functions as provided on the screen according to your needs










Icon	Function
	Close the current playback.
	Play the previous audio.
	Play/pause the current playback.
	Play the next audio.
	Check audios in the playlist.
	Repeatedly play audios in the playlist.
	Repeatedly play a single audio in the playlist.
	Randomly play audios in the playlist.

Video


Select the video file you want to play and perform the functions as provided on the screen according to your needs.



Icon	Function
	Close the current playback.
	Play the previous video.
	Fast rewind the current video.
	Play/pause the current playback.
	Fast forward the current video.
	Play the next video.
	Check videos in the playlist.


Browser


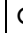
At network connected state, click on browser icon to surf the Internet. Click on the symbol **X** in the upper left corner to close it.

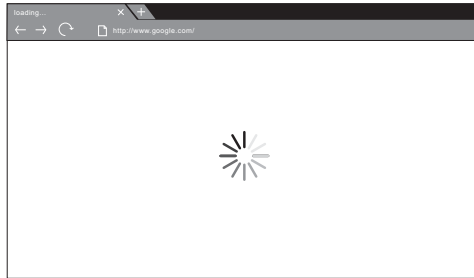

PIP

Click on PIP icon to pop up picture-in-picture interface.

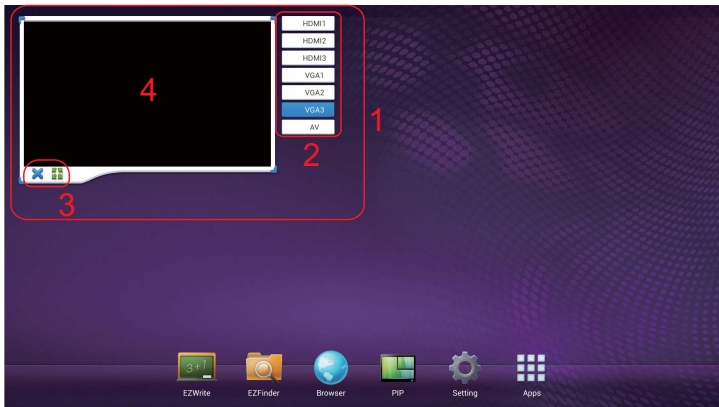

Item	Description
1	Picture-in-picture interface.
2	Click to choose a input source in the list to be shown.
3	Click  for full screen. Click  to exit picture-in-picture interface.
4	Click with the touch pen to pop up the input source list.



To use remote control for picture-in-picture operations:

- press **▲** to pop up the input source list.
- Press **▶** to enable the selection from the list.
- Press **▲/▼** to select and press **ENTER** to confirm the selection.

Setting

Setting is the shortcut to setting menu. Refer to "[Setting menu](#)" for details.

Apps



Other than preset apps located at the bottom of the screen, additional apps will be placed in the same section and be displayed when App icon is clicked.

Product information

Specifications


Item		Specifications
		RP840G
LCD panel	Backlight	E-LED
	Panel size	84"
	Pixel pitch (mm)	0.4845
	Native resolution (pixels)	3840 x 2160
	Brightness (cd/m ²) (typical)	350
	Contrast (typical)	1600:1
	Response time (ms) (typical)	8
	Panel Bit	10-bit
Touch	Technology	IR Touch
	Resolution	32767 x 32767
	Capacity	10 points
	Accuracy	+/- 2mm
	Touch Output	USB x 1
	Operating System	Windows XP/Vista/7CE, Mac OS X, Linux
Panel glass	Tempered glass	AG coating, 80
	Thickness	4mm
Input	Computer	VGA (D-Sub 15-pin) x 3
	Video	Composite Video (3-in-1 connector) x 1, HDMI x 4 (1080P x 3, 4K2K x 1)
	Audio	Line-in (3.5 mm jack) x 3
	USB	Type A; Type B
	Control	RS-232C (D-Sub 9-pin),
	TV Tuner	X
Output	Computer	VGA (D-Sub 15-pin) x 1
	Video	X
	Audio	Earphone (3.5 mm jack), COAX x 1
	External speaker out (L/R)	X
Audio	Audio W (Amp)	10W x 2
	Internal speaker	O

Power	Supply	100 - 240V AC, 50/60 Hz
	Consumption Max.	550W
	Consumption Standby	< 0.5W
Environment	Operating Temperature	0 - 40°C, 32 - 104°F
	Operating Humidity	10 - 90% (without condensation)
	Storage Temperature	-25 - 55°C, -13 - 131°F
	Storage Humidity	10 - 95% (without condensation)
	Display Orientation	Landscape
Mechanical	Weight (kg)	116
	Dimensions (W x H x D) (mm)	1978 x 1187 x 96 mm
	Bezel Dimension - T/B/ L/R (mm)	40/62.5/40/40
Feature	Image setting	O
	Source/Volume Control	O
	Sharpness enhancement	O
	Dimming control	O
	10-bit color processing	O
	De-Interlacing / comb Filter	O
	Customized Classroom Mode	O



Specifications and functions are subject to change without notice.

Dimensions

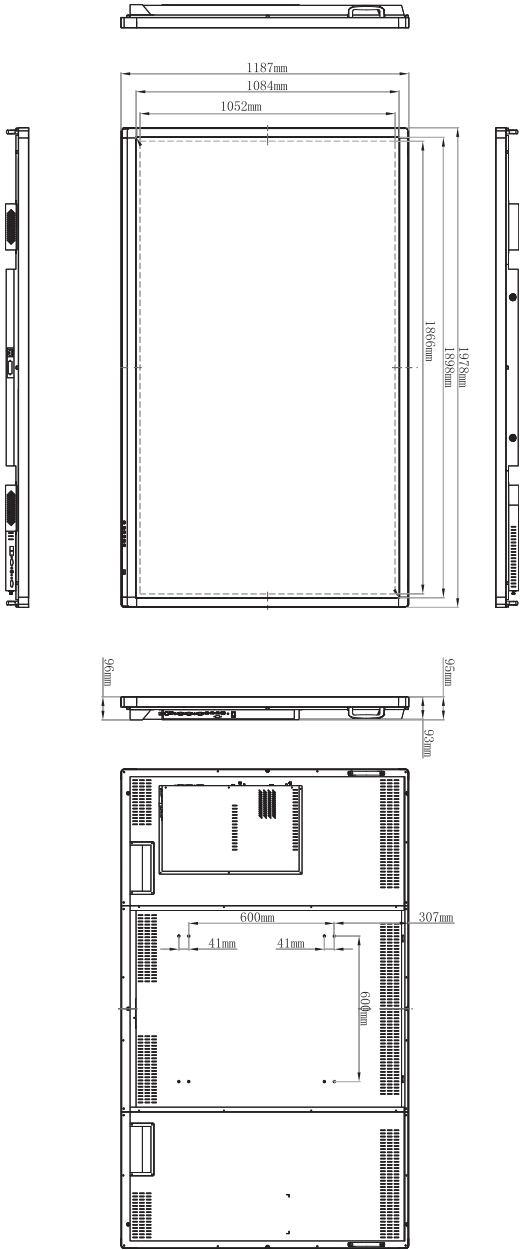

Unit: mm

Supported input signal resolution

Resolution	Input source				
	AV	S-Video	YPbPr	VGA	HDMI
640 x 480 @ 60Hz				○	
640 x 480 @ 67Hz					
640 x 480 @ 72Hz					
640 x 480 @ 75Hz					
720 x 400 @ 70Hz					
800 x 600 @ 60Hz				○	
800 x 600 @ 75Hz					
832 x 624 @ 75Hz					
1024 x 768 @ 60Hz				○	
1024 x 768 @ 75Hz					
1152 x 870 @ 75Hz					
1280 x 720 @ 60Hz					
1280 x 768 @ 60Hz					
1280 x 800 @ 60Hz RB					
1280 x 800 @ 60Hz				○	
1280 x 960 @ 60Hz					
1280 x 1024 @ 60Hz					
1360 x 768 @ 60Hz					
1366 x 768 @ 60Hz					
1400 x 1050 @ 60Hz					
1600 x 1200 @ 60Hz					
1680 x 1050 @ 60Hz RB					
1600 x 1050 @ 60Hz					
1920 x 1080 @ 50Hz				○	
1920 x 1080 @ 60Hz				○	
3480 x 2160 @ 30Hz					○
NTSC-M					
NTSC-J					
PAL-BDGHI					
576i (50Hz)					○
480i (60Hz)					○
480p (60Hz)					○

576p (50Hz)					○
720p (25Hz)					
720p (30Hz)					
720p (50Hz)					○
720p (60Hz)					○
1080i (50Hz)					○
1080i (60Hz)					○
1080p (24Hz)					
1080p (25Hz)					
1080p (30Hz)					
1080p (24Psf)					
1080p (25Psf)					
1080p (50Hz)					○
1080p (60Hz)					○



- ○: supported
- Blank: not supported
- 3480 x 2160 @ 30Hz is available via HDMI 4.

Troubleshooting

Problem	Solution
No picture	<p>Check the following:</p> <ul style="list-style-type: none"> • Is the display turned on? Check the power indicator of the display. • Is the signal source device turned on? Turn on the device and try again. • Are there any loose cable connections? Make sure that all cables are connected firmly. • Have you chosen an unsupported output resolution on the computer? Refer to Supported input signal resolution on page 43 to select a supported resolution and try again. • Have you chosen an unsupported output resolution on the DVD or Blu-ray disc player? Refer to Supported input signal resolution on page 43 to select a supported resolution and try again.
No sound	<p>Check the following:</p> <ul style="list-style-type: none"> • Have you turned on the mute function on the display or the input source device? Turn off the mute function or increase the audio volume level and try again. • Are there any loose cable connections? Make sure that all cables are connected firmly.
The computer input image looks strange	<ul style="list-style-type: none"> • Have you chosen an unsupported output resolution on the computer? Refer to Supported input signal resolution on page 43 to select a supported resolution and try again. • Use the Auto Adjust function (See VGA settings on page 29) to let the display automatically optimize the display of computer image. • If the result of the Auto Adjust function is not satisfactory, use the Phase, Horizontal Pos. and Vertical Pos. functions to manually adjust the image.
The control panel buttons do not work	<p>Have you locked the control panel buttons? Unlock the buttons and try again.</p>

The remote control does not work	<ul style="list-style-type: none"> • Have you locked the remote control function? Unlock the function and try again. • Check for incorrect battery orientation. • Check for dead batteries. • Check your distance and angle from the display. • Check whether remote control is properly being pointed at the display's remote control sensor window. • Check for any obstacle between the remote control and the remote control sensor window. • Check that the remote control sensor window is not under strong fluorescent lighting, or in direct sunlight. • Check for any devices (computer or personal digital assistant, PDA) nearby that transmit infrared signals which may cause interference to signal transmission between the remote control and the display. Turn off the infrared function of these devices.
Remote control failure	<ol style="list-style-type: none"> 1. Check whether there are other objects between remote control and television remote control receiving window, thus leading to failure of remote control. 2. Check whether the battery electrode in the remote control is correct. 3. Check whether remote control needs to replace battery.
Machine automatically shutdown	<ol style="list-style-type: none"> 1. Whether set sleep or not. 2. Check whether there is sudden power outage. 3. Check whether there is no signal automatic shutdown.
Signal out of range	<ol style="list-style-type: none"> 1. Check whether display is set correctly. 2. Check whether resolution is the best resolution. 3. Adjust line and field synchronization in menu.
Background has vertical lines or streaks	<ol style="list-style-type: none"> 1. Select automatic correction in menu. 2. Adjust clock and phase position in menu.
Image lack of color, color is incorrect	<ol style="list-style-type: none"> 1. Check whether VGA is not well connected or has quality problem. 2. Adjust chromaticity and brightness or contrast in menu.
Display format that is not supported.	<ol style="list-style-type: none"> 1. Select automatic correction in menu. 2. Adjust clock and phase position in menu.
Touch function invalid	<ol style="list-style-type: none"> 1. Check whether touch driver is installed and started. 2. Check whether the size of article touched is comparable with finger.
Touch positioning not correct	<ol style="list-style-type: none"> 1. Check whether driver is properly installed and make correction. 2. Check whether touch pen is facing the screen.

No picture and no sound	<ol style="list-style-type: none">1.Check whether the machine is started state.2.Check whether signal wire is well plugged, whether INPUT is corresponding to it.3.If in internal computer mode, check whether internal computer is started.
With horizontal or vertical stripes or image dithering	<ol style="list-style-type: none">1.Check whether signal wire is well connected.2.Check whether other electronic equipment or power tools are placed around the machine.
No color, color is weak or image is weak	<ol style="list-style-type: none">1.Adjust chromaticity and brightness or contrast in menu.2.Check whether signal wire is well connected.
With image but without sound	<ol style="list-style-type: none">1.Check whether mute button is pressed for mute.2.Press VOL. + / - to adjust volume.3.Check whether audio line is connected correctly.
Only one speaker has sound	<ol style="list-style-type: none">1.Adjust sound balance in menu.2.Check whether computer sound control panel only sets up one sound channel.3.Check whether audio line is connected correctly.
VGA output without sound	<ol style="list-style-type: none">1.Check whether connect external device with headphone cable.

10/16/14