

# Tune-up procedure

1. When adjusting the RF Power at manufacturing, just turn L1, L2, L3.
2. L4 is where you adjust its accuracy.

