Operating instructions:

Battery type X-97780 (Class 2)

1. Brake seal and remove locking pin from slider.
2. Push slider to move switch to EMERGENCY position.
3. To de-operate beacon, move switch to READY position. Manual operation in bracket:

To manually remove beacon from bracket, remove the

bracket locking pin.

Automatic operation:
1. Beacon is installed in the bracket. 2. Beacon will automatically release and activate before reaching 4 meters depth, independent of switch position.

Temperature range -20°C to +55°C



For marine distress use only. Unautherized operation is prohibited. WARNING!

Locking pin

Switch

Compass safety distance: 1,5 m

JOTRON electronics a.s 3280 Tjodalyng . Norway E-mail: marine @jotron.com


Test instructions:

3. Red test lamp will start flashing for approx. 15 sec.. Then on Remove beacon from the bracket.
 Push switch to TEST position. - PASSED.

There will be one flash in the strobe light. Any other behaviour indicates a

JOTRON electronics as cannot be held responsible for any damage caused due to incorrect use of the equipment or breach of laid down procedures or for failure of any specific component or other part of the equipment.



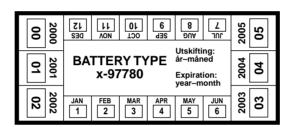



PUSH