









### Operating Instructions:

#### Manual operation in bracket

1. Brake set and release locking pin from stop.
2. Push slider to move switch to EMERGENCY position.
3. To dis-engage battery, push slider to READY position.

To manually remove bracket from battery, remove the bracket locking pin.

#### Automatic operation

1. Bracket is attached to the bracket.
2. Bracket will automatically release and withdraw from the battery pack, requiring 4 meters depth, withdrawal or other condition.

Battery Pack

1000  
1000  
1000  
1000





