

# PANTECH

ADR8995™



## User Guide for Android 2.3 (Gingerbread)

Thank you for choosing the Pantech ADR8995, our latest smartphone.

The Pantech ADR8995 has many features designed to enhance your mobile experience. From its unique, stylish design, you will enjoy the entire ADR8995 experience.


This User Guide contains important and useful information that will maximize your familiarity with all that the Pantech ADR8995 has to offer.

# BASIC INSTRUCTIONS

## BASIC INSTRUCTIONS

 
### USEFUL TIPS USING ADR8995

To understand information contained in this user guide and activities that you can do with ADR8995, please keep in mind the following tips:

- It is assumed that you start operating applications of ADR8995 from the applications menu.
- 1 Tap  from home screen to access the applications menu.
  - 2 Flick the screen up or down and run the application you want to use.



Accessing Applications

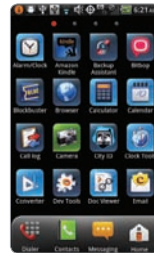

Navigating Applications

- Words in bold fonts refer to the relevant action on the screen. For example, “Tap **Gmail**” means that you have to tap Gmail below the Gmail icon. Words might be placed below or next to an icon or included in the text.
- The symbol “>” refers to the next action. For example, “Tap **Settings** > **Language & keyboard**” means that you should tap **Settings** first and then **Language & keyboard** next.

- Applications refers to the screen where all applications of ADR8995 appear.
- Home screen refers to the screen that appears first when you unlock the screen.
- Idle mode refers to the status when you stay on the home screen ready to run an application.
- Channels through which you can share items, e.g. contacts and pictures, increase as you subscribe to services. For example, if you sign up for Facebook or Twitter, you can also share information with others through Facebook or Twitter.
- Captured images in this manual might change according to the relevant software upgrade.

## INPUTTING TEXT

Edit text easily to enter in a message or search for information in the Internet.













- 1 Enter text as you want. As you enter a word, related words appear below. Tap one of them if you find it appropriate.
- 2 Drag a word or phrase that you want to edit, and press and hold it.



## ABOUT Google ACCOUNT

It is recommended that you have a Google account to use a few applications of ADR8995. For more information on setting up a Google account, refer to **Activating ADR8995** on page 25.

## COMMON ICONS

Icon	Selected to
	Adjust value
	Zoom out
	Zoom in
	Delete the selected item
	Rearrange the selected item
	Strength of battery: The more green, the more it is charged
	The battery is charging
	There is no SIM/USIM card
	SD card prepared
	The memory disk is full
	There is an error
	The phone doesn't ring when there is an incoming call

## ABOUT BATTERY USAGE

Your phone is powered by a Lithium Ion (Li-Ion) battery. Therefore, you can recharge battery while some charge remains without reducing your phone's autonomy. For a safe use of the battery,

- Do not use a damaged battery or charger.

- Do not disassemble, open crush, bend, deform, puncture or shred the battery.
- Do not modify or remanufacture, insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Do not put your battery in contact with conductive objects.
- Dispose of and recycle used batteries in accordance with local regulations. Do not dispose of batteries by burning; they may explode.
- Do not use an unauthorized charger or battery.
- Use the battery only for the device for which it is specified.
- Use the battery with a charging device that has been qualified for the device per this standard. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the device per this standard, IEEEStd-1725-2006.
- Children should be supervised when they use the battery.
- Avoid dropping the phone or the battery. If the phone or the battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Use your battery for the specified purpose only.
- The closer you move to your network's base station, the longer you can use your phone because less battery power is required for connection.
- The battery recharging time varies depending on the remaining battery capacity and the battery and charger type.
- Battery life inevitably shortens over time.
- Since overcharging may shorten battery life, remove the phone from its charger once it is fully charged. Unplug the charger once charging is complete. Leaving the battery in hot or cold places, especially inside a car in summer or winter, may reduce its capacity and life.
- To prevent injury or burns, ensure that no metal objects come into contact with the + and – terminals of the battery.

# TABLE OF CONTENTS

BASIC INSTRUCTIONS .....	2
BASIC INSTRUCTIONS .....	2
TABLE OF CONTENTS.....	6

## 1. GETTING STARTED

GETTING STARTED .....	13
CHECKING PACKAGE.....	13
INSTALLING SIM/RUIM CARD.....	14
INSTALLING MICROSD CARD.....	15
INSERTING BATTERY .....	16
CHARGING BATTERY .....	17
CHARGING BATTERY WIRELESS.....	18
TURNING ADR8995 ON/OFF.....	18
MANAGING SCREEN.....	18
OVERVIEWING PRODUCT .....	21
GRIPPING ADR8995.....	25
ACTIVATING ADR8995.....	25
BACKING-UP DATA.....	28
UNDERSTANDING HOME SCREEN.....	30
CUSTOMIZING HOME SCREEN .....	34
SETTING LANGUAGE OPTION.....	39

## 2. CALLS AND MESSAGES

CALLS AND MESSAGES.....	41
CALLING.....	41
SKYPE CALL.....	48
MESSAGING.....	49
CONTACTS.....	57
Google TALK.....	62

## 3. PERSONAL INFORMATION

PERSONAL INFORMATION.....	66
CALENDAR.....	66

## 4. COMMUNICATION

COMMUNICATION.....	70
EMAIL.....	70
GMAIL.....	73
TWITTER.....	75
FACEBOOK.....	77
SOCIAL NET WIDGET.....	79
S-BOARD.....	80

## 5. ENTERTAINMENT

ENTERTAINMENT .....	85
LISTENING TO MUSIC.....	85
USING CAMERA .....	91
USING CAMERA AS CAMCORDER.....	97
USING GALLERY.....	101
ENJOYING YOUTUBE.....	103
USING VIDEO PLAYER.....	106

## 6. CONNECTIVITY

CONNECTIVITY .....	110
USING A WI-FI NETWORK.....	110
CONNECTING TO A 3G/4G NETWORK.....	114
USING Bluetooth.....	118
MAKING ADR8995 A MODEM.....	121

## 7. LOCATION-BASED SERVICES

LOCATION-BASED SERVICES.....	125
USING Google MAPS.....	125
USING PLACES .....	126
USING LATITUDE .....	128
NAVIGATION.....	131



NEWS & WEATHER.....	133
---------------------	-----

## 8. WEB-BASED SERVICES

WEB-BASED SERVICES.....	138
WEB SURFING.....	138
Google SEARCH.....	144
VOICE SEARCH.....	146
ANDROID MARKET.....	146

## 9. TOOLS

TOOLS.....	150
CALCULATOR.....	150
TIP CALCULATOR.....	151
ALARM/CLOCK.....	152
CLOCK TOOLS.....	155
CONVERTER.....	158
DOC VIEWER.....	159
HANDY MEMO.....	161
RECORDER.....	164
WEATHER.....	167
SURFACE LEVEL.....	169

## 10. STORAGE

STORAGE.....	172
MANAGING THE MEMORY CARD.....	172
CONNECTING TO A PC .....	173
USING ADR8995 AS MASS STORAGE.....	174
TRANSFERRING FILES THROUGH WINDOW MEDIA SYNC.....	175

## 11. SETTINGS

SETTINGS.....	177
WIRELESS & NETWORKS .....	177
CALL SETTINGS.....	178
SOUND.....	180
DISPLAY.....	182
LOCATION & SECURITY.....	183
APPLICATIONS .....	188
ACCOUNTS & SYNC.....	189
PRIVACY .....	190
STORAGE.....	190
LANGUAGE & KEYBOARD .....	191
ACCESSIBILITY.....	191
DATE & TIME.....	192
ABOUT PHONE.....	193

## 12. APPENDIX

APPENDIX.....	196
SAFETY AND WARRANTY.....	196
UPnP AND DLNA.....	214
SPECIFICATIONS.....	215
LOCATION-BASED SERVICES.....	216
END USER LICENSE AGREEMENT (EULA).....	217
TROUBLESHOOTING CHECKLIST.....	217
Index.....	219

# 1

## GETTING STARTED

This chapter provides important information to know before using ADR8995, including:

- CHECKING PACKAGE
- INSTALLING SIM/RUIM CARD
- INSTALLING MICROSD CARD
- INSERTING BATTERY
- CHARGING BATTERY
- CHARGING BATTERY WIRELESS
- TURNING ADR8995 ON/OFF
- MANAGING SCREEN
- OVERVIEWING PRODUCT
- GRIPPING ADR8995
- ACTIVATING ADR8995
- BACKING-UP DATA
- UNDERSTANDING HOME SCREEN
- CUSTOMIZING HOME SCREEN
- SETTING LANGUAGE OPTION

# GETTING STARTED

 
## CHECKING PACKAGE

Check if the package contains the following items:

- Handset
- Battery
- AC travel charger
- Quick Start Guide
- User Guide
- Stereo ear-mic
- Warranty Card
- Micro-SD card

## INSTALLING SIM/RUIM CARD

- 1** Press and hold the latch and slide it to remove the battery cover from ADR8995.
- 2** Insert the SIM/RUIM card into the slot. Ensure that the gold contacts of the card go against the metal contacts of ADR8995.
- 3** Close the battery cover by sliding it up until you hear “click.”

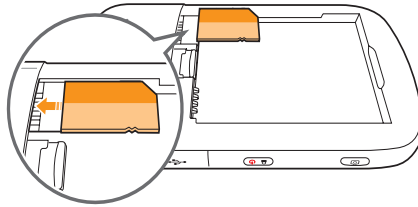


## ABOUT SIM/RUIM CARD

When you subscribe to your network operator, you receive the Subscriber Identity Module (SIM) card or RUIM (Re-Usable Identification Module) card that houses your registration information, PIN code, etc. Keep it secure and handle carefully like a credit card. Do not bend, scratch or expose it to moisture. Avoid static electricity.

## INSTALLING MICROSD CARD

 - 1** Press and hold the latch and slide it to remove the battery cover ADR8995.
- 2** Insert the microSD card into the slot. Ensure that the gold contacts of the card go against the metal contacts of the phone.
- 3** Close the battery cover by sliding it up until you hear “click.”

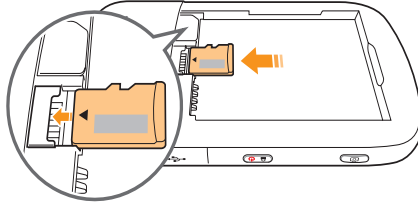


## ABOUT MICROSD CARD

A microSD card is a removable flash memory card where you can save data. Save pictures and contacts, and download applications to the SD card. You can expand the external memory up to 32GB.

It is recommended that you format the microSD card before using ADR8995.

## INSERTING BATTERY

 - 1 Press and hold the latch and slide it to remove the battery cover from ADR8995.
- 2 Align the gold contacts on the battery with the contacts located at the top of the battery compartment on ADR8995.
- 3 Press the battery down until it lays flat in the compartment.
- 4 Close the battery cover by sliding it up until you hear “click.”

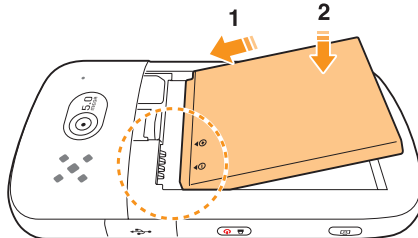


## ABOUT BATTERY

ADR8995 uses a Lithium Ion (Li-Ion) battery. Make sure to use the authorized battery and charger only. Maximum hours to use the battery might vary depending on service types offered by the service provider and temperatures. For more details, inquire at your nearest dealer.



## CHARGING BATTERY

 - 1 Open the protective cover on the right side of ADR8995 and connect the charger adapter to the USB connector of ADR8995.

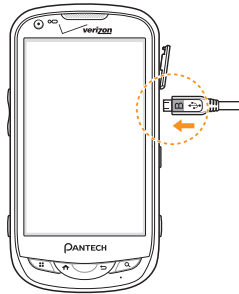

ⓘ **Note** Make sure to align the connector as indicated in the image. Otherwise, the charging connector will be damaged and the battery will not be charged.

- 2 Disconnect the charger from ADR8995 when the battery is fully charged.

## CHARGING BATTERY WIRELESS

You can also charge battery using the wireless charger.

- 1** Place ADR8995 on the charger. It starts to be charged.
- 2** Remove ADR8995 from the charger when the light turns green.

## TURNING ADR8995 ON/OFF

TO TURN ON ADR8995,

- 1** Press and hold the LOCK/POWER key for a few seconds.
- 2** Unlock the screen.

TO TURN ADR8995 OFF,

- 1** Press and hold the LOCK/POWER key.
- 2** Tap **Power off**.
- 3** Tap **OK**. The screen will turn off in a few seconds.

## MANAGING SCREEN

### UNLOCKING SCREEN

The screen is locked by default when you turn on power. To unlock the screen,

- 1 Press the LOCK/POWER key.
- 2 Drag the lock to the right. Draw a pattern if the screen is protected by a pattern lock. Enter a PIN or a password if the screen is locked by a PIN or a password.



① **Note** You can check missed calls, messages or emails quickly when screen is locked: Drag the icon for call, message or email to the clock located in the middle of the screen.

## LOCKING SCREEN

It is recommended to lock the screen to protect information contained in ADR8995 and save the usage of the battery. To lock the screen, press the LOCK/POWER key.

## USING TOUCH SCREEN

Run an application or perform functions with the touch screen. The following finger actions describe how to use the touch screen of ADR8995.

- **Tap:** Tap the screen once to access a menu or an option
- **Double tap:** Tap an item twice
- **Drag:** Tap and hold your finger on an item and move it without losing contact with the screen
- **Flick:** Place a finger on the screen and move the screen up or down, or left or right.
- **Pinch:** Place two fingers on the screen and move them apart to zoom in a picture, a document or a web page, or move them together to zoom out.
- **Select and tap:** Tap an item in the list of options available
- **Press and hold:** Press an item for a few seconds and you can see options available for the item

ⓘ **Note** Use one finger at a time except when you deal with a picture or a document. ADR8995 will not recognize it when you use more than two fingers.



### ⚠ **CAUTION**

- Do not use sharp tools that can scratch the touch screen.
- Do not allow the touch screen to come in contact with water or chemicals. The touch screen may malfunction in humid conditions or in chemicals.
- Do not sit on ADR8995. The touch screen can be damaged.

 
# OVERVIEWING PRODUCT

## FRONT VIEW




Key	Function
MENU 	Displays options available; turns on screen; rearranges the home screen
HOME 	Moves to the Home screen; turns on screen; runs the task manager

## REAR VIEW

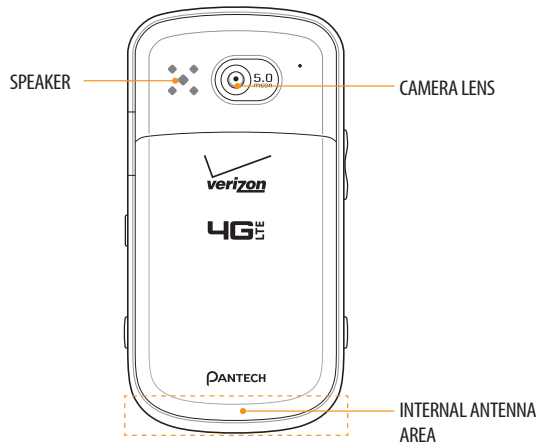


Key	Function
BACK ↵	Ends an application; returns to the previous menu
SEARCH 🔍	Opens a search window

## SIDE VIEW

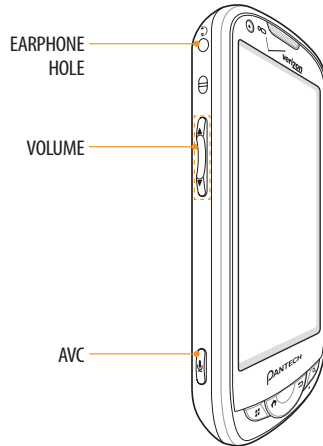 

Key	Function
VOLUME	Adjusts all sound volumes; adjusts the ring mode
AVC	Runs the voice command

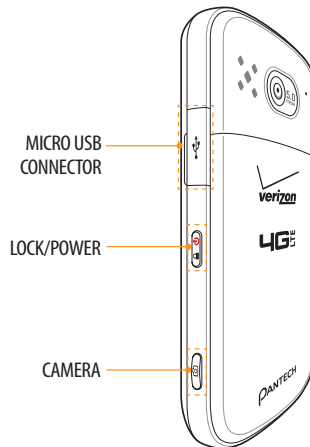 


Key	Function
Micros USB connector	Connects ADR8995 and your PC via the USB cable; provides power
CAMERA	Runs the camera; captures an image on the screen
LOCK/POWER	Locks the screen; turns on/off screen



## GRIPPING ADR8995

 It is strongly recommended that you hold ADR8995 in the right position for a call as indicated below:

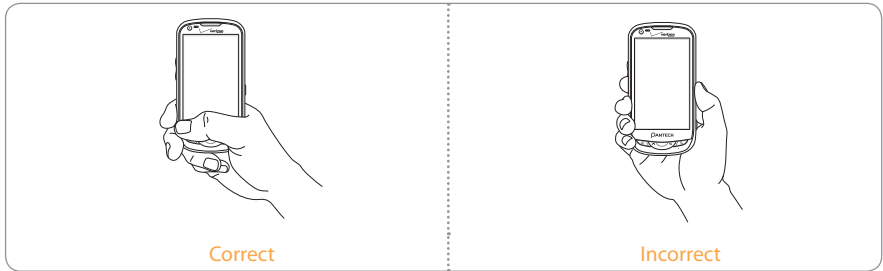

- Make sure not to block the internal antenna embedded in ADR8995. Check the location of the antenna on the illustration on page 22.
- Do not wear metal accessories on your hand: it can affect the quality of calls.

## ACTIVATING ADR8995

Go through a few processes when you turn on ADR8995 for the first time after inserting the battery.

### LEARNING HOW TO USE ADR8995

- 1** Press and hold the LOCK/PWR key to turn on ADR8995.
- 2** Tap the android.
- 3** Tap **Activate** for auto activation. ADR8995 will dial \*228 automatically and become available for use in a few minutes.
- 4** Tap **Learn how to use this phone**.

- 5** Tap **VZQ Location Services > Agree > Next**.
- 6** Tap **Standalone GPS Services > Agree > Next**.
- 7** Tap **Google Location Services > Agree > Next**.
- 8** Select and tap an account to sync and tap **Next** if it is the first time. You can add a new account for sync. You can also tap **Skip** and synchronize accounts later.
- 9** Type the email address and password and tap **Next**.
- 10** Tap **Accept** for terms and conditions of the service.
- 11** Select and tap the type of contents that you want to display and sync, type the nickname if necessary and tap **Next**.
- 12** Follow necessary steps for each accounts.
- 13** Type the user name or email address, and password for Google account and tap **Next**.
- 14** Tap **Next** for My Verizon Profile Sign In.
- 15** Tap **Basic Set-up and Usage Videos**. You can also tap **My Verizon Video** or **Additional Video**. If you do not want to see it, tap **Done**.
- 16** Select and tap a tour in the list and see how it works. Tap **Done** if you finish the guided tours.
- 17** Tap **Close**. The learning process will end.

 **Note** You can do all of these steps later by tapping **Setup Wizard**.

## CREATING A Google ACCOUNT

- 1** Tap **Settings > Accounts & sync > Add account**.
- 2** Tap **Google > Next > Create**.

- 3 Enter your first name, last name and user name for the account, and tap **Next**. The user name should be 6–30 characters long. You can select an alternative.




- 4 Tap **Next** > **Connect to Wi-Fi** if you have not connected ADR8995 to the Wi-Fi network and follow the instructions.
- 5 Enter a password and enter it again to confirm. You should enter at least 8 characters.
- 6 Tap **Next**.
- 7 Select and tap a security question and enter an answer.
- 8 Enter a secondary email address and tap **Create**.
- 9 Tap **I agree, Next** for the Google Terms of Service.
- 10 Tap **Try again** if your password is too weak for a password or contains invalid characters.
- 11 Repeat the steps 5 to 9.
- 12 Type the characters that appear on screen and tap **Next**.
- 13 Tap **Sync Contacts** if you want to synchronize your contacts. Tap **Sync Gmail** if you want to synchronize Gmail.
- 14 Tap **Finish setup**.

## BACKING-UP DATA

Back-up important data saved in ADR8995 using the Backup Assistant.

## REGISTERING ACCOUNTS

- 1 Tap **Backup Assistant** from the applications menu.
- 2 Tap **Start**. Backup Assistant starts to connect to the server.
- 3 Type a 4-8 digit PIN, tap  in the virtual keypad and tap **Next**.
- 4 Type the PIN again for confirmation and tap **Next**.
- 5 Tap on the checkbox for **I authorize Backup Assistant to send my PIN to my phone** and tap **Next**. It takes some time before registration is completed.

## BACKING-UP ACCOUNTS

- 1 Tap **Backup Assistant** from the applications menu.
- 2 Tap **Backup Now**. If you want to stop backing-up, tap **Stop Backup**.

## RESTORING DATA

- 1 Tap **Backup Assistant** from the applications menu.
- 2 Enter your PIN and tap **Restore**.

## RECURRING SYNC

- 1 Tap **Backup Assistant** from the applications menu.
- 2 Tap **Recurring Sync**.
- 3 Select and tap the time for sync and tap **OK**.

## CHANGING PIN NUMBER

 
- 1 Tap **Backup Assistant** from the applications menu.
- 2 Tap **PIN**.
- 3 Type the current PIN.
- 4 Type a new PIN and type it again.
- 5 Tap **OK**.

## CHECKING AT THE WEBSITE

- 1 Tap **Backup Assistant** from the applications menu.
- 2 Tap [www.verizonwireless.com/backupassistant](http://www.verizonwireless.com/backupassistant) on the bottom of the screen and check your data online.

## UNDERSTANDING HOME SCREEN



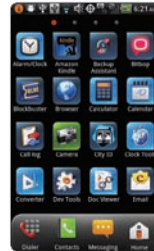

Home screen is the starting point to use applications of ADR8995. Place shortcuts, widgets or folders, and create wallpaper for your preferences. Press  if you want to move to home screen any time.





Sample home screens

## LAUNCHER BAR ICONS

The following icons represent applications that are placed in the launcher bar by default. Rearrange them if you want to.

Icon	Description
	Makes calls
	Opens Messaging
	Opens Phonebook
	Moves to home screen; runs the multitask manager

Icon	Description
	Moves to the Applications screen
	Hides the launcher bar


## NAVIGATING HOME SCREEN

 
ADR8995 provides seven different screens where you can arrange items for your preferences. Change the number of home screens if you want.

- 1 Flick the screen from the left to the right or vice versa.
- 2 Tap a desired application or widget to run.


## CHECKING APPLICATIONS WITH TASK MANAGER

Manage applications using Task Manager and enhance efficiency.


- 1 Press and hold  in the idle mode. You can check applications in the order of use. You can see up to twelve applications on the screen.
- 2 Tap **Task Manager**. You can see applications that are running, system status and useful tips.
- 3 Tap **End** next to the application that you want to stop. You can see the CPU and the RAM that the application is using currently.
- 4 Tap **Shutdown** if you want to stop the application from running. Tap **End Protect** on the top of the screen if the application is protected.
- 5 Tap **Tips** and check useful information that might help you manage applications of ADR8995.

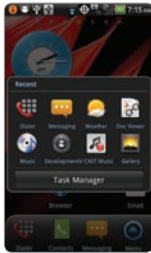

Running Task Manager

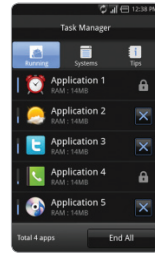 

Ending applications


ⓘ **Note** Make sure to press  and move to home screen if you want to finish using an application. Otherwise, the application continues to run and will take much memory and battery.

## SETTING STATUS BAR AND EASY-SETTING

  
Status bar offers a quick access to Easy Setting and ongoing events.

- 1 Tap on the top of the home screen and drag the status bar down.
- 2 Tap an icon in Easy Setting that you want to run. The icon turns light green when the function is on.
- 3 Tap **Clear** if you want to remove notifications in the bar.



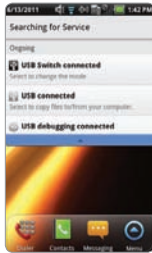



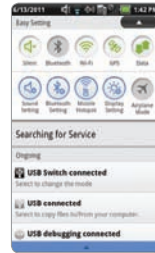





Opening Notifications



Checking the notification bar


## EASY-SETTING ICONS

Icon	Description
	Mutes the sound
	Activates Bluetooth
	Activates Wi-Fi
	Activates GPS
	Activates data network
	Adjusts sound settings
	Adjusts Bluetooth settings
	Adjusts Mobile Hotspot settings








Icon	Description
	Adjusts Display settings
	Turns the airplane mode on/off

## CUSTOMIZING HOME SCREEN

### ADDING A SHORTCUT


- 1 Press and hold on the empty space of the home screen or press  in the idle mode and tap **Add**.
- 2 Tap **Shortcuts**.
- 3 Select and tap an item among those that can be added as a shortcut.
- 4 Select and tap a shortcut among those in the list. Types of shortcuts may increase as you install applications on ADR8995.

### SHORTCUTS LIST














Icon	Description	Icon	Description
	Applications		Directions & Navigation
	Bookmark		Gmail label
	Contact		Latitude
	Direct dial		Music Playlist
	Direct message		Settings

① **Note** You can also make a shortcut of an application by pressing and holding it in the applications menu.














## ADDING A WIDGET

- 1 Press and hold on the empty space of the screen or press  in the idle mode and tap **Widget**.
- 2 Tap **Pantech Widgets** or **Android Widgets**. Types of widgets may increase as you install applications on ADR8995. Refer to the relevant chapter for more information about widgets.
  - Press and hold the widget to add, and select a style if you have tapped **Pantech Widgets**.
  - Select and tap the widget to add if you have tapped **Android Widgets**.

## PANTECH WIDGETS LIST


Icon	Description	Icon	Description
	Task Manager		Contacts
	Memo		Calendar
	Event Notification		Bookmark
	Weather		Clock
	Music		Email
	Social Net		Web Space
	Integrated Clock		

## ANDROID WIDGETS LIST

Icon	Description	Icon	Description
	Calendar		Picture frame
	Data Usage		Power Control
	Google Search		Rate Places
	Home screen tips		Slacker Radio
	Latitude		TuneWiki
	Market		YouTube
	News & Weather		

① **Note** Space necessary for widgets may differ depending on widgets: secure enough space before adding widgets on the home screen.

## CREATING WALLPAPER FROM GALLERY

- 1 Press and hold on the empty space of the screen, or press  in the idle mode and tap **Wallpaper**.
- 2 Tap **Wallpapers** > **Gallery**.
- 3 Select and tap a picture and adjust the size.
- 4 Tap **Gallery**, **Live wallpapers** or **Wallpapers**:
  - Select and tap a picture from Gallery, adjust the size and tap **Save** if you have tapped **Gallery**.
  - Select and tap live wallpaper and tap **Set wallpaper** if you have tapped **Live wallpapers**. You can tap **Settings** and adjust settings for your preference.
  - Select and tap wallpaper and tap **Set wallpaper** if you have tapped **Wallpapers**.

## ADDING A FOLDER

 
- 1 Press and hold on the empty space of the home screen or press **■** in the idle mode and tap **Add**.
- 2 Tap **Folders**.
- 3 Select and tap a folder type. Once a folder is created on the home screen, you can add items into it by pressing and holding them and dragging them into the folder.

## USING EVENT NOTIFICATION WIDGET

- 1 Press and hold on the empty space on the screen, or press **■** in the idle mode and tap **Widget**.
- 2 Tap **Pantech Widgets**.
- 3 Press and hold Event Notification on the bottom of the screen and place it on the screen where you want to.
- 4 Tap an icon for recent calls, messages or emails, and take necessary steps.

## DELETING ITEMS FROM HOME SCREEN

- 1 Press and hold a shortcut, widget or folder you want to delete.
- 2 Drag it to the trash box icon on the bottom.

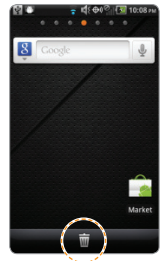

## CHANGING HOME SCREEN MODE

- 1 Press **■** in the idle mode and tap **Mode**.
- 2 Flick the screen, select and tap a mode, and tap **Save**. If you want to create your own mode, tap **User** on the top of the screen and take necessary steps.



## EDITING APPLICATIONS SCREEN

- 1 Tap **⊕** in the idle mode.
- 2 Press **■** and tap **Edit**.
- 3 Drag an application that you want to change the location to your preferred space. You can also change applications on the launcher bar. If you want to hide an application, drag it to the icon on the left bottom of the screen.
- 4 Press **Save** if you are done with editing.

## SEARCHING FOR APPLICATIONS

- 1 Tap **⊕** in the idle mode.
- 2 Press **■** and tap **Search** to find an application.
- 3 Type the name of the application. You can find the application easily.

## SETTING LANGUAGE OPTION

Before using applications, select the language that you want to use for ADR8995. To set the language option:

- 1** Tap **Settings** > **Language & keyboard** > **Select language**.
- 2** Select and tap a language that you want to use.

# 2

## CALLS AND MESSAGES

This chapter provides important information about using key functions of ADR8995 including:





CALLING  
SKYPE CALL  
MESSAGING  
CONTACTS  
Google TALK



# CALLS AND MESSAGES

 
## CALLING

### MAKING A CALL


- 1 Tap .
- 2 Enter the area code and the phone number. Tap  to delete the previous number. Press and hold  to delete the whole number.
- 3 Tap .

### ANSWERING AND ENDING A CALL

- 1 Tap **Accept** to the right to answer the call.
- 2 Tap **Quiet** if you want ADR8995 to make no sound or vibration from the incoming call.
- 3 Tap **End** to end the call during the conversation. After ending a call, you can see its summary shortly.

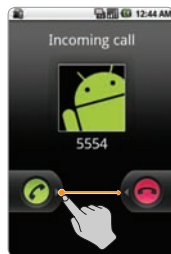

### MAKING A CALL USING SPEED DIALING










- 1 Tap .
- 2 Press and hold a number to which you have assigned a telephone number. Refer to page 59 for more information.








## ADJUSTING VOLUME

- 1 During a call, press the volume key + to increase the speaker volume. Press the volume key - to decrease the volume.
- 2 In the idle mode, press the volume key + to increase the ringer volume. Press the volume key - to decrease the volume. If you want ADR8995 to make vibrations when there is an incoming call or message, press the volume key—all the way down until the mode changes.

## CALLS AND MESSAGES

### ICONS FOR CALLING


Icon	Description
	The speakerphone is active.
	Strength of signal: The bar becomes bigger when the signal is strong.
	There is no signal.
	A call is under way.
	There is a call on hold.
	There is a missed call.
	TTY is active.
	
	

Icon	Description
	
	Strength of EVDO signal: The bar becomes bigger when the signal is strong.
	Strength of CDMA signal: The bar becomes bigger when the signal is strong.
	The roaming service is under way.
	New voicemail has arrived
	The other party cannot listen to you during a call.
	

## SWAPPING A CALL FOR A MULTIPARTY CALL


- 1 Tap **Add call** during a call. The first party will hear a waiting sound.
- 2 Tap **Swap** to change the calling party.
- 3 Tap **End** to finish the call.

## MAKING A CONFERENCE CALL

- 1 Tap .
- 2 Enter the area code and the phone number.
- 3 Tap **Add call** to invite a third party to the call.
- 4 Tap **Merge calls** if you want to allow all the parties to participate in the conversation.




## ADDING A CALL

- 1 Tap **Add call** to make a call to another party during a call with a party.
- 2 Enter the telephone number and tap .

 **Note** The current call is held when you make a call with another party.


## MAKING A CALL FROM THE ADDRESS BOOK

- 1 Tap .
- 2 Tap **Contacts**, select and tap a contact to call.
- 3 Tap **Call home**, **Call mobile** or **Call work** according to your preferences.

## MAKING AN EMERGENCY CALL



- 1 Tap **Emergency call** when the SIM card is not inserted in ADR8995.
- 2 Tap **911** or other numbers for emergency calls.

## CHECKING CALL HISTORY



- 1 Tap .
- 2 Tap **Call log**.
- 3 Tap the search box, and tap **All**, **Missed Calls**, **Received Voice Calls**, **Dialed Voice Calls**, **Messages** or **Call Ranking**.
  - Tap **All** if you want to see the whole calling history.
  - Tap **Missed Calls** if you want to see the list of calls that you have missed.
  - Tap **Received Voice Calls** if you want to see the list of calls that you have received.
  - Tap **Dialed Voice Calls** if you want to see the list of contacts that you had made calls.
  - Tap **Messages** if you want to see the list of messages that you have exchanged.
  - Tap **Call Ranking** if you want to see the list of call history. Top 10 contacts appear that you have communicated in the order of frequencies.

 **Note** You can also check if there is a missed call by dragging the notification bar down. Tap the contact if you want to make a call back to the number.

## RECEIVING VISUAL VOICE MAIL


- 1 Tap .
- 2 Tap **Call log**.
- 3 Tap **Play** in a call with  in the list if you want to see the visual voice mail.
  - Tap **\*86** in the keypad if you have not subscribed to the monthly Visual Voice Mail service.
  - If you have subscribed to the service, you can see the visual voice mail. Tap **Call Back** if you want to make a call back to the contact.
- 4 Tap the contact if you want to see the details of the contact and tap **Play** if you want to see the visual voice mail.

## SENDING VISUAL VOICE MAIL


- 1 Tap .
- 2 Tap **Call log**.
- 3 Press and hold the contact with the visual voice mail and tap **Send Voicemail**.
- 4 Tap . The voice mail starts to be recorded.
- 5 Tap **Mark as Urgent** or **Mark as Private**, and tap **Send**.

 **Note** If you have not subscribed to the voice mail service, tap **Call Voicemail** and follow the next steps.

## SAVING A NEW CONTACT

- 1 Tap .
- 2 Enter a telephone number and tap **Save** in the middle of the screen. If there is contact for the number, it appears below.
- 3 Tap **Create new contact**.
- 4 Tap **Phone** or your Google account. If you tap **Phone**, the contact will be saved in the internal memory of ADR8995. If you tap your Google account, the contact will be saved in your Google account.
- 5 Enter necessary information of the contact and tap **Save**.

## ADDING NEW INFORMATION TO EXISTING CONTACT

- 1 Tap .
- 2 Enter a telephone number and tap **Save** in the middle of the screen.
- 3 Tap **Select a contact**, and select and tap a contact to add information.
- 4 Tap the number or **Add more field**:
  - Tap the number that appears on the top of the list if you want to replace the number with one that you have entered.
  - Tap **Add more field** if you want to add the number that you have entered, in an additional field.
- 5 Tap **Save** if you finish editing contact.

## TALKING THROUGH THE SPEAKER

- 1 Tap **Speaker** during a call. A red bar appears under Speaker when the function is on. The speaker does not work when a headset is connected to ADR8995.
- 2 Tap **Speaker** if you want to stop using the function.

① **Note** If the proximity sensor is working, speakerphone would run automatically when you take your face off ADR8995 for a few seconds.

## TALKING WITH Bluetooth Technology


- 1 Tap **Bluetooth** during a call. A red bar appears under Bluetooth when the function is on.
- 2 Tap **Bluetooth** if you want to stop using the function.

① **Note** Refer to the relevant manual of the Bluetooth headset for more information.

## MUTING THE PHONE

- 1 Tap **Mute** during a call. A red bar appears under Mute when the function is on.
- 2 Tap **Mute** if you want to turn off the function.


## ADDING SHORTCUTS TO FAVORIATE CONTACTS

- 1 Press and hold on the empty space on the home screen or press  in the idle mode and tap **Shortcuts**.
- 2 Select and tap your favorite contact that you want to add to on the home screen.

## SKYPE CALL

### MAKING A CALL USING SKPYE

Using Skype Call, make a call with no charge at all for domestic calls or in a relatively low price for international calls. To make a call through Skype:

- 1 Tap .
- 2 Enter a telephone number.
- 3 Press and hold **Call** and tap **Skype Call**.





Making a call




Receiving a call

① **Note** The call can end during the conversation when you move out of the Wi-Fi zone depending on the call settings. If you have set up the Wi-Fi network to convert to the 3G network automatically, you can continue the conversation.

## MESSAGING


### SENDING A NEW MESSAGE

- 1 Tap **Messaging** from the applications menu.
- 2 Tap **New message**.
- 3 Enter the contact of the recipient or tap  select and tap a contact.
- 4 Enter a message.

**5 Tap Send.**




 
 

① **Note** A failed message remains in the list. If you want to delete it, press and hold the message and tap **Delete**.


**ENTERING A MESSAGE USING VOICE**

- 1** Tap **Messaging** from the applications menu.
- 2** Tap **New Message** and tap in the body of the text.
- 3** Tap  in the virtual keyboard and speak your message.
- 4** Tap **Send**.


**ENTERING A TEXT USING THE KEYBOARD**

Use different keyboard settings for different characters. Swype is the method for entering text by default.

 
- 1** Tap **Messaging** from the applications menu.
- 2** Tap **New message** and tap in the body of the text.
- 3** Tap  to select and enter letters for the message.
  - When  is selected, the next letter entered is capitalized.
  - When  is selected, all letters entered are capitalized.
- 4** Tap  if you want to enter many numbers or/and common symbols. Tap  >  if you want to enter many complicated symbols in a row.

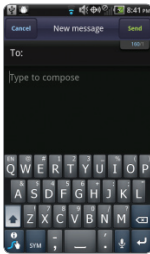

Capital letters

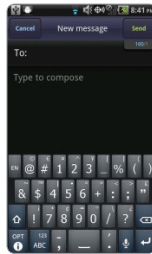 

Numbers and common symbols

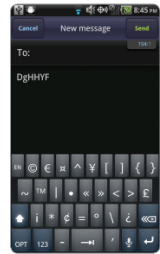 

Complicated symbols

- ① **Note** If you want to enter a number or/and common symbol in between common letters for a message:
- Press and hold a key for one second and you can enter the secondary character on the right of each key. For example, press and hold **g** for one second and you can enter the number "6".
  - Press and hold a key for two seconds and you can enter the additional characters assigned for each key. For example, press and hold **g** for two seconds and you can also enter "<<" in addition to g and 6.

## CREATING A MESSAGE USING SWYPE

- 1 Tap **Messaging** from the applications menu.
- 2 Tap **New message** and tap on the empty space for the message.
- 3 Drag your finger on the screen to enter the message. If you fail to drag your finger in the right way, alternative words appear. Select and tap an alternative if available.

## ABOUT SWYPE

Swype is a fast and easy way to enter a message. For example, drag your finger on the screen keyboard as shown and input “Quick” rather than tapping all the alphabets.




Entering “Quick”






## CHANGING INPUT METHOD TO THE ANDROID KEYBOARD

- 1 Press and hold on the screen while you enter a message.
- 2 Tap **Input method** > **Android keyboard**. Now you can create a message by tapping on the screen keyboard.





## SETTING SWYPE OPTIONS

- 1 Tap  > **Options**.
- 2 Tap **Language** if you want to change the language for Swype.
- 3 Tap **Word prediction** if you want to see predicted words while you enter a word.
- 4 Tap **Enable tip indicator** if you want to see the flashing indicator for quick help.


## ICONS FOR MESSAGES


Icon	Description
	There is a message that is not sent.
	There is an incoming message pushed from the email server.
	
	
	A new message with a picture has arrived.
	A new email has arrived.

## DELETING MESSAGES



- 1 Tap **Messaging** from the applications menu.
- 2 Press  and tap **Delete**.
- 3 Tap  next to the message(s) to delete. If you want to delete all  messages, press  and tap **Select All**.
- 4 Tap **Done** > **OK**.

## USING A QUICK TEXT


- 1 Tap **Messaging** from the applications menu.
- 2 Press  and tap **Quick Text**.
- 3 Select and tap a text.

- 4 Press  and tap **Send message**.
- 5 Enter the contact of the recipient.
- 6 Tap **Send**.

## ADDING A QUICK TEXT

- 1 Tap **Messaging** from the applications menu.
- 2 Press  and tap **Quick Text**.
- 3 Press  and tap **Add New**.
- 4 Enter a quick text.
- 5 Tap **Save**.

## ATTACHING PICTURES

- 1 Tap **Messaging** from the applications menu.
- 2 Tap **New message**.
- 3 Enter the contact of the recipient.
- 4 Type a message on the empty space.
- 5 Press  and tap **Attach > Picture**.
- 6 Select and tap a picture from **Take a picture**, **Gallery** or **Handy Memo (Drawing)**.
- 7 Take a picture to attach if you have selected **Take a picture**. Or select and tap a picture to attach.
- 8 Tap **Send**.

## SETTING STORAGE LIMITS

- 1 Tap **Messaging** from the applications menu.
- 2 Press **⋮** and tap **Settings** > **Delete old messages** if you want old messages to be deleted when the storage limit is reached.
- 3 Tap **Text message limit**, set the maximum number of messages and tap **Set**.
- 4 Tap **Multimedia message limit**, set the maximum number of messages and tap **Set**. Make sure to delete old messages before setting the maximum number of messages.

① **Note** Make sure to secure enough internal memory space: you might experience difficulties receiving or sending messages when the memory space is low.


## SETTING SIGNATURE

- 1 Tap **Messaging** from the applications menu.
- 2 Press **⋮** and tap **Settings**.
- 3 Tap **Signature auto-append** if you want to add signature automatically, type your signature and tap **Save**.

## CHECKING USED SPACE

- 1 Tap **Messaging** from the applications menu.
- 2 Press **⋮** and tap **Used space**.

## SEARCHING FOR MESSAGES

- 1 Tap **Messaging** from the applications menu.
- 2 Press  and tap **More > Search**.
- 3 Enter a word to search messages.


## VIEWING RECEIVED MESSAGES

- 1 Tap **Messaging > Conversation**.
- 2 Select and tap a message that you want to read. You can also view received messages using Event Log.

## REPLYING A RECEIVED MESSAGE


- 1 Tap **Messaging > Conversation**.
- 2 Select a message to reply.
- 3 Enter a message and tap **Send**.

## SETTING THE TEXT MESSAGE


- 1 Tap **Messaging** from the applications menu.
- 2 Press  and tap **Settings**.
- 3 Tap **Delivery reports** if you want to receive a report from the recipient that your message has been delivered.



## SETTING THE MULTIMEDIA MESSAGE

- 1 Tap **Messaging** from the applications menu.
- 2 Press  and tap **Settings**.
- 3 Tap **Delivery reports** if you want to receive a report from the recipient that your message has been delivered.
- 4 Tap **Auto-retrieve** if you want to take back messages automatically.
- 5 Tap **Roaming auto-retrieve** if you want to take back messages automatically while roaming. The function will not run if the Auto-retrieve function is not operating.

## SETTING THE NOTIFICATIONS



- 1 Tap **Messaging** from the applications menu.
- 2 Press  and tap **Settings**.
- 3 Tap **Notifications** if you want to see in the status bar when a message is delivered.
- 4 Tap **Select ringtone** and select and tap a ringtone for the message that you receive, and tap **OK**.
- 5 Tap **Vibrate** and select and tap one among **Always**, **Only when silent** and **Never**, and tap **OK**.

## CONTACTS

### VIEWING CONTACTS INFORMATION

- 1 Tap **Contacts** from the applications menu.
- 2 Select and tap a contact for more information.

## CREATING CONTACTS


- 1 Tap **Contacts** from the applications menu.
- 2 Press  and tap **New contact**.
- 3 Tap **Phone** or your Gmail account where you can save a contact. The Gmail account will not be available if you have not synchronized the account with your device.
- 4 Enter related information:
  - Tap , tap **Select photo from Gallery** or **Take photo** and take the necessary steps if you want to assign a photo for the contact.
  - Tap **Group** and assign a group for the contact if you want to include the contact in the group.
- 5 Tap **Save** if you finish entering information for the contact.

① **Note** You can create a contact by entering the telephone number first. Tap , enter a telephone number, and tap **Save** in the middle of the screen. Refer to page 47 for more information.

## CREATING GROUPS FOR CONTACTS

- 1 Tap **Contacts** from the applications menu.
- 2 Tap **Group** on the top of the screen and tap **New Group**.
- 3 Enter the group name and tap **Save**. The contacts will be also saved through Backup Assistant. If you have not subscribed to the Backup Assistant service, tap **OK** in the registration screen and take necessary steps. Refer to page 28 for more information.

## ADDING MEMBERS FOR CONTACTS GROUP


- 1 Tap **Contacts** from the applications menu.
- 2 Tap **Group** on the top of the screen.
- 3 Select and tap a group where you want to add members.
- 4 Press  and tap **Add new member**.
- 5 Tap **Select from contacts** or **New contact**:
  - Select and tap contacts that you want to add for the group if you have tapped **Select from contacts**, and tap **Done**.
  - Follow the necessary steps for creating new contacts and assign the group if you have tapped **New contact**.

## SETTING SPEED DIALS

- 1 Tap **Contacts** from the applications menu.
- 2 Tap **Speed dial** on the top of the screen.
- 3 Tap **Add** for speed dialing number from 1 to 99, and select and tap contacts for the number. The number 1 is assigned for voice mail by default.

 **Note** You cannot assign two speed dialing numbers for one telephone number.

## RESERVING CONTACTS WITH BACKUP ASSISTANT

- 1 Tap **Contacts** from the applications menu.
- 2 Press  and tap **Backup Assistant**. You can check the current status of saved contacts.

## EDITING CONTACTS

- 1 Tap **Contacts** from the applications menu.
- 2 Press and hold a contact to edit, and tap **Edit contact**.
- 3 Edit information and tap **Save**.

## DELETING CONTACTS

- 1 Tap **Contacts** from the applications menu.
- 2 Press and hold a contact to delete and tap **Delete contact**.
- 3 Tap **Yes**.


## IMPORTING/EXPORTING CONTACTS INFORMATION

- 1 Tap **Contacts** from the applications menu.
- 2 Press **⋮** and tap **More > Import/Export**.
- 3 Tap **USIM card contacts**, **Export to USIM card(Copy)**, **Export to USIM card(Move)**, **Import from SD card** or **Export to SD card**.
- 4 Tap **OK**.

## SEARCHING FOR CONTACTS INFORMATION

- 1 Tap **Contacts** from the applications menu.
- 2 Press **⋮** and tap **Search**.
- 3 Enter the name of contact. The search result appears instantly.


## SETTING DISPLAY OPTIONS

- 1 Tap **Contacts** from the applications menu.
- 2 Press  and tap **More**, and tap **Display options**.
- 3 Tap **Only contacts with phones** if you want to see only contacts with phone numbers.
- 4 Tap **Sort list by** and tap **First name** or **Last name**.
- 5 Tap **View contact names as** and tap **First name first** or **Last name first**.
- 6 Tap your Google account, select and tap the category for system group.
- 7 Tap **Done** when you are finished.


## SENDING CONTACT DETAILS

- 1 Tap **Contacts** from the applications menu.
- 2 Press and hold a contact to share and tap **Send Contacts**.
- 3 Tap **Bluetooth**, **Email**, **Gmail** or **Messaging**.


## SETTING CONTACT OPTIONS

- 1 Tap **Contacts** from the applications menu.
- 2 Press and hold a contact, and tap **Options**.
- 3 Tap **Ringtone**, select and tap a ringtone for the contact and press .
- 4 Tap **Incoming calls** if you want to send incoming calls from the contact to voicemail directly.

## MANAGING ACCOUNTS AND SYNC

- 1 Tap **Contacts** from the applications menu.
- 2 Press  and tap **More > Accounts**.
- 3 Tap **Background data** to allow applications to retrieve data at any time.
- 4 Tap **Auto-sync** if you want to sync data automatically.
- 5 Tap **Add account** if you want to add an account and follow the next steps for creating accounts.

## ADDING PEOPLE WIDGET

- 1 Press and hold on the empty space of the screen, or press  in the idle mode and tap **Widgets**.
- 2 Tap **Pantech Widgets**.
- 3 Press and hold **Contacts** on the bottom of the screen and place it on the home screen where you want to.
- 4 Select a style.
- 5 Tap the widget and assign a contact for the widget.

 **Note** You cannot add two People widgets on the same home screen at the same time.

## Google TALK

### SETTING YOUR STATUS


- 1 Tap **Talk** from the applications menu.
- 2 Tap on the top of the screen where your Gmail address is displayed.

**3** Tap the status bar on the top of the screen.

**4** Tap **Available**, **Busy** or **Invisible**.

① **Note** The status message will not be displayed if your status is Invisible.

**5** Enter the status message.


**6** Tap  if you want to insert a photo.

**7** Select and tap a picture from your gallery, adjust the size of the picture and tap **Save**.

**8** Tap **Done**. Your status is displayed at the top of the screen.

## INVITING A FRIEND TO CHAT

**1** Tap **Talk** from the applications menu.

**2** Press  and tap **Add friend**.

**3** Enter the user name of the friend you want to add.

**4** Tap **Send invitation**.

## CHATTING WITH FRIENDS

**1** Tap **Talk** from the applications menu.

**2** Select and tap one of friends that appear on the screen.


**3** Enter a message and tap **Send**.

**4** Press  and tap **Add to chat** if you want another friend to join the conversation.


**5** Press  and tap **More > Insert smiley**, and select and tap one.

**6** Press  and tap **End chat** if you want to stop chatting with your friend.

## MANAGING YOUR FRIENDS LIST

- 1 Tap **Talk** from the applications menu.
- 2 Press  and tap **More**.
- 3 Tap **Invites**. You can check pending invitations.

## SETTING THE TALK ENVIRONMENT

- 1 Tap **Talk** from the applications menu.
- 2 Press  and tap **Settings**.
- 3 Tap **Automatically sign in** if you want to remain signed-in for Talk.
- 4 Tap **Mobile indicator** if you want your friends to see that you are on a mobile device.
- 5 Tap **IM notifications** if you want to see notifications in the status bar when a new IM arrives.



# 3

## PERSONAL INFORMATION

This chapter provides important information  
about using ADR8995 including:

CALENDAR


# PERSONAL INFORMATION

## CALENDAR

### ADDING AN ACCOUNT

You should have an account to use the calendar. For details on Google account, refer to the page 26.


### CREATING AN EVENT

- 1 Tap **Calendar**.
- 2 Tap a day in the calendar.
- 3 Double-tap an hour that you want to add an event.
- 4 Enter necessary information. Press  and tap **Show extra options** if you need more options.
- 5 Tap **Done**.



 **Note** You can also create an event by pressing  and tapping **More > New event**.

### CHECKING EVENTS

- 1 Tap **Calendar**.
- 2 Tap a day that you want to view events for the day. A blue dot indicates an event for a day.
- 3 Press  and tap **Day** or **Week** if you want to see events for a daily or weekly basis. Monthly view is displayed by default.

- 4 Tap **Today** if you want to events for today.
- 5 Tap **Agenda** if you want to see events in the text mode.



Monthly view



Agenda

 
## CALENDAR ICONS

Icon	Description	Icon	Description
	Today		Focus
	Day with events		Focus with events

① **Note** Monthly view is displayed as default.

## EDITING EVENTS

- 1 Tap **Calendar**.
- 2 Tap the day that you want to edit events.
- 3 Tap the event that you want to edit.
- 4 Press **⋮** and tap **Edit event**.
- 5 Edit the event and tap **Done**.

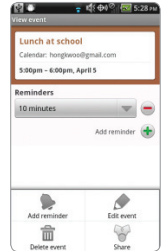

Adding an event

## SETTING THE REMINDER

- 1 Tap **Calendar**.
- 2 Press **⋮** and tap **More > Settings**.
- 3 Tap **Set alerts & notifications** and select an option if you want to change the notification method.
- 4 Tap **Select ringtone** if you want to select a specific ringtone for the calendar.

## ADDING CALENDAR WIDGET

- 1 Press and hold on the empty space on the home screen, press **⋮** in the idle mode and tap **Widgets**.
- 2 Tap **Pantech Widgets**.
- 3 Press and hold **Calendar** on the bottom of the screen and place it on the home screen where you want to.
- 4 Select a style for the day, week or month. You can also add the calendar widget provided by Google.

# 4

## COMMUNICATION

This chapter provides important information  
about using ADR8995 including:

EMAIL

GMAIL

TWITTER

FACEBOOK

SOCIAL NET WIDGET

S-BOARD

# COMMUNICATION

## EMAIL

 
### SETTING UP AN EMAIL ACCOUNT

- 1 Tap **Email** from the applications menu.
- 2 Enter your email address and password for the first use.
- 3 Tap **Manual setup** or **Next**. If you tap **Manual setup**, tap **POP3**, **IMAP** or **Exchange**, set necessary options and tap **Next**.
- 4 Give a name for the account.
- 5 Give your name that will be displayed on the outgoing messages.
- 6 Tap **Done**.

① **Note** The screen varies depending on the email service provider.

### ADDING A NEW EMAIL ACCOUNT


- 1 Tap **Email** from the applications menu.
- 2 Tap your account on the top of the inbox screen and tap **Add account**.
- 3 Select and tap an email service provider.
- 4 Follow the steps to set up an email account.

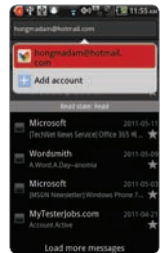

## VIEWING INCOMING MESSAGES

- 1 Tap **Email** from the applications menu.
- 2 Select and tap an account, and tap a message you want to check.


## SENDING AN EMAIL

- 1 Tap **Email** from the applications menu.
- 2 Press  and tap **Compose**.

① **Note** If you have added more than two email accounts, the first one is designated as the primary account for sending an email.

- 3 Enter the recipient's email address, or tap and select and tap the contact.
- 4 Enter the subject of the email and the message.
- 5 Tap **Send**.

## ADDING ATTACHMENTS TO AN EMAIL

- 1 Press  in the composed message and tap **Attach**.
- 2 Tap **Document**, **Picture**, **Video**, **Capture picture**, **Capture Video** or **Record audio** and take necessary steps.
- 3 Tap **Send** when you are finished.

## DESIGNATING EMAILS AS FAVORITES

- 1 Tap **Email** from the applications menu.
- 2 In the Inbox screen, select the check box before the email(s) and tap **Add star**. A red star icon appears next to the message.

## MARKING EMAILS AS READ/UNREAD

- 1 Tap **Email** from the applications menu.
- 2 In the Inbox screen:
  - If you want to mark an email as read without checking it, select the check box in front of the email and tap **Mark read**. Tap **Mark unread** if you want to make the email as unread.
  - If you want to check an email first, tap the email, press **⌘** and tap **Mark as unread**.

## REMOVING THE EMAIL ACCOUNT


- 1 Tap **Email** from the applications menu.
- 2 Press and hold the account that you want to remove.
- 3 Tap **Remove account** > **OK**.

## EMAIL SETTINGS

- 1 Tap **Email** from the applications menu.
- 2 Tap an account.
- 3 Press **⌘** and tap **More** > **Account settings**.
- 4 Tap **Inbox check frequency** and, set the time interval to check email.
- 5 Tap **Default account** if you want to set the email account as the basic account by default.



## ADDING EMAIL WIDGET

- 1 Press and hold on the empty space on the home screen, or press  in the idle mode and tap **Widget**.
- 2 Tap **Pantech Widgets**.
- 3 Press and hold **Email** on the bottom of the screen and place it on the home screen where you want to.
- 4 Select a style.

 
## GMAIL

### ADDING A GMAIL ACCOUNT

- 1 Tap **Gmail** from the applications menu.
- 2 Tap **Next**.
- 3 Tap **Sign in** if you have a Gmail account.
- 4 Enter your user name and password.
- 5 Tap **Sign in**.

## READING INCOMING MESSAGES

- 1 Tap **Gmail** from the applications menu.
- 2 Select and tap the message to read.
- 3 Tap **Archive** if you want to preserve the message in a separate folder.
- 4 Tap **Delete** if you want to delete the message.

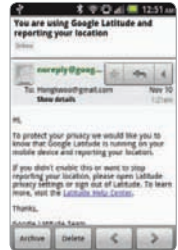

① **Note** If you have added more than two email accounts, the first one is designated as the primary account for sending an email.

## SENDING AN EMAIL THROUGH GMAIL

- 1 Tap **Gmail** from the applications menu.
- 2 Press **⌘** and tap **Compose**.
- 3 Enter the recipient's email address, the subject and the message.
- 4 Tap **📧** or press **⌘** and tap **Send**.

## DESIGNATING EMAILS AS SPAM

- 1 Tap **Gmail** from the applications menu.
- 2 Select and tap an email.
- 3 Press **⌘** and tap **More**.
- 4 Tap **Report spam** if you want to report the email and put it from your inbox.

## SETTING GMAIL OPTIONS

- 1 Tap **Gmail** from the applications menu.
- 2 Press **☰** and tap **More > Settings**.
- 3 Tap **Confirm actions**, tap **Archive**, **Delete** and/or **Send** to see the confirmation message for each action, and tap **OK**.
- 4 Tap **Reply all** if you want to make it default to reply all to incoming messages.
- 5 Tap **Email notifications** if you want to see if a new mail arrives. The check box is selected by default.




## TWITTER

### JOINING IN TWITTER

- 1 Tap **Twitter** from the applications menu.
- 2 Tap **Sign In**, enter Username or email address and password, and tap **Sign In** again. If you do not have an account, tap **Sign Up** and follow the necessary steps.





## POSTING TWEET

- 1 Tap **Twitter** from the applications menu.
- 2 Tap  on the top of the screen.
- 3 Enter a message in the box. You can enter up to 140 words for a message.
- 4 Tap , and select and tap a picture from your gallery if you want to attach a picture for the message. You can take a photo right away by tapping  and running the camera.
- 5 Tap **Tweet**.





Posting Tweet


## SENDING MESSAGES

- 1 Tap **Twitter** from the applications menu.
- 2 Tap  on the top of the screen.
- 3 Enter a message in the box.
- 4 Tap .
- 5 Tap the check box next to the recipient you want to send to and tap **OK**.
- 6 Tap **Tweet**.


## SEARCHING TWEETS OR PEOPLE

- 1 Tap **Twitter** from the applications menu.
- 2 Tap .
- 3 Type the keyword in the box and tap . You can also tap one of keywords that appear below the box.

## ADJUSTING SETTINGS FOR NOTIFICATIONS

- 1 Tap **Twitter** from the applications menu.
- 2 Press  and tap **Settings**.
- 3 Tap **Notifications** to make the function active. It is selected by default.
- 4 Tap **Tweets** if you want to know when there is a new Tweet for your account.
- 5 Tap **Vibrate** if you want Crossover to make vibrations when there is an incoming notification.
- 6 Tap **Notification ringtone** if you want to assign a ringtone for the notification. Then, select and tap one in the list and tap **OK**.

## ADJUSTING SETTINGS FOR SYNC

- 1 Tap **Twitter** from the applications menu.
- 2 Press  and tap **Settings**.
- 3 Tap **Sync Contacts > Sync all > Done** if you want to synchronize data about the people you are following to Contacts of Crossover.
- 4 Tap **Refresh interval**, select and tap the time for refreshing Tweets.

## FACEBOOK

### ACCESSING FACEBOOK

- 1 Tap **Facebook** from the applications menu.
- 2 Tap **I agree** for the end user license agreement screen.
- 3 Enter your email address and password.





- 4 Tap **Login**. If you don't have the account, tap **Sign up** and follow the necessary steps.
- 5 Select and tap an option for syncing and tap **Finish** to complete the process.

 
## POSTING MESSAGES

- 1 Tap **Facebook** from the applications menu.
- 2 Enter a message in the box on the top and tap **Share** if you want to display a new status to your friends.


🕒 **Note** If your friend has posted a new message, it appears first. Then, press , tap  and post a message.

## SENDING MESSAGES

- 1 Tap **Facebook** from the applications menu.
- 2 Tap **Messages**. If there are new feeds, press  first.
- 3 Press  and tap **Compose**. Or you can tap  to post a message.
- 4 Enter the recipient's name, or tap , select and tap the check box next to the recipient you want and tap **Done**.
- 5 Enter the subject and contents of the message.
- 6 Tap **Send**.

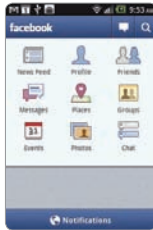

Main screen

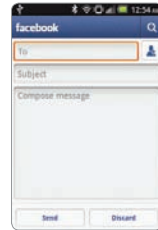 

Posting a message


## ADJUSTING SETTINGS

- 1 Tap **Facebook** from the applications menu.
- 2 Press **⌘** and tap **Settings**. If there are new feeds, press **↶** first.
- 3 Tap **Refresh interval** and set the frequency for refreshing.
- 4 Tap **Messages** if you want to see when a new message arrives. The check box is selected by default.
- 5 Tap **Friend requests** if you want to see when a friend wants to add you on Facebook. The check box is selected by default.

## SOCIAL NET WIDGET

Use the Social Networking Services easily with the Social Net widget. Check updates in Twitter, MySpace and/or Facebook at a glance and post your messages.

## ADDING THE SOCIAL NET WIDGET


- 1 Press  in the idle mode and tap **Widget**.
- 2 Tap **Pantech Widgets > Social Net**.
- 3 Select and tap a style.
- 4 Tap the widget on the screen and log in to Twitter, Facebook or MySpace. When updated, the relevant icon changes color.



## S-BOARD



Form a group with your friends through S-Board and share contents and logs that you have created using ADR8995.

## FORMING A GROUP



- 1 Tap **S-Board** from the applications menu. The landscape mode is only available.
- 2 Tap **Create New**.
- 3 Tap **Add Photo**, select and tap a picture from the Gallery.
- 4 Enter the name of the group.
- 5 Enter the name or phone number of a member that you want to add to the group. You can also add by tapping , selecting and tapping a contact, and tapping **Done**.
- 6 Tap **Next** on the top of the screen.
- 7 Enter a message in the empty space and tap **Done**.
- 8 Tap **Send**.




## EDITING A GROUP

- 1 Tap **S-Board** from the applications menu.
- 2 Press  and tap **Edit group**.
- 3 Tap **Photo**, select and tap a picture from the Gallery.
- 4 Change the name of the group.
- 5 Tap  if you want to set the group as your favorite.
- 6 Tap **Done**.

## ADDING MEMBERS TO A GROUP


- 1 Tap **S-Board** from the applications menu.
- 2 Press  and tap **Add members**.
- 3 Enter the name or phone number of a member to add to the group. You can also add by tapping  selecting and tapping a contact, and tapping **Done**.
- 4 Tap **Next** on the top of the screen.
- 5 Enter a message in the empty space and tap **Done**.
- 6 Tap **Send**.

## DELETING MEMBERS FROM A GROUP

- 1 Tap **S-Board** from the applications menu.
- 2 Press  and tap **Delete members**.
- 3 Select and tap a member you want to remove.
- 4 Tap **Next** on the top of the screen.

- 5 Enter a message in the empty space.
- 6 Tap **Send**.


## DELETING A GROUP

- 1 Tap **S-Board** from the applications menu.
- 2 Press  and tap **Delete group**.
- 3 Tap **Yes**.
- 4 Enter a message in the empty space.
- 5 Tap **Send**.

## SHARING MEDIA

- 1 Tap **S-Board** from the applications menu.
- 2 Tap **Contents** on the top left of the screen.
- 3 Tap a content icon.
- 4 Select content from a corresponding application.
- 5 Move the attached icon.
- 6 Resize the icon if it is resizable.
- 7 Tap **Share**.

## DELETING LOGS

- 1** Tap **S-Board** from the applications menu.
- 2** Tap **Logs**.
- 3** Press  and tap **Delete Logs**.
- 4** Select and tap logs you want to remove.
- 5** Tap **Done**.

# 5

## ENTERTAINMENT

This chapter provides important information  
about using ADR8995 including:

- LISTENING TO MUSIC
- USING CAMERA
- USING CAMERA AS CAMCORDER
- USING GALLERY
- ENJOYING YOUTUBE
- USING VIDEO PLAYER

 
# ENTERTAINMENT

## LISTENING TO MUSIC

Enjoy music on ADR8995 Make sure to insert a microSD card to transfer music files to ADR8995 and listen to them.





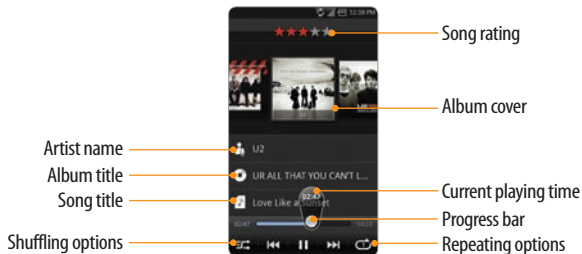

## PLAYING MUSIC

- 1 Tap **Music** from the applications menu.
- 2 Select and tap a file from the list sorted by the alphabetic order. Files that ADR8995 offers include AAC, AAC+, eAAC+, MP3, AMR- (NB/WB/WB+), MIDI, OGG, WAV, WMA (9/10) and QCELP/EVRC. Tap **Play All** if you want to listen to all files.



① **Note** Music would run in the background if you do not end the application. ▶ indicates that music is being played. Tap ▶ if you want to stop it or listen to another music file.


## NAVIGATING THE PLAYING SONG

- 1 Tap **Music** from the applications menu.
- 2 Drag  to the right or left in the bar. Numbers in  indicates the current playing time.
  - Press and hold  if you want to fast-forward the file by 2, 5, 10 or 20 seconds.
  - Press and hold  if you want to rewind the file by 2, 5, 10 or 20 seconds.
- 3 Tap  if you want to move to the next file. Tap  if you want to move to the previous file. Or flick the album cover to the right or left to change the playing music.

## ADJUSTING VOLUME

- 1 Tap **Music** from the applications menu.
- 2 Press the volume key + if you want to increase volume. Press the volume key – if you want to decrease volume. As you adjust volume, the Media Volume on the screen changes its color.

## CHECKING SONGS' INFORMATION

- 1 Tap **Music** from the applications menu.
- 2 Press and hold the song that you want to see the related information.  in front of a file indicates that it is being played.
- 3 Tap **Properties** and scroll up or down to view its information.

① **Note** If you want to search for related information while a song is playing, press and hold the artist name, album title or song, and tap **Amazon MP3**, **Brower**, **YouTube** or **Music**, and take necessary actions.


## SETTING MUSIC FILE AS RINGTONE

- 1 Tap **Music** from the applications menu.
- 2 Press and hold the song that you want to set as ringtone of ADR8995.
- 3 Tap **Set as ringtone**.

## ADDING A SONG TO A PLAYLIST


- 1 Tap **Music** from the applications menu.
- 2 Press and hold the song that you want to add to a playlist.
- 3 Tap **Add to playlist**.

## CREATING A PLAYLIST











- 1 Tap **Music** from the applications menu.
- 2 Tap **Song** in the top of the screen and tap **Playlist**.
- 3 Press  and tap **New Playlist**.
- 4 Enter the name of the playlist and tap **OK**.
- 5 Tap the check box next to the song(s) that you want to add to the playlist and tap **Add**.

## MANAGING PLAYLISTS

- 1 Tap **Music** from the applications menu.
- 2 Tap **Song** in the top of the screen and tap **Playlist**.

- 3** Press and hold a playlist that you want to manage.
- If you want to listen to all songs of the playlist, tap **Play all**.
  - If you want to delete the playlist, tap **Delete**.
  - If you want to add tracks to the list, tap **Add tracks**, select songs and tap **Add**.
  - If you want to remove tracks from the list, tap **Remove tracks**, tap  next to the song to remove and tap **Done**.
  - If you want to create a new name for the playlist, tap **Rename**, enter the new name and tap **OK**.

## MUSIC PLAYER ICONS

Icon	Description
	Play: Plays a file
	Pause: Pauses the song
	Fast-forward: Fast-forwards the song (press and hold) Next file: Moves to the next file (tap)
	Rewind: Rewinds the song (press and hold) Previous file: Moves to the previous file (tap)
	Shuffle: Shuffles songs (green); Shuffle is off (white)
	Repeat is off
	Repeat: Repeats all songs
	Repeats current song
	Playing songs' list: Shows the list of files that are being played
	Rate: Rates the file
	Current time: Shows the current playing time






## SORTING MUSIC FILES BY TYPE

- 1 Tap **Music** from the applications menu.
- 2 Tap **Song** on the top of the screen, and select and tap **Song, Album, Artist, Genre, Playlist, Folder, Rating, Mood** or **Most Played**. A list of music files for the type appears.






## LISTENING TO MUSIC FILES BY MOOD

- 1 Tap **Music** from the applications menu.
- 2 Tap **Song** on the top of the screen and tap **Mood**. Songs are automatically sorted by the metadata value of each file. Tap **Play All** if you want to listen to all music files.

## DELETING MUSIC FILES

- 1 Tap **Music** from the applications menu.
- 2 Press  and tap **Delete**.
- 3 Tap  next to the song to delete. If you want to delete all music files, press  and tap **Select All**.
- 4 Tap **Done**. Selected files will be deleted from ADR8995.

## RATING MUSIC FILES

- 1 Tap **Music** from the applications menu.
- 2 Select and tap a file to rate.
- 3 Tap      while the file is playing and rate from one to five stars.

## SHARING MUSIC FILES

- 1 Tap **Music** from the applications menu.
- 2 Press and hold a music file to share with your friends, and tap **Send**.
- 3 Tap **Bluetooth, Email, Gmail, Messaging** or **V CAST Media Manager** and follow necessary steps.

## MUSIC PLAYER SETTINGS

- 1 Tap **Music** from the applications menu.
- 2 Press **⌘** and tap **Settings**.
- 3 Tap **Shuffle** if you want to listen to music files randomly in the playlist.  
If you want to change the repeat the repetition option, tap **⏮** or **⏭** and select **Repeat All, Repeat One** or **Repeat Off**.







## ADDING MUSIC PLAYER WIDGET

 
- 1 Press and hold on the empty space on the home screen and tap **Pantech Widgets**.
- 2 Press and hold **Music** on the bottom of the screen and place it on the home screen where you want to.
- 3 Select a style.

## USING CAMERA

Take pictures and record videos with the built-in camera. They can be saved in ADR8995 and sent via multimedia messages.

### TAKING PICTURES


- 1 Tap **Camera** or press the CAMERA key. The screen changes to landscape mode by default.
- 2 Tap on the screen and select options if necessary. Option buttons disappear in a few seconds.
- 3 Focus on the object and tap  or press the CAMERA key. The picture is saved automatically.
- 4 Tap **Share**, **Set as** or **Delete** and take necessary steps. If you want to zoom in the picture, tap  and drag  to the right.
- 5 Press  if you want to take another picture.

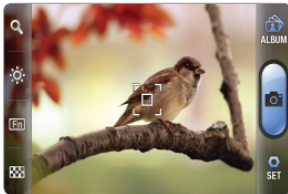





Selecting options






Focusing on the object

 **Note** The screen moves to Applications if you do not touch the screen or run the camera for two minutes.




## ZOOMING IN/OUT

- 1 Tap on the screen or press  while in the camera mode.
- 2 Tap .
- 3 Drag  to the left to zoom out, or to the right to zoom in.
- 4 Focus on the object and tap  or press the CAMERA key.



## ADJUSTING BRIGHTNESS

- 1 Tap on the screen or press  while in the camera mode.
- 2 Tap .
- 3 Drag  to the left to reduce brightness, or to the right to increase brightness.







## ADDING SPECIAL EFFECTS

- 1 Tap on the screen or press  while in the camera mode.
- 2 Tap  and select special effects.
  - For White Balance, tap **Auto**, **Outdoor**, **Cloudy**, **Fluorescent** or **Glow**.
  - For Filter, tap **Normal**, **Mono**, **Negative** or **Sepia**.
- 3 Press  or tap on the empty screen to take a picture.

## TAKING PICTURES USING TIMER




- 1 Tap on the screen or press  while in the camera mode.
- 2 Tap .
- 3 Tap **Timer** and set the timer for 3, 5 or 10 seconds. After the camera focuses on the object, a picture will be taken automatically in the set time.

## TAKING POLAROID PICTURES



- 1 Tap on the screen or press  while in the camera mode.
- 2 Tap  and tap **Polaroid**.  on the top of the screen indicates the Polaroid mode.
- 3 Focus on the object and tap  or press the CAMERA key. The taken picture starts to appear in ten seconds. Tap on the screen or shake ADR8995 if you want to see the picture quickly.
- 4 Tap  if you want to erase some part of the picture. Or tap  if you want to draw a writing on the picture.
- 5 Tap **Done**.





## TAKING MULTI-SHOT

- 1 Tap on the screen or press  while in the camera mode.
- 2 Tap  and tap **Multi Shot**.
- 3 Focus on the object and tap  or press the CAMERA key. The camera will take four photos (nine for 640x480) in a row.


## TAKING DIVISION SHOT

- 1 Tap on the screen or press  while in the camera mode.
- 2 Tap  and tap **Division Shot**.
- 3 Select and tap **Auto 4 cut** or **Auto 9 cut**, or **Split 2 cut**, **Split 4 cut** or **Split 6 cut**.


## USING FRONT/BACK CAMERA

- 1 Tap **Camera** or press the CAMERA key. The camera placed in the back side is activated by default.
- 2 Tap . Now you can take a picture using the front camera, including yourself. Features for the front camera might differ from those of the back camera.
- 3 Tap  if you want to take a picture using the back camera.

## CHANGING RESOLUTION

- 1 Tap on the screen or press  while in the camera mode.
- 2 Tap **SET > Resolution**.
- 3 Select and tap a resolution that you want to apply to the picture. Resolution varies from 640x480 to 160x120. The maximum number of pictures that you can take will increase as you reduce the resolution for pictures.
- 4 Tap **Done**.

## CHANGING SCENE MODE

- 1 Tap on the screen or press  while in the camera mode.
- 2 Tap **SET > Scene**.
- 3 Select and tap a scene mode that you want to apply to the picture.
- 4 Tap **Done**.










## CHANGING SETTINGS

- 1 Tap on the screen or press  while in the camera mode.
- 2 Tap **SET > Settings**.


**3** To change camera settings:

- Tap **ON** or **OFF** for View after Saving. If you tap **ON**, the picture will appear after saved.
- Tap **ON** or **OFF** for Anti Shake. If you tap **ON**, you can prevent pictures from being shaken when they are taken.
- Tap **WIDE** or **CENTER** for Photometry. If you tap **WIDE**, the light will be distributed to the picture equally. If you tap **CENTER**, the light will be focused mainly on the center of the picture.
- Tap **ON** or **OFF** for GPS Receive. If you tap **ON**, geo-information will be attached to the picture.

## CAMERA MENU OPTIONS


Icon	Description
	Shutter: Takes a picture
	Function: Adds special effects: White Balance, Filter; and sets timer and focus mode
	Shot: Selects shot modes: Single Shot, Multi Shot, Polaroid, Division Shot
	Brightness: Adjusts brightness
	Zoom: Zooms the object in or out
	Album: Views saved pictures
	Setting: Changes settings: Resolution, Scene, View after Saving, Anti Shake, Photometry, GPS Receive
	Front camera: Uses the front camera
	Back camera: Uses the back camera

---


Icon	Description
	Video mode: Changes to the camcorder mode

---


## SHARING PICTURES

- 1 Tap on the screen and tap  while in the camera mode, or tap **Gallery** in the applications menu.
- 2 Press and hold a picture to share. If you want to share all pictures, tap **Select All**. You can also select a few pictures.
- 3 Tap **Share**.
- 4 Tap **Online Album**, **Picasa**, **Messaging**, **Gmail** or **Bluetooth** and take necessary steps. If you have selected more than one pictures, **YouTube**, **Picasa**, **Messaging**, **Bluetooth** and **Gmail** are available.

## SETTING A PICTURE AS WALLPAPER


- 1 Tap on the screen and tap  while in the camera mode, or tap **Gallery** in the applications menu.
- 2 Select and tap a picture to set as wallpaper.
- 3 Tap **Menu** > **More** > **Set as** > **Wallpaper**.
- 4 Adjust the size of the picture and tap **Save**.

## CROPPING A PICTURE


- 1 Tap on the screen and tap  while in the camera mode, or tap **Gallery** in the applications menu.
- 2 Select and tap a picture to crop.
- 3 Tap **Menu** > **More** > **Crop**.
- 4 Adjust the size of the picture and tap **Save**.



## ASSIGNING A PICTURE TO PHOTO SETTING





- 1 Tap on the screen and tap  while in the camera mode or tap **Gallery** in the applications menu.
- 2 Select and tap a picture to assign to a contact.
- 3 Tap **Menu** > **More** > **Set as** > **Photo setting**.
- 4 Select and tap a contact to set the picture for its icon.
- 5 Adjust the size of the picture and tap **Save**.

## DELETING PICTURES

- 1 Tap  while in the camera mode or tap **Gallery** in the applications menu.
- 2 Press and hold a picture to delete. If you want to delete all pictures, tap **Select All**. You can also select a few pictures.
- 3 Tap **Delete** > **Confirm Delete**.

## USING CAMERA AS CAMCORDER

 
### RECORDING VIDEOS

- 1 Tap **Camera** from the applications menu or press the CAMERA key. The screen changes to landscape mode by default.
- 2 Tap .
- 3 Tap on the screen and select options if necessary. Option buttons disappear in a few seconds.
- 4 Focus on the object and press . Press  if you want to cancel recording.
- 5 Tap  if you want to stop recording. The recorded video would be saved automatically.

- 6 Tap ► if you want to see the recorded video. Or tap **Share** or **Delete** and take necessary steps.
- 7 Press the CAMERA key or ⏪ if you want to record another video.



Selecting options

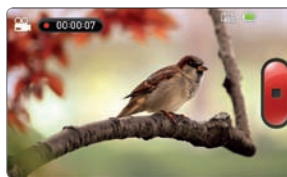

Recording a video

ⓘ **Note** The screen moves to the applications menu if you do not touch the screen or run an application for two minutes.


## ADJUSTING BRIGHTNESS

- 1 Tap on the screen while in the camcorder mode.
- 2 Tap ☀️.
- 3 Drag 🔄 to the left to reduce brightness, or to the right to increase brightness.

## ZOOMING IN/OUT

- 1 Tap on the screen while in the camcorder mode.
- 2 Tap 🔍.
- 3 Drag 🔄 to the left to zoom out, or to the right to zoom in.




## CHANGING RESOLUTION





- 1 Tap on the screen or press  while in the camcorder mode.
- 2 Tap **SET** > **Settings**.
- 3 Select and tap a resolution that you want to apply to the video. Resolution varies from 320x240 to w800x480 for the back camera, and 320x240 to 640x480 for the front camera.
- 4 Tap **Done**.

## CHANGING SETTINGS


- 1 Tap on the screen while in the camcorder mode.
- 2 Tap **SET** > **Resolution**.
- 3 To change camcorder settings:
  - Tap **ON** or **OFF** for View after Saving. If you tap **ON**, the video will appear after saved.
  - Tap **ON** or **OFF** for Voice Recording. If you tap **ON**, the video will be recorded with voice included.
  - Tap **NOR** or **MMS** for Recording Time. The recording time will increase as you reduce the resolution for videos from NOR to MMS.

 
## CAMCORDER MENU OPTIONS

Icon	Description
	Video: Records a video
	Function: Uses functions: White Balance, Filter, Timer
	Brightness: Adjusts brightness

Icon	Description
	Zoom: Zooms the object in or out
	Album: Views saved videos
	Settings: Changes settings: Resolution, View after Saving, Voice Recording, Recording Time
	Camera mode: Changes to the camera mode

## SHARING VIDEOS

- 1 Tap on the screen and tap  while in the camcorder mode, or tap **Gallery** in the applications menu.
- 2 Tap on the first video on the screen.
- 3 Press and hold a video to share. If you want to share all videos, tap **Select All**. You can also select a few videos.
- 4 Tap Share.
- 5 Tap **Online Album**, **Bluetooth**, **Messaging** or **YouTube**.

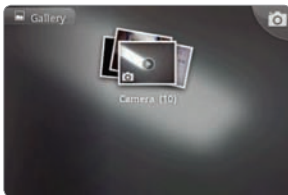

Selecting a video



Sharing a video

## DELETING VIDEOS

- 1 Tap on the screen and tap while in the camcorder mode or tap **Gallery** in the applications menu.
- 2 Tap on the first video on the screen.
- 3 Press and hold a video to delete. If you want to delete all videos, tap **Select All**. You can also select a few videos.
- 4 Tap **Delete** > **Confirm Delete**.

## USING GALLERY

### VIEWING PICTURES



- 1 Tap **Gallery** from the applications menu.
- 2 Select and tap a picture to view. If you have downloaded images from external sources, e.g. websites, pictures are saved in different folders. Then, select and tap the folder where pictures you want to see are saved.
- 3 Double-tap on the screen to zoom in the picture to the maximum. Double-tap on the screen again to zoom out the picture to the minimum.
- 4 Flick the screen to the left or right if you want to see other pictures.

 
① **Note** Functions of the gallery disappear in a few seconds. Tap on the screen if you want to see functions available.

## ADDING PICTURE FRAME

- 1 Press and hold on the empty space on the home screen and tap **Android Widgets**.
- 2 Tap **Picture frame**.
- 3 Select and tap a picture that you want to display through the widget.
- 4 Adjust the size of the picture and tap **Save**.

## VIEWING VIDEOS

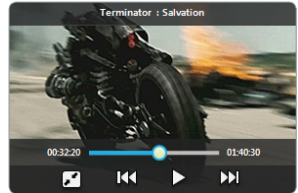

- 1 Tap **Gallery** from the applications menu.
- 2 Select a video to view. Video Player is run by default to play videos. An item with  is a video.
- 3 Tap  to play the video. The screen turns to the landscape view by default.



## VIEWING PICTURES IN A SLIDESHOW

- 1 Tap **Gallery** from the applications menu.
- 2 Select and tap the pictures that you want to view in a slideshow.
- 3 Tap **Slideshow**.
- 4 Tap on the screen if you want to stop the slideshow.
- 5 Tap on the screen and tap **Slideshow** if you want to resume the slideshow.

## ARRANGING PICTURES

- 1 Tap **Gallery** from the applications menu.
- 2 Select and tap a folder where you want to see.
- 3 Drag  to the right if you want to see pictures with information including date and location. Drag  to the left if you want to see pictures by the order of date.


## ENJOYING YOUTUBE

### WATCHING VIDEOS

- 1 Tap **YouTube** from the applications menu.
- 2 Select and tap a video to watch.
- 3 Double-tap the screen to watch the video in full screen.



### UPLOADING VIDEOS

- 1 Tap **YouTube** from the applications menu.
- 2 Press  and tap **Upload**.
- 3 Select and tap a video to upload.
- 4 Set a title for the video and tap **Upload**.

## CHECKING UPLOAD STATUS

- 1 Tap on the top of the screen and drag it down while the video is being uploaded.
- 2 Tap **Uploading**. You can see the status of the upload.
- 3 Press **⏸** and tap **Pause uploads** if you want to pause uploading. Press **▶** and tap **Resume uploads** if you want to resume upload.
- 4 Tap the video on the top of the screen and tap **Cancel** if you want to cancel the upload.

## CREATING A YOUTUBE ACCOUNT


- 1 Tap **YouTube** from the applications menu.
- 2 Press **⏸** and tap **My Channel > Add account**.
- 3 Tap **here** on the bottom of the YouTube sign-in screen.
- 4 Follow the steps to create an account.

## SHARING VIDEOS


- 1 Tap **YouTube** from the applications menu.
- 2 Select and tap a video to share.
- 3 Tap **More > Share** on the top of the screen.
- 4 Tap **Bluetooth, Email, Facebook, Gmail, Messaging or Twitter**.




## WATCHING VIDEOS BY CATEGORY

- 1 Tap **YouTube** from the applications menu.
- 2 Press  and tap **Browse**.
- 3 Select and tap a category.
- 4 Flick the screen to scroll, select and tap a video to watch.

## WATCHING VIDEOS BY UPLOAD DATE

- 1 Tap **YouTube** from the applications menu.
- 2 Press  and tap **Browse**.
- 3 Select and tap a category.
- 4 Tap **This week** on the top of the screen.
- 5 Select and tap one among time intervals.

## VIEWING MY ACCOUNT INFORMATION

- 1 Tap **YouTube** from the applications menu.
- 2 Press  and tap **My Channel**.
- 3 Tap your Google account. You can tap **Add account** and add an account for YouTube.
- 4 Tap each item for your account including Uploads, Favorites, Playlists and Subscriptions.

## YOUTUBE SETTINGS

- 1 Tap **YouTube** from the applications menu.
- 2 Press **⋮** and tap **Settings**.
- 3 Tap **High quality on mobile** if you want to watch high-quality videos.
- 4 Tap **Caption font size** and select and tap the font size if you want to adjust the size of the font.
- 5 Tap **Clear search history** if you want to remove search history from the search box and tap **OK**.
- 6 Tap **SafeSearch filtering** if you want to block videos that contain restricted content, and select and tap the filtering option.

## ADDING YOUTUBE WIDGET


- 1 Press and hold on the empty space on the home screen, and tap **Android Widgets**.
- 2 Tap **YouTube**. You can view video clips with one tap. You can also upload your video easily or search for videos.

## USING VIDEO PLAYER

### VIEWING VIDEOS



- 1 Tap **Video Player** from the applications menu. All video files are displayed by default. Tap **Folder** if you want to check videos by folder.
- 2 Select and tap a video to see.
  - If you want to see the video from where you have seen before, tap **OK**. Otherwise, the video runs from the beginning.
  - If you want to select several videos in a row, press **⋮** and tap **Play selected items**, tap the check box next to the videos that you want to see, and tap **Done**.

## CHECKING INFORMATION OF VIDEOS


- 1 Tap **Video Player** from the applications menu.
- 2 Tap the video that you want to see related information.
- 3 Press  and tap **Properties** while the video is being played. You can see information of the video, including file size, duration, format, resolution, date created and protection info.

 **Note** The video would stop being played when you see its information.








## ADJUSTING CAPTIONS

- 1 Tap on the screen while a video is playing through Video Player.
- 2 Tap **On** on the left side of the screen. If there are captions for the video, On is selected by default.
- 3 Tap **Sync** on the right side of the screen and tap  if you want to make captions faster by 0.5 second, or tap  if you want to make captions slower by 0.5 second.






## ADJUSTING VOLUME

- 1 Tap on the screen while a video is playing through Video Player.
- 2 Press the volume key to increase or decrease volume. Once  appears on the screen, you can adjust volume by dragging the bar to the left or right.

## VIDEO PLAYER ICONS

Icon	Description
	Play: Plays the video
	Pause: Pauses the video
	Fast-forward: Fast-forwards the video (press and hold) Next file: Moves to the next file (tap)
	Rewind: Rewinds the video (press and hold) Previous file: Moves to the previous file (tap)
	Full view: Turns the screen to full view
	Caption: Displays caption
	Caption sync: Adjusts sync time

## VIDEO PLAYER SETTINGS

- 1 Press  while a video is playing through Video Player.
- 2 Tap **Settings**.
- 3 In order to adjust settings:
  - Tap  or  for Caption Language and select the language. If there is no caption for the video, you can only select the option for Repeat.
  - Tap  or  for Repeat and select the option.

# 6

## CONNECTIVITY

This chapter provides important information about getting connected to network to use ADR8995 including:

USING A Wi-Fi NETWORK

CONNECTING TO A 3G/4G NETWORK


USING Bluetooth

# CONNECTIVITY

## USING A WI-FI NETWORK

Connect ADR8995 to a Wi-Fi network and enjoy the wireless Internet connection. Depending on your data plan or the area where you stay, you should pay for connection to the Wi-Fi network.

### CONNECTING TO A WI-FI NETWORK



- 1 Tap **Settings** from the applications menu.
- 2 Tap **Wireless & networks > Wi-Fi settings**.
- 3 Tap **Wi-Fi** to activate the technology.
- 4 Select and tap a network to connect.
- 5 Enter the password if the network is secured.  indicates a secured Wi-Fi network. Tap **Show password** if you want the password to be displayed.
- 6 Tap **Connect**. Once the network is remembered, ADR8995 will automatically connect to it when in range.



Activating Wi-Fi



Connecting to a Wi-Fi network

① **Note** The icon next to each network indicates the strength of the signal. For example,  indicates the signal is poor while  indicates the signal is strong.

## ABOUT NETWORK NOTIFICATIONS

You are informed by default when a Wi-Fi network is available around you. The message in the status bar indicates a network is available. Tap **Network notification** in the Wi-Fi settings if you do not want to be informed the availability of the network.


## USING THE EASY SETTING

- 1 Tap on the top of the home screen and drag it down.
- 2 Tap **Easy Setting**. The icon turns light green when the function is on.

## SETTING Wi-Fi NETWORKS

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Wireless & networks > Wi-Fi settings**.
- 3 Tap **Wi-Fi** to activate the technology.
- 4 Tap **WPS connection** if you want to establish a new wireless connection automatically using the Wi-Fi Protected Setup (WPS). You should press WPS on your Wi-Fi access point within two minutes.
  - Tap **Button connection**. You should press WPS button on your Wi-Fi access point within 2 minutes.
  - Tap **PIN connection**. You should enter PIN at your Wi-Fi access point within 2 minutes.

## SEARCHING FOR Wi-Fi NETWORKS

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Wireless & networks > Wi-Fi settings**.
- 3 Tap **Wi-Fi** to activate the technology.
- 4 Press  and tap **Scan**. ADR8995 scans networks automatically every six seconds. The newly found networks appear on the bottom of the list.

## ADDING A Wi-Fi NETWORK

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Wireless & networks > Wi-Fi settings**.
- 3 Tap **Wi-Fi** to activate the technology.
- 4 Tap **Add Wi-Fi network**.
- 5 Enter Network SSID and select the security type among **Open**, **WEP**, **WPA/WPA2 PSK** and **802.1x EAP**. Aside from Open, you must enter a password for the network.
- 6 Tap **Save**.


## DISCONNECTING TO A Wi-Fi NETWORK

- 1 Tap the network that is connected to ADR8995.
- 2 Tap **Forget** to disconnect with the network.

 **Note** You can also disconnect to the Wi-Fi network by pressing and holding the network and tapping **Forget** network.




## SETTING ADVANCED FEATURES

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Wireless & networks > Wi-Fi settings**.
- 3 Tap **Wi-Fi** to activate the technology.
- 4 Press  and tap **Advanced**.
- 5 For advanced settings,
  - Tap **Regulatory domain**, and select and tap channels for the domain.
  - Tap **Wi-Fi sleep policy** and specify when ADR8995 should switch from the Wi-Fi network to mobile network to mobile network.

For IP settings, tap **Use static IP** first.

- Tap **IP address**, enter the address and tap **OK**.
- Tap **Gateway**, enter the gateway and tap **OK**. You can also adjust settings for Netmask, DNS 1 and DNS 2.

## ICONS FOR WIFI AND 3G/4G

Icon	Description
	Connected to a Wi-Fi network
	The GPS is active.
	
	
	
	

Icon	Description
	
	
	
	
	
	

## CONNECTING TO A 3G/4G NETWORK

Make sure to turn off the Wi-Fi network connection: Wi-Fi network and the mobile hotspot cannot run at the same time.

### CONNECTING TO MOBILE HOTSPOT FOR 3G NETWORK

- 1 Tap **Mobile Hotspot** from the applications menu.
- 2 Tap **Mobile Hotspot** to activate the function. If a Wi-Fi network is active, tap **Turn Wi-Fi off**.
- 3 Tap **Continue** in the screen on the 3G mobile hotspot feature. Tap on the check box if you do not want to see the screen in the future.
- 4 Tap **Continue** in the screen on the calling plan.
- 5 Tap **Turn on Mobile Hotspot**. Or tap **Battery Management** if you want to check options for managing battery. You can also tap on the check box if you do not want to see the screen in the future.

## CONNECTING TO MOBILE HOTSPOT FOR 4G NETWORK

- 1 Tap **Mobile Hotspot** from the applications menu.
- 2 Tap **Mobile Hotspot** to activate the function. If a Wi-Fi network is active, tap **Turn Wi-Fi off**.
- 3 Tap **Battery Management** if you want to check options for managing battery.

## CONNECTING TO 4G BROADBAND

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Wireless & networks**.
- 3 Tap **Mobile Broadband Connect** for Mobile Hotspot.
- 4 MHS Provisioned. If you have not subscribed to the Mobile Broadband connection service, tap **Subscribe for \$ss/month** and tap **Accept**.

## CONFIGURING AUTOMATIC CONNECTION

- 1 Tap **Mobile Hotspot** from the applications menu.
- 2 Tap **Mobile Hotspot** to activate the function.
- 3 Tap **Configure > Automatic**. The configuration process starts. If the process fails, tap **OK > Begin Manual Configuration** and set up the configuration manually.

## CONFIGURING MANUAL CONNECTION

- 1 Tap **Mobile Hotspot** from the applications menu.
- 2 Tap **Mobile Hotspot** to activate the function.
- 3 Tap **Configure > Manual**.

- 4 For each option:
  - Tap **Network Name (SSID)** and type the network name and tap **OK**.
  - Tap **Security Type**, select and tap a security type and take necessary steps.
  - Tap **80211 Mode** and select and tap a mode.
  - Tap **Broadcast Channel** and select and tap a channel.
  - Tap **Country** and select and tap a country.


## MANAGING BATTERY

- 1 Tap **Mobile Hotspot** from the applications menu.
- 2 Tap **Mobile Hotspot** to activate the function.
- 3 Tap **Configure > Battery Management**.
- 4 Select and tap an option for turning off Mobile Hotspot.

## MANAGING DEVICES

- 1 Tap **Mobile Hotspot** from the applications menu.
- 2 Tap **Mobile Hotspot** to activate the function.
- 3 Tap **Manage Devices**.
- 4 For each option:
  - Tap **View Connected Devices**. You can see devices that are connected to ADR8995. If you want to delete a connected device, tap **✕** next to the device and tap **OK**.
  - Tap **Manage allowed Devices > Add device**, type the device name, MAC address and IP address and tap **Done**.
  - Tap **Privacy Separator** if you want to control data transfer and tap **Done**. If Privacy Separator is checked, data will not be transferred among devices that are connected to your Mobile Hotspot.

## MANAGING APPLICATIONS FOR PORT FILTERING

- 1 Tap **Mobile Hotspot** from the applications menu.
- 2 Tap **Mobile Hotspot** to activate the function.
- 3 Tap **Manage Application**.
- 4 Tap **Port Filtering**.
- 5 Select and tap an application for port filtering. If you want to delete the application, tap  next to it and tap **OK**.
- 6 Type the application name and tap **Done**.
- 7 Type the range starting port and tap **OK**.
- 8 Tap **Port Type** and tap **TCP** or **UDP**.
- 9 Tap **Done**.

## MANAGING APPLICATIONS FOR PORT FORWARDING

- 1 Tap **Mobile Hotspot** from the applications menu.
- 2 Tap **Mobile Hotspot** to activate the function.
- 3 Tap **Manage Application**.
- 4 Tap **Port Forwarding**.
- 5 Select and tap an option, type the IP address and tap **OK**.
- 6 Tap **Done**.

## SETTING DHCP SERVER

- 1 Tap **Mobile Hotspot** from the applications menu.
- 2 Tap **Mobile Hotspot** to activate the function.
- 3 Tap **DHCP Server**.
- 4 Type the starting IP address, ending IP address, mask and gateway.
- 5 Tap **Done**.

## CHECKING DATA USAGE

- 1 Tap **Mobile Hotspot** from the applications menu.
- 2 Tap **Mobile Hotspot** to activate the function.
- 3 Tap **Data Usage**.
- 4 Check the current use of data.
- 5 Tap **Done** if you finish checking the usage.

## USING Bluetooth

 
Bluetooth technology enables wireless connections between electronic devices. Using this technology, you can send images, text, and business cards.

With Bluetooth technology, ADR8995 provides:


- Connection to hands-free devices
- Connection to electronic devices

## PAIRING WITH DEVICES

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Wireless & networks > Bluetooth settings**.
- 3 Tap **Bluetooth** to activate the technology.
- 4 Tap **Scan for devices**.
- 5 Select and tap a device from the list.
- 6 Tap **Pair** to pair with and connect to the device.

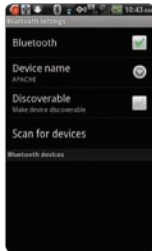

Scanning devices

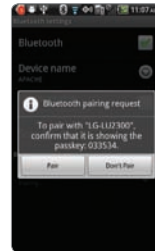 




Requesting pairing

## DEVICE ICONS

PC	Headset	Phone	LAPTOP	Unknown device
				

## ICONS FOR Bluetooth

Icon	Description
	Bluetooth is connected.
	Bluetooth is active but not connected to other device.
	A file is ready to be delivered from other device

## USING THE EASY SETTING

- 1 Tap on the top of the home screen and drag it down.
- 2 Tap **Bluetooth**. The icon turns light green when the function is on.

## Bluetooth SETTINGS

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Wireless & networks > Bluetooth settings**.
- 3 Tap **Bluetooth** to activate the technology.
- 4 Tap **Discoverable** if you want to let other people pair their devices with ADR8995. The status lasts for 120 seconds.

## SHARING A PICTURE USING Bluetooth

- 1 Tap **Gallery** from the applications menu.
- 2 Select and tap a picture to share.
- 3 Tap **Menu > Share > Bluetooth**.



- 4 Select and tap a device among those paired with ADR8995. The other party will receive a message to accept the file.

## RENAMING THE DEVICE

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Wireless & networks > Bluetooth settings**.
- 3 Tap **Bluetooth** to activate the technology.
- 4 Tap **Device name** and enter a new name.
- 5 Tap **OK**.

## MAKING ADR8995 A MODEM

ADR8995 provides other devices with an Internet connection by becoming a Wi-Fi hotspot.

## ACTIVATING THE USB TETHERING

- 1 Connect ADR8995 with an electronic device using the USB cable.
- 2 Tap **Settings** from the applications menu.
- 3 Tap **Wireless & networks > Tethering & portable hotspot**.
- 4 Tap **USB tethering** to activate the technology. The electronic device that is connected to ADR8995 can now access the Internet.

① **Note** You cannot use a few applications that require Internet connection while using the tethering technology.

## BECOMING A PORTABLE Wi-Fi HOTSPOT

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Wireless & networks > Tethering & portable hotspot**.
- 3 Tap **Portable Wi-Fi hotspot**. ADR8995 can offer the Internet connection to other devices around you.

## SETTING OPTIONS FOR PORTABLE Wi-Fi HOTSPOT

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Wireless & networks > Tethering & portable hotspot**.
- 3 Tap **Portable Wi-Fi hotspot settings > Configure Wi-Fi hotspot**.
- 4 Enter a name for Network SSID and select the security type.
  - Tap **Open** if you want to make an open network.
  - Tap **Open** and tap **WPA2(AES)**, **WPA(TKIP)** or **WPA/WPA2** and enter the related items if you want to allow limited devices to access the Internet through ADR8995.
- 5 Tap **Save**.




Wi-Fi hotspot for Open



Wi-Fi hotspot for WPA2 PSK

① **Note** Security type for portable Wi-Fi hotspot is WPA2 PSK and the password is "12345678" by default.

## USB TETHERING AND PORTABLE HOTSPOT ICONS

Icon	Description
	Portable Wi-Fi hotspot is active
	USB tethering is active

# 7

## LOCATION-BASED SERVICES

This chapter provides important information  
about using ADR8995 including:

USING Google MAPS

USING PLACES

USING LATITUDE

NAVIGATION

NEWS & WEATHER

# LOCATION-BASED SERVICES

## USING Google MAPS



Google Maps offers useful information based on your region. Make sure to connect ADR8995 to a Wi-Fi, 3G or 4G network. If you turn on the GPS function, you can obtain more accurate information.

### FINDING PLACES

 
1 Tap **Maps**. You can see your current location on the map.

① **Note** Make sure to connect to wireless networks or GPS satellites by tapping **Settings > Location & security** and tapping **VZW Location Services, Standalone GPS Services or/and Google Locations Services > Agree**.



2 Tap on the search box and type the keyword using the virtual keyboard and tap  or .


3 Tap  if you want to see the result list.  appears when there are many results that match your search.

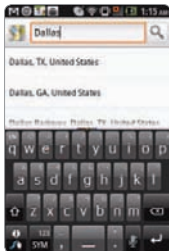4 Select and tap the location that you want to see, and check the related information.




## ZOOMING IN AND OUT OF THE MAP



- 1 Tap  to zoom in the map.
- 2 Tap  to zoom out of the map.

 **Note** You can double-tap the screen to zoom in the map.

## FINDING DIRECTIONS

- 1 Tap **Maps** from the applications menu.
- 2 Press  and tap **Directions**.
- 3 Enter the name of the place you want to visit.
- 4 Decide whether you want to go to the end point by car, public transportation or foot.
- 5 Tap **Go**.

## FINDING CURRENT LOCATION ON THE MAP

- 1 Tap **Maps** from the applications menu.
- 2 Tap . Your location is indicated as .

## USING PLACES


### FINDING PLACES

- 1 Tap **Places** from the applications menu.
- 2 Enter a keyword in the search box, or tap **Restaurants**, **Coffee**, **Bars**, **Attractions**, **ATMs**, **Gas Stations** or **Explore Nearby**.

- 3 Select and tap a place in the search results.

① **Note** If you want to sort the result by distance or ratings by customers, tap **Distance** or **Rating** in the search results.

## VIEWING PLACES AT A GLANCE

- 1 Tap **Places** from the applications menu.
- 2 Select and tap a category.
- 3 Press  in the search results and tap **See map**. You can see related places in the map.

## ADDING A CATEGORY FOR PLACES

- 1 Tap **Places** from the applications menu.
- 2 Tap **Add** on the bottom of the screen and enter a category to add. The category appears on the screen.

## ADDING STARRED PLACES


- 1 Tap **Places** from the applications menu.
- 2 Select and tap a category.
- 3 Select and tap a place that you want to see.
- 4 Tap the star icon for each place. When selected, the icon turns yellow.

① **Note** You can see starred places by pressing  and tapping **Starred Places** in the first screen of Places.

## USING LATITUDE


Share your location with your friends or check those of your friends. Make sure to have a Google account to use Latitude.

### JOINING LATITUDE

- 1 Tap **Latitude** from the applications menu.
- 2 Tap **OK** for the tip on the updated map.
- 3 Tap **Allow & Share** if you allow your location to be informed to your friends. The Latitude screen appears shortly where your personal information is displayed.
- 4 Press  if you want to see your location in the map.



### ADDING FRIENDS FROM CONTACTS

- 1 Tap **Latitude** from the applications menu.
- 2 Press  and tap **Add friends**.
- 3 Tap **Select from Contacts**.
- 4 Select and tap the contact you want to add as your friend.

① **Note** All contacts are displayed by default. If you want to classify contacts, tap **All Contacts** on the top of the screen, and select and tap a category of contacts.

- 5 Tap **Yes** if you want to send sharing requests.



## ADDING FRIENDS FROM EMAIL ADDRESSES

- 1 Tap **Latitude** from the applications menu.
- 2 Press **☰** and tap **Add friends**.
- 3 Tap **Add via email address**.
- 4 Enter the email address of your friend and tap **Add friends**.
- 5 Tap **Yes** if you want to send sharing requests.

## ACCEPTING INVITATION FROM FRIENDS

- 1 Tap **Latitude** from the applications menu.
- 2 Tap 1 **new sharing request** on the top of the screen.
- 3 Tap **Accept and share back**. You can see the location of your friend shortly below.



## MANAGING FRIENDS

- 1 Tap **Latitude** from the applications menu.
- 2 Tap one of the friends in the screen.
- 3 Tap **Real-time updating**, and select and tap the time interval for refreshing locations.
- 4 Tap **Sharing options**, and select and tap an option.
- 5 Tap **Remove this friend** and tap **OK** if you want to remove the friend from Latitude.

## CHECKING PERSONAL SETTINGS

- 1 Tap **Latitude** from the applications menu.
- 2 Tap your name on the top of the screen. You can see your name, Gmail account and your current location.
- 3 Tap **Change your photo**, tap **Take a picture** or **Pick from gallery**, and change your photo.



## ADJUSTING PRIVACY SETTINGS

 
- 1 Tap **Latitude** from the applications menu.
- 2 Press **⋮** and tap **Settings**.
- 3 Tap **Detect your location**, **Set your location** or **Do not detect your location** for a location reporting. Detect your location is selected by default.
- 4 Tap **Enable location history** if you want to store your locations in the past and visualize them on the Latitude website.
- 5 Tap **Sign out of Latitude** if you do not want to use Latitude. If you want to join Latitude again, press **⋮** and tap **Join Latitude**.

**Note** For more information on the map, refer to Using Google Maps on page 125.

## NAVIGATION




### SEARCHING FOR THE DESTINATION BY VOICE

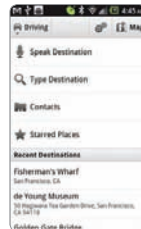
- 1 Tap **Navigation** from the applications menu.
- 2 Tap **Speak Destination** and speak your destination toward ADR8995.
- 3 Select and tap a destination in the list when there are many possible destinations.



 ① **Note** You can also search the destination by typing it or selecting in the contacts.



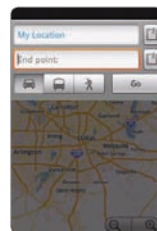


### FINDING DIRECTIONS USING Google MAPS

- 1 Tap **Maps** from the applications menu.
- 2 Press **⌘** and tap **Directions**.
- 3 Enter the name of the end point.
- 4 Tap , , or  and tap **Go**.
- 5 Select and tap a place in the results.





① **Note** For more information on Google Maps, refer to Using Google Maps on page 125.

## SETTING THE END POINT MANUALLY

- 1 Tap **Maps** from the applications menu.
- 2 Press  and tap **Directions**.
- 3 Tap  to the right of End point.
- 4 Tap **Point on map** if you want to set the end point.
- 5 Tap a point on the map.
- 6 Tap **Tap to select this point**.
- 7 Tap ,  or  and tap **Go**.

 **Note** You can also set your location following the same process.

## CHECKING THE TRAFFIC CONDITIONS

- 1 Press  and tap **Route Info** while Navigation is running.
- 2 Flick the screen along the suggested route to the destination.  
Depending on the traffic conditions, the road appears in green (good), yellow (congested) or red (jammed).
- 3 Tap  and tap the route if you want to set an alternative route.



 
## NEWS & WEATHER

News and Weather offers news in various fields and weather information in your region. Viewing weather information

- 1 Tap **News & Weather** from the applications menu. Information on your current region for the moment is provided by default.
- 2 Tap on the weather information in the middle of the screen if you want to check the weather forecast throughout the day.
- 3 Tap on the chart and drag the vertical bar on the screen to the left or right if you want to see weather information for a certain time of the day.




Weekly weather forecast

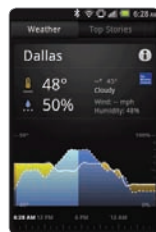


Daily weather forecast

## SELECTING WEATHER SETTINGS

- 1 Tap **News & Weather** from the applications menu.
- 2 Press  and tap **Settings**.
- 3 Tap **Weather settings**.
- 4 Tap **Use my location** if you want to see information of your region automatically.
- 5 Tap **Use metric** if you want to change the unit for weather information.


## CHANGING MY LOCATION

- 1 Tap **News & Weather** from the applications menu.
- 2 Press  and tap **Settings**.
- 3 Tap **Weather settings**.
- 4 Deselect **Use my location**.
- 5 Tap **Set location** and enter the name or postal code of a city you want.


## READING NEWS ARTICLES

- 1 Tap **News & Weather** from the applications menu.
- 2 Tap **Top Stories** on the top of the screen.
- 3 Select and tap an article if you want to see the full story.
- 4 Flick the screen to the left or right if you want to see articles by category.


## CUSTOMIZING NEWS TOPICS

- 1 Tap **News & Weather** from the applications menu.
- 2 Press  and tap **Settings**.
- 3 Tap **News settings** > **Select news topics**.
- 4 Select and tap the topic you want to see. Tap it again if you want to delete the topic.


## ADDING NEWS TOPICS

- 1 Tap **News & Weather** from the applications menu.
- 2 Press  and tap **Settings**.
- 3 Tap **News settings** > **Select news topics**.
- 4 Tap **Custom topic**, enter the title and tap **OK**. You can see articles related to the title.

## SELECTING NEWS SETTINGS

- 1 Tap **News & Weather** from the applications menu.
- 2 Press  and tap **Settings**.
- 3 Tap **News Settings**.
- 4 Tap **Prefetch articles** if you want to shorten time to access articles. Remember this increases data usage and consumes more battery. Tap **Prefetch images** if you also want to make it short to access images.
- 5 Tap **News terms of service** if you want to check Terms of Use for news.
- 6 Tap **Mobile privacy policy** if you want to see the latest mobile privacy policy.

## SETTING REFRESH OPTIONS

- 1** Tap **News & Weather** from the applications menu.
- 2** Press  and tap **Settings**.
- 3** Tap **Refresh settings**.
- 4** Tap **Auto-refresh** if you want to update weather and news automatically. The check box is selected by default.
- 5** Tap **Refresh interval**, select and tap an interval to refresh.



# 8

## WEB-BASED SERVICES

This chapter provides important information  
about using ADR8995 including:

WEB SURFING

Google SEARCH


VOICE SEARCH

THE ANDROID MARKET

# WEB-BASED SERVICES




## WEB SURFING

### SEARCHING FOR INFORMATION IN THE INTERNET


- 1 Tap **Browser** from the applications menu.
- 2 Tap on the search box and type the keyword.
- 3 Tap .
- 4 Pinch two fingers apart on the screen if you want to zoom in the web page.




### FINDING WORDS IN THE CURRENT PAGE

 
- 1 Press  and tap **More > Find on page** while a web page is open.
- 2 Enter a word that you want to see in the current page. The screen moves to the place that includes the word as you type it.
- 3 Tap  to move to the next sentence that contains the word. Tap  to move to the previous sentence.

## COPYING TEXT IN THE CURRENT PAGE



- 1 Press  and tap **More** > **Select text** while a web page is open.
- 2 Enter a word that you want to see in the current page. The screen moves to the place that includes the word as you type it.
- 3 Drag text on the screen. The dragged text is copied to clipboard automatically. You can paste the copied text.

## SEARCHING FOR INFORMATION WITH VOICE

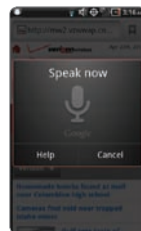

- 1 Tap **Browser** from the applications menu.
- 2 Tap on the search box and tap  in the virtual keyboard.
- 3 Speak a keyword as clearly as you can.
- 4 Select and tap the web page in the search result.




## VISITING A NEW PAGE

- 1 Tap **Browser** from the applications menu.
- 2 Tap the address bar and enter a new URL.
- 3 Tap  next to the address bar or tap  in the virtual keyboard.




## REFRESHING A PAGE

- 1 Tap **Browser** from the applications menu.
- 2 Tap  to refresh the page when a page is open. Or tap  to stop refreshing the page.


## CHANGING HOME PAGE

- 1 Tap **Browser** from the applications menu.
- 2 Press  and tap **More**.
- 3 Tap **Settings** > **Set home page**.
- 4 Enter a new URL if you want to change the home page, and tap **OK**.
- 5 Tap **Use current page** if you want to use the current page as the home page.

## VIEWING BROWSER HISTORY

 
- 1 Tap **Browser** from the applications menu.
- 2 Press  and tap **Bookmarks**.
- 3 Tap **Most visited** if you want to see web pages that you visit the most. Tap  next to the website if you want to add it to bookmarks.
- 4 Tap **History** if you want to see past browsing activity. Press  and tap **Clear history** if you want to delete the browsing history.

## OPENING A NEW WINDOW

- 1 Tap **Browser** from the applications menu.
- 2 Press  and tap **New window**. Another window appears.

## MANAGING MANY WINDOWS

- 1 Tap **Browser** from the applications menu.
- 2 Press **⌘** and tap **Windows**.
- 3 Select and tap a window that you want to see. Or Tap **✕** next to the window that you want to delete.

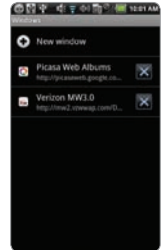

## ADDING BOOKMARKS

- 1 Tap **Browser** from the applications menu.
- 2 Press **⌘** and tap **Bookmarks** while you are visiting a web page.
- 3 Tap **+Add**.
- 4 Enter the name and location of the website and tap **OK**.


## OPENING BOOKMARKED PAGES

- 1 Tap **Browser** from the applications menu.
- 2 Press **⌘** and tap **Bookmarks**.
- 3 Press and hold a bookmark of a web page:
  - Tap **Open** if you want to open the web page in the current window.
  - Tap **Open in new window** if you want to open the web page in a new window.



## ADDING BOOKMARK WIDGET

- 1 Press and hold on the empty space on the home screen and tap **Pantech Widgets**.
- 2 Press and hold **Bookmark** on the bottom of the screen and place it on the home screen where you want to.
- 3 Select a style. You can access the bookmarked website with one tap.


## MANAGING BOOKMARKS

- 1 Tap **Browser** from the applications menu.
- 2 Press  and tap **Bookmarks**.
- 3 Press and hold a bookmark:
  - If you want to edit the bookmark, tap **Edit bookmark**, change the name or location, and tap **OK**.
  - If you want to make its shortcut in Home screen, tap **Add shortcut to Home**.
  - If you want to share the bookmark as a link, tap **Share link**, tap **Bluetooth**, **Email**, **Gmail** or **Messaging** and take necessary steps.
  - If you want to copy the URL, tap **Copy link URL** and paste it to a message.


## REARRANGING BOOKMARKS

- 1 Tap **Browser** from the applications menu.
- 2 Press  and tap **Bookmarks**.
- 3 Press  and tap **Rearrange bookmarks**.
- 4 Press and hold a bookmark to move and drag it to other place.


## DELETING BOOKMARKS

- 1 Tap **Browser** from the applications menu.
- 2 Press  and tap **Bookmarks**.
- 3 Press and hold a bookmark and tap **Delete bookmark**.
- 4 Tap **OK**.

## SETTING THE DISPLAY OPTIONS

- 1 Tap **Browser** from the applications menu.
- 2 Press  and tap **More > Settings**.
- 3 Tap **Text size**, select and tap your preferred text size.
- 4 Tap **Default zoom**, select and tap your preferred zoom mode.
- 5 Tap **Block pop-up windows** if you want to prevent pop-up windows from appearing. The check box is selected by default.

## SETTING PRIVACY OPTIONS




- 1 Tap **Browser** from the applications menu.
- 2 Press  and tap **More**.
- 3 Tap **Settings**.
- 4 Tap **Clear all cookie data > OK** if you want to delete all cookie data.
- 5 Tap **Clear form data > OK** if you want to delete all form data.

## ADDING WEB WIDGET


- 1 Press and hold on the empty space on the home screen and tap **Pantech Widgets**.
- 2 Press and hold **Web Space** on the bottom of the screen and place it on the home screen where you want to.

## Google SEARCH

### SEARCHING FOR INFORMATION WITH Google


- 1 Tap **Google Search**, or press **Q** in idle mode.
- 2 Enter a keyword in the search box and tap  or . You can also tap  and say it on the phone.

### SETTING SEARCH OPTIONS


- 1 Tap **Google Search** from the applications menu.
- 2 Press  and tap **Search settings**.
- 3 Tap **Google search**.
- 4 Tap **Show web suggestions** if you want to see suggestions from Google as you search through Google. The check box is selected by default.
- 5 Tap **Use My Location** if you allow your location to be used for Google search results.



## SELECTING ITEMS THAT CAN BE SEARCHED

- 1 Tap **Google Search** from the applications menu.
- 2 Press  and tap **Search settings**.
- 3 Tap **Searchable items**.
- 4 Select and tap items you want to include for the search result.

## MANAGING SEARCH HISTORY

- 1 Tap **Google Search** from the applications menu.
- 2 Press  and tap **Manage search history**.

 **Note** Make sure to tap **Search history** first if you want to use **Manage search history**.

- 3 Enter the email address and password for your Google account.
- 4 Select and tap search history in the list and tap **Remove** if you want to remove the search history.

 
## ADDING Google SEARCH WIDGET

- 1 Press and hold on the empty space on the home screen, and tap **Android Widgets**.
- 2 Tap **Google Search**.
- 3 Select the item that should be included for search. You can edit the items later.

## VOICE SEARCH

Search the Internet by speaking on the phone.

- 1 Tap **Voice Search** or press and hold **Q**.
- 2 Say a keyword on the mic.
- 3 Select and tap the result. Speak again when no matches are found for the keyword.

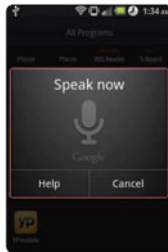

Voice search



Search results

## ANDROID MARKET

Download useful applications from the Android Market and use them for your purposes.

 
### DOWNLOADING APPLICATIONS

- 1 Tap **Market** from the applications menu.
- 2 Tap **Next** and follow the necessary steps for adding a Google account if you do not have a Google account.

- 3 Tap **Accept** on the Android Market Terms of Service if you are accessing the Android Market for the first time.
- 4 Tap **Apps**, **Games** or **My apps** in the middle of the screen. You can also tap one of the images that are rotating in the top of the screen.
  - Tap **Apps** if you want to download applications that provide useful functions for your purposes.
  - Tap **Games** if you want to download and enjoy games.
  - Tap **My apps** if you want to check applications that you have downloaded and manage them.
- 5 Select and tap a category.
- 6 Tap **Top paid**, **Top free** or **Just in**.
  - For Top paid applications, tap the price, tap **OK** and take the necessary steps.
  - For Top free applications, tap **FREE** > **OK**. The selected applications will be downloaded instantly.
  - For Just in applications, tap an application and follow the necessary steps depending on whether it is a paid or free application.



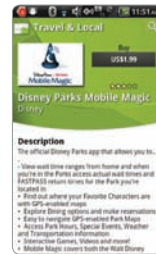


Installing free application




Installing paid application

## SEARCHING FOR APPLICATIONS


- 1 Tap **Market** from the applications menu.

- 2 Tap  and enter the name or the keyword of the application that you want to install and tap  or .
- 3 Select and tap the application and install it.

## RUNNING DOWNLOADED APPLICATIONS

- 1 Tap on the top of the home screen, drag the notifications down.
- 2 Tap the application that you have downloaded from the Android Market.  indicates that an application is completely downloaded. You can also run the application in the applications menu.

## DELETING APPLICATIONS FROM THE ANDROID MARKET

- 1 Tap **Market** from the applications menu.
- 2 Press  and tap **My apps**.
- 3 Press and hold the application to delete and tap **Uninstall** > **OK**.

 **Note** You cannot uninstall applications that are installed by default by the manufacturer.

## DELETING APPLICATIONS FROM SETTINGS

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Applications** > **Manage applications**.
- 3 Select and tap an application to delete.
- 4 Tap **Uninstall** > **OK**.
- 5 Tap **OK**.

# 9

## TOOLS

This chapter provides important information  
about using ADR8995 including:

CALCULATOR  
TIP CALCULATOR  
ALARM/CLOCK  
CLOCK TOOLS  
CONVERTER  
DOC VIEWER  
HANDY MEMO  
RECORDER  
WEATHER  
SURFACE LEVEL

# TOOLS

## CALCULATOR

Perform basic mathematical calculations with the calculator in ADR8995.

### DOING CALCULATIONS

- 1 Tap **Calculator** from the applications menu.
- 2 Enter a number and tap a mathematical sign you want to use.
- 3 Tap **C** to delete a number. Press and hold **C** to delete the whole number.





### SAVING CALCULATIONS



- 1 Tap **Calculator** from the applications menu.
- 2 Press **⌘** during a calculation and tap **Save**.
- 3 Enter a name and tap **Save**. The final value appears under the name by default.

### EDITING SAVED CALCULATIONS

- 1 Tap **Calculator** from the applications menu.
- 2 Press **⌘** and tap **List**.
- 3 Press and hold the calculation to edit and tap **Edit**.



- 4 Tap the calculation and edit it.
- 5 Press  and tap **Save**, or press .

 
## DELETING CALCULATIONS

- 1 Tap **Calculator** from the applications menu.
- 2 Press  and tap **List**.
- 3 In order to delete calculations:
  - If you want to delete a calculation, press and hold the calculation to delete, and tap **Delete**.
  - If you want to delete several calculations, press , tap **Delete**, tap **Delete** next to calculations to delete and tap **Done** in the top of the screen.
- 4 Tap **OK**.


## TIP CALCULATOR

### CALCULATING TIPS

- 1 Tap **Tip Calculator** from the applications menu.
- 2 Type the amount of money for Bills.
- 3 Type the percentage for Tip. If you want to divide the tip, type the number of persons for Split. Tap  to delete a number. Press and hold  to delete the whole number.
- 4 Tap **Done**. The calculated value appears below.

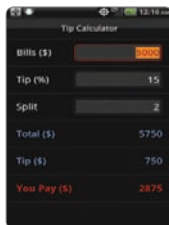



## RESETTING CALCULATION

- 1 Tap **Tip Calculator** from the applications menu.
- 2 Press  and tap **Reset**.


## ALARM/CLOCK

Alarm/Clock helps set the alarm and see basic information on your region including time and weather.

### ADDING NEW ALARMS

- 1 Tap **Alarm/Clock** from the applications menu.
- 2 Tap  and tap **Add alarm**. You can also press  and tap **Add alarm**.
- 3 Tap the check box next to **Turn alarm on**.
- 4 In order to add an alarm:
  - Tap **Time**, enter the hour and minute and tap **Save**.
  - Tap **Repeat**, tap the check box next to each day for a week and tap **OK**.
  - Tap **Ringtone** and tap a ringtone for the alarm. You can listen to each ringtone when you tap it.
  - Tap **Mute** if you want no sound for the alarm.
  - Tap the check box next to **Vibrate** if you do not want ADR8995 to make vibrations for alarm. It is selected by default.
  - Tap **Label**, enter a name for the alarm and tap **OK**.
- 5 Tap **Done**. A blue bar appears under the new alarm.



### EDITING ALARMS

- 1 Tap **Alarm/Clock** from the applications menu.
- 2 Tap  and tap the alarm to edit.


 


- 3 Tap each option and change the setting.
- 4 Tap **Done**.



## DEACTIVATING ALARMS

- 1 Tap **Alarm/Clock** from the applications menu.
- 2 Tap  and tap  of the alarm to deactivate. A blue bar indicates that the alarm is on. The color disappears when the alarm is turned off.

## DELETING ALARMS


- 1 Tap **Alarm/Clock** from the applications menu.
- 2 Tap  and tap the alarm to delete. In order to delete alarms:
  - If you want to delete an alarm, tap the alarm to delete, and tap **Delete**.
  - If you want to delete several alarms at once, press , tap **Delete alarm**, tap the check box next to the alarms to delete and tap **Done**.
- 3 Tap **OK**.

## SETTING ALARMS


- 1 Tap **Alarm/Clock** from the applications menu and tap .
- 2 Press  and tap **Settings**.
- 3 In order to set alarms:
  - Tap **Alarm in silent mode** if you want to play the alarm even when ADR8995 is in silent mode. The check box is selected by default.
  - Tap **Alarm volume** if you want to adjust the volume, set the volume and tap **OK**.
  - Tap **Snooze duration** if you want to adjust the snooze duration, select and tap the duration.

- Tap **Volume button effect** if you want to assign a button action for the volume key during an alarm, select and tap an option.


## ENJOYING MUSIC ON DESK CLOCK

- 1 Tap **Alarm/Clock** from the applications menu.
- 2 Tap  and tap music files to listen to.

## DISPLAYING PICTURES ON DESK CLOCK

- 1 Tap **Alarm/Clock** from the applications menu.
- 2 Tap . You can see pictures saved in ADR8995.

## SETTING OPTIONS FOR DOCK

- 1 Tap **Alarm/Clock** from the applications menu.
- 2 Press  and tap **Dock settings**.
- 3 Tap **Audio** and select options for Audio.
- 4 Tap **Dock insertion sound** if you want ADR8995 to make sound when inserting or removing it from the dock.

## ADDING INTERGRATED CLOCK WIDGET

 
- 1 Press and hold on the empty space on the home screen, and tap **Pantech Widgets**.
- 2 Flick widget icons on the bottom of the screen to the left and press and hold **Integrated Clock**.
- 3 Place the icon on the home screen where you want and select a style for the widget.

## CLOCK TOOLS



Clock Tools offers the current time in major cities and time zones around the world. World time is displayed first by default. You can also use the timer and the stopwatch.

### VIEWING THE WORLD TIME

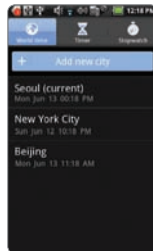



- 1 Tap **Clock Tools** from the applications menu.
- 2 Tap **Add new city** and enter the name of a city. Type the first letter and you can find the city easily.
- 3 Select and tap the city. The time for the newly added city appears below the current time.



### REARRANGING THE ORDER OF CITIES

- 1 Tap **Clock Tools** from the applications menu.
- 2 Press  and tap **Rearrange**.
- 3 Select a city to relocate and drag  up or down to rearrange the order. You cannot move the location of the current city.
- 4 Tap **Done**.


## DELETING A CITY

- 1 Tap **Clock Tools** from the applications menu.
- 2 In order to delete cities:
  - If you want to delete one or more than one cities, press  and tap **Delete**, and tap  next to the city.
  - If you want to delete all cities at once, press  and tap **Delete**, press  and tap **Select All**.
- 3 Tap **Done** > **OK**.

## ADDING WORLD CLOCK WIDGET

- 1 Press and hold on the empty space on the home screen, and tap **Pantech Widgets**.
- 2 Press and hold **Clock** on the bottom of the screen and select a style for the widget.
- 3 Tap the widget if you want to manage cities that appear on the clock.

## APPLYING SUMMER TIME

- 1 Tap **Clock Tools** from the applications menu.
- 2 Press  and tap **Summer time**.
- 3 Tap the check box next to the city where you want to apply summer time. You can add an hour or two hours.
- 4 Tap **Done**.

## USING TIMER

 
- 1 Tap **Clock Tools** from the applications menu.
- 2 Tap **Timer**.
- 3 Press **⏏** and tap **Set** for setting the time.
- 4 Set the hour, minute and second and tap **Save**.
- 5 Tap **Start**. Timer begins to run and makes sound when time is up even when the vibration mode is set for ADR8995.




ⓘ **Note** You can reset the time by tapping **Reset** while timer is running.

## USING STOPWATCH

- 1 Tap **Clock Tools** from the applications menu.
- 2 Tap **Stopwatch**.
- 3 In order to use stopwatch:
  - Tap **Lap** on the top of the screen and tap **Start**. This function is used when you want to measure time that takes to run for a certain distance.
  - Tap **Lap > Split** on the top of the screen and tap **Start**. This function is used when you want to measure the accumulated time. You can split it up to 100 times.
- 4 Tap **Reset** to restart the stopwatch.

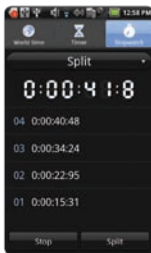

Lapping time

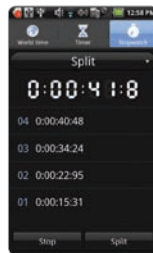 


Splitting time

## CONVERTER

 
Converter helps convert values for length, volume, weight, temperature, area and speed.

### CONVERTING VALUES

- 1 Tap **Converter** from the applications menu.
- 2 Select a unit type. Length is selected by default. Change the unit type by tapping **◀** or **▶**.
- 3 Tap on the box below the unit type and enter value.
- 4 Select the original unit by dragging the wheel in the middle of the screen.
- 5 Select a target unit. The changed value promptly appears below. Values are rounded off the numbers to three decimal places.

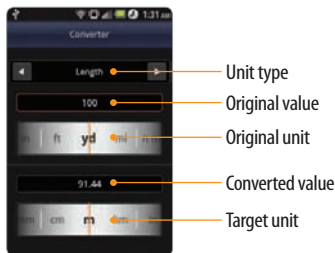


## RESETTING A CONVERSION

- 1 Tap **Converter** from the applications menu.
- 2 Press  during a conversion and tap **Reset**.







## DOC VIEWER

Read documents that are stored in a variety of formats in ADR8995.

## READING DOCUMENTS

- 1 Tap **Doc Viewer** from the applications menu.
- 2 Select and tap a folder where you have stored documents.
- 3 Select and tap a document to read. Press  and tap **Sort** if you want to rearrange stored documents by alphabet, type, date or size.
- 4 Tap anywhere on the screen while a document is open.

## 5 In order to read a document:

- Tap  and tap  to zoom in the document or tap  to zoom out in landscape mode. In the portrait mode, drag  downwards or upwards to zoom in or out. You can also zoom in the document by pinching your fingers apart, and zoom out by pinching your fingers together.
- Tap  if you want to fit the document to width. Or tap  if you want to fit the document to height.





 
Full view



Selecting options

## SEARCHING FOR WORDS IN A DOCUMENT


- 1 Tap **Doc Viewer** from the applications menu.
- 2 Open a document.
- 3 Press  and tap **Word search**.
- 4 Enter a word to search for and tap **Done** in the virtual keyboard.
- 5 Tap  to see the word that you have searched for in the next sentence or page.
- 6 Tap **Done** if you want to stop searching for the word.

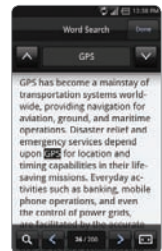



## MOVING TO A PAGE IN A DOCUMENT

 - 1 Tap **Doc Viewer** from the applications menu.
- 2 Open a document.
- 3 Tap **◀** to move to the previous page. Tap **▶** to move to the next page.
- 4 Press **⌘** and tap **Go to page**.
- 5 Enter the page to go and tap **👉**

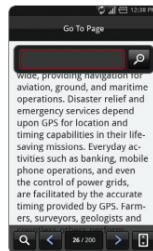

## HANDY MEMO



Write a memo with your finger or the keypad. Make sure to insert a microSD card to use Handy Memo.

 
### WRITING TEXT MEMOS

- 1 Tap **Handy Memo** from the applications menu.
- 2 Tap **Create new > Text memo**. If there are no memos saved in the memory card, the screen appears first by default where you can type in a text memo.
- 3 Type in text.
- 4 Tap **Save**. The memo appears in full view. Press **⌘** if you want to the first screen of Handy Memo.



## DRAWING A HANDY MEMO

- 1 Tap **Handy Memo** from the applications menu.
- 2 Tap **Create new > Hand drawing memo.**
- 3 Draw a memo with your finger.
- 4 Tap  to select effects.
- 5 Adjust the thickness of the pencil and the eraser.
- 6 Tap **Save**. The memo appears in full view. Press  if you want to the first screen of Handy Memo.

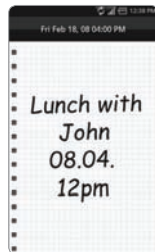


## EDITING MEMOS

- 1 Tap **Handy Memo** from the applications menu.
- 2 Before editing a memo:
  - If you want to edit a memo without checking it in full view, press and hold the memo to edit and tap **Edit**.
  - If you want to check a memo in full view before editing, tap the title first. Then, tap on the screen.
- 3 Edit the memo and tap **Save**.

## SHARING MEMOS

- 1 Tap **Handy Memo** from the applications menu.
- 2 Before sharing a memo:
  - If you want to send a memo to your friends without checking it, press and hold the memo to share and tap **Share**.

- If you want to check the memo before sending it to your friends, tap the title, press  and tap **Share**.

**3** Tap **Bluetooth**, **Email**, **Gmail** or **Messaging**.

**4** Follow necessary steps for each service.



① **Note** If you choose to use **Messaging**, text memos are sent as the Short Message Service (SMS) and hand drawing memos are sent as the Multimedia Messaging Service (MMS).

## CHANGING MEMO TYPE

**1** Tap **Handy Memo** from the applications menu.

**2** Tap **Create new** and tap **Text memo** or **Hand drawing memo**.

**3** For each option:

- Press  and tap **Hand drawing memo** if you want to draw a memo with hand.
- Press  and tap **Text memo** if you want to type a memo.





**4** Tap **OK** for saving the memo if you were in the middle of creating a memo. If you do not write or draw any memo, the memo type will change instantly.

## ADDING MEMO WIDGET

**1** Press and hold on the empty space on the home screen and tap **Pantech Widgets**.



**2** Press and hold **Memo** on the bottom of the screen and place it on the home screen where you want to.

## DELETING MEMOS

 
- 1 Tap **Handy Memo** from the applications menu.
- 2 Before deleting a memo:
  - If you want to delete a memo without checking it, press and hold the memo to delete and tap **Delete**.
  - If you want to check the memo before deleting, tap the title, press  and tap **Delete**.
  - If you want to delete several memos at once, press  and tap **Delete**, tap  next to memos to delete and tap **Done**. If you want to all memos, press  and tap **Select all** and tap **Done**.
- 3 Tap **OK**.

## RECORDER

 
### RECORDING YOUR VOICE

- 1 Tap **Recorder** from the applications menu.
- 2 Tap  to start recording your voice. Recorder can record a memo for up to 24 hours. Recording will stop 24 hours later and is saved automatically.
- 3 Tap  to stop recording your voice.

 **Note** Once you have recorded a voice memo, the screen to play it appears. Tap  to replay the recorded voice memo. Press  if you want to record a new voice memo.

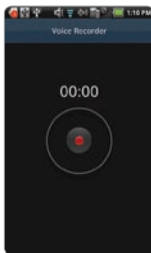



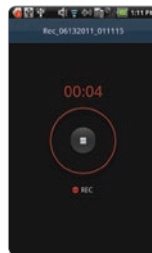

Ready to record





Recording starts


## LISTENING TO RECORDED VOICES

- 1 Tap **Recorder** from the applications menu.
- 2 Press  and tap **List**.
- 3 Press and hold a memo to listen and tap **Play**.
- 4 Tap . If you want to go back to the list, press , or press  and tap **List**.


## SHARING VOICE MEMOS

- 1 Tap **Recorder** from the applications menu.
- 2 Press  and tap **List**.
- 3 Before sending memos to your friends:
  - If you want to send a memo, press and hold a memo to share, and tap **Share**.
  - If you want to send several memos, press , tap **Share**, select the checkbox next to memos to share, and tap **Done**.
- 4 Tap **Bluetooth**, **Email**, **Gmail** or **Messaging**, and take necessary steps.



## RENAMING MEMO

- 1 Tap **Recorder** from the applications menu.
- 2 Press  and tap **List**.
- 3 Press and hold a memo to rename and tap **Rename**.
- 4 Change the name of the memo and tap **Save**.

## SETTING A MEMO AS RINGTONE

- 1 Tap **Recorder** from the applications menu.
- 2 Press  and tap **List**.
- 3 Press and hold a memo to use as a ringtone, and tap **Set as Ringtone**.

## DELETING VOICE MEMOS

- 1 Tap **Recorder** from the applications menu.
- 2 Press  and tap **List**.
- 3 Before deleting voice memos:
  - If you want to delete a memo, press and hold a memo to delete, and tap **Delete > OK**.
  - If you want to delete several memos, press , tap **Delete**, select the checkbox next to memos to delete and tap **Done**.
- 4 Tap **OK**.

## ABOUT MEMORY CAPACITY

 
When the memory card is not enough to record memos for long time, a different message appears:

- If you can record a memo for less than an hour, the possible time for recording appears.
- If there is less than 2Mb in the memory card, “Not enough memory” appears.
- If there is less than 1 MB in the memory card, Recorder would stop recording a memo and save it automatically.

## WEATHER

### CREATING LIST OF INTERESTED CITIES


- 1 Tap **Weather** from the applications menu.
- 2 Tap **Add new city**.
- 3 Type the name of the city you want, or flick the screen upwards while you type and tap a city. Weather information of the city appears in the list. You can add up to 15 cities in the list.

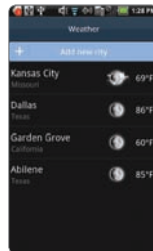


### VIEWING WEATHER INFORMATION

- 1 Tap **Weather** from the applications menu.
- 2 Select and tap a city in the list you want to see.
- 3 If you want to see more information:

 - Tap **Update** if you want to see the current weather information.
- Press **☰** and tap **Forecast**, and you can see weather forecast for the next five days including today.

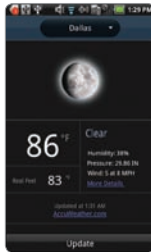

Current weather

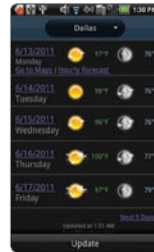 

Weather forecast

## CHANGING THE TEMPERATURE UNIT




- 1 Tap **Weather** from the applications menu.
- 2 Press **☰** and tap **Settings**.
- 3 Tap **°F** or **°C**. The temperature changes from Fahrenheit to Celsius.
- 4 Press **↩** if you finish changing the unit.

## REARRANGING THE ORDER OF CITIES

- 1 Tap **Weather** from the applications menu.
- 2 Press **☰** and tap **Rearrange**.
- 3 Drag **↕** next to the city to move upward or downward.
- 4 Tap **Save**.



## DELETING A CITY


- 1 Tap **Weather** from the applications menu.
- 2 Press  and tap **Delete**.
- 3 Tap  next to the city to delete. If you want to delete all cities, press  and tap **Select All**.
- 4 Tap **Done**.
- 5 Tap **OK**.

## ADDING WEATHER WIDGET


- 1 Press and hold on the empty space on the home screen and tap **Pantech Widgets**.
- 2 Press and hold **Weather** on the bottom of the screen and place it on the home screen where you want to.

 
## SURFACE LEVEL

### CHECKING CURRENT LEVEL

- 1 Tap **Surface Level** from the applications menu.
- 2 Press  and tap **Calibration**.

### CHANGING SKINS

- 1 Tap **Surface Level** from the applications menu.
- 2 Press  and tap **Change Skin**.

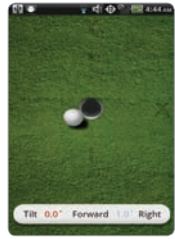

Sample skins

# 10

## STORAGE

This chapter provides important information  
about using ADR8995 including:

MANAGING THE MEMORY CARD  
USING ADR8995 AS MASS STORAGE  
TRANSFERRING FILES THROUGH WINDOW MEDIA SYNC

# STORAGE

## MANAGING THE MEMORY CARD

Manage the microSD card carefully. If you do not follow the steps described below to manage the memory card, you can incur serious damage to the card.

### VIEWING AVAILABLE MEMORY

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Storage**.
- 3 Flick the screen and check the status of the SD card and internal phone storage.

### UNMOUNTING THE SD CARD

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Storage > Unmount SD card**.
- 3 Read the warning on unmounting the SD card and tap **OK**.
- 3 Press and hold the **LOCK/POWER** key.
- 4 Tap **Power off > OK**.
- 5 Open the battery cover.
- 6 Remove the battery.
- 7 Now you can remove the SD card safely.

① **Note** If you want to mount the SD card, tap **Settings > Storage > Mount SD card**.

## FORMATTING THE MICROSD CARD

- 1 Tap **Settings** from the applications menu.
- 2 Tap **Storage > Unmount SD card > OK**.
- 3 Tap **Format SD card > Format SD Card > Erase everything**. All data stored in the card will be deleted.

## CONNECTING TO A PC

Synchronize files and exchange data with a computer using the PC data cable. Keep in mind that you cannot transfer media files if you turn on the USB debugging mode (**Settings > Applications > Development > USB debugging**).

## SELECTING THE USB MODE

- 1 Connect the USB cable to ADR8995.
- 2 Connect the other end of the cable to your computer.
- 3 Select and tap a USB mode for your purposes:
  - Tap **PC Mode > OK** if you want to use ADR8995 as your PC. It is selected by default.
  - Tap **Window Media Sync > OK** if you want to transfer media files between ADR8995 and your PC.
  - Tap **USB Mass Storage > OK** if you want to save mass files in ADR8995.
  - Tap **Charge Only > OK** if you only want to connect the USB cable to charge ADR8995. Remember that ADR8995 continues to be charged as long as it is connected to PC through the cable even if you have not selected the Charge Only mode.



① **Note** USB Mass Storage mode will not appear if there is no memory card in ADR8995.

## CHANGING THE USB MODE IN THE STATUS BAR

- 1 Connect ADR8995 to your computer using the USB cable.
- 2 Tap on the top of the screen and drag down the status bar.
- 3 Tap **USB Switch connected** and tap a USB mode for your purposes and tap **OK**.

## USING ADR8995 AS MASS STORAGE




Copy files between your computer and the microSD card in ADR8995. In the mass storage mode, a few applications—Handy Memo, Voice Memo, Music Player, Camera, Document Viewer—that need the microSD card will not run.

## COPYING FILES

- 1 Set the USB mode for mass storage.
- 2 Tap on the top of the screen, drag the status bar down and tap **USB connected > Turn on USB storage > OK**. A window appears where you can see what is saved in ADR8995. These steps appear only when you have selected the USB mass storage mode.
- 3 Select and copy files to transfer between ADR8995 and your PC.
- 4 Paste files to your PC or ADR8995. The status of transferred files is displayed in the status bar.
- 5 Tap **Turn off USB storage** in the status bar if you want to turn off the function, and tap **Turn off USB storage**.



## USB MODE ICONS

Icon	Description
	USB debugging is connected
	USB Switch connected: Change the USB mode
	USB is connected: Turn on/off USB storage mode

## TRANSFERRING FILES THROUGH WINDOW MEDIA SYNC

- 1 Set the USB mode for Window Media Sync. A window appears where you can see what is saved in ADR8995.
- 2 Select and copy files to transfer between ADR8995 and your PC.

# 11

## SETTINGS

This chapter provides important information about setting options to use ADR8995 including:

- WIRELESS & NETWORKS
  - CALL SETTINGS
    - SOUND
    - DISPLAY
  - LOCATION & SECURITY
    - APPLICATIONS
  - ACCOUNTS & SYNC
    - PRIVACY
    - STORAGE
  - LANGUAGE & KEYBOARD
    - ACCESSIBILITY
    - DATE & TIME
  - ABOUT PHONE



# SETTINGS

## WIRELESS & NETWORKS

### SETTING AIRPLANE MODE

- 1 Tap **Settings** > **Wireless & networks** > **Airplane mode**. If you turn on Airplane mode, Wi-Fi, Bluetooth and GPS functions are turned off at once. However, you can turn on each function for your preference.
- 2 Tap **Airplane mode** again to reactivate other functions.

### SETTING MOBILE NETWORKS

- 1 Tap **Settings** > **Wireless & networks**.
- 2 Tap **Mobile networks** to manage the mobile network.

### SETTING TETHERING AND PORTABLE HOTSPOTS

- 1 Tap **Settings** > **Wireless & networks** > **Tethering & portable hotspot**.
- 2 Tap **USB tethering** to provide Internet connection to other devices.
- 3 Tap **Portable Wi-Fi hotspot** to make ADR8995 a portable Wi-Fi hotspot. Refer to page 122 for more information.

### SETTING Wi-Fi NETWORKS

- 1 Tap **Settings** > **Wireless & networks**.
- 2 Tap **Wi-Fi settings** to manage the wireless network.

## SETTING Bluetooth

- 1 Tap **Settings > Wireless & networks**.
- 2 Tap **Bluetooth settings** to manage the wireless technology option.

## SETTING VPN SETTINGS

- 1 Tap **Settings > Wireless & networks > VPN settings > Add VPN**.
- 2 Tap **Add PPTP VPN, Add L2TP VPN, Add L2TP/IPSec PSK VPN or Add L2TP/IPSec CRT VPN**.
- 3 Set up the network by entering necessary information.

## CALL SETTINGS

### SETTING VOICEMAIL SERVICE

- 1 Tap **Settings > Call settings > Voicemail Service**.
- 2 Tap **My carrier**.

### SETTING VOICEMAIL SETTINGS

- 1 Tap **Settings > Call settings > Voicemail settings**.
- 2 Tap **Voicemail number**.
- 3 Enter the voicemail number and tap **OK**.

## SETTING AUTO ANSWER

- 1 Tap **Settings** > **Call settings** > **Auto Answer**.

## SETTING ASSISTED DIALING

- 1 Tap **Settings** > **Call settings** > **Assisted dialing**.
- 2 Tap **Assisted dialing status**.
- 3 Tap **Reference country**, select and tap a country.

## SETTING AUTO RETRY

- 1 Tap **Settings** > **Call settings** > **Auto Retry**.
- 2 Select and tap the time for automatic retry.

## SETTING TTY MODE

- 1 Tap **Settings** > **Call settings** > **TTY mode**.
- 2 Tap **TTY Off**, **TTY Full**, **TTY HCO** or **TTY VCO**.

## SETTING DTMF TONES

- 1 Tap **Settings** > **Call settings** > **DTMF Tones**.
- 2 Tap **Normal** or **Long**.

## SETTING VOICE PRIVACY

- 1 Tap **Settings** > **Call settings** > **Voice Privacy**.

## SETTING DIALPAD

- 1 Tap **Settings** > **Call settings** > **Show dialpad**.
- 2 Tap **Service number**, **Custom phone number** or/and **All calls**.
- 3 Tap **Entered custom number**, type the custom phone number and tap **OK**.

## SOUND

### SETTING SILENT MODE

- 1 Tap **Settings** > **Sound** > **Silent mode**. All other functions except the media volume and alarms are silenced if you select this option.
- 2 Tap **Silent mode** again to activate all functions.

### SETTING TO VIBRATE

- 1 Tap **Settings** > **Sound** > **Vibrate**.
- 2 Tap **Always**, **Never**, **Only in Silent mode** or **Only when not in Silent mode**.
- 3 Tap **OK**.

## SETTING VOLUME

- 1 Tap **Settings > Sound > Volume**. Make sure to deselect Silent mode.
- 2 Adjust the volume for ringtone, media and alarm. Tap **Use incoming call volume** for notifications if you want to use this function. Otherwise, deselect it and adjust the volume for notifications.
- 3 Tap **OK**.

## SETTING PHONE RINGTONE

- 1 Tap **Settings > Sound > Phone ringtone**.
- 2 Select and tap a ringtone in the list.
- 3 Tap **OK**.

## SETTING NOTIFICATION RINGTONE

- 1 Tap **Settings > Sound > Notification ringtone**.
- 2 Select and tap a ringtone for notifications.
- 3 Tap **OK**.

## SETTING FEEDBACK OPTIONS

- 1 Tap **Settings > Sound**.
- 2 Tap **Audible touch tones** if you want to play tones when using the dial pad. It is selected by default.
- 3 Tap **Audible selection** if you want to play sound when making selection on the screen.
- 4 Tap **Screen lock sounds** if you want to play sound when locking and unlocking the screen.
- 5 Tap **Haptic feedback** if you want ADR8995 to vibrate when you press soft keys. It is selected by default.

## SETTING EMERGENCY TONE

- 1 Tap **Settings** > **Sound** > **Emergency tone**.
- 2 Tap **Off, Alert** or **Vibrate**.

## SETTING ROAMING SOUND

- 1 Tap **Settings** > **Sound** > **Roaming Sound** if you want to be indicated by sound when you are roaming.

# DISPLAY

## SETTING BRIGHTNESS

- 1 Tap **Settings** > **Display** > **Brightness level**.
- 2 Drag the vertical bar to the right to increase brightness. Drag it to the left to decrease brightness.
- 3 Tap **OK**.

## SETTING AUTO-ROTATE SCREEN

- 1 Tap **Settings** > **Display** > **Auto-rotate screen** if you want to make the screen rotate automatically when you move ADR8995 horizontally or vertically.

## SETTING ANIMATION OPTIONS

- 1 Tap **Settings** > **Display** > **Animation**.
- 2 Tap **No animations**, **Some animations** or **All animations**.
- 3 Tap **OK**.

## SETTING SCREEN TIMEOUT

- 1 Tap **Settings** > **Display** > **Screen timeout**.
- 2 Select and tap the time interval to turn off the screen.

## SETTING ROAMING BANNER

- 1 Tap **Settings** > **Display** > **Roaming Banner** if you want to be visually indicated whether you are roaming.

## LOCATION & SECURITY

### SETTING VERIZON LOCATION SERVICES

- 1 Tap **Settings** > **Location & security** > **VZW Location Services**.
- 2 Tap **Agree**.

### SETTING STANDALONE GPS SERVICES

- 1 Tap **Settings** > **Location & security** > **Standalone GPS Services**.
- 2 Tap **Agree**.

### SETTING Google LOCATION SERVICES

 
- 1 Tap **Settings** > **Location & security** > **Google Location Services**.
- 2 Tap **Agree**.

## SETTING SCREEN LOCK WITH A PATTERN KEY


- 1 Tap **Settings** > **Location & security** > **Set up screen lock** > **Pattern**.
- 2 Read “Securing your phone” page and tap **Next**.
- 3 Watch how to set up the pattern and tap **Next**.

① **Note** Steps 2–3 appear only when you set up the pattern lock for the first time.

- 4 Drag your pattern on the screen and tap **Continue**. Make sure to connect the pattern with at least four dots. Tap **Retry** and draw another pattern if you want to set up one.
- 5 Tap **Continue**.
- 6 Drag the pattern again and tap **Confirm**.

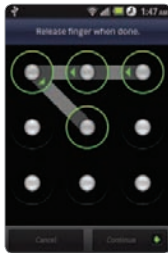

Setting the pattern lock

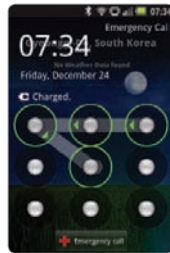 

Unlocking the pattern lock

① **Note** If you fail to drag the correct pattern to unlock the screen for five consecutive times, you have to wait for 30 seconds before you can try it again. If you forget your pattern lock, tap **Forgot pattern**, enter your account name and password for Google and create a new pattern lock. However, **Forgot pattern** will not appear if you have no Google account for ADR8995.



## FORGOT YOUR PASSWORD FOR Google ACCOUNT?

If you have forgotten your password for Google account, reset it at the Google website.

- 1 Open your web browser on your computer and go to <https://www.google.com/accounts/recovery>.
- 2 Enter the email address or username that you use to sign in to your Google account and click **Submit**.
- 3 Enter the characters that you see on the screen and click **Continue**.
- 4 Select an option about recovering your account and click **Continue**.
- 5 Take necessary steps for each option:
  - Enter the answer for security questions if you have selected **Answer your security question**. This option will not be available if you have signed in to your Google account within last five days.
  - Check your email account you provided when you created your Google Account and follow the instructions if you have selected **Email to ●●●●●@\*\*\*\***.
  - Fill in the form for Google Accounts Help if you have selected **I no longer have access to these**, and click **Submit** on the bottom of the window.

① **Note** Do not select **Text message to ●●●●●●●●●●30**: You cannot receive a code to reset your password on your mobile phone.

## SETTING SCREEN LOCK WITH A PASSWORD

- 1 Tap **Settings > Location & security > Set up screen lock > Password**.
- 2 Enter your password and tap **OK**. The password should be at least 4 characters.
- 3 Enter the password again to confirm.

- 4 Tap OK.



Setting the password lock



Unlocking the password lock

ⓘ **Note** Tap Settings > Location & security > Visible passwords if you want to see passwords as you type.

## SETTING SCREEN LOCK WITH A PIN

- 1 Tap Settings > Location & security > Set up screen lock > PIN.
- 2 Enter numbers as PIN and tap **Continue**. The PIN should be at least 4 characters.
- 3 Enter the numbers again to confirm.
- 4 Tap OK.



Setting PIN



Entering PIN

① **Note** Tap Settings > Location & security > Set up screen lock > None if you do not want to set up an additional process to unlock the screen.

## SETTING SIM/RUIM CARD LOCK

- 1 Tap Settings > Location & security > Set up SIM/RUIM card lock.
- 2 Tap **Lock SIM/RUIM card** and enter the SIM PIN if you want to require a PIN to use the phone.
- 3 Tap **Change SIM/RUIM PIN** and enter the old SIM PIN and a new SIM PIN if you want to change the SIM/RUIM PIN.



## SETTING THE CREDENTIAL STORAGE PASSWORD

- 1 Tap **Settings** > **Location & security** > **Set password**.
- 2 Enter a new password and enter it again to confirm.
- 3 Tap **OK**.

## APPLICATIONS

### MANAGING APPLICATIONS

- 1 Tap **Settings** > **Applications** > **Manage applications** > **Downloaded**.
- 2 Tap an application and tap **Force stop** if you want to stop its operation by force. Tap **Uninstall** if you want to uninstall the application.
- 3 Tap **Running** on the top of the screen and tap an application to manage its operation.

### VIEWING RUNNING SERVICES AND APPLICATIONS

- 1 Tap **Settings** > **Applications** > **Running services**.
- 2 Tap a service or an application to stop its operation or to edit its options.
- 3 Tap **Stop** if you want to stop its operation.

### DEBUGGING USB

- 1 Tap **Settings** > **Applications** > **Development**.
- 2 Tap **USB debugging** to allow the debug mode when the USB cable is connected.
- 3 Read and tap **OK** on the USB debugging information page.

## MAINTAINING THE STAYING CONDITION

- 1 Tap **Settings** > **Applications** > **Development**.
- 2 Tap **Stay awake** to keep ADR8995 awake while it is being charged.

## ALLOWING MOCK LOCATIONS

- 1 Tap **Settings** > **Applications** > **Development**.
- 2 Tap **Allow mock locations** to pretend to be in another Location for development purposes.

## ACCOUNTS & SYNC

### MANAGING BACKGROUND DATA

- 1 Tap **Settings** > **Accounts & sync**.
- 2 Tap **Background data** if you want to sync, send and receive data any time.

### ALLOWING BACKGROUND DATA TO SYNC AUTOMATICALLY

- 1 Tap **Settings** > **Accounts & sync**.
- 2 Tap **Auto-sync** if you want to sync data automatically.

### RUNNING BACKUP ASSISTANT

- 1 Tap **Settings** > **Accounts & sync**.
- 2 Tap **Backup Assistant**.

## PRIVACY

### BACKING UP DATA

- 1 Tap **Settings** > **Privacy**.
- 2 Tap **Back up my data** if you want to back up your data.
- 3 Tap **Automatic restore** if you want to restore backed-up data for an application.

### RESETTING ADR8995

- 1 Tap **Settings** > **Privacy**.
- 2 Tap **Factory data reset** if you want to erase all data from the phone.
- 3 Tap **Reset phone**.
- 4 Tap **Erase everything**.

## STORAGE

### VIEWING THE STATUS OF SPACE

- 1 Tap **Settings** > **Storage**. The status of space available for ADR8995 is displayed.

## FORMATTING THE MICROSD CARD

- 1 Tap **Settings > Storage**.
- 2 Tap **Unmount SD card > OK**.
- 3 Tap **Erase SD card > Erase SD card > Erase everything**.
- 4 Tap **Mount SD card** if you want to mount the card.

## LANGUAGE & KEYBOARD

### SELECTING THE LANGUAGE

- 1 Tap **Settings > Language & keyboard > Select language**.
- 2 Select and tap a language to use for ADR8995.

### SETTING ANDROID KEYBOARD

- 1 Tap **Settings > Language & keyboard > Android keyboard**.
- 2 Tap **Vibrate on keypress** if you want ADR8995 to vibrate when you press soft keys.

## ACCESSIBILITY

### SETTING THE ACCESSIBILITY OPTION

- 1 Tap **Settings > Accessibility**.
- 2 Tap **Power button ends call** if you want to end a call by pressing the LOCK/PWR key.

## DATE & TIME

### ALLOWING DATE AND TIME TO BE SET AUTOMATICALLY

- 1 Tap **Settings** > **Date & time**.
- 2 Tap **Automatic**.

ⓘ **Note** Set date, Select time zone and Set time will not work if you tap Automatic.

### SETTING THE DATE

- 1 Tap **Settings** > **Date & time** > **Set date**.
- 2 Deselect Automatic and enter month, day and year for ADR8995.
- 3 Tap **Set**.

### SETTING TIME ZONE

- 1 Tap **Settings** > **Date & time** > **Select time zone**.
- 2 Select and tap a time zone in the list.

### SETTING TIME

- 1 Tap **Settings** > **Date & time** > **Set time**.
- 2 Enter the minute and the hour.
- 3 Tap **Set**.



## SELECTING DATE FORMAT

- 1 Tap **Settings** > **Date & time** > **Select date format**.
- 2 Select a preferred date format.
- 3 Tap **OK**.

## ABOUT PHONE

### UPDATING SOFTWARE

- 1 Tap **Settings** > **About phone**.
- 2 Tap **Software Update**.
- 3 Tap **Status** if you want to see the current status of the software and tap **OK**.
- 4 Tap **Check New** > **Yes** if you want to check the latest software and download it on your phone.

① **Note** You can also update the software by tapping **Software Update** from the applications menu.

### CHECKING THE STATUS OF THE PHONE

- 1 Tap **Settings** > **About phone**.
- 2 Tap **Status** if you want to check the current status of the phone, including battery status, battery level and your phone number.

### CHECKING BATTERY USE

- 1 Tap **Settings** > **About phone**.
- 2 Tap **Battery use** if you want to check how the battery is being used.

## SEEING LEGAL INFORMATION

- 1** Tap **Settings > About phone**.
- 2** Tap **Legal information** if you want to see the open source licenses and Google's legal information.

## RESETTING ADR8995

Solve repeated problems by resetting ADR8995. Make sure to turn off ADR8995 first to protect information and software in ADR8995.

- 1** Remove the battery cover and battery without turning off ADR8995.
- 2** Insert the battery to ADR8995 right away.
- 3** Turn on ADR8995.

# 12

## APPENDIX

SAFETY AND WARRANTY

UPnP AND DLNA

SPECIFICATIONS

LOCATION-BASED SERVICES

END USER LICENSE AGREEMENT (EULA)

TROUBLESHOOTING CHECKLIST

INDEX

# APPENDIX

## SAFETY AND WARRANTY

### SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES

#### EXPOSURE TO RADIO FREQUENCY SIGNALS

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for handheld wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

ANSI C951 (1992) \*

NCRP Report 86 (1986) \*\*

ICNIRP (1996) \*\*\*

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C951).

The design of your phone complies with the FCC guidelines (and those standards).

\* American National Standards Institute.

\*\* National Council on Radiation Protection and Measurements.

\*\*\* International Commission on Non-Ionizing Radiation Protection.

#### ANTENNA SAFETY

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Please contact your local dealer for replacement antenna.

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

## DRIVING SAFETY

Talking on the phone while driving is extremely dangerous and is illegal in some states. Remember, safety comes first. Check the laws and regulations on the use of phones in the areas where you drive. Always obey them. Also, if using your phone while driving, please:

- Give full attention to driving. Driving safely is your first responsibility.
- Use hands-free operation, if available.
- Pull off the road and park before making or answering a call, if driving conditions so require.

If you must use the phone while driving, please use one-touch, speed dialing, and auto answer modes.

An airbag inflates with great force. DO NOT place objects, including both installed or portable wireless equipment, in the area over the airbag or in the air bag deployment area. If in-vehicle wireless equipment is improperly installed and the air bag inflates, serious injury could result.

**⚠ WARNING** Failure to follow these instructions may lead to serious personal injury and possible property damage.

## ELECTRONIC DEVICES

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment may not be shielded against the RF signals from your wireless phone. Therefore, use of your phone must be restricted in certain situations.

## PACEMAKERS

The Health Industry Manufacturers Association recommends that a minimum separation of six (6") inches be maintained between a handheld wireless phone and a pacemaker to avoid potential interference with the pacemaker. These recommendations are consistent with the independent research by and recommendations of Wireless Technology Research. Persons with pacemakers:

- ALWAYS keep the phone more than six inches from your pacemaker when the phone is turned on.
- Do not carry the phone in a breast pocket.

- Use the ear opposite the pacemaker to minimize the potential for interference.
- If you have any reason to suspect that interference is taking place, turn your phone OFF immediately.

## HEARING AIDS

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your service provider (or call the customer service line to discuss alternatives).

## OTHER MEDICAL DEVICES

If you use any other personal medical device, consult the manufacturer of your device to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information. Turn your phone OFF in healthcare facilities when any regulations posted in these areas instruct you to do so. Hospitals or healthcare facilities may be using equipment that could be sensitive to external RF energy.

## VEHICLES

RF signals may affect improperly installed or inadequately shielded electronic systems in motor vehicles. Check with the manufacturer or its representative regarding your vehicle. You should also consult the manufacturer of any equipment that has been added to your vehicle.

## POSTED FACILITIES

Turn your phone OFF where posted notices so require.

## OTHER SAFETY GUIDELINES

### AIRCRAFT

FCC regulations prohibit using your phone while in the air. Turn your phone OFF before boarding an aircraft. Always request and obtain prior consent and approval of an authorized airline representative before using your phone aboard an aircraft. Always follow the instructions of the airline representative

whenever using your phone aboard an aircraft, to prevent any possible interference with airborne electronic equipment.

## **BLASTING AREAS**

To avoid interfering with blasting operations, turn your phone OFF when in a “blasting area” or in areas posted: “Turn off two-way radio.” Obey all signs and instructions.

## **POTENTIALLY EXPLOSIVE ATMOSPHERES**

Turn your phone OFF when in any area with a potentially explosive atmosphere and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; vehicles using liquefied petroleum gas (such as propane or butane); areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle’s engine.

## **PRECAUTIONS**

Your Handheld Portable Telephone is a high quality piece of equipment. Before operating, read all instructions and cautionary markings on (1) USB AC Adapter (2) Battery and (3) Product Using Battery.

Failure to follow the directions below could result in serious bodily injury and/or property damage due to battery liquid leakage, fire or rupture.

- DO NOT use this equipment in an extreme environment where high temperature or high humidity exists.
- DO NOT abuse the equipment. Avoid striking, shaking or shocking. When not using, lay down the unit to avoid possible damage due to instability.
- DO NOT expose this equipment to rain or spilled beverages.
- DO NOT use unauthorized accessories.

- DO NOT disassemble the phone or its accessories. If service or repair is required, return unit to an authorized PCD cellular service center. If unit is disassembled, the risk of electric shock or fire may result.
- DO NOT short-circuit the battery terminals with metal items etc.

## SAFETY INFORMATION FOR FCC RF EXPOSURE

### WARNING! READ THIS INFORMATION BEFORE USING

#### CAUTIONS

In August 1996 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards.

#### BODY-WORN OPERATION

This device was tested for typical body-worn operations with the back of the phone kept 2 cm. from the body. To maintain compliance requirements, use only belt-clips, holsters or similar accessories that maintain a 2 cm separation distance between the user's Body and the back of the phone, including the antenna.

The use of belt-clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

For more information about RF exposure, please visit the FCC website at <http://www.fcc.gov>.

#### SAR INFORMATION

**THIS MODEL PHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radiofrequency (RF) energy set by the Federal Communications



Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 16 W/kg. \* Tests for SAR are conducted with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.

Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is 1.05W/Kg and when worn on the body, as described in this user guide, is 0.797W/Kg (Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement for safe exposure.

The SAR testing for Body-worn operation was performed with a belt clip that provided a 20mm separation. The User's Manual indicates that any holsters/clips used with this device should contain no metallic components.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines.

SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of <http://www.fcc.gov/oet/ea> after searching on JYCAPACHE.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications Industry Association (CTIA) web-site at <http://www.ctia.org>.

\* In the United States and Canada, the SAR limit for mobile phones used by the public is 16 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.

## HEARING AID COMPATIBILITY (HAC) FOR WIRELESS TELECOMMUNICATIONS DEVICES

### PCD'S COMMITMENT

PCD believes that all of our customers should be able to enjoy the benefits of digital wireless technologies.

We are committed to providing a selection of compatible devices for our customers who wear hearing aids.

**THIS PHONE HAS A HAC RATING OF M4/T4**

### WHAT IS HEARING AID COMPATIBILITY?

The Federal Communications Commission has implemented rules and a rating system designed to enable people who wear hearing aids to more effectively use these wireless telecommunications devices. The standard for compatibility of digital wireless phones with hearing aids is set forth in American National Standard Institute (ANSI) standard C6319. There are two sets of ANSI standards with ratings from one to four (four being the best rating): an "M" rating for reduced interference making it easier to hear conversations on the phone when using the hearing aid microphone, and a "T" rating that enables the phone to be used with hearing aids operating in the telecoil mode thus reducing unwanted background noise.

### HOW WILL I KNOW WHICH WIRELESS PHONES ARE HEARING AID COMPATIBLE?

The Hearing Aid Compatibility rating is displayed on the wireless phone box.

A phone is considered Hearing Aid Compatible for acoustic coupling (microphone mode) if it has an "M3" or "M4" rating. A digital wireless phone is considered Hearing Aid Compatible for inductive coupling (telecoil mode) if it has a "T3" or "T4" rating.



## HOW WILL I KNOW IF MY HEARING AID WILL WORK WITH A PARTICULAR DIGITAL WIRELESS PHONE?

You'll want to try a number of wireless phones so that you can decide which works the best with your hearing aids. You may also want to talk with your hearing aid professional about the extent to which your hearing aids are immune to interference, if they have wireless phone shielding, and whether your hearing aid has a HAC rating.

### MORE INFORMATION ABOUT HEARING AIDS AND DIGITAL WIRELESS PHONE

- For FCC Hearing Aid Compatibility and Volume Control, Visit <http://www.fcc.gov/cgb/dro/hearing.html>
- For Hearing Loss Association of America, Visit <http://www.hearingloss.org/learn/cellphonetech.asp>
- For CTIA, Visit <http://www.accesswireless.org/hearingaid/>
- For Gallaudet University, RERC, Visit <http://tap.gallaudet.edu/voice>

### FDA CONSUMER UPDATE



U.S. FOOD AND DRUG ADMINISTRATION – CENTER FOR DEVICES AND RADIOLOGICAL HEALTH CONSUMER UPDATE ON WIRELESS PHONES

#### 1. Do wireless phones pose a health hazard?

The available scientific evidence does not show that any health problems are associated with using wireless phones. There is no proof, however, that wireless phones are absolutely safe. Wireless phones emit low levels of radiofrequency energy (RF) in the microwave range while being used. They also emit very low levels of RF when in the home screen. Whereas high levels of RF can produce health effects (by heating tissue), exposure to low level RF that does not produce heating effects causes no known adverse health effects. Many studies of low level RF exposures have not found any biological effects. Some studies have suggested that some biological effects may occur, but such findings have not been confirmed by additional research. In some cases, other researchers have had difficulty in reproducing those studies, or in determining the reasons for inconsistent results.

## 2. What is FDA's role concerning the safety of wireless phones?

Under the law, FDA does not review the safety of radiation-emitting consumer products such as wireless phones before they can be sold, as it does with new drugs or medical devices. However, the agency has authority to take action if wireless phones are shown to emit radiofrequency energy (RF) at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of wireless phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists. Although the existing scientific data do not justify FDA regulatory actions, FDA has urged the wireless phone industry to take a number of steps, including the following:

- Support needed research into possible biological effects of RF of the type emitted by wireless phones;
- Design wireless phones in a way that minimizes any RF exposure to the user that is not necessary for device function; and
- Cooperate in providing users of wireless phones with the best possible information on possible effects of wireless phone use on human health.

FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of RF safety to ensure coordinated efforts at the federal level. The following agencies belong to this working group:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Safety and Health Administration
- National Telecommunications and Information Administration

The National Institutes of Health participates in some inter-agency working group activities, as well. FDA shares regulatory responsibilities for wireless phones with the Federal Communications Commission (FCC). All phones that are sold in the United States must comply with FCC safety guidelines that limit RF exposure. FCC relies on FDA and other health agencies for safety questions about wireless phones. FCC also regulates the base stations that the wireless phone networks rely upon. While these base stations operate at higher power than do the wireless phones themselves, the RF exposures that people get from these base stations are typically thousands of times lower than

those they can get from wireless phones. Base stations are thus not the subject of the safety questions discussed in this document.

### **3. What kinds of phones are the subject of this update?**

The term “wireless phone” refers here to hand-held wireless phones with built-in antennas, often called “cell,” “mobile,” or “PCS” phones. These types of wireless phones can expose the user to measurable radiofrequency energy (RF) because of the short distance between the phone and the user’s head. These RF exposures are limited by Federal Communications Commission safety guidelines that were developed with the advice of FDA and other federal health and safety agencies. When the phone is located at greater distances from the user, the exposure to RF is drastically lower because a person’s RF exposure decreases rapidly with increasing distance from the source. The so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house, typically operate at far lower power levels, and thus produce RF exposures far below the FCC safety limits.

### **4. What are the results of the research done already?**

The research done thus far has produced conflicting results, and many studies have suffered from flaws in their research methods. Animal experiments investigating the effects of radiofrequency energy (RF) exposures characteristic of wireless phones have yielded conflicting results that often cannot be repeated in other laboratories. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. However, many of the studies that showed increased tumor development used animals that had been genetically engineered or treated with cancer-causing chemicals so as to be predisposed to develop cancer in the absence of RF exposure. Other studies exposed the animals to RF for up to 22 hours per day. These conditions are not similar to the conditions under which people use wireless phones, so we don’t know with certainty what the results of such studies mean for human health. Three large epidemiology studies have been published since December 2000. Between them, the studies investigated any possible association between the use of wireless phones and primary brain cancer, glioma, meningioma, or acoustic neuroma, tumors of the brain or salivary gland, leukemia, or other cancers. None of the studies demonstrated the existence of any harmful health effects from wireless phone RF exposures. However, none of the studies can answer questions about long-term exposures, since the average period of phone use in these studies was around three years.

## **5. What research is needed to decide whether RF exposure from wireless phones poses a health risk?**

A combination of laboratory studies and epidemiological studies of people actually using wireless phones would provide some of the data that are needed. Lifetime animal exposure studies could be completed in a few years. However, very large numbers of animals would be needed to provide reliable proof of a cancer promoting effect if one exists. Epidemiological studies can provide data that is directly applicable to human populations, but 10 or more years' follow-up may be needed to provide answers about some health effects, such as cancer. This is because the interval between the time of exposure to a cancer-causing agent and the time tumors develop - if they do - may be many, many years. The interpretation of epidemiological studies is hampered by difficulties in measuring actual RF exposure during day-to-day use of wireless phones. Many factors affect this measurement, such as the angle at which the phone is held, or which model of phone is used.

## **6. What is FDA doing to find out more about the possible health effects of wireless phone RF?**

FDA is working with the U.S. National Toxicology Program and with groups of investigators around the world to ensure that high priority animal studies are conducted to address important questions about the effects of exposure to radiofrequency energy (RF). FDA has been a leading participant in the World Health Organization International Electromagnetic Fields (EMF) Project since its inception in 1996. An influential result of this work has been the development of a detailed agenda of research needs that has driven the establishment of new research programs around the world. The Project has also helped develop a series of public information documents on EMF issues. FDA and the Cellular Telecommunications & Internet Association (CTIA) have a formal Cooperative Research and Development Agreement (CRADA) to do research on wireless phone safety. FDA provides the scientific oversight, obtaining input from experts in government, industry, and academic organizations. CTIA-funded research is conducted through contracts to independent investigators. The initial research will include both laboratory studies and studies of wireless phone users. The CRADA will also include a broad assessment of additional research needs in the context of the latest research developments around the world.

## **7. How can I find out how much radiofrequency energy exposure I can get by using my wireless phone?**

All phones sold in the United States must comply with Federal Communications Commission (FCC) guidelines that limit radiofrequency energy (RF) exposures. FCC established these guidelines in

consultation with FDA and the other federal health and safety agencies. The FCC limit for RF exposure from wireless telephones is set at a Specific Absorption Rate (SAR) of 16 watts per kilogram (16 W/kg). The FCC limit is consistent with the safety standards developed by the Institute of Electrical and Electronic Engineering (IEEE) and the National Council on Radiation Protection and Measurement. The exposure limit takes into consideration the body's ability to remove heat from the tissues that absorb energy from the wireless phone and is set well below levels known to have effects. Manufacturers of wireless phones must report the RF exposure level for each model of phone to the FCC. The FCC website (<http://www.fda.gov> (under “c” in the subject index, select Cell Phones > Research)) gives directions for locating the FCC identification number on your phone so you can find your phone's RF exposure level in the online listing.

### **8. What has FDA done to measure the radiofrequency energy coming from wireless phones?**

The Institute of Electrical and Electronic Engineers (IEEE) is developing a technical standard for measuring the radiofrequency energy (RF) exposure from wireless phones and other wireless handsets with the participation and leadership of FDA scientists and engineers. The standard, “Recommended Practice for Determining the Spatial-Peak Specific Absorption Rate (SAR) in the Human Body Due to Wireless Communications Devices: Experimental Techniques,” sets forth the first consistent test methodology for measuring the rate at which RF is deposited in the heads of wireless phone users. The test method uses a tissue-simulating model of the human head. Standardized SAR test methodology is expected to greatly improve the consistency of measurements made at different laboratories on the same phone. SAR is the measurement of the amount of energy absorbed in tissue, either by the whole body or a small part of the body. It is measured in watts/kg (or milliwatts/g) of matter. This measurement is used to determine whether a wireless phone complies with safety guidelines.

### **9. What steps can I take to reduce my exposure to radiofrequency energy from my wireless phone?**

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if you are concerned about avoiding even potential risks, you can take a few simple steps to minimize your exposure to radiofrequency energy (RF). Since time is a key factor in how much exposure a person receives, reducing the amount of time spent using a wireless phone will reduce RF exposure.

- If you must conduct extended conversations by wireless phone every day, you could place more distance between your body and the source of the RF, since the exposure level drops off dramatically with distance.

For example, you could use a headset and carry the wireless phone away from your body or use a wireless phone connected to a remote antenna. Again, the scientific data do not demonstrate that wireless phones are harmful. But if you are concerned about the RF exposure from these products, you can use measures like those described above to reduce your RF exposure from wireless phone use.

#### **10. What about children using wireless phones?**

The scientific evidence does not show a danger to users of wireless phones, including children and teenagers. If you want to take steps to lower exposure to radiofrequency energy (RF), the measures described above would apply to children and teenagers using wireless phones. Reducing the time of wireless phone use and increasing the distance between the user and the RF source will reduce RF exposure. Some groups sponsored by other national governments have advised that children be discouraged from using wireless phones at all. For example, the government in the United Kingdom distributed leaflets containing such a recommendation in December 2000. They noted that no evidence exists that using a wireless phone causes brain tumors or other ill effects. Their recommendation to limit wireless phone use by children was strictly precautionary; it was not based on scientific evidence that any health hazard exists.

#### **11. What about wireless phone interference with medical equipment?**

Radiofrequency energy (RF) from wireless phones can interact with some electronic devices. For this reason, FDA helped develop a detailed test method to measure electromagnetic interference (EMI) of implanted cardiac pacemakers and defibrillators from wireless telephones. This test method is now part of a standard sponsored by the Association for the Advancement of Medical Instrumentation (AAMI). The final draft, a joint effort by FDA, medical device manufacturers, and many other groups, was completed in late 2000. This standard will allow manufacturers to ensure that cardiac pacemakers and defibrillators are safe from wireless phone EMI. FDA has tested hearing aids for interference from handheld wireless phones and helped develop a voluntary standard sponsored by the Institute of Electrical and Electronic Engineers (IEEE). This standard specifies test methods and performance requirements for hearing aids and wireless phones so that no interference occurs when a person uses a “compatible” phone and a “compatible” hearing aid at the same time. This standard was approved by the IEEE in 2000. FDA continues to monitor the use of wireless phones for possible interactions with other medical devices. Should harmful interference be found to occur, FDA will conduct testing to assess the interference and work to resolve the problem.



## 12. Where can I find additional information?

For additional information, please refer to the following resources:

- For FDA web page on wireless phones, Visit <http://www.fda.gov/Radiation-EmittingProducts/RadiationEmittingProductsandProcedures/HomeBusinessandEntertainment/CellPhones/default.htm>
- For Federal Communications Commission (FCC) RF Safety Program, Visit <http://www.fcc.gov/oet/rfsafety>
- For International Commission on Non-Ionizing Radiation Protection, Visit <http://www.icnirp.de>
- For World Health Organization (WHO) International EMF Project, Visit <http://www.who.int/peh-emf/en/>
- For National Radiological Protection Board (UK), Visit <http://www.hpa.org.uk/radiation/>

## AVOID POTENTIAL HEARING LOSS

Prolonged exposure to loud sounds is the most common cause of preventable hearing loss. Some scientific research suggests that using portable audio devices, and cellular telephones, at high volume settings for long durations may lead to permanent noise-induced hearing loss. This includes the use of headphones (including headsets, earbuds and Bluetooth® or other wireless devices). Exposure to very loud sound has also been associated in some studies with tinnitus (a ringing in the ear), hypersensitivity to sound and distorted hearing. Individual susceptibility to noise-induced hearing loss and other potential hearing problems varies.

The amount of sound produced by a portable audio device varies depending on the nature of the sound, the device, the device settings and the headphones. You should follow some commonsense recommendations when using any portable audio device:

- Set the volume in a quiet environment and select the lowest volume at which you can hear adequately.
- When using headphones, turn the volume down if you cannot hear the people speaking near you or if the person sitting next to you can hear what you are listening to.

- Do not turn the volume up to block out noisy surroundings. If you choose to listen to your portable device in a noisy environment, use noise-cancelling headphones to block out background environmental noise.
- Limit the amount of time you listen. As the volume increases, less time is required before your hearing could be affected.
- Avoid using headphones after exposure to extremely loud noises, such as concerts, that might cause temporary hearing loss. Temporary hearing loss might cause unsafe volumes to sound normal.
- Do not listen at any volume that causes you discomfort. If you experience ringing in your ears, hear muffled speech or experience any temporary hearing difficulty after listening to your portable audio device, discontinue use and consult your doctor.

YOU CAN OBTAIN ADDITIONAL INFORMATION ON THIS SUBJECT FROM THE FOLLOWING SOURCES:

**AMERICAN ACADEMY OF AUDIOLOGY**

11730 Plaza America Drive, Suite 300

Reston, VA 20190

Voice: 800-AAA-2336

Email: [infoaud@audiology.org](mailto:infoaud@audiology.org)

Internet: <http://www.audiology.org>

**NATIONAL INSTITUTE ON DEAFNESS AND OTHER COMMUNICATION DISORDERS NATIONAL INSTITUTES OF HEALTH**

31 Center Drive, MSC 2320

Bethesda, MD USA 20892-2320

Voice: (301) 496-7243

Email: [nidcdinfo@nidcd.nih.gov](mailto:nidcdinfo@nidcd.nih.gov)

Internet: <http://www.nidcd.nih.gov/health/hearing>

## NATIONAL INSTITUTE FOR OCCUPATIONAL SAFETY AND HEALTH

1600 Clifton Rd

Atlanta GA 30333 USA

Voice: 1-800-CDC-INFO (1-800-232-4636)

Internet: <http://www.cdc.gov/niosh/topics/noise/default.html>

## FCC COMPLIANCE INFORMATION

This device complies with Part 15 of FCC Rules.

### Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received. Including interference that may cause undesired operation.

## INFORMATION TO THE USER

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful Interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if Not installed and used in accordance with the instructions, may cause harmful Interference to radio communications. However, there is no guarantee that interference will not occur in a particular Installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.  
Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet of a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for assistance.

⚠ **CAUTION** Changes or modification not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment. Connecting of peripherals requires the use of grounded shielded signal cables.

## 12-MONTH LIMITED WARRANTY

Personal Communications Devices, LLC. (the "Company") warrants to the original retail purchaser of this handheld portable cellular telephone, that should this product or any part thereof during normal consumer usage and conditions, be proven defective in material or workmanship that results in product failure within the first twelve (12) month period from the date of purchase, such defect(s) will be repaired or replaced (with new or rebuilt parts) at the Company's option, without charge for parts or labor directly related to the defect(s).

The antenna, keypad, display, rechargeable battery and battery charger, if included, are similarly warranted for twelve (12) months from date of purchase.

This Warranty extends only to consumers who purchase the product in the United States or Canada and it is not transferable or assignable.

This Warranty does not apply to:

- (a) Product subjected to abnormal use or conditions, accident, mishandling, neglect, unauthorized alteration, misuse, improper installation or repair or improper storage;
- (b) Product whose mechanical serial number or electronic serial number has been removed, altered or defaced.
- (c) Damage from exposure to moisture, humidity, excessive temperatures or extreme environmental conditions;
- (d) Damage resulting from connection to, or use of any accessory or other product not approved or authorized by the Company;
- (e) Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts;
- (f) Product damaged from external causes such as fire, flooding, dirt, sand, weather conditions, battery leakage, blown fuse, theft or improper usage of any electrical source.

The Company disclaims liability for removal or reinstallation of the product, for geographic coverage, for inadequate signal reception by the antenna or for communications range or operation of the cellular system as a whole.

When sending your wireless device to Personal Communications Devices for repair or service, please note that any personal data or software stored on the device may be inadvertently erased or altered. Therefore, we strongly recommend you make a back up copy of all data and software contained on your device before submitting it for repair or service. This includes all contact lists, downloads (i.e. third-party software applications, ringtones, games and graphics) and any other data added to your device. In addition, if your wireless device utilizes a SIM or Multimedia card, please remove the card before submitting the device and store for later use when your device is returned, Personal Communications Devices is not responsible for and does not guarantee restoration of any third-party software, personal information or memory data contained in, stored on, or integrated with any wireless device, whether under warranty or not, returned to Personal Communications Devices for repair or service.

To obtain repairs or replacement within the terms of this Warranty, the product should be delivered with proof of Warranty coverage (e.g. dated bill of sale), the consumer's return address, daytime phone number and/or fax number and complete description of the problem, transportation prepaid, to the Company at the address shown below or to the place of purchase for repair or replacement processing. In addition, for reference to an authorized Warranty station in your area, you may telephone in the United States (800) 229-1235, and in Canada (800) 465-9672 (in Ontario call 416-695-3060).

THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.

ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY MUST BE BROUGHT WITHIN A PERIOD OF 18 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR AN SPECIAL CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. THE COMPANY SHALL NOT BE LIABLE FOR THE DELAY IN RENDERING SERVICE UNDER THIS WARRANTY OR LOSS OF USE DURING THE TIME THE PRODUCT IS BEING REPAIRED OR REPLACED.

No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product. Some states or provinces do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitation or exclusions may not apply to you. This Warranty gives you specific

legal rights, and you may also have other rights, which vary from state to state or province to province.

IN USA: Personal Communications Devices.

555 Wireless Blvd.

Hauppauge, NY 11788

1-800-229-1235

IN CANADA: PCD Communications Canada LLC.

5535 Eglinton Avenue West, Suite 234

Toronto, Ontario

M9C 5K5

1-800-465-9672

## UPNP AND DLNA

### UNIVERSAL PLUG AND PLAY (UPnP)



Universal Plug and Play (UPnP) technology targets home networks, proximity networks and networks in small businesses and commercial buildings. It enables data communication between any two devices under the command of any control device on the network. UPnP technology is independent of any particular operating system, programming language, or network technology.

### DIGITAL LIVING NETWORK ALLIANCE (DLNA)



You'll find the DLNA Certified™ logo on all kinds of new digital devices for your home and on the go – TVs, PCs, mobile phones, you name it. But they aren't the same TVs, PCs and mobile phones you're used to. They may look familiar, but they have new capabilities of DLNA Device Classes.

## SPECIFICATIONS

### DESIGN

Slim bar

DISPLAYS

TBD

### MELODIES

AAC, AAC+, eAAC+, MP3, AMR-(NB/WB), MIDI, OGG, WAV, (QCELP/ EVRC)

### CAMERA

Integrated 5M CMOS Camera

- Resolution up to 2560 x 1920 (4,915,200 pixels)
- MPEG4 Video recording up to 20f/s; playing up to 30f/s (WVGA size)
- Self-timer function (3, 5 or 10 seconds)
- Photo album and video album

### DIMENSIONS & WEIGHT

- Weight: TBD
- Dimensions: 127 x 64.4 x 12.09mm (5" x 2.54" x 0.48")

### POWER MANAGEMENT (PERFORMANCE)

Battery Type	Capacity	Standby Time	Talk Time
Standard Lithium-Ion (Li-ion)	1,500 mAh	TBD	TBD

## OPERATING FREQUENCY

- GSM/GPRS/EDGE 850/900/1800/1900 MHz, UMTS/HSDPA 850/1900 MHz networks in North America, South America, Europe, Africa, and Asia-Pacific where these networks are supported.
- Automatic band switching

## LOCATION-BASED SERVICES

Your wireless device can determine its (and your) physical, geographical location ("Location Information"). Certain applications and services can access, collect and use Location Information and disclose the information to others. Use caution and discretion when you make Location Information available to them.

To limit potential unauthorized access to your Location Information, Verizon Wireless devices are preset to "E911" which only allows authorized emergency response personnel to locate you when you dial 9-1-1 from your wireless device.

When you select "VZW Location Services" or "Standalone GPS Services" or "Google Location Services" you allow third party access to Location Information. Any software, widget or peripheral components or service you choose to download, add or attach to your wireless device or otherwise access or use can use this information.

Check your wireless device periodically and only use software, widgets, peripheral components and services from reliable sources. Verizon Wireless makes no representation of accuracy, completeness or timeliness of any location data, product or service.

When you use your mobile browser or other services and applications, you authorize Verizon Wireless to collect, use and disclose your Location Information to provide you with any location services.

Verizon Wireless does not retain Location Information longer than necessary to provide the services to you. We will not knowingly disclose your Location Information to third parties without your consent, except as required by law.

Carefully review the privacy policies of application providers and third parties who have access to your Location Information. Significant risks can be associated with disclosing your Location Information to others.



## END USER LICENSE AGREEMENT (EULA)

Your use of Visual Voice Mail confirms that you are the account owner, you are authorized to sign up for this service and you agree to pay the monthly subscription fee. Basic Voice Mail and V Cast coverage areas are required to use Visual Voice Mail. Visual Voice Mail may not support all traditional Voice Mail features which will remain accessible by dialing \*86 from your handset. Standard messaging rates apply to any messages initiated from Visual Voice Mail.

Accessing Voice Mail, Call Forwarding, Call Return, Personal Operator and other features are subject to airtime, long distance, roaming charges and taxes and IN Calling minutes do not apply. Visual Voice Mail and traditional Voice Mail may not always be synchronized and if you cancel Visual Voice Mail you may lose all stored voice mails and information.

Visual Voice Mail can only use the Verizon Wireless network rather than the available WiFi connection. Standard data usage charges shall apply.

I understand that by selecting OK my password will be automatically stored and will allow anyone in possession of this device to have access to my voice mail. I further understand that my voice mail messages may be stored in electronic format on this device.

## TROUBLESHOOTING CHECKLIST

### WHEN AUDIO QUALITY IS POOR:

End a call and try again.

### WHEN THE OTHER PARTY CANNOT HEAR YOU SPEAKING:

Your phone may be set to MUTE. Disable the MUTE function. Or your hand may be covering the microphone.

### WHEN BATTERY LIFE IS SHORTER THAN USUAL:

This may happen when you are in an area with low signal strength. Turn off your phone when it is not in use. Change the battery when battery energy is exhausted.

**WHEN YOU CANNOT TURN ON YOUR PHONE:**

Make sure your battery is charged. Check to see if your phone works while recharging the battery.

**WHEN YOU ARE UNABLE TO SEND A MESSAGE:**

Either you are not registered to receive an SMS service, or you may be in an area where your network service provider cannot provide such a service.

**WHEN YOU ARE UNABLE TO MAKE A CALL:**

Your phone may be set to "fixed dial." Cancel the "fixed dial" function.

# INDEX

## A

ACCESSIBILITY	191
ACCOUNTS & SYNC	189
AIRPLANE MODE	177
ALARM/CLOCK	152
ANDROID MARKET	146
APPLICATIONS	2
AUTOMATIC RESTORE	190
AUTO-ROTATE SCREEN	182

## B

BACKGROUND DATA	189
BATTERY USE	193
Bluetooth	118
BOOKMARK	141
BRIGHTNESS	182
BROWSER	138

## C

CALCULATOR	150
CALENDAR	66

CALL LOG	45
CAMERA	91
CLOCKTOOLS	155
CONTACTS	57
CONVERTER	158

## D

DATE FORMAT	193
DATE & TIME	192
DISPLAY	182
DOC VIEWER	159
DTMF TONES	179

## E

EMAIL	70
ERASE EVERYTHING	173

## F

FACEBOOK	77
FACTORY DATA RESET	190
FORCE STOP	188

**G**

GALLERY	101
GMAIL	73
Google MAPS (See Maps)	125
Google SEARCH	144
Google TALK (See Talk)	
GPS SATELLITES	125

**H**

HANDY MEMO	161
HOME SCREEN	30

**I**

IM NOTIFICATIONS	64
------------------	----

**K**

KEYBOARD	50
----------	----

**L**

LANGUAGE & KEYBOARD	191
LATITUDE	128
LEGAL INFORMATION	194
LITHIUM ION (LI-ION) BATTERY	4
LOCATION & SECURITY	183

## LOCK/PWR KEY

25

**M**

MAPS	125
MASS STORAGE	174
MESSAGING	49
MicroSD CARD	15
MOBILE NETWORKS	177
MOCK LOCATIONS	189
MODEM	121
MOUNT SD CARD	172
MUSIC	85

**N**

NAVIGATION	131
NEWS & WEATHER	133

**P**

PASSWORD	185
PATTERN LOCK	184
PC	173
PIN	186
PLACES	126
PLAYLISTS	87

POWER BUTTON ENDS CALL 191  
 PRIVACY 190

**Q**

QUICK TEXT 53

**R**

RECORDER 164  
 RESET PHONE 190  
 RINGTONE 57

**S**

SAFETY INFORMATION 196  
 S-BOARD 80  
 SCREEN LOCK 184  
 SCREEN TIMEOUT 183  
 SET DATE 192  
 SETTINGS 177  
 SHORTCUTS 34  
 SILENT MODE 180  
 SIM/RUIM CARD 14  
 SOCIAL NET WIDGET 79  
 SOUND 180  
 STOPWATCH 157

STORAGE 172  
 SWYPE 52

**T**

TALK 62  
 TETHERING & PORTABLE HOTSPOT 121  
 TIMER 157  
 TIME ZONE 192  
 TOUCH SCREEN 20  
 TTY MODE 179

**U**

UNINSTALL 188  
 UNMOUNT SD CARD 191  
 USB DEBUGGING 188  
 USE MY LOCATION 144

**V**

VIBRATE 180  
 VOICE MAIL 46  
 VOICE SEARCH 146  
 VOLUME 181  
 VPN 178

**W**

WALLPAPER	36
WARRANTY	196
WEATHER	167
WIDGET	35
Wi-fi	110
WIRELESS & NETWORKS	111
WORLD TIME	155

**Y**

YOUTUBE	103
---------	-----

**Z**

ZOOMING	92
---------	----