



PANTECH
P2030

User Guide

Thank you for choosing the Pantech P2030, our latest mobile phone.

The Pantech P2030 has many features designed to enhance your mobile experience. From its EZ to read menus, to its sleek, stylish design, we know you will enjoy the entire P2030 experience.


This User Guide contains important and useful information that will maximize your familiarity with all that the Pantech P2030 has to offer.

Specifications

Design

Clamshell phone with internal and external display

Displays

- 260K Colors TFT LCD with 2.2" internal display
- 65K Colors TFT LCD with 1.38" external display
- 7 lines for text in basic mode with 16 point font
- Two soft keys and four-way scroll and selection  keys

Melodies

MIDI, i-Melody, MP3, AMR, WAV, AAC, AAC+, WMA

Camera

Integrated 1.3M CMOS Camera

- Resolution up to 1280 x 1024 (1.3M pixels)
- Mpeg4 Video recording/playing up to 15f/s (QCIF size)
- Self-timer function (5 seconds or 10 seconds)
- Photo album and video album

Dimensions & Weight

Weight: 101 g (with standard battery)

Dimensions: 99 mm x 50 mm x 18.65 mm

Power Management (Performance)

Battery Type	Capacity	Standby Time	Talk Time
Standard Lithium-Ion (Li-ion)	Up to 920mAh	Up to 250 hours	Up to 3 hours

Operating Frequency

- GSM 850Mhz, GSM 900Mhz, DCS 1800Mhz, and PCS 1900Mhz networks in North America, South America, Europe, Africa, and Asia-Pacific where these networks are supported.
- Automatic band switching.

Specifications.....	2
Phone overview	8
Using Shortcuts.....	10
Menu overview	11
Quick & Easy.....	14
SIM card and battery.....	17
Turning the phone on/off.....	20
Essential display indications.....	20
Setting the phone mode	22
Entering text.....	23
EZ quick call keys.....	26
PC Suite.....	26
Memory card.....	27

Breeze Mode

1. Calls and address book

Making, receiving and ending a call	32
Using video share.....	34
Options during a call	36
Checking all calls	39
Speed dialing	40
Using address book.....	41
Using your headset	44
Service and fixed dialing number.....	44

2. Messaging

Receiving messages.....	48
Creating and sending text messages.....	49
Creating multimedia messages.....	49
Managing messaging memory	54
Email.....	55

3. Multimedia

Camera	58
Photo album	63
Video album	64

4. Useful Features

Calendar	68
Alarm clock.....	69
Pill Reminder.....	69
User Guide	71
Calculator.....	71
Tip calculator	71
Stop watch	72
Voice recognition.....	72

5. Connectivity

Bluetooth	76
-----------------	----

Using Mobile Web	78
------------------------	----

6. Settings

Phone status.....	80
Sounds & alerts	80
Display settings	80
Memo	82

Advanced Mode

1. Calls and address book

Making, receiving and ending a call	84
Using video share	86
Options during a call	88
Call settings	91
Settings for video share	91
Checking all calls	92
Speed dialing	94

Using address book	95
Using your headset	97
Service and fixed dialing number.....	98
Caller identification.....	99

2. Messaging

Receiving messages	102
Creating and sending text messages.....	103
Creating multimedia messages.....	104
Message templates.....	109
Message settings.....	109
Managing messaging memory	111
Email.....	113
Using instant messenger	113

3. Multimedia

Camera	116
Photo album	121


Video album	123
Audio album.....	125
Music player	126
Music player settings	131
Media player.....	132
Other files.....	134
Managing memory.....	135
Playing games.....	135
AppCenter.....	135

4. Useful Features


Calendar	138
Alarm clock.....	139
Pill Reminder.....	139
User Guide	141
Calculator.....	141
Tip calculator	141

Stop watch	142	Display settings	157
Notepad and voice memo.....	142	Security.....	159
World time	144	Updating software	160
Converter	144	Reset.....	161
Timer	144	TTY.....	162
Voice recognition.....	145		
5. Connectivity		7. Appendix	
Bluetooth	148	Alert message	164
Using Mobile Web	151	Troubleshooting checklist	165
Using the web browser	151	Safety information	166
Setting profiles.....	153	Safety precautions	167
		About the battery usage	169
6. Settings		FCC Hearing-Aid Compatibility (HAC)	
Language	156	regulations for wireless devices	171
Time and date	156	FCC Regulatory Compliance	174
Voice command setting	156	Warranty	177
Sounds and alerts	157		


Phone overview

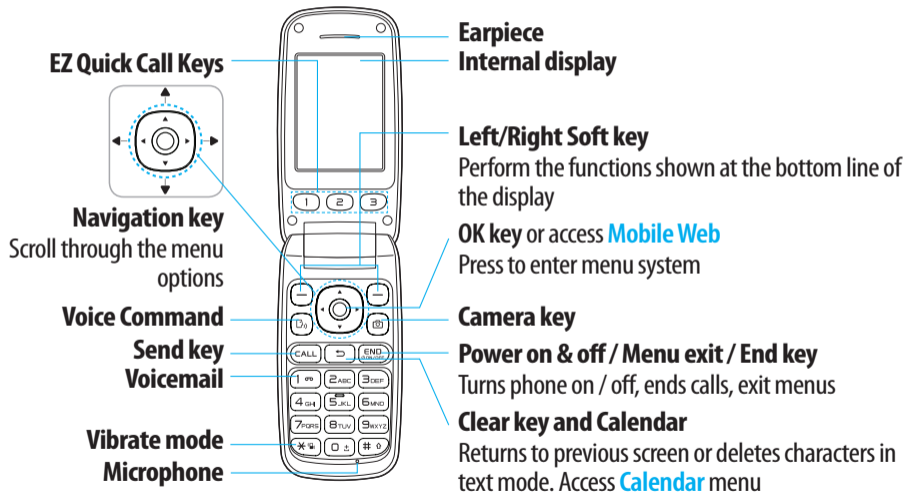

**Volume up /
down**

 


External Display

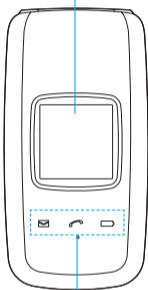


**LED Indicators
Message, Call,
Battery**

Camera Speaker

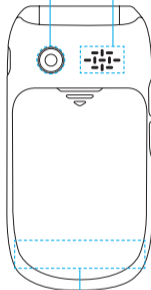

**Internal antenna
area**

 



**Micro USB
(Ear Mic. &
Charger)**

note: Holding the device by the internal antenna area might affect the quality of all calls.

Using Shortcuts

Numbered menu items, such as menus, sub-menus, and options can be quickly accessed by using their shortcut numbers. In Menu mode, Main Menu can be accessed by pressing the number keys (1 to 0) corresponding to their location on the screen.

Example: Accessing the **Phone Mode** menu.

1. Press **Menu**.
2. Press  for **Settings**.
3. Press  for **Phone Mode**.
4. Press the ▲/▼ scroll key to select the mode.

note: The steps may vary by mode and this manual provides instructions for both **Breeze Mode** and **Advanced Mode** respectively.

Menu overview

Breeze mode menu

Address Book

- Contacts
- Groups
- Favorites
- Settings
- Fixed Dial Numbers
- My Phone Number
- Service Numbers

Messaging

- Inbox
- Create Message
- Sent Messages
- Voice Mail
- Mobile Email

Camera

- Take a Picture
- Record a Video
- My Pictures
- My Videos
- Online Locker

AT&T Services

- Say a Command
- AT&T Navigator
- My Cast Weather
- Mobile Web
- Games & Apps
- My Account

Tools

- Calendar
- Alarm Clock
- Pill Reminder
- User Guide
- Calculator
- Tip Calculator
- Stop Watch

Settings

- Phone Status
- Sounds & Alerts
- Bluetooth
- Font Size
- Wallpaper
- Phone Mode

[§]SIM dependent [¶]Network dependent

Advanced mode menu



Address Book

Contacts
Groups
Favorites
Settings
Fixed Dial
Numbers
My Phone
Number
Service
Numbers



Messaging

Conversations
Create Message
Mobile Email
IM
Outbox
Drafts
Voice Mail
Settings
Templates
Used Space



IM



Mobile Email



Mobile Web



AppCenter



AT&T GPS

AT&T
Navigator
Shop GPS
AT&T
FamilyMap
Where
AllSport GPS



YPmobile



My Stuff

Applications
Audio
Games
Online Locker
Picture
Video
Tools
Other Files
Used Space



AT&T Music

Music Player
Shop Music
AT&T Radio
Shazam



Online Locker




 



Settings








  
Phone Mode
Profiles
Display
Call
Phone
Network
Connections
Network
Connectivity
Security





AT&T Software
Update
Reset
TTY
Phone
Information

^sSIM dependent ⁿNetwork dependent

Quick & Easy

Keys	Functions
	Perform the functions shown at the bottom line of the display by using these soft keys.
	Scroll through the menu options in Menu mode. In standby mode, Left Scroll: Access Mobile Email menu Right Scroll: Access IM menu Up Scroll: Access Create Message menu Down Scroll: Access Address Book menu
	Select a menu function or store user-input information, such as names. Also use this key for confirmation as the  key. Launch the Mobile Web directly if pressed in standby mode.
	Delete characters from the display, or return to previous menu. Open Calendar view if pressed quickly in standby mode.

Keys	Functions
	Make or receive a call. Show the recent call list in standby mode. Re-dial the last call number if pressed and held in standby mode.
	Complete the current call. Turn on/off the phone if pressed and held. Cancel user input and return to standby mode while in Menu mode.
	Quickly connect to the voice mail server if pressed and held in standby mode.
  	Enters numbers, letters or special characters. Go to the dial screen if pressed in standby mode.
	Enter or exit from vibrate mode if pressed and held in standby mode. Show the symbol input screen if pressed in text input mode.
	Enter the + sign prefix for international dialing if pressed and held. Enter the space character in text input mode.

Keys	Functions
	Change various text input modes if pressed at the text-editing screen.
	Adjust the earpiece volume while making a call. Control the Ringtone volume, vibrate mode and silent all mode in standby. Mute the ringtone of an incoming call. Reject the incoming call if pressed and held when you receive an incoming call.
	Turn camera capture mode on. Work as a camera shutter in capture mode.
	Turn the Voice Commands on.

SIM card and battery

About your SIM card

When you subscribe to your network operator, you receive a SIM (Subscriber Identity Module) card containing your registration information, PIN code, etc. Like a credit card, it should be kept secure and handled carefully. Do not bend, scratch or expose it to moisture. Avoid static electricity.

To avoid corrupting your SIM card's memory, always switch off your phone before removing or inserting your SIM card.


About your battery

Your phone uses a Li-Ion battery. Make sure to use an authorized battery and charger only. For more details, please inquire at your nearest dealer.


note: Your phone is powered by a Lithium Ion (Li-Ion) battery. This means that, unlike other forms of battery technology, you can recharge your battery while some charge remains without reducing your phone's autonomy due to the "battery memory effect" inherent in those technologies.

Installing/removing SIM card and battery


1. Remove the battery cover from the unit. To fit the battery cover, put it on the guide rail and push up.

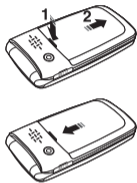


2. Insert the SIM card into the slot. The gold contacts of the SIM card should go against the metal contacts of the phone.

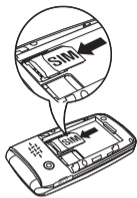

 
Put the contacts of the battery into the hole located at the bottom of the unit and then insert and press the upper side of the battery until you hear the “click”. Make sure you align the gold contacts at the battery end with contacts on the phone. If the



 contacts at the battery are not properly aligned, damage could occur to the phone and the battery.



 3. To remove the battery push the bottom of the battery to upwards (1) and remove (2) the battery.






Push the SIM card in the arrow direction as shown.




To charge your battery

1. To charge, connect the charger adapter as shown right.

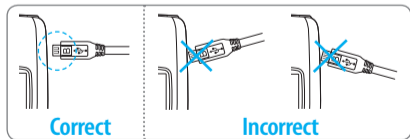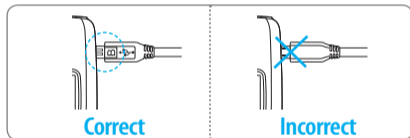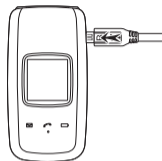

2. To remove the adapter connecting, pull the adapter away as shown right.

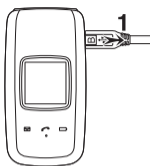

Turning the phone on/off











To turn on











1. Press and hold .










To turn off










1. Press and hold .



Essential display indications

	Signal strength. The greater the number of bars, the stronger the signal. When network is in searching mode  is displayed.
	Flight mode is active.
	A call is being made. When you are in no service area  is displayed.
	Call forwarding ⁿ is active.
	Incoming calls set to ring only (Normal).
	Incoming calls set to Vibrate and Ring .
	Incoming calls set to Vibrate Only .
	Incoming calls set to Silent .

	Received one or more text messages.
	Received one or more multimedia messages.
	Received one or more WAP push messages.
	Received one or more other messages.
	Received one or more voice messages.
	Inbox is full.
	A message is being sent.
	A message is being received.
	An alarm is set.
	Bluetooth is active.

	Bluetooth hands-free headset is connected.
	Bluetooth A2DP headset is connected.
	Bluetooth hands-free + A2DP headset is connected.
	Data transfer via Bluetooth.
	Headset is connected.
	USB is connected.
	External memory card is inserted.
	An error occurred on the external memory card.
	TTY is active.

	An EDGE signal is available. It is displayed when there is an active EDGE session.
	A GPRS signal is available. It is displayed when there is an active GPRS session.
	A 3G signal is available. It is displayed when there is an active 3G session.
	WAP is connected When the security is set  is displayed.
	Battery strength. When the battery charge is low,  is displayed.
	Available, Away, Invisible Status of AIM
	Online, Away, Busy, Offline Status of MSN


	Available, Busy, Invisible Status of YAHOO
	You have received one or more IM messages

ⁿNetwork dependent


Setting the phone mode

Your phone has two customized modes, Breeze and Advanced. The default is set to Breeze mode which provides EZ access to the functions used most frequently. In the Breeze mode, you can view an abbreviated menu: [Address Book](#), [Messaging](#), [Camera](#), [AT&T Services](#), [Tools](#) and [Settings](#). The **Advanced Mode** allows access to all menu items.

Breeze Mode

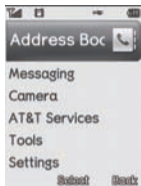

Advanced Mode

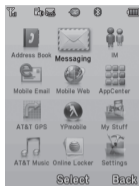

To change the phone mode

1. Press **Menu** > **Settings** > **Phone Mode**.
2. Select **Breeze Mode** or **Advanced Mode**.

Assigning the menu

 

You can set the most commonly used menu in **Shortcuts** in standby mode.

1. Press **Shortcuts** in standby mode > select **Unassigned**.
2. Press **Add**.
3. Select the menu and sub menu.
4. Press **Save**.

Entering text

You can enter text with multi-tap, predictive, numeric or symbol.

Useful keys

	Display symbols.
	Adding a space.



Press to toggle from initial caps to all caps, to lower case, or to numeric entries. Press to change the text entry functions from ABC mode to predictive mode, or number mode.

ABC Mode (lower case / initial caps / all caps)

Predictive Mode (lower case / initial caps / all caps)

Number Mode

Key characters by language

Each of the following keys will scroll through these sequential options listed by language.





Key	English	French	Spanish
	.	, - ? ! / ' @ :	

	abc	ç à ä	á ã ç
	def	é è	é
	ghi		í
	jkl		
	mno	ö ñ	ó ñ
	pqrs	ß	
	tuv	ù ü	ú ü
	wxyz		

ABC mode




Press the key labeled with the target letter once for the first letter; press it twice for the second letter, and so on.

1. Press to change the mode as multi-tap.

2. Press  to  to input text repeatedly. To write the letter “C”, press  3 times. To write number 2 press  4 times.

Predictive mode (T9)

The predictive mode automatically compares your keystrokes with an internal linguistic dictionary to determine the correct word. It will display the most commonly used first. To save a word not listed in phone’s dictionary, press **Options** > **Predictive Settings** > **My Words**.

1. Press  to change the mode to predictive.
2. Press  to  to input text.

For example, to write ‘hello’, press

    .

Number mode

You can input numbers in this mode.

1. Press  to change the mode to 123.
2. Press  to  and  to input numbers.

Symbol mode

You can input symbols.

1. Press  to view the symbols.
2. Press /// to select a symbol and press **Insert**.

EZ quick call keys

Getting in touch with those you call most is now as EZ as 1-2-3.

note: The following direction is an example with using (1) key. The usage of (2) and (3) key will be same as the following.

To assign a contact to Quick Call

1. Press (1).
2. Select **Quick Call** > **Assign**.
3. Select a contact > **Select**.

To make a call using one touch key

1. Press (1).
2. Press **Call**.

To send a message using one touch key

1. Press (1).
2. Press **Options** > **Send Message**.

PC Suite

PC suite is a Windows-based PC program that allows you to easily manage personal data and multimedia files by connecting your Phone to a PC. The PC suite application can be downloaded at <http://www.pantechusa.com/>.

System requirements

- Microsoft Windows 2000 or XP family and Vista 32 bit

- At least 300MB of free disk space
- Interface devices such as USB or Bluetooth for the connection with the phone

PC Suite features

- PC Suite launcher
- Connection Manager
- Contact Manager
- PC Sync
- Message Manager
- File Manager
- MMS PC Composer
- Internet Access

Memory card


You can use a microSD card as a memory card. It gives you more space to save pictures, videos, music, etc.

Inserting a memory card


1. Remove the battery cover and the battery from the unit.




2. Unlock the microSD card slot by carefully sliding it up. The metal cover should now easily lift up.

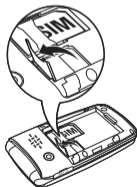

3. Insert the microSD card into the slot. The gold contacts of the microSD card should go against the metal contacts of the phone.

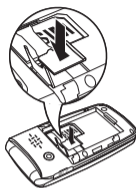

4. Close the metal cover and slide down to lock the microSD card in place. The  icon will be displayed when the phone is turned on.

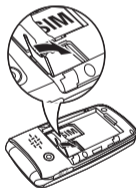

Using a memory card

You can save, move and delete the files between your phone and external memory card. You can also move and copy the files to computer from your phone.

To copy a file to the memory card

1. Select the file > **Options** > **Copy to External Memory**.
2. To copy the file back to the phone, press **Options** > **Copy to Phone**.

To move a file to the memory card

1. Select the file > **Options** > **Move to External Memory**.
2. To move the file back to the phone, press **Options** > **Move to Phone**.

To delete a file from the memory card

1. Select the file from the card > **Options** > **Delete**.

In **Advanced Mode**, you have access to all of the features of P2030 including the features provided by **Breeze Mode**.

To move the file from the card to the computer

1. Connect the data cable with mobile and the computer.
2. Press **Menu** > **Settings** > **Connectivity**.
3. Select **Select USB Mode**.
4. Select **Music Player**, **Mass Storage** or

Ask on Connection.

5. Follow the instructions on your computer screen.

note: Select **Music Player** when you want to add music to the playlist in your device. When you select **Ask on Connection**, it will ask you to select either the **Music Player** or **Mass Storage** every time you connect your device with your computer.

Resetting a memory card

1. Press **Menu** > **Settings** > **Reset**.
2. Enter the password > **External Memory Reset**.

note: The default password is '1234'.

Memo



P2030

1

Calls and address book

- Making, receiving and ending a call
- Using video share
- Options during a call
- Checking all calls
- Speed dialing
- Using address book
- Using your headset
- Service and fixed dialing number

Making, receiving and ending a call

Making a call

1. Enter the area code and phone number.
2. Press **CALL**.

Answering a call

1. Press **CALL**.

Ending a call

1. Press **END ON/OFF**.

Once the call is completed, a call summary is displayed.

Rejecting a call

Press **END ON/OFF** or select **Ignore**.

Making a call using the call list

Your phone logs up to 20 dialed, received and missed call numbers.

1. Press **CALL** to display the **Recent Calls** list.
2. Select **All Calls, Missed Calls, Received Calls, Dialed Calls** or **Call Ranking** by pressing **◀/▶**.
3. Select a number.
4. Press **CALL** to dial the selected number.

note: To redial the last number in the **Recent Calls** list, press **CALL**.

Making a call during a call



1. Enter the phone number or press **Options > View Contacts**.
2. Press **CALL** to dial the second call.

The first call is automatically put on hold.

Switching between two calls


1. Press **Swap**.

Making an international call



1. Press and hold  key for the international prefix until the '+' character appears.
2. Type the country code, area code, and phone number.
3. Press .

Making an emergency call



1. You can make emergency calls even if your phone does not have a SIM card.

2. Press Emergency Number, or press **SOS** if your phone does not have a SIM card.
3. Press .

Replying to a missed callⁿ

1. Press **View** to display the list of missed calls.
2. Select a number to call by pressing .
3. Press .

Answering a second callⁿ


1. Press . The first call is automatically put on hold.
2. Press  to end the second call. The call on hold is automatically reconnected.

Using video share


You can share live or recorded video while on a call. You can send or receive video.

note: Video Share is not available in all markets. Both parties must be in a 3G service area—a 3G icon must appear by the signal bars prior to a call being placed, and both parties must remain in the 3G coverage area for the duration of the Video Share.

<Call mode>

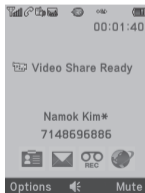

<Video Share Mode>

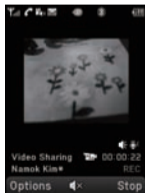

Making video share call

1. Enter the area code and phone number > **CALL**.
2. Press **Options** > **Video Share**.
3. Select **Live** or **Recorded**.

note: To use video share in the **Recent Calls**, press **Options** > **Video Share**.

Turning off the speakerphone

1. Press **⊙** or Press **Options** > **Speakerphone Off** during video share mode.
2. Press **Options** > **Mute** to mute the sound.

Increasing or decreasing the brightness

1. Press **Options** > **Brightness**.
2. Adjust the brightness by pressing ◀/▶.

Zooming in and out

1. Press **Options** > **Zoom**. It ranges from 1 x to 3 x.

Stopping the recording

1. Press **Options** > **Stop Record**.

For details on automatic recording, see page 91.

Stopping or ending video share

1. Press **Stop** to end the video share.
2. Press ⊖ to stop video share.

note: Even if you end video share, the call will not be ended. Press **END** to end the call. The recorded video is saved in **Menu** > **Camera** > **My Videos** in Breeze Mode while the recorded video is saved in **Menu** > **My Stuff** > **Video** in Advanced Mode.

Receiving video share

1. After receiving video share, it will ask you whether to accept or reject the video share > **Yes** to accept and **No** for reject.
2. Press **Options** > **Full Screen** to landscape the screen.

01

02

03

04

05

06

01

02

03

04

05

06

07

Options during a call

Microphone off and on

Switching your phone's microphone off

1. Press **Options** > **Mute** [.

Switching your phone's microphone back on

1. Press **Options** > **Unmute**.

Talking on speaker

1. Press **Speaker Phone** [.

Removing background noise

You can eliminate background noise from conversations and improve the voice

quality of communications by setting Noise Suppression to On.

- 1 Press **Options** > **Noise Suppression**.
2. Select **On** or **Off**.

Putting a call on hold and returningⁿ

Putting a call on hold

1. Press **Options** > **Hold** or press .

Returning to a held call

1. Press **Options** > **Unhold** or press  again.

Multi-party callsⁿ

You can talk with more than one person or have a conference call.

Making a multi-party call

1. Call the first participant.
2. Call the second participant. The first call is automatically put on hold.
3. Press **Options** > **Join**.

Having a private conversation with one participant

1. Press **Options** > **Split**.
2. Press .
3. Select the participant and press .

All of the multi-party call participants can

now hear each other.

Removing one participant from a multi-party call

1. Press **Options** > **End**.
2. Select the participant and press .

The call ends with that participant, but you can continue to talk with other participants.

Searching for a number in address book during a call

1. Press **Options** > **View Contacts** > **All Contacts**.
2. Select a number > .

01

02

03

04

05

06

01

02

03

04

05

06

07

Searching for a name or group in address book

Enter the first letters of the name for Name Search. The entries are displayed starting with the first entry matching your input.

Finding a name manually in address book

1. Press ▲/▼.

Viewing the details of highlighted entry in address book

1. Press **Select**.

For details on address book, see page 41.

Reading a message during a call

1. Press **Options** > **View Message**.

2. Select a message > **Open**.

Sending a message during a call

1. Press **Options** > **Send Message**.

For details on creating a text message, see page 49.

Mobile Web

1. Press **Options** > **Mobile Web**.

Viewing the calendar during a call

1. Press **Options** > **View Calendar**.

Making a note during a call

1. Press **Options** > **Notepad**.

Voice recording

1. Press **Options** > **Voice Recording**.

Checking all calls

You can view information about all **Recent Calls** simply by pressing **CALL**. For more options for all, missed, received and dialed calls, select an entry and press **Options**.

Viewing missed calls

1. Press **Shortcuts** in standby mode.
2. Select **Recent Calls** > **Missed Calls**.

Viewing received calls

1. Press **Shortcuts** in standby mode.
2. Select **Recent Calls** > **Received Calls**.

Viewing dialed calls

1. Press **Shortcuts** in standby mode.

2. Select **Recent Calls** > **Dialed Calls**.

Viewing call rankings

1. Press **Shortcuts** in standby mode.
2. Select **Recent Calls** > **Call Ranking**.

Deleting call logs

1. Press **Shortcuts** in standby mode.
2. Select **Recent Calls** > **Delete Call Logs**.
3. Select **All Calls** > **Yes**.

note: If no logs exist, the message “No Call Exist” appears.

Viewing call time

1. Press **Shortcuts** in standby mode.
2. Select **Recent Calls** > **Call Time**.
3. **Last Call, Received Calls, Dialed Calls,**

01

02

03

04

05

06

01

02

03

04

05

06

07

and **Total Calls** are displayed.

Resetting all call times

1. Press **Shortcuts** in standby mode.
2. Select **Recent Calls** > **Call Time**.
3. Select **Reset** > **Yes**.

note: The default password is '1234'.

Viewing data transmitted information

1. Press **Shortcuts** in standby mode.
2. Select **Recent Calls** > **Packet Counter**.
 - **Current Info:** You can view transmitted data in the current session, in Kilobytes. **Sent**, **Received** and **Total** information are also available.

- **Last Info:** You can view **Sent**, **Received**, **Total** and **Duration** transmitted in previous sessions, in Kilobytes.
- **Total Info:** You can view all **Sent**, **Received**, **Total** and **Duration** transmitted data in Kilobytes.
- **Clear Logs:** The default password is '1234'.


Speed dialing

You can dial quickly using speed dialing. Up to 8 phone numbers can be programmed using numbers 2 to 9.



 : Voice mail

 : Prefix for international call

Setting speed dial

1. Press **Menu** > **Address Book** > **Settings**.
2. Press **Speed Dial** and select an empty entry and press **Add**.
3. Select a contact and press  or **Select**.

Changing speed dial contact

1. Press **Menu** > **Address Book** > **My Settings**.
2. Press **Speed Dial** and select a number.
3. Press  or **Change**.
4. Select a contact and press  or **Select**.

Removing from speed dial

1. Press **Menu** > **Address Book** > **My Settings**.
2. Press **Speed Dial** and select a number.
3. Press **Remove**.

Using address book

You can save names, phone numbers, and information on the SIM or phone. Number of entries can depend on the capacity of the SIM card.

Adding a contact

1. Press **Menu** > **Address Book** > **Contacts** > **Options** > **Add New Contact**.

01

02

03

04

05

06

01

02

03

04

05

06




07

2. Input the fields.
3. Press  or **Save**.



Viewing the contact list

1. Press  or press **Menu** > **Address Book** > **Contacts**.


Searching for a phone number

1. Press  or press **Menu** > **Address Book** > **Contacts**.
2. Input the first letter or two of the person's name and scroll with /.
3. Press **Select** to view detail information.
4. To update information, press **Options** > **Edit Contact**.

Calling from contact list

1. Press  or press **Menu** > **Address Book** > **Contacts**.
2. Select a contact to call.
3. Press .

Sending a contact

1. Press  or press **Menu** > **Address Book** > **Contacts**.
2. Select a contact > **Options** > **Send Contact Info**.
3. You can send the contact using **Multimedia Message** or **Bluetooth**.

Deleting a contact

1. Press  or press **Menu** > **Address**

Book > Contacts.

2. Select a contact > **Options** > **Delete**.

Making groups

1. Press ▼, ► or press **Menu** > **Address Book** > **Groups**.
2. Press **Options** > **Add New Group**.
3. Enter group name and press **Save**.

Editing groups

1. Press ▼, ► or press **Menu** > **Address Book** > **Groups**.
2. Select a group and press **Options** > **Edit Group**, **Add New Members**, **Remove Members**, **Delete Group**.

Adding to favorites or groups

1. Press ▼ or press **Menu** > **Address Book** > **Contacts**.
2. Select a contact and press **Select** > **Options** > **Add to**.
3. Press **Favorites** or **Groups**.

01

02

03

04

05

06

01

02

03

04

05

06

07

Using your headset

You can send or receive a call using your headset. When you connect your headset to the jack, the button on the headset works as follows.

note: You must use the headset designed for this device. It is an optional item. Not all headset will have a button.

While in standby mode

1. Press the button **once** to list recent calls.
2. Press the button **twice** to redial the last call.

While the phone is closed

1. Press the button **once** to receive a call.

2. Press the button **once** to end the call.

Service and fixed dialing number

Calling your service numbers⁵

You can see the service number to reach the service provider.

1. Press **Menu** > **Address Book** > **Service Numbers**.
2. Select a number > press  .

Viewing fixed dialing number list

Fixed dialing number is a service that limits your access to specific numbers in the address book list recorded on the SIM. Input

the PIN2 to set up or cancel this service.

1. Press **Menu** > **Address Book** > **Fixed Dial Numbers**.

note: PIN2 must be correctly entered within 3 attempts. If you input incorrect code three times in a row, the PIN2 code will be blocked. If the PIN2 code is blocked, please contact your service provider. Your PIN2 code is supplied with the SIM card.

01

02

03

04

05

06

01

02

03

04

05

06

07

Memo



P2030

2

Messaging

- Receiving messages
- Creating and sending text messages
- Creating multimedia messages
- Managing messaging memory
- Email

Receiving messages

Viewing a new message

1. Press **View** or press .

Reading a message from the inbox

1. Press **Menu** > **Messaging** > **Inbox**.
2. Select a received message > **View**.

Saving the contact information from a received message

1. Select a received message > **View**.
2. Press **Options** > **Save**.
3. Select **New Contact** or select **Update Contact**.

Saving the object in a received multimedia message

1. Open a multimedia message.
2. Select an object.
3. Press **Options** > **Use** > **Save**.

It will be saved in one of the categories in the **My Stuff** folder.

For details on Photo album, see page 121.

Listening to voice messages

1. Press and hold  or press **Menu** > **Messaging** > **Voice Mail**.

It will automatically call the voice mail center.

Creating and sending text messages

Sending a text message

1. Press **▲** or press **Menu** > **Messaging** > **Create Message**.
2. Enter a message.
3. Press **Send to** and select a contact to send the message and press **Select**.
4. Press **Send**.
5. To view sent message, press **Menu** > **Messaging** > **Sent Messages**.

Replying to a message

1. Select a message > **Options** > **Reply**.

Creating multimedia messages

You can create and send multimedia messages. Capacity is 100Kb, 300Kb or 600Kb. An error message will alert you once the message exceeds the capacity.

Adding a saved picture to the message

1. Press **▲** or press **Menu** > **Messaging** > **Create Message**.
2. Enter a message.
3. Select **Insert** > **Picture** > **Picture** > **Camera**.
4. Scroll to the saved picture and press **Select**.
5. To preview the message, press **Options**

01

02

03

04

05

06

01

02

03

04

05


06

07

> **Preview** > **Current** or **Whole Message**.

6. To edit the text message, press ▲/▼ to select the text box and edit your message.
7. Press **Send to** and select a contact to send the message and press **Select**.
8. Press **Send**.

Adding a new picture to the message

1. Press ▲ or press **Menu** > **Messaging** > **Create Message**.
2. Enter a message.
3. Select **Insert** > **Take New Picture**.
4. Focus on the object > .
5. To preview the message, press **Options**

> **Preview** > **Current** or **Whole Message**. To go back to text editor page, press **Stop**.

6. To edit the text message, press ▲/▼ to select the text box and edit your message.
7. Press **Send to** and select a contact to send the message and press **Select**.
8. Press **Send**.

For details on taking a picture, see page 60.

Adding a saved video to the message

1. Press ▲ or press **Menu** > **Messaging** > **Create Message**.
2. Enter a message.