

# USER GUIDE

PANTECH THT803SPP

5U000436C0A REV.00 0M8035PP

PANTECH THT803SPP

GUÍA DEL  
USUARIO

PANTECH THT803SPP



# User Guide

**THT803SP**



## CHAPTER 1. BEFORE USING

<b>BEFORE USING</b> .....	9
INSIDE THE PACKAGE.....	9
HANDSET DESCRIPTIONS .....	10
DISPLAY INDICATORS .....	14
INSTALL BATTERY .....	18
REMOVE BATTERY .....	19
CHARGING YOUR BATTERY .....	19
BATTERY HANDLING INFORMATION.....	20

## CHAPTER 2. BASIC OPERATION

<b>BASIC OPERATION</b> .....	23
TURNING THE PHONE ON/OFF .....	23
ACCESSING THE MENU .....	23
QUICK SWITCHING BETWEEN THE MAIN MENUS.....	24
MENU SUMMARY.....	25
MAKING A CALL.....	30
ANSWERING CALLS.....	30
MISSED CALL NOTIFICATION .....	31
PAUSE/WAIT FEATURE .....	31
MAKING AN INTERNATIONAL CALL .....	32
3-WAY CALLING .....	32
CALL WAITING FUNCTION .....	33
CALLING A NUMBER FROM CONTACTS.....	33
ADJUSTING VOLUME .....	33
CALLER ID FUNCTION .....	34
VIBRATE MODE.....	34

SPEAKERPHONE MODE.....	34
USING AUTO KEYPAD LOCK FUNCTION .....	34
AVAILABLE OPTIONS DURING A CALL.....	34
MAKING AN EMERGENCY CALL .....	36
DIALING LETTERS .....	37

## CHAPTER 3. MEMORY FUNCTION

<b>MEMORY FUNCTION</b> .....	39
STORING A PHONE NUMBER.....	39
EDITING CONTACT ENTRIES .....	42
DEFAULT NUMBERS.....	44
ENTERING LETTERS, NUMBERS & SYMBOLS .....	45
ONE, TWO, THREE - TOUCH DIALING .....	46

## CHAPTER 4. MENU FUNCTION

<b>CONTACTS</b> .....	49
NEW CONTACT.....	49
CONTACT LIST .....	49
BACKUP ASSISTANT .....	50
GROUPS.....	50
SPEED DIALS.....	54
IN CASE OF EMERGENCY .....	55
FAVORITES.....	57
MY NAME CARD .....	59
<b>RECENT CALLS</b> .....	60
RECENT CALLS.....	60
MISSED.....	60

RECEIVED.....	61
DIALED.....	62
BLOCKED.....	62
ALL.....	63
VIEW TIMERS.....	64
<b>TOOLS.....</b>	<b>65</b>
VOICE COMMANDS.....	65
CALCULATOR.....	71
TIP CALCULATOR.....	71
CALENDAR.....	72
E-DIARY.....	74
ALARM CLOCK.....	76
STOP WATCH.....	78
WORLD CLOCK.....	79
NOTEPAD +.....	80
<b>SETTINGS.....</b>	<b>82</b>
MY VERIZON.....	82
BLUETOOTH.....	82
SOUNDS SETTINGS.....	86
DISPLAY SETTINGS.....	90
PHONE SETTINGS.....	95
CALL SETTINGS.....	101
MEMORY.....	103
PHONE INFO.....	104
SET - UP WIZARD.....	105

## CHAPTER 5. MEDIA CENTER

<b>MEDIA CENTER.....</b>	<b>108</b>
TUNES & TONES.....	108
PICTURE.....	111
GAMES.....	113
MOBILE WEB.....	114
BROWSE & DOWNLOAD.....	114
EXTRAS.....	115
MEDIA CENTER INFO.....	115

## CHAPTER 6. MESSAGING MENU

<b>MESSAGING MENU.....</b>	<b>117</b>
WHEN A NEW MESSAGE ARRIVES.....	117
NEW MESSAGE.....	117
MESSAGES.....	120
INBOX.....	122
SENT.....	123
DRAFTS.....	124
ERASE ALL.....	125
VOICEMAIL.....	125
MOBILE IM.....	126
EMAIL.....	126
CHAT.....	126
SETTINGS.....	127

**CHAPTER 7. SAFETY AND WARRANTY**

**SAFETY ..... 131**

- SAFETY INFORMATION FOR WIRELESS HANDHELD PHONES..... 131
- SAFETY INFORMATION FOR FCC RF EXPOSURE ..... 136
- SAR INFORMATION..... 137
- HEARING AID COMPATIBILITY (HAC) FOR WIRELESS  
TELECOMMUNICATIONS DEVICES ..... 138
- FDA CONSUMER UPDATE ..... 140
- AVOID POTENTIAL HEARING LOSS ..... 148
- FCC COMPLIANCE INFORMATION..... 151

**WARRANTY ..... 152**

- 12 MONTH LIMITED WARRANTY ..... 152

# 1 BEFORE USING

This chapter provides important information about using the TXT8035PP including:

Inside the Package  
Handset Descriptions  
Display Indicators  
Install Battery  
Remove Battery  
Charging your Battery  
Battery Handling Information

TXT8035PP

## INSIDE THE PACKAGE

This package should include all items pictured below. If any are missing or different, immediately contact the retailer where you purchased the phone.

Consumer Information  
About Radio Frequency  
Emissions and  
Responsible Driving

RF Brochure

Getting Started

Getting Started Guide



Handset

Customer Agreement  
and Important  
Information

Customer Agreement and  
Important Information

Product Safety and  
Warranty Information

 
Product Safety and  
Warranty Information Guide



Battery Cover



Standard Battery



Wall Adapter

01

02

03


04

05

06

07

## HANDSET DESCRIPTIONS

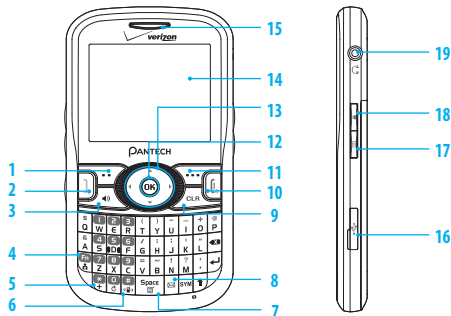

1. **Left Soft Key:** From idle mode, press to display the Message menu or access the function listed above the key.
2. **SEND Key:** Press to make or receive a call. From idle mode, press to access the All Calls list.
3. **Speakerphone Key:** Press to turn Speakerphone On or Off.
4. **Favorites/Mode Change Key:** Press to access the Favorites menu. In text entry mode, press to change the character input type.
5. **International Dial Key:** Press to enter an asterisk (\*) character for calling features. Press and hold to display the plus sign (+) for international dialing.
6. **Vibration Mode Key:** Press and hold to turn Vibration Mode on or off.

7. **Notepad + Key/Space Key:** Press to access the Notepad + menu or to add a space between characters.
8. **TXT Composer Key:** Press to access the New TXT Message menu.
9. **CLR Key:** Press to clear a character from the display. Press and hold to clear all characters. Within a menu, press to return to the previous menu.
10. **END Key:** Press to end calls or close applications. Press and hold to power your phone on or off.
11. **Right Soft Key:** Press to display the Contacts menu or access the function listed above the key.
12. **OK Key:** Allows you to access the menu screen. It also allows you to accept choices when navigating through a menu.
13. **Directional Key:** The Directional Key allows you to scroll through phone menu options and provides a shortcut to phone functions from idle mode.
14. **Display Screen:** Displays the digital clock, messages, phone status and indicator icons.
15. **Earpiece:** Allows you to hear the other caller.
16. **Charging/Data Jack:** Connects the phone to the USB.
17. **Camera Key:** Press to access the built-in camera.
18. **Lock/Unlock Key:** Press and hold to lock/unlock the keypad.
19. **Headset Jack:** Allows you to plug in an optional headset for convenient, hands-free conversations or for listening to music.

01

02

03


04

05

06


07

## HANDSET DESCRIPTIONS

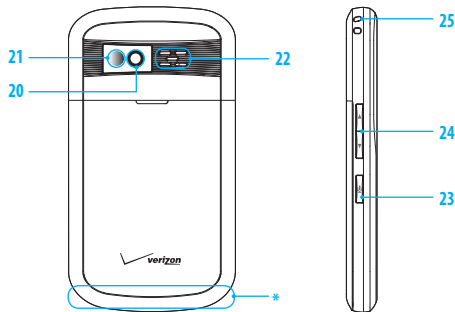

- 20. Camera Lens:** The lens of your built-in camera.
- 21. Self-Portrait Mirror:** Displays your reflection when taking pictures
- 22. External Speaker:** Music, Ringtones and Sounds are played through the speaker.
- 23. AVC Key:** From idle mode, press and hold to access the VOICE COMMANDS menu.
- 24. Volume Keys:** Press to adjust master volume in idle mode, adjust the earpiece volume during a call or volume when playing music.
- 25. Wrist Strap Eyelet:** Accessory eyelet (attach optional straps and lanyards - purchased separately).

## \*. Internal Antenna Area

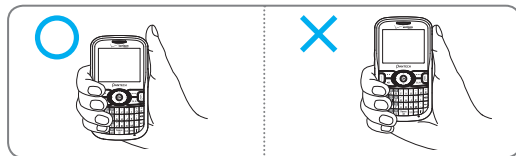

 Holding the device by the internal antenna area might affect the quality of all calls.

01

02

03

04













05


















06

07



## DISPLAY INDICATORS

Icon	Icon Descriptions
	<b>1X Signal Strength:</b> Indicates your phone is in the CDMA 1X network. More bars indicate a stronger signal.
	<b>D Signal Strength:</b> Indicates your phone is receiving digital data. More bars indicate a stronger signal.
	<b>Airplane Mode:</b> Transmitting and receiving information is restricted.
	<b>Roaming:</b> The phone is outside of the home service area.
	<b>SSL (Secured Socket Layer):</b> Indicates that secure communication between client and server has been established during data communication using encryption.
	<b>Voice Privacy:</b> Indicates Voice Privacy mode is active.
	<b>Data Call:</b> Indicates a Data Session is in progress.
	<b>Dormant:</b> Indicates phone is in a dormant state during a data call. Phone reverts to Dormant mode when there hasn't been activity on a page for some time - the connection is still active and you can make and receive calls.
	<b>No Service:</b> Phone cannot receive signal from the system.
	<b>TTY:</b> TTY mode is active.
	<b>Voice Call:</b> A call is in progress. *No icon indicates the phone is in idle mode.
	<b>E911:</b> Global Positioning Service (GPS) for E911 is set to On for emergency calls only.

Icon	Icon Descriptions
	<b>Location On:</b> GPS is set to On for Location Service and E911 calls.
	<b>Keypad Lock:</b> Indicates the keypad and external keys are locked.
	<b>Bluetooth:</b> Indicates Bluetooth® mode.
	<b>Bluetooth Active:</b> Indicates Bluetooth Active mode.
	<b>Bluetooth Connected:</b> Indicates a Bluetooth Device is connected.
	<b>Battery Level:</b> Battery charging level - the more blocks, the stronger the charge.
	<b>AVR Active:</b> AVR mode is active.
	<b>AVR Listening:</b> Indicates AVR listening.
	<b>All Sounds Off:</b> All sounds are set to off.
	<b>Alarm Only:</b> Phone will alert you only with an alarm tone.
	<b>Vibrate Only:</b> Indicates the Ringer Volume is set to Vibrate On.
	<b>Speakerphone:</b> Speakerphone mode is active.
	<b>Missed Calls:</b> Indicates you have missed calls.
	<b>Message:</b> Indicates you have new messages.
	<b>Calendar Appointment:</b> Event Alarm is active.
	<b>Voicemail:</b> Indicates you have a voice mail message.
	<b>Alarm On:</b> Appears when an alarm is set.

01

02

03













04















 











05







06

07

Recent Call Icons	
 Dialed Call	 Missed Call
 Received Call	

New Contact Icons	
 Mobile1	 Group
 Mobile2	 Picture
 Home	 Ringtone
 Work	 Message Tone
 Email 1	 Fax
 Email 2	 Speed Dial

Message Icons	
 Unread EMS	 Corrupt Message
 Read EMS	 Pending Message Send
 New/Unread Message	 Unread MMS
 Opened/Read Message	 Read MMS
 Message Delivered	 Sent Message
 Incomplete Delivery	 Received Message
 Sent Message, Delivery Failed	 Unread WAP Push
 Message Locked	 Read WAP Push
 Text Message Draft	 Multiple Message Delivered
 Picture Message Draft	 Multiple Message Failed
 Priority	 Multiple Message Incomplete
 Unopened MMS Notification	 Multiple Message Pending
 Opened MMS Notification	 Multiple Message Sent

Other Icon	
 IM Screen Name	 AIM
 Address	 Yahoo!
 WL Messenger	 DST (Daylight Saving Time)

01

02

03

04


05

06


07


## INSTALL BATTERY

 1. Insert your fingernail into the slot (1), then push down on top of the battery cover and slide it off to remove (2).
2. Slide the battery into the slot (3) by aligning the contacts and push down (4) until you hear the "click".



3. Align the cover tabs with the slots on the back of the device and slide the battery cover onto the unit until it snaps into place.

  If the battery is not correctly placed in the compartment, the handset will not turn on and/or the battery may detach during use.




## REMOVE BATTERY

 
1. To remove the battery cover, insert your fingernail into the slot (1), then push down on top of the battery cover and slide it off (2).
2. Insert your fingernail into the slot (3) and lift the battery from the compartment (4).
3. Align the cover tabs with the slots on the back of the device and slide the battery cover onto the unit until it snaps into place.



## CHARGING YOUR BATTERY

1. Connect the USB data cable into the cableless wall adapter.
2. Plug the USB data cable into the phone's Charging/Data Jack (making sure to align the connector as it appears in the image to the right) and the wall adapter end into an electrical outlet.

 If the battery connector is not properly aligned, damage could occur to the charging connector and the phone may not charge.



01

02

03

04

05

06

07

3. To remove the Wall Charger, pull the charger from the device.



- When you charge the battery with the handset powered off you will see a charging status screen. After the charging has completed, the Charge Complete message appears. You cannot operate the phone until it is powered on. To turn your phone on, press and hold the END Key (⏻) until your display turns on.
- The battery is not fully charged at the time of purchase. Fully charge the battery before use.
- It is more efficient to charge the battery with the handset powered off.
- Battery operating time gradually decreases over time.
- If the battery fails to perform normally, you may need to replace the battery.

## BATTERY HANDLING INFORMATION

### DO'S

- Only use the battery and charger approved for use with the TXT8035PP
- Only use the battery for the system for which it is specified.
- Only use or replace the battery with a charging system or another battery that has been qualified with the system per this standard, IEEE-Std-1725-2006. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Only use the battery for its original purpose. As an improper battery use may result in a fire, explosion or other hazard.
- Try to keep batteries in a temperature between 41°F (5°C) and 95°F (35°C). If the battery is stored in temperatures above or below the recommended range, give it time to warm up or cool down before using.
- Store the discharged battery in a cool, dark, and dry place.
- Purchase a new battery when its operating time gradually decreases after fully charging.
- Properly and promptly dispose of the battery according to local laws.
- Battery usage by children should be supervised.

### DON'TS

- Do not attempt to disassemble or open the battery – it is a sealed unit with no serviceable parts.
- Do not crush, bend or deform, puncture or shred the battery.
- Do not drop the phone or battery. If the phone or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Do not leave the battery in extremely hot or cold temperatures. Otherwise, it could significantly reduce the capacity and lifetime of the battery.
- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Do not accidentally short-circuit the battery by carrying it in your pocket or purse with other metallic objects such as coins, clips and pens. This may critically damage the battery.
- Do not short-circuit a battery or allow metallic conductive objects to contact battery terminals.
- Do not dispose of the battery by placing into a fire.

01

02

03

04

05

06

07

# 2 BASIC OPERATION

This chapter addresses and explains the basic features for TXT8035PP including:

Turning the Phone On/Off

Accessing the Menu

Quick Switching Between the Main Menus

Menu Summary

Making a Call

Answering Calls

Missed Call Notification

Pause/Wait Feature

Making an International Call

3-Way Calling

Call Waiting Function

Calling a Number from Contacts

Adjusting Volume

Caller ID Function

Vibrate Mode

Speakerphone Mode

Using Auto Keypad Lock Function

Available Options During a Call

Making an Emergency Call


Dialing Letters

TXT8035PP

## TURNING THE PHONE ON/OFF


### TURNING THE PHONE ON

1. Press and hold the END Key  until the display turns on.


-  If “ENTER LOCK CODE” appears on the display, press the OK Key to unlock the keypad, and enter your 4-digit lock code.
- The default lock code is the last 4 digits of your phone number.







### TURNING THE PHONE OFF

1. Press the OK Key to unlock the keypad, then press and hold the END Key  until your display turns off.

-  Immediately change or recharge the battery when “BATTERY LOW” appears on the display. Memory may possibly be damaged if the phone turns off due to the battery completely draining.
- Turn the phone off before removing or replacing the battery. If the phone is on, unsaved data may be lost.

## ACCESSING THE MENU

Your phone can be customized via the menu. Each function can be accessed by swiping the Directional Key  or by pressing the number that corresponds with the menu item.

1. Press the OK Key  [MENU].
2. To scroll through the menu, press the Directional Key  up or down or press the number that corresponds to the desired menu item.
3. To return to the previous page, press the CLR Key . To exit the current menu and return to idle mode, press the END Key .
4. From idle mode, press the OK Key to unlock the keypad, then press the Left Soft Key  [Message] to open the Messages menu or press the Right Soft Key  [Contacts] to open your Contact List.

-  This manual assumes that [Display Themes](#) is set to [Oceanic Delight](#), and [Menu Layout](#) is set to [List](#), which are the default settings.

## QUICK SWITCHING BETWEEN THE MAIN MENUS

While a menu is being accessed, you can quickly switch between the other menu options.

1. Press the OK Key (OK) [MENU], then select a desired menu from the following main menus:

**Media Center, Messaging, Contacts, Calendar, My Pictures, Recent Calls, VZ Navigator, Settings & Tools.**

2. Press the OK Key.
3. Once a menu is selected, press the Directional Key (left or right) to switch between the menus.

## MENU SUMMARY

Main Menu	2 <sup>ND</sup> DEPTH	3 <sup>RD</sup> DEPTH	4 <sup>RD</sup> DEPTH
1. Media Center	1. Tunes & Tones	1. Get New Ringtones	1. Get New Applications, VCAST Tones, Downloaded App1.
		2. Get Ringback Tones	
		3. My Ringtones	1. Get New Ringtones, VZTones, Download-EMS Ringtone, Preloaded-ringtone
		4. My Sounds	1. Record New, User-generated Sound, Downloaded MMS Sound, Preload MMS Sound
	2. Pictures	1. Get New Pictures	1. Get New Applications, VZTones, Downloaded App1.
		2. My Pictures	
3. Take Picture			
4. Online Album			
3. Games		1. Get New Applications, VZTones, Downloaded App1.	
4. Mobile Web			
5. Browse & Download		1. Get New Applications Backup Assistant Mobile Email Bing Search VZ Navigator Downloaded App1.	
6. Extras		1. Get New Applications Downloaded App.1	

01

02

03

04

05

06

07

Main Menu	2 <sup>ND</sup> DEPTH	3 <sup>RD</sup> DEPTH	4 <sup>TH</sup> DEPTH
2. Messaging	1. New Message	1. TXT Message 2. Picture Message 3. Voice Message	
	2. Message		
	3. Drafts		
	4. Voicemail		
	5. Mobile IM		
	6. Email	1. Mobile Email 2. Mobile Web Mail	
	7. Chat		
3. Contacts	1. New Contact		
	2. Contact List		
	3. Backup Assistant		
	4. Groups		
	5. Speed Dials		
	6. In Case of Emergency		
	7. My Name Card		
4. Mobile Email	1. Mobile Email 2. Mobile Web Mail		
5. My Verizon			
6. My Pictures			
7. Recent Calls	1. Missed		
	2. Received		
	3. Dialed		
	4. Blocked		
	5. All		
	6. View Timers		
8. VZ Navigator	Launch VZ Navigator		

Main Menu	2 <sup>ND</sup> DEPTH	3 <sup>RD</sup> DEPTH	4 <sup>TH</sup> DEPTH	
9. Settings & Tools	1. My Verizon			
	2. Master Volume			
	3. Tools	1. Voice Commands	1. Call	
			2. Send	
			3. Go To	
			4. Check	
			5. Contact	
			6. Search	
			7. Redial	
8. My Verizon				
9. Help				
4. Bluetooth	2. Calculator 3. Tip Calculator 4. Calendar 5. E-Diary 6. Alarm Clock 7. Stop Watch 8. World Clock 9. Notepad +			
5. Sounds Settings	1. Add New Device			
5. Sounds Settings	1. Easy Set-up 2. Call Sounds	1. Call Ringtone		
		2. Call Vibrate		
		3. Caller ID Readout		
		3. Alert Sounds	1. TXT Message	
			2. Multimedia Message	
			3. Voicemail	
			4. Emergency Tone	
			5. Missed Call	
		4. Keypad Sounds	DTMF, Cloud, Simple	
5. Keypad Volume	High, Medium High Medium, Medium Low, Low, Off			
6. Digit Dial Readout	On, Off			

- 01
- 02
- 03
- 04
- 05
- 06
- 07

Main Menu	2 <sup>ND</sup> DEPTH	3 <sup>RD</sup> DEPTH	4 <sup>TH</sup> DEPTH
9. Settings & Tools	5. Sounds Settings	7. Service Alerts	1. ERI 2. Minute Beep 3. Call Connect 4. Software Update
		8. Device Connect	
		9. Power On/Off	1. Power On 2. Power Off
	6. Display Settings	1. Easy Set-up	
		2. Banner	1. Personal Banner 2. ERI Banner
		3. Backlight	1. Display 2. Keypad
		4. Wallpaper	Thumbnail View
		5. Display Themes	White(VZW Theme) Modern Olive Amoled
		6. Main Menu Settings	1. Menu Layout 2. Replace Menu Items 3. Position Menu Items 4. Reset Menu Settings
		7. Font Type (TBD)	VZW Font Sleek Modern Font Dandy Round Font
8. Dial Fonts	Normal Large Only		
9. Menu Font Size	Normal Large		
0. Clock Format	Analog Large Analog Digital12 Large Digital12 Digital24 Large Digital24 Off		


Main Menu	2 <sup>ND</sup> DEPTH	3 <sup>RD</sup> DEPTH	4 <sup>TH</sup> DEPTH
9. Settings & Tools	7. Phone Settings	1. Airplane Mode	
		2. Set Shortcuts	1. Set My Shortcuts 2. Set Directional Keys
		3. Voice Commands Settings	1. Confirm Choices 2. Sensitivity 3. Adapt Voice 4. Prompts 5. About
		4. Language	
		5. Location	
		6. Current Country	
		7. Security	1. Edit Codes 2. Restrictions 3. Phone Lock Setting 4. Lock Phone Now 5. Restore Phone
		8. System Select	
	9. NAM Selection	1. Auto NAM 2. Change NAM	
		8. Call Settings	1. Answer Options 2. Auto Retry 3. TTY Mode 4. One Touch Dial 5. Voice Privacy 6. DTMF Tones 7. Assisted Dialing
9. Memory		1. Phone Memory	1. Memory Usage 2. My Pictures 3. My Ringtones 4. My Sounds 5. My Contacts



Main Menu	2 <sup>ND</sup> DEPTH	3 <sup>RD</sup> DEPTH	4 <sup>TH</sup> DEPTH
9. Settings & Tools	0. Phone Info	1. My Number 2. SW/HW Version 3. Icon Glossary 4. Software Update	
	*. Set-up Wizard		


## MAKING A CALL

### 1. Enter an area code and a phone number.

-  To erase one digit at a time, press the CLR Key [CLR].
- To erase the entire number, press and hold the CLR Key [CLR].
- When you place or receive a call from phone numbers stored in your Contact List with a contact name, the name will be displayed.

### 2. Press the SEND Key [J].

### 3. To end a call, press the END Key [G].

-  If you activate the **Auto Retry** function, the phone will automatically re-dial the number (Refer to [page 101](#)).
- You can also place calls using Voice-Activated Dialing. Please refer to [page 65](#) for more details.

## ANSWERING CALLS

### 1. When a call comes in, press **ANSWER**.

- To ignore the incoming call, tap **IGNORE**.
- To silence the call ringtone, tap **QUIET**.

### 2. To ignore incoming calls, press the Right Soft Key [\*\*\*] [Ignore].

### 3. To end a call, press the END Key [G].

-  If **Answer Options** is set to "Auto with Handsfree", calls are answered automatically after about five seconds (Refer to [page 101](#)).

## MISSED CALL NOTIFICATION

When an incoming call is not answered, the Missed Call icon appears on the display.

### TO DISPLAY THE MISSED CALL ENTRY FROM THE NOTIFICATION SCREEN:

1. Highlight **View Now** and press the OK Key.
2. Press the OK Key [OPEN] to view the call details.

### TO DISPLAY A MISSED CALL ENTRY FROM IDLE MODE:

1. From idle mode, press the OK Key [MENU], select **7. Recent Calls**, then press the OK Key.
2. Press **1. Missed**.
3. Highlight the entry you wish to view, then press the OK Key [OPEN].
4. To dial the phone number, press the SEND Key [J].

## PAUSE/WAIT FEATURE


Pauses are used for automated systems (i.e., voice mail or calling cards). Insert a pause after a phone number and then enter another group of numbers. The second set of numbers is dialed automatically after the pause. This feature is useful for dialing into systems that require a code.




### 2-Sec Pause (p)

The phone waits 2 seconds before sending the next string of digits automatically.




1. From idle mode, enter the area code and phone number.
2. Press the Right Soft Key [\*\*\*] [Options].
3. Select **1. Add 2-Sec Pause** and press the OK Key.
4. Enter additional number(s) (pin number or credit card number).
5. Press the SEND Key [J] to dial or the Left Soft Key [\*\*] [Save] to save.

### Wait (w)

The phone stops dialing until you press the SEND Key  or OK Key to advance to the next number.




1. Enter the phone number.
2. Press the Right Soft Key  [Options].
3. Select **2. Add Wait** and press the OK Key.
4. Press the SEND Key  to dial or the Left Soft Key  [Save] to save.


### MAKING AN INTERNATIONAL CALL

1. Press and hold the \* Key . The + required for international calls appears.
2. Enter the country code, area code, and phone number, then press the SEND Key .
3. To end the call, press the END Key .

### 3-WAY CALLING



With 3-Way Calling, you can talk to two people at the same time. When using this feature, normal airtime rates will be applied for each of the two calls.

1. Enter the phone number you wish to call, then press the SEND Key .
2. Once you have established the connection, enter the second phone number you wish to call and then press the SEND Key .
3. When you're connected to the second party, press the SEND Key  again to begin your 3-Way call.



 If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all three calls will be disconnected.



### CALL WAITING FUNCTION

If you are on a call and you receive another incoming call, you will hear a beep and the caller's phone number will appear on the display. With Call Waiting, you may put the active call on hold while you answer the other incoming call.

1. To answer another call while on the phone, press the SEND Key . This places the first call on hold. To switch back to the first caller, press the SEND Key  again.



### CALLING A NUMBER FROM CONTACTS


 
1. From idle mode, press the OK Key to unlock the keypad, then press the Right Soft Key  [Contacts].
2. Select the Contact entry and press the OK Key [VIEW], then select the desired phone number.
3. Press the SEND Key  to place the call.

 Selecting the Contact entry and then pressing the Send Key  will dial the Default Number of the Contact entry automatically.

### ADJUSTING VOLUME

#### TO ADJUST THE MASTER VOLUME:

1. From idle mode, press the OK Key to unlock the keypad, then press the Volume Keys  /  up or down.
2. Select one of the following options and press the OK Key [SET] to save it.  
**All Sounds Off / Alarm Only / Vibrate Only / Low / Medium Low / Medium / Medium High / High**

 • Press the Volume Keys  /  up or down to adjust Earpiece volume during a call.

01

02

03

04

05

06



07

## CALLER ID FUNCTION

Caller ID displays the number of the person calling when your phone rings. If the caller's identity is stored in Contacts, the name appears on the screen. The caller ID is stored in the Recent Calls menu.



## VIBRATE MODE

Vibrate Mode mutes key tones and alerts for an incoming call or message. To activate Vibrate Mode:

1. From idle mode, press and hold the Vibration Mode Key  to activate vibration mode.
2. To deactivate vibration mode, press and hold the Vibration Mode Key .

## SPEAKERPHONE MODE

The Speakerphone feature lets you hear audio through the speaker and talk without holding the phone.

1. To activate, press the OK Key to unlock the keypad, then press the Speakerphone Key . To deactivate, press the Speakerphone Key  again.

## USING AUTO KEYPAD LOCK FUNCTION

When the slide is closed the all keys are locked. To unlock them, press any key on the external display with the phone in the closed position "PRESS OK TO UNLOCK KEYPAD" displays. Press the OK Key to unlock the keypad.

## AVAILABLE OPTIONS DURING A CALL

During a phone call, you can access the following features by pressing the Right Soft Key  [Options]:

### NEW MESSAGE

To access the Messages Menu during a call:

1. Press the Right Soft Key  [Options], with **New Message** highlighted, press the OK Key.

### CONTACT LIST

To view your Contact List during a call:

1. Press the Right Soft Key  [Options], select **Contact List** and press the OK Key.

### RECENT CALLS

To view your Recent Calls list during a call:

1. Press the Right Soft Key  [Options], select **Recent Calls** and press the OK Key.

### BLUETOOTH

To access the Bluetooth® Menu during a call:

1. Press the Right Soft Key  [Options], select **Bluetooth** and press the OK Key.



If an Audio device is connected, **Audio To Phone / Audio To Device** is displayed in the options menu instead of **Bluetooth**.

### MAIN MENU

To access the Main Menu during a call:

1. Press the Right Soft Key  [Options], select **Main Menu** and press the OK Key.

### NOTEPAD +

To compose notes during a call:

1. Press the Right Soft Key  [Options], select **Notepad +** and press the OK Key.

## VOICE PRIVACY

To turn the voice privacy feature On or Off:


1. Press the Right Soft Key  [Options], select **Voice Privacy** and press the OK Key.

## MAKING AN EMERGENCY CALL

The E911 feature automatically places the phone in Emergency Call Mode when you dial the preprogrammed emergency number, "911". It also operates in Lock Mode and out of the service area.


### 911 IN LOCK MODE

To make an emergency call in Lock Mode:

1. Enter "911", then press the SEND Key .
2. The call connects.
3. The phone maintains Emergency Mode for 5 minutes. When the call ends, the phone returns to Lock Mode.

### 911 USING ANY AVAILABLE SYSTEM

To make an Emergency Call using any available system:

1. Enter "911", then press the SEND Key .
2. The call connects.
3. The phone will stay in Emergency Mode for 5 minutes. While the phone is in the Emergency Mode for 5 minutes, the phone can receive an incoming call from any available system or you can make outgoing calls even in the Emergency Callback Mode.

## DIALING LETTERS


Allows you to dial the number associated with a specific word.

For example, to call "1-800-FLOWERS":

1. Enter "1-800", then press the Mode Change Key .
2. Enter "FLOWERS" with the QWERTY Keypad and press the SEND Key  to connect.



• If the Alphabetical Entry Mode icon is turned on, only capital letters will be appeared.

• Pressing the Mode Change Key  will change between Numeric Entry Mode and Alphabetical Entry Mode.

01

02

03

04

05

06

07

# 3 MEMORY FUNCTION

This chapter addresses memory functions including:

Storing a Phone Number

Editing Contact Entries

Default Numbers

Entering Letters, Numbers & Symbols

One, Two, Three - Touch Dialing

THT803SPP


### STORING A PHONE NUMBER

The Contact List stores up to 1000 entries.

#### ADDING A NEW CONTACT

1. From idle mode, enter the phone number you want to save.
2. Press the Left Soft Key [☐] [Save].
3. Select **1. Add New Contact** and press the OK Key.
4. Press the Directional Key [⤴] up or down to select the type of phone number you want to save, then press the OK Key.

**Mobile 1 / Mobile 2 / Home / Work / Fax**

 Use **Update Existing** to add another phone number to a contact already stored in memory.

5. Enter a name for the phone number (up to 32 characters), then press the OK Key [SAVE].
6. **"CONTACT SAVED"** displays, then the phone number reappears on the screen. Press the End Key [⏏] to exit, or press the Send Key [⏏] to call the number.

#### OPTIONS TO CUSTOMIZE YOUR CONTACTS

Once the basic phone number and name information is stored in your Contacts, you can edit and/or customize the entries.

1. From idle mode, press the Right Soft Key [☐] [Contacts], then highlight the Contact entry you want to edit.
2. Press the Left Soft Key [☐] [Edit] to access the Edit Contact screen.
3. Select the information field you want to customize. Fields include:  
**Name / Mobile 1 / Home / Work / Email 1 / Group / Picture / Ringtone / Message Tone / Mobile 2 / IM Screen Name / Fax / Email 2 / Street / City / State / Zip Code / Country**
4. Change the data as necessary, then press the OK Key [SAVE] to update the contact entry.


## ADDING OR CHANGING GROUPS

To organize your Contacts into groups:

1. From idle mode, press the Right Soft Key [Contacts], then highlight the desired Contact entry.
2. Press the Left Soft Key [Edit].
3. Highlight **Group** and press the Left Soft Key [Set].
4. Select **Family** or **Work**, then press the OK Key [MARK]. To create a new group, press the Right Soft Key [New], enter the new group name, then press the OK Key [SAVE].
5. Press the Left Soft Key [Done] to set the group.
6. Press the OK Key [SAVE] to update the contact entry.

## CHANGING THE CALL RINGTONE

To identify who is calling by setting different ringtones for different phone numbers in your Contacts:

1. From idle mode, press the OK Key to unlock the keypad, press the Right Soft Key [Contacts], then highlight the desired entry.
  2. Press the Left Soft Key [Edit].
  3. Highlight **Ringtone**, then press the Left Soft Key [Set].
  4. Select the new ringtone, then press the OK Key.
-  Press the Left Soft Key [Play] to listen to a highlighted ringtone or press the Right Soft Key [Options] to view the file information before you press the OK Key.
5. Press the OK Key [SAVE] to update the contact entry.

## ADDING OR CHANGING THE PICTURE

To select a picture to assign to a Caller ID:

1. From idle mode, press the OK Key to unlock the keypad, press the Right Soft Key [Contacts], then highlight the desired entry.
2. Press the Left Soft Key [Edit].

3. Highlight **Picture**, and press the Left Soft Key [Set].
4. Press the Directional Key [Up, Down, Left or Right] to select a picture then press the OK Key.
5. When completed, press the OK Key [SAVE] to update the contact entry.

## ADDING OR CHANGING AN EMAIL ADDRESS

To enter or add an Email address to a Contact entry:

1. From idle mode, press the Right Soft Key [Contacts], then highlight the desired entry.
2. Press the Left Soft Key [Edit].
3. Highlight **Email 1** or **Email 2**.
4. Enter an Email address using the QWERTY Keypad, then press the OK Key [SAVE] to update the contact entry.

## ADDING A SPEED DIAL ENTRY

To add an entry to Speed Dial:

1. From idle mode, press the OK Key to unlock the keypad, press the Right Soft Key [Contacts], then highlight a desired entry.
2. Press the Left Soft Key [Edit].
3. Highlight the phone number you want to add to Speed Dial, then press the Right Soft Key [Options].
4. Select **1. Set Speed Dial**, then press the OK Key.
5. Select a Speed Dial location, then press the OK Key [SET].
6. Select **Yes** and press the OK key.
7. Press the OK Key [SAVE] to update the contact entry.

 Using the QWERTY Keypad press the corresponding speed dial number to select the desired speed dial location.

## EDITING CONTACT ENTRIES

### ADDING A PHONE NUMBER FROM IDLE MODE

1. From idle mode, enter the phone number you want to save (up to 32 digits).
2. Press the Left Soft Key [☐] [Save].
3. Highlight **2. Update Existing**, then press the OK Key.
4. Highlight the existing Contact entry, then press the OK Key.
5. Highlight the following phone number type, then press the OK Key.  
**Mobile 1 / Mobile 2 / Home / Work / Fax**
6. If a phone number is already assigned to the type you selected, select **Yes** to overwrite the existing entry, then press the OK Key.
7. “**CONTACT UPDATED**” displays, then the phone number reappears on the screen. Press the End Key [⏏] to exit, or press the Send Key [☎] to call the number.

### ADDING A PHONE NUMBER FROM THE CONTACT LIST SCREEN

1. From idle mode, press the Right Soft Key [☐] [Contacts]. Your Contacts are displayed alphabetically.
2. Highlight the Contact entry you want to edit, then press the Left Soft Key [☐] [Edit].
3. Highlight the phone number field and enter the number, then press the OK Key [SAVE] to update the contact entry. A confirmation message appears.

### EDITING STORED PHONE NUMBERS

1. From idle mode, press the Right Soft Key [☐] [Contacts]. Your Contacts are displayed alphabetically.
2. Highlight the Contact entry you want to edit, then press the Left Soft Key [☐] [Edit].
3. Select the phone number you want to edit.
4. Edit the phone number as necessary, and then press the OK Key [SAVE] to update the contact entry.

### EDITING STORED NAMES

1. From idle mode, press the Right Soft Key [☐] [Contacts]. Your Contacts are displayed alphabetically.
2. Highlight the Contact entry you want to edit, then press the Left Soft Key [☐] [Edit].
3. Edit the name as necessary, and then press the OK Key [SAVE] to update the contact entry.

### DELETING A PHONE NUMBER FROM A CONTACT

1. From idle mode, press the OK Key to unlock the keypad, then press the Right Soft Key [☐] [Contacts].
2. Highlight the Contact entry, then press the Left Soft Key [☐] [Edit].
3. Select the desired phone number to be deleted.
4. Press and hold the Clear Key [CLR] to delete the number.
5. Press the OK Key [SAVE] to update the contact entry. A confirmation message appears.

### DELETING A CONTACT ENTRY

1. From idle mode, press the OK Key to unlock the keypad, then press the Right Soft Key [☐] [Contacts].
2. Select the desired Contact entry to be deleted.
3. Press the Right Soft Key [☐] [Options], select **2. Erase** and press the OK Key.
4. Select **Yes** and press the OK Key. A confirmation message appears.

### DELETING A SPEED DIAL

1. From idle mode, press the OK Key to unlock the keypad, then press the Right Soft Key [☐] [Contacts].
2. Highlight the entry that has a speed dial to be deleted.
3. Press the Left Soft Key [☐] [Edit].
4. Highlight the phone number that has a speed dial to be deleted.

- Press the Right Soft Key [Options], select **1. Remove Speed Dial** and press the OK Key.
- Select **Yes** and press the OK Key. A confirmation message appears.
- Press the OK Key [SAVE] to update the contact entry.

## DEFAULT NUMBERS

The phone number saved when a Contact is created is the Default Number. If more than one number is saved in a Contact entry, another number can be set as the Default Number.


 The Default Number cannot be deleted. The entire Contact entry can be deleted or another number can be assigned as the Default Number allowing you to delete the original number and keep the Contact entry.

## CHANGING THE DEFAULT NUMBER

- From idle mode, press the OK Key to unlock the keypad, then press the Right Soft Key [Contacts]. Your Contacts are displayed alphabetically.
- Highlight the Contact entry you want to edit, then press the Left Soft Key [Edit].
- Highlight the phone number you want to assign as the Default Number, then press the Right Soft Key [Options].
- Select **2. Set As Default**, then press the OK Key.
- Select **Yes** and press the OK Key. A confirmation message appears.
- Press the OK Key [SAVE] to update the contact entry.

## ENTERING LETTERS, NUMBERS & SYMBOLS

Your device has a QWERTY Keypad that provides a superior typing experience on a small handheld device for easy and comfortable input.

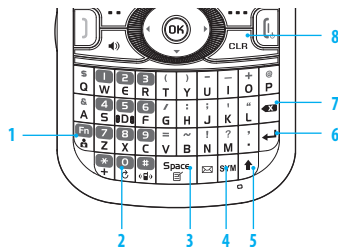

### 1. [Mode Change Key] Mode Change Key:

- When in Numeric entry mode
  - Press to change between entering numbers and letters that appear on the same key.
- When in Text entry mode
  - Press to change between entering numbers and letters that appear on the same key.
  - Press and hold to lock in numeric or text entry mode.

### 2. [Word Change Key] Word Change Key: When in text entry mode, press to select the next matching word.

### 3. [Space Key] Space Key: Press to accept a word and add a space while entering letters. From idle mode, press to access the Notepad+ menu.



4. [SYM] **Symbols Key:** Press to open the symbols list.
5. [↕] **Caps Key:** Press to select a letter case for the standard text [Abc] input mode. [Abc], [ABC] and [abc] indicate the standard text input.
6. [↵] **Enter Key:** Press to insert a carriage return.
7. [✖] **Delete Key:** When in a Text entry field and in entry mode, press to delete the character to the left of the cursor. Press and hold to delete the entire word or character string that was just entered.
8. [CLR] **CLR Key:** When in a Text entry field and in entry mode, press to delete the character to the left of the cursor. Press and hold to delete the entire word or character string that was just entered.

 For best performance in low-light environments, your handset includes a backlight feature that can illuminate both the display and the keypad so you can keep reading and typing. (Please refer to [page 92](#) for more details on [Backlight](#).)

## ONE, TWO, THREE - TOUCH DIALING

Ideal for frequently dialed numbers, this feature allows contact entries to be dialed via the keypad with only one, two, or three key presses.

### ONE - TOUCH DIALING:

**1-9:** Press the OK Key to unlock keypad, press and hold the number you wish to connect to for more than 1 second. **1 (Voicemail)** is already assigned to your voicemail box.

### TWO - TOUCH DIALING:

**10-94:** Press the OK Key to unlock keypad, press the first digit and press and hold the second digit of the number to dial.

**95, 96, 97, 98 and 99:** Speed Dial entries **95(#Warranty Center)**, **96(#DATA)**, **97(#BAL)**, **98(#MIN)** and **99(#PMT)** are already assigned to Verizon Wireless Account Information.

### THREE - TOUCH DIALING:

**100-500:** Press the OK Key to unlock keypad, press the first and second digits, then press and hold the third digit of the number to dial.

**411:** Speed Dial entry **411 (Directory Assistance)** is already assigned.

01

02

03

04

05

06

07

# 4 MENU FUNCTION

This chapter addresses accessing the menu and using its functions and features to customize your TXT8035PP.

## CONTACTS

New Contact  
Contact List  
Backup Assistant  
Groups  
Speed Dials  
In Case of Emergency  
Favorites  
My Name Card

## RECENT CALLS

Recent Calls  
Missed  
Received  
Dialed  
Blocked  
All  
View Timers

## TOOLS

Voice Commands  
Calculator  
Tip Calculator  
Calendar  
E-Diary  
Alarm Clock  
Stop Watch  
World Clock  
Notepad +


## SETTINGS

My Verizon  
Bluetooth  
Sounds Settings  
Display Settings  
Phone Settings  
Call Settings  
Memory  
Phone Info  
Set-up Wizard

TXT8035PP

## NEW CONTACT

To add a new number to your Contact List:

 Using this submenu, the number is saved as a new Contact. To save the number into an existing Contact, edit the Contact entry.

1. From idle mode, press the **(OK)** [MENU], then press **3. Contacts**, **1. New Contact**.
2. In the **Name** field, enter a name for the Contact.

 To change the input mode, press the Left Soft Key **[ABC]** [Abc], select the desired option, and press the OK Key.

3. Press the Directional Key **(D)** down to enter information in other fields for the contact. Fields include:

**Mobile 1 / Home / Work / Email 1 / Group / Picture / Ringtone / Message Tone / Mobile 2 / IM Screen Name / Fax / Email 2 / Street / City / State / Zip Code / Country**

4. Press the OK Key [SAVE] to create the contact entry.

## CONTACT LIST

You can review all the entries stored in your Contact List or quickly find an entry by entering a name or its character string in the Go To field.

1. From idle mode, press the **(OK)** [MENU], then select **3. Contacts**, **2. Contact List**.

 **Shortcut:** From idle mode, press the Right Soft Key **[CONTACTS]** [Contacts]. The list of names in your contacts is displayed alphabetically.

2. Enter a name or part of a name in the **Go To** field at the bottom of the screen or press the Directional Key **(D)** up or down to scroll through your Contact List.
3. To edit the entry, press the Left Soft Key **[EDIT]** [Edit]. To view contact details, press the OK Key [VIEW].

• By pressing the Right Soft Key **[OPTIONS]** [Options], you can choose from the following:

01

02

03

04

05

06

07

**New Contact:** Add a new contact to your contact list.

**Erase:** Deletes the contact from your contact list.

**New TXT Message:** Allows you to send a TXT Message to the contact.

**New Picture Message:** Allows you to send a Picture Message to the contact.

**New Voice Message:** Allows you to send a Voice Message to the contact.

**Send IM:** Allows you to send an IM message to the contact. Only available when an IM Screen Name is set for the contact.

**Send Email:** Allows you to send an Email message to the contact. Only available when an Email address is set for the contact.

**Set As ICE Contact:** Set as an emergency contact.

**Call:** Dial the contact.

**Manage Contacts:** Allows you to manage your contacts with the following options:

**Erase / Lock / Unlock / Copy To Card**

**Send Name Card:** Allows you to send a name card via Bluetooth®.

4. To dial the selected number, press the Right Soft Key (⏏) [Options], select **Call** and press the OK Key or press the SEND Key (⏏) to place a call.

## BACKUP ASSISTANT

Backup Assistant is a wireless service that stores a copy of your Contact List to a secure web site.

1. From idle mode, press the (OK) [MENU], then select **3. Contacts, 3. Backup Assistant**.
2. Follow the on-screen prompts.

## GROUPS

Groups allow you to classify phone entries into groups with up to 10 members in each group. The default groups include Family and Work and they cannot be erased or renamed.

### TO ADD NEW GROUP

1. From idle mode, press the (OK) [MENU], then select **3. Contacts, 4. Groups**.

2. Press the Left Soft Key (⏏) [New].
3. Enter a new group name and press the OK Key [SAVE].

### TO ASSIGN PHONE NUMBER TO GROUP

1. From idle mode, press the (OK) [MENU], then select **3. Contacts, 4. Groups**.
2. Select the group where you want to add the contact, and then press the Right Soft Key (⏏) [Options].
3. Select **Add** and press the OK Key.
4. Your contact entries will be displayed in alphabetical order. Select the contact you want to add then press the OK Key [MARK].
5. Press the Left Soft Key (⏏) [Done]. "MEMBER LIST UPDATED" will be displayed.

### TO CHANGE GROUP NAME

1. From idle mode, press the (OK) [MENU], then select **3. Contacts, 4. Groups**.
2. Select the group you want to rename then press the Right Soft Key (⏏) [Options].
3. Select **4. Rename** and press the OK Key.
4. Enter the new group name, then press the OK Key [SAVE].

### ERASE GROUP

1. From idle mode, press the (OK) [MENU], then press **3. Contacts, 4. Groups**.
2. Select the existing group name that you want to erase, and then press the Right Soft Key (⏏) [Options].
3. Select **5. Erase Group** and press the OK Key.
4. "ERASE GROUP?" will appear on the screen.
5. Select **Yes** and press the OK Key. A confirmation message appears.

### TO SEND A TXT MESSAGE TO A GROUP

1. From idle mode, press the **[OK]** **[MENU]**, then select **3. Contacts**, **4. Groups**.
2. Select the group you want to send a message to, then press the Right Soft Key **[Options]**.
3. Select **1. New TXT Message**.
4. Input your message in the Text field and then press the Right Soft Key **[Options]** to select from the following: **Insert Quick Text**, **Save As Draft**, **Add, Format Text**, **Priority Level** or **Cancel Message**.
5. To send the TXT message, press the OK Key **[SEND]** or press the SEND Key **[ ]**.

### TO SEND A PICTURE MESSAGE TO A GROUP

1. From idle mode, press the **[OK]** **[MENU]**, then select **3. Contacts**, **4. Groups**.
2. Select the group you want to send a message to, then select the Right Soft Key **[Options]**.
3. Press **2. New Picture Message**.
4. Under **Text**, input your message and then press the Directional Key **[Down]**.
5. Under **Picture**, press the Left Soft Key **[My Pics]**, select the picture you would like to send then press the OK Key. Press the Directional Key **[Down]**.
6. Under **Sound**, press the Left Soft Key **[Sounds]**, select the sound you would like to send then press the OK Key. Press the Directional Key **[Down]**.
7. Under **Name Card**, press the Left Soft Key **[Add]**, select **1. My Name Card** or **2. From Contacts**. If **From Contacts** is selected, press the Directional Key **[Up]** or **[Down]** to highlight a desired contact or contacts, then press the OK Key **[MARK]**. Press the Left Soft Key **[Done]** when you have finished selecting contacts. Press the Directional Key **[Down]**.
8. Under **Subject**, input a subject using the QWERTY Keypad.

9. Press the Right Soft Key **[Options]** to select from the following: **Preview**, **Save As Draft**, **Insert Quick Text**, **Add Slide**, **Priority Level**, **Remove Picture**, **Remove Slide**, **Remove Sound**, **Remove Name Card** or **Cancel Message**.



These options will vary depending on the message contents chosen.

10. To send the Picture Message, press the OK Key **[SEND]** or press the SEND Key **[ ]**.

### TO SEND A VOICE MESSAGE TO A GROUP

1. From idle mode, press the **[OK]** **[MENU]**, then select **3. Contacts**, **4. Groups**.
2. Select the group you want to send a voice message to, then press the Right Soft Key **[Options]**.
3. Press **3. New Voice Message**.
4. To record a new Voice Memo, press the OK Key to start recording, then press the OK Key **[STOP]** to finish recording and save the voice memo.
5. Under **Voice**, your recorded file name will appear. Press the Directional Key **[Down]**.
6. Under **Text**, input your message then press the Directional Key **[Down]**.
7. Under **Name Card**, press the Left Soft Key **[Add]**, select **1. My Name Card** or **2. From Contacts**. If **From Contacts** is selected, press the Directional Key **[Up]** or **[Down]** to highlight a desired contact or contacts, then press the OK Key **[MARK]**. Press the Left Soft Key **[Done]** when you have finished selecting contacts. Press the Directional Key **[Down]**.
8. Under **Subject**, input a subject using the QWERTY Keypad.
9. Press the Right Soft Key **[Options]** to select from the following: **Review**, **Save As Draft**, **Insert Quick Text**, **Priority Level**, **Remove Recording**, **Remove Name Card** or **Cancel Message**.


 These options will vary depending on the message contents chosen.

10. To send the Voice Message, press the OK Key [SEND] or press the SEND Key [ ] .

## SPEED DIALS

From idle mode, calls can be placed to numbers stored in speed dials, and pressing & holding the location number on the keypad.

1. From idle mode, press the **[OK] [MENU]**, then select **3. Contacts, 5. Speed Dials**.
2. Highlight the desired Speed Dial position, or enter the Speed Dial digit, then press the OK Key [SET].
3. Select the desired Contact entry, then press the OK Key.
4. Highlight the number you wish to set to speed dial then press the OK Key.
5. “**ASSIGN SPEED DIAL TO CONTACT?**” appears on the screen. Select **Yes** and press the OK Key. A confirmation message appears.

 “Unassigned” appears if the location is available.

## TO ERASE A SAVED SPEED DIAL

1. From idle mode, press the **[OK] [MENU]**, then select **3. Contacts, 5. Speed Dials**.
2. Select the Speed Dial entry you want to erase.
3. Press the Right Soft Key **[...]** [Remove].
4. “**REMOVE SPEED DIAL?**” appears on the screen. Select **Yes** and press the OK Key. A confirmation message appears.

## IN CASE OF EMERGENCY

Your phone has a special menu to organize your emergency contacts and personal information.

### TO ASSIGN EMERGENCY CONTACTS

Follow the procedures below to register a Contact to be contacted in case of emergency, or to register a medical record number or other personal info. To register up to three different Contacts to ICE:

1. From idle mode, press the **[OK] [MENU]**, then select **3. Contacts, 6. In Case of Emergency**.

 **Shortcut:** From idle mode, press the Right Soft Key **[...]** [Contacts], then select **In Case of Emergency** and press the OK Key [VIEW].

2. Select **Contact 1, Contact 2** or **Contact 3**, then press the OK Key [ADD].
3. To select a contact from the Contacts List, press **1. From Contacts**, select the Contact entry, and then press the OK Key. To add a new contact as an ICE CONTACT, press **2. New Contact**, enter the info, and then press the OK Key [SAVE].
4. The Contact name will be displayed in the place of **Contact 1, Contact 2** or **Contact 3**.

### TO RE-ASSIGN EMERGENCY CONTACTS

1. From idle mode, press the **[OK] [MENU]**, then select **3. Contacts, 6. In Case of Emergency**.
2. Select the contact you want to re-assign, press the Right Soft Key **[...]** [Options], then select **1. Re-assign**.
3. To select a contact from the Contacts List, press **1. From Contacts**, select the Contact entry, and then press the OK Key. To reassign a new contact as an ICE CONTACT, press **2. New Contact**, enter the info then press the OK Key [SAVE].
4. A confirmation message appears.

01

02

03

04

05

06

07

### TO UNASSIGN EMERGENCY CONTACTS

1. From idle mode, press the **[OK]** [MENU], then select **3. Contacts, 6. In Case of Emergency**.
2. Select the contact you want to unassign, then press the Right Soft Key **[Options]**.
3. Select **2. Unassign**.
4. A confirmation message appears.

### TO CALL AN ASSIGNED EMERGENCY CONTACT

1. From idle mode, press the **[OK]** [MENU], then select **3. Contacts, 6. In Case of Emergency**.
2. Select the contact you want to call and then press the Left Soft Key **[Call]** or press the SEND Key **[ ]**.

### TO ADD PERSONAL INFO

To store a Medical Record Number or other information that may be useful in case of an emergency:

1. From idle mode, press the **[OK]** [MENU], then select **3. Contacts, 6. In Case of Emergency**.
2. Select **Personal Info** and then press the OK Key [VIEW].
3. Select **Note 1, Note 2** or **Note 3** and then press the OK Key [ADD].
4. Enter the information using the QWERTY Keypad and then press the OK Key [SAVE].
5. The entered information now appears in the place of **Note 1, Note 2** or **Note 3**.

### TO EDIT SAVED PERSONAL INFO

1. From idle mode, press the **[OK]** [MENU], then select **3. Contacts, 6. In Case of Emergency**.
2. Select **Personal Info** then press the OK Key [VIEW].
3. Select the Note you want to edit then press the OK Key [VIEW].
4. Press the OK Key [EDIT], edit the Note, then press the OK Key [SAVE].

### TO ERASE SAVED PERSONAL INFO

1. From idle mode, press the **[OK]** [MENU], then select **3. Contacts, 6. In Case of Emergency**.
2. Select **Personal Info** then press the OK Key [VIEW].
3. Select the Note you want to erase then press the Right Soft Key **[Erase]**.
4. "ERASE NOTE?" will be displayed on the screen. Select **Yes** and press the OK Key. A confirmation message appears.

## FAVORITES

Allows you to save your most frequently accessed contacts for quick access.

### TO ASSIGN FAVORITE CONTACTS

1. From idle mode, press the Favorites/Mode Change Key **[A]**, press the Directional Key **[Left/Right]** left or right to scroll to **FAVORITES**, then press the OK Key.
2. Press the Directional Key **[Left/Right/Up/Down]** left, right, up or down to select an empty field, then press the OK Key [ASSIGN].
3. Press the contact you want to assign, then press the OK Key [MARK].
4. Touch the Left Soft Key **[Done]**.





### TO VIEW FAVORITE CONTACTS

1. From idle mode, press the Favorites/Mode Change Key **[A]**, press the Directional Key **[Left/Right]** left or right to scroll to **FAVORITES**, then press the OK Key.
2. Press the Directional Key **[Left/Right/Up/Down]** left, right, up or down to select a desired contact.
3. Press the Left Soft Key **[Messages]**. Or, press the Right Soft Key **[Options]** to choose from the following:
  - **Send IM:** Allows you to send an IM message to the contact. Only available when an IM Screen Name is set for the contact.
  - **Send Email:** Allows you to send an Email message to the contact. Only available when an Email address is set for the contact.
  - **Remove:** Removes a contact from Favorites.




- **Remove All:** Removes all contacts from Favorites.



4. Press the OK Key [VIEW].

### TO ERASE FAVORITE CONTACTS

1. From idle mode, press the Favorites/Mode Change Key , press the Directional Key  left or right to scroll to **FAVORITES**, then press the OK Key.
2. Press the Directional Key  left, right, up or down to select a desired contact, then press the OK Key [VIEW].
3. Press the Left Soft Key  [Erase].
4. “**CONTACT SET AS ICE, ERASE CONTACT?**” will be displayed on the screen. Select **Yes** and press the OK Key. A confirmation message appears.

### TO EDIT FAVORITE CONTACTS




 

1. From idle mode, press the Favorites/Mode Change Key , press the Directional Key  left or right to scroll to **FAVORITES**, then press the OK Key.
2. Press the Directional Key  left, right, up or down to select a desired contact, then press the OK Key [VIEW].

-  Press the Right Soft Key  [Options] to choose from the following:
- **New TXT Message / New Picture Message / New Voice Message / Set Speed Dial / Call / Send IM.**

3. Press the OK Key [EDIT].

-  To edit the contact, please refer to [page 49](#) for more details on [Contact List](#).



### TO CALL A FAVORITE CONTACT ENTRY OR SEND A MESSAGE

1. From idle mode, press the Favorites/Mode Change Key , press the Directional Key  left or right to scroll to **FAVORITES**, then press the OK Key.
2. Press the Directional Key  left, right, up or down to select a desired contact.
3. To make a call, press the SEND Key . To send a text message to the contact, press the TXT Composer Key .



### MY NAME CARD

A Name Card with the handset's mobile number automatically appears.


### EDIT MY NAME CARD

1. From idle mode, press the  [MENU], then select **3. Contacts, 7. My Name Card**.
2. Press the Left Soft Key  [Edit].
3. Edit the My Name Card options and then press the OK Key [SAVE] to save your changes.

### SEND MY NAME CARD

1. From idle mode, press the  [MENU], then select **3. Contacts, 7. My Name Card**.
2. Press the Right Soft Key  [Send].
3. Select **1. TXT Message, 2. Picture Message, 3. Voice Message** or **4. Via Bluetooth**.

- **TXT Message:** Allows you to send TXT messages with the Name Card as an attachment.
  1. Enter the recipient's contact information and press the OK Key.
  2. Enter your message in the Text field and then press the OK Key [SEND].
- **Picture Message:** Allows you to send picture messages with the Name Card as an attachment.
  1. Enter the recipient's contact information and press the OK Key.
  2. Compose your Picture Message and then press the OK Key [SEND]. Please refer to [page 118](#) for more details on [Picture Message](#).
- **Voice Message:** Allows you to send voice messages with the Name Card as an attachment.
  1. Press the OK Key to start recording a voice memo and press the OK Key [STOP] to finish recording and save the voice memo.
  2. Compose your Voice Message and then press the OK Key [SEND]. Please refer to [page 119](#) for more details on [Voice Message](#).
- **Via Bluetooth:** Allows you to send Name Card to another Bluetooth® device.
  1. Press **1. Add New Device**. If the Bluetooth power is switched off, the following message will appear on the screen: “**TURN BLUETOOTH POWER ON?**”. Press the OK Key to select **Yes**.

- When “PLACE DEVICE YOU ARE CONNECTING TO IN DISCOVERABLE MODE” appears, press the OK Key to start searching Bluetooth devices.
- Press the Directional Key  up or down to select a desired device and press the OK Key [PAIR]. Please refer to page 82 for more details on Bluetooth.
- The handset may prompt you for the passkey. Consult the Bluetooth accessory (sold separately) instructions for the appropriate passkey (typically “0000” - 4 zeroes). Enter the passkey, then press the OK Key.
- “Before Connecting To [Device Name]” will appear on the screen. Select **Always Ask** or **Always Connect** and press the OK Key.

## RECENT CALLS


The Recent Calls menu is a list of the last phone numbers or Contact entries for calls you placed, accepted, missed, or blocked. It is continually updated as new numbers are added to the beginning of the list and the oldest entries are removed from the bottom of the list.

### ACCESS AND OPTIONS

- From idle mode, press the **[OK] [MENU]**, select **7. Recent Calls**, then press the OK Key.
- Select a submenu.
  - 1. Missed / 2. Received / 3. Dialed / 4. Blocked / 5. All / 6. View Timers**

### MISSED

Displays information about the 90 most recently missed calls. Place a call to a missed call by simply pressing the SEND Key .

- From idle mode, press the **[OK] [MENU]**, then select **7. Recent Calls**, **1. Missed**.
- Highlight an entry and do one of the following options:
  - Press the OK Key **[OPEN]** to view the entry.
  - Press the Send Key  to place a call to the number.
  - Press the Right Soft Key **[Options]** to select:

**Save to Contacts:** Stores the phone number to your Contacts.

**Details:** View contact information stored in your Contact List.

**Erase:** Deletes the call from Missed calls list.

**Lock/Unlock:** Locks or unlocks the entry.

**Erase All:** Deletes all entries from Missed calls list.

**View Timers:** Displays usage time.


- Press the Left Soft Key **[Message]** to select:
  - TXT Message:** Allows you to send a TXT Message to the contact.
  - Picture Message:** Allows you to send a Picture Message to the contact.
  - Voice Message:** Allows you to send a Voice Message to the contact.



After 90 missed calls, the oldest call will automatically be erased from the history.

## RECEIVED

Displays information about the 90 most recently received calls. Place a call to a received call by simply pressing the SEND Key .

- From idle mode, press the **[OK] [MENU]**, then select **7. Recent Calls**, **2. Received**.
- Highlight an entry and do one of the following options:
  - Press the OK Key **[OPEN]** to view the entry.
  - Press the Send Key  to place a call to the number.
  - Press the Right Soft Key **[Options]** to select:
    - Save to Contacts:** Stores the phone number to your Contacts.
    - Details:** View contact information stored in your Contact List.
    - Erase:** Deletes the call from Received calls list.
    - Lock/Unlock:** Locks or unlocks the entry.
    - Erase All:** Deletes all entries from Received calls list.
    - View Timers:** Displays usage time.
  - Press the Left Soft Key **[Message]** to select:
    - TXT Message:** Allows you to send a TXT Message to the contact.
    - Picture Message:** Allows you to send a Picture Message to the contact.
    - Voice Message:** Allows you to send a Voice Message to the contact.



After 90 received calls, the oldest call will automatically be erased from the history.






## DIALED

Displays information about the 90 most recently dialed numbers. Place a call to a dialed call by simply pressing the SEND Key .

1. From idle mode, press the **OK** [MENU], then select **7. Recent Calls, 3. Dialed**.

2. Highlight an entry and do one of the following options:

- Press the OK Key [OPEN] to view the entry.
- Press the Send Key  to place a call to the number.
- Press the Right Soft Key  [Options] to select:
  - Save to Contacts:** Stores the phone number to your Contacts.
  - Details:** View contact information stored in your Contact List.
  - Erase:** Deletes the call from Dialed Calls list.
  - Lock/Unlock:** Locks or unlocks the entry.
  - Erase All:** Deletes all entries from Dialed Calls list.
  - View Timers:** Displays usage time.
- Press the Left Soft Key  [Message] to select:
  - TXT Message:** Allows you to send a TXT Message to the contact.
  - Picture Message:** Allows you to send a Picture Message to the contact.
  - Voice Message:** Allows you to send a Voice Message to the contact.

 After 90 dialed calls, the oldest call will automatically be erased from the history.

## BLOCKED

This menu appears only when Incoming Call Restriction is set.




1. From idle mode, press the **OK** [MENU], then select **7. Recent Calls, select Blocked** and then press OK Key.

 This menu appears only when Incoming Call Restriction is set.

2. Enter the four-digit lock code. The default lock code is the last 4 digits of your phone number.

3. Highlight an entry and do one of the following options:

- Press the OK Key [OPEN] to view the entry.

- Press the Send Key  to place a call to the number.
- Press the Right Soft Key  [Options] to select:
  - Details:** View contact information stored in your Contact List.
  - Erase:** Deletes the call from Blocked calls list.
  - Lock/Unlock:** Locks or unlocks the entry.
  - Erase All:** Deletes all entries from Blocked calls list.
  - View Timers:** Displays usage time.
- Press the Left Soft Key  [Message] to select:
  - TXT Message:** Allows you to send a TXT Message to the contact.
  - Picture Message:** Allows you to send a Picture Message to the contact.
  - Voice Message:** Allows you to send a Voice Message to the contact.






- After 90 blocked calls, the oldest call will automatically be erased from the history.
- Please refer to [page 98](#) for more details on [Restrictions](#).


## ALL



Displays information about the most recently received, dialed and missed calls.

1. From idle mode, press the **OK** [MENU], then select **7. Recent Calls, select All** and press the OK Key.

2. Highlight an entry and select from the following options:




- Press the OK Key [OPEN] to view the entry.
- Press the Send Key  to place a call to the number.
- Press the Right Soft Key  [Options] to select:
  - Save to Contacts:** Stores the phone number to your Contacts.
  - Details:** View contact information stored in your Contact List.
  - Erase:** Deletes the call from All calls list.
  - Lock/Unlock:** Locks or unlocks the entry.
  - Erase All:** Deletes all entries from All calls list.
  - View Timers:** Displays usage time.
- Press the Left Soft Key  [Message] to select:
  - TXT Message:** Allows you to send a TXT Message to the contact.
  - Picture Message:** Allows you to send a Picture Message to the contact.
  - Voice Message:** Allows you to send a Voice Message to the contact.

 After the 270 received, dialed or missed calls, the oldest call will automatically be erased from the history.

 **Shortcut:** To view a quick list of all your calls, press the Send Key  from idle mode.

## VIEW TIMERS



Checks the usage time and manages your calls within the limit you set. To view 11 timers (Last Call, All Calls, Received Calls, Dialed Calls, Roaming Calls, Transmit Data, Received Data, Total Data, Last Reset, Lifetime Calls, Lifetime Data Counter):

1. From idle mode, press the  [MENU], then select **7. Recent Calls**, select **View Timers** and press the OK Key.
2. Highlight a call list. Call timers include:  
**Last Call / All Calls / Received Calls / Dialed Calls / Roaming Calls / Transmit Data / Received Data / Total Data / Last Reset / Lifetime Calls / Lifetime Data Counter**
  - Press the Left Soft Key  [Reset] to reset highlighted timer.
  - Press the Right Soft Key  [Reset All] to reset all timers.

## VOICE COMMANDS

Your phone is equipped with an Advanced Voice Commands (AVC) feature. This feature allows you to make calls or use the phone's functions by simply using your voice. All you have to do is talk into the phone and then the phone will recognize your voice and complete tasks by itself.

1. To access Voice Commands from idle mode, press the  [MENU], then press **9. Settings & Tools, 3. Tools, 1. Voice Commands**.

 **Shortcut:** From idle mode, press and hold the AVC Key  to access the Voice Commands menu.

2. The phone displays the Voice Commands menu and prompts you to say the name of the command you want to use. To complete your task, simply follow the voice prompts. You can speak the name of the command after you hear a beep.
3. Select one of the following options, then press the OK Key.  
**Call <Name or #> / Send <MSG Type> / Go To <Shortcut> / Check <Item> / Contact <Name> / Search / Redial / My Verizon / Help**

 To view information about each option, press the Left Soft Key  [Info]. Press the Right Soft Key  [Settings] to access Voice Commands Settings. Please refer to [page 68](#) for more details on [Voice Commands Settings](#).

4. When it recognizes one of these commands, the phone launches the associated application. If the phone does not hear a command within approximately eight seconds, AVC mode will turn itself off.

### CALL <NAME OR #>

Use the Call command to voice dial a name from your Contact List or a phone number. When dialing a number, pronounce each digit, but do not pause noticeably between the digits.

1. You will hear **Please say a command** and the Voice Commands menu will be displayed.

- If calling a contact from your Contact List, say Call <Name>. Your phone will ask you to confirm the name you said. Say “Yes” if it was repeated correctly. That phone number will be dialed. If there is more than one number saved for that contact, you will be asked to confirm which number to dial.

Example: Call John Work

#### SEND <MSG TYPE>

Use the Send command to send a text or other type of message to a specified name or number.

- You will hear **Please say a command** and the Voice Commands menu will be displayed.
- Say “Send” followed immediately by Text, Picture, Voice Message.  
Example: Send text message to Bob

#### GO TO <SHORTCUT>

Use the Go To command to open an application on your phone. You can say “Go To” by itself and be prompted to say the application name, or you can skip the prompt by saying “Go To” followed by the application name.

- You will hear **Please say a command** and the Voice Commands menu will be displayed.
- To access a menu within the phone, say “Go To” followed by the menu.  
Example: “Go To Calendar”. If no menu option is stated, a list of options will be provided.

#### CHECK <ITEM>

The Check command lets you check status information for your phone. You can say “Check” or “Check Status” to see and hear all status information.

- You will hear **Please say a command** and the Voice Commands menu will be displayed.

- Say “Check” followed immediately by one of the following items:  
**Status / Voicemail / Messages / Missed Calls / Time / Signal Strength / Battery Level / Volume / Balance / Minutes / Payment / My Number**

#### CONTACT <NAME>

Use the Contact command to retrieve and display information for any name stored in your Contact List.

- You will hear **Please say a command** and the Voice Commands menu will be displayed.
- Say “Contact <Name>” to retrieve and display the contact information.  
Example: Contact Bob Smith and follow the voice prompts.  
**Call / Readout / Create New / Modify / Erase**

#### SEARCH

Use the Search command to search for information over the Internet.

- You will hear **Please say a command** and the Voice Commands menu will be displayed.
- Say “Search”.
- Your phone will make a web connection.

#### REDIAL

Use the Redial command to make a call to the last number you dialed.

- You will hear **Please say a command** and the Voice Commands menu will be displayed.
- Say “Redial”.
- Your phone will make a call to the last number you dialed.

01

02

03

04

05

06

07

## MY VERIZON

Use the My Verizon command to access information about your Verizon account.

1. You will hear **Please say a command** and the Voice Commands menu will be displayed.
2. Say **"My Verizon"**.
3. Your phone will make a web connection.

## HELP

Use the Help command to view how to use the Voice Commands.


1. You will hear **Please say a command** and the Voice Commands menu will be displayed.
2. Say **"Help"**.
3. The Help guide will be displayed on your phone.

## VOICE COMMANDS SETTINGS

### CONFIRM CHOICES

When the phone does not recognize your voice command, it will ask you to repeat your voice command. If it does not recognize the name or number, it will display a list of up to three choices and speak each one in turn. You can control how often the phone asks you to confirm the recognized name or number.

1. From idle mode, press the **OK [MENU]**, then press **9. Settings & Tools, 3. Tools, 1. Voice Commands**.

 To view information about each option, press the Left Soft Key **[Info]**.

2. Press the Right Soft Key **[Settings]** and then select **1. Confirm Choices**.

 **Shortcut:** From idle mode, press and hold the AVC Key **[Settings]** to access the Voice Commands menu and press the Right Soft Key **[Settings]**.

3. Select **Automatic, Always Confirm** or **Never Confirm**, then press the OK Key **[SET]**.

## SENSITIVITY

The Sensitivity setting allows you to adjust the sensitivity monitoring of voice tones. If you frequently experience the messages **"Please try again"** or **"COMMAND NOT RECOGNIZED Try again?"**, adjust the sensitivity toward **Less Sensitive**. If you frequently experience false activations (when the phone recognizes a name you didn't say), adjust the sensitivity toward **More Sensitive**.

1. From idle mode, press the **OK [MENU]**, then select **9. Settings & Tools, 3. Tools, 1. Voice Commands**.
2. Press the Right Soft Key **[Settings]** and then select **2. Sensitivity**.
3. Select **More Sensitive, Automatic** or **Less Sensitive**, then press the OK Key **[SET]**.

## ADAPT VOICE

Voice Commands are speaker independent, which means that no training or adaptation is required. Some users with heavy accents or unusual voice characteristics may find difficulty in achieving high accuracy with speaker independent Voice Commands, so the Adapt Voice feature allows users to dramatically improve the recognition accuracy after adapting their voices. Users who get acceptable recognition accuracy will find no additional benefit to performing the Adapt Voice feature.

1. From idle mode, press the **OK [MENU]**, then select **9. Settings & Tools, 3. Tools, 1. Voice Commands**.
2. Press the Right Soft Key **[Settings]** and then select **3. Adapt Voice**.
3. Select **1. Train Voice**, then press the OK Key.

• **Train Voice:** Requires that you make recordings of your voice to customize the voice recognition system. It will take a few minutes.

4. **"Adaptation will take a couple of minutes to complete. Adapt in a quiet room. Press OK to begin."** will appear on the screen. Press the OK Key. Wait for the beep, and then repeat the sentences using a normal tone of voice.

5. When you are finished with a full session, you will reach a screen that reads “Adaptation Complete”.

## PROMPTS

Allows you to select voice command system characteristics.

- From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 3. Tools, 1. Voice Commands**.
- Press the Right Soft Key **[...]** [Settings] and then select **4. Prompts**.
- Select **1. Mode, 2. Audio Playback** or **3. Timeout**, then press the OK Key.
  - Mode:** Select the voice command system mode from the following:
    - Prompts:** For handset to prompt for required information.
    - Readout+Alerts:** For handset to prompt for required information and readout the contents of the screen and phone alerts.
    - Readout:** For handset to prompt for required information and readout the contents of the screen.
    - Tones Only:** For handset to provide beeps only for audio guidance.
  - Audio Playback:** Allows audio playback to play through the speakerphone or earpiece. Select **Automatic, Speakerphone** or **Earpiece**.
  - Timeout:** Select a period of time either **5 seconds** or **10 seconds** which the system listens for a command before timing out.
- Select an option and press the OK Key **[SET]**.

## ABOUT

- From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 3. Tools, 1. Voice Commands**.
- Press the Right Soft Key **[...]** [Settings] and then select **5. About**.
- The Nuance version appears.
- To return to the previous screen, press the CLR Key **[CLR]** or Right Soft Key **[...]** [Back].

## CALCULATOR

The Calculator allows you to perform simple mathematical calculations. To access the calculator:

- From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 3. Tools, 2. Calculator**.
- Follow the instructions below to calculate  $8 \times 6 \div 4 - 2.5 = 9.5$ 
  - Input 8 and then Press the Directional Key **[Right]** right.
  - Input 6 and then Press the Directional Key **[Left]** left.
  - Input 4 and then Press the Directional Key **[Down]** down.
  - Input 2 and then press the **[.]** to input (.).
  - Input 5 and then press the OK Key and you will see the answer (9.5).
- To reset, press the Left Soft Key **[...]** [Clear].



- Directional Key right : X
- Directional Key down : -
- Directional Key left : +
- Directional Key up : +
- \* Key : \*
- Left Soft / CLR Key : Clear
- OK Key : =
- To change the displayed number from positive (+) to negative (-) and vice versa, press # Key **[#]**.
- Press the Right Soft Key **[...]** [Operator] to use parenthesis **1. (, 2. )** and **3. Exponent**.

## TIP CALCULATOR

Allows you to calculate the tip and determine how much each person should pay for the bill.

- From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 3. Tools, 3. Tip Calculator**.
- Input the amount in the **Total Bill** field and Press the Directional Key **[Right]** down.

01

02






03

04

05



06

07

- Select the percentage of tip in the **TIP(%)** field by Pressing the Directional Key  left or right. The amount of a tip will be displayed in the **Tip (\$)** field. Press the Directional Key  down.
- Input the number of persons by pressing the Directional Key  left or right. The tip amount and cost per person is shown.
- Press the CLR Key  [Reset] to clear the fields. Press the END Key  [Close] to return to the Previous menu.

## CALENDAR

 
The Calendar tool provides easy and convenient access to your schedule. Simply store your appointments and your phone will alert you.

- From idle mode, press the **OK** [MENU], then select **9. Settings & Tools, 3. Tools, 4. Calendar**.
- Highlight the scheduled day.
- Press the Left Soft Key  [Add].
- The **Subject** field is highlighted. Enter the name of the event using the QWERTY Keypad. Press the Directional Key  down to set the other fields for the event:

### START TIME

Use the keypad to set a start time and press the Left Soft Key  for **am/pm**.


### END TIME

Use the keypad to set an end time and press the Left Soft Key  for **am/pm**.

### START DATE

Use the keypad to change or enter the start date.

## RECURRENT



Press the Directional Key  left or right to set the recurrence of the event from the following:

**Once / Daily / Weekly / Monthly / Yearly**

## END DATE

Use the keypad to change or enter the end date.


## ALERT TONE

Press the Left Soft Key  [Set] to select a new ringtone. Highlight a desired ringtone then press the OK Key [SET]. Press the Left Soft Key  [Play] to play a ringtone.

## VIBRATE


Press the Directional Key  left or right to set **On** or **Off**.

## REMINDER

Press the Directional Key  left or right to select a reminder before the event from the following:

**Once / Every 2 Minutes / Every 15 Minutes / Off**

## ALERT TIME

- Press the Directional Key  left or right to select the alert time before the event takes place from the following:  
**On Time / 5 minutes before / 10 minutes before / 15 minutes before / 30 minutes before / 1 hour before / 3 hours before / 5 hours before / 1 Day Before**
- Press the OK Key [SAVE] to save it. The date of the event will be marked on your calendar.

### VIEW SAVED EVENT

1. From idle mode, press the **[OK]** **[MENU]**, then select **9. Settings & Tools, 3. Tools, 4. Calendar**.
2. Choose the event then press the OK Key **[VIEW]**.

### ERASE SAVED EVENT

1. From idle mode, press the **[OK]** **[MENU]**, then select **9. Settings & Tools, 3. Tools, 4. Calendar**.
2. Choose the event then press the OK Key **[VIEW]**.
3. Press the Left Soft Key **[■]** **[Erase]**, select **Yes**, then press the OK Key.

### ERASE ALL PAST EVENTS

Allows you to delete past events from today.

1. From idle mode, press the **[OK]** **[MENU]**, then select **9. Settings & Tools, 3. Tools, 4. Calendar**.
2. Press the Right Soft Key **[■]** **[Options]**, select **7. Erase Past Events** and press the OK Key.
3. Select **Yes**, then press the OK Key.

### E-DIARY

E-Diary is a simple diary application designed to be easy to understand and convenient for everyday use.

1. From idle mode, press the **[OK]** **[MENU]**, then select **9. Settings & Tools, 3. Tools, 5. E-Diary**.
2. Press the Left Soft Key **[■]** **[New]**.
3. In the **Weather & Feeling** field, Press the Left Soft Key **[■]** **[Set]**, then select an icon and press the OK Key.
4. Press the Directional Key **[⊙]** down to set the other fields for the E-diary:

### TITLE

Enter the title of the diary.

### PICTURE

Press the Left Soft Key **[■]** **[Set]** to select an image stored in My Pictures and press the OK Key. Please refer to **page 111** for more details on **MY PICTURES**.

### TEXT

Enter the message for the diary.

### BACKGROUND

Press the Directional Key **[⊙]** left or right to select one of the following backgrounds:

**Blackboard / Essay / Sky / Letter**

5. In each field, press the Right Soft Key **[■]** **[Options]** then select **1. Preview** to preview the setting you selected or **2. Cancel E-Diary** to discard your new E-diary.

 **Remove Picture** and then set a picture in a Picture filed can be used.

6. Press the OK Key **[SAVE]** to save your E-diary.

### SEND AN E-DIARY

1. From idle mode, press the **[OK]** **[MENU]**, then select **9. Settings & Tools, 3. Tools, 5. E-Diary**.
2. Press the Directional Key **[⊙]** up or down to highlight an entry, then Press the Right Soft Key **[■]** **[Options]**.
3. Select **1. Send** and press the OK Key, then compose a Picture Message and press the OK Key **[SEND]**. Please refer to **page 118** for more details on **Picture Message**.

## EDIT AN E-DIARY

1. From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 3. Tools, 5. E-Diary**.
2. Highlight an **E-diary**, then Press the Right Soft Key **[Options]**.
3. Select **2. Edit** and press the OK Key, then modify the E-diary.
4. Press the OK Key **[SAVE]** to save your modifications.

## ERASE E-DIARY

1. From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 3. Tools, 5. E-Diary**.
2. Highlight an **E-diary**, then press the Right Soft Key **[Options]**.
3. Select **3. Erase** to erase an E-diary or **4. Erase All** to erase all the E-diary entries, then press the OK Key.
4. Select **Yes** and press the OK Key.

## ALARM CLOCK

The Alarm Clock tool allows you to set up to three alarms. When you set an alarm, the current time is displayed at the top of the screen. When the alarm goes off, Alarm 1 (2 or 3, as applicable) will be displayed on the LCD screen and the alarm will sound.

1. From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 3. Tools, 6. Alarm Clock**.

 **Shortcut:** From idle mode, press the Directional Key **[Right]** to access **MY SHORTCUTS** and then press **4. Alarm Clock**.

2. Highlight an **Alarm (1, 2 or 3)**, then press the OK Key.
3. Press the Directional Key **[Down]** to set the fields for the alarm:

### ALARM

Press the Directional Key **[Left/Right]** to select **On** or **Off**.

## TIME

Use the keypad to set a time for the alarm and press the Left Soft Key **[AM/PM]** to set **am** or **pm**.

## FREQUENCY

Press the Directional Key **[Left/Right]** to select a setting from the following:  
**Once / Daily / Weekdays / Weekends**

## RINGTONE

Press the Left Soft Key **[Set]** then select **1. Get New Applications** or select the alert tone you wish to set. Press the Left Soft Key **[Play]** to play a ringtone. Press the OK Key **[SET]** to make your selection.

4. Press the OK Key **[SAVE]** to set the alarm.

## TURN ON/OFF THE ALARM SETTING

1. From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 3. Tools, 6. Alarm Clock**.
2. Highlight an **Alarm (1, 2 or 3)**, then press the Right Soft Key **[Options]**.
3. Select **1. Turn On** or **Turn Off** then press the OK Key.

## RESET THE ALARM SETTING

1. Press the **[OK]** [MENU], then select **9. Settings & Tools, 3. Tools, 6. Alarm Clock**.
2. Highlight an **Alarm (1, 2 or 3)**, then press the Right Soft Key **[Options]**.
3. Select **2. Reset Alarm**, then press the OK Key.
4. **"RESET ALARM (1, 2 or 3)?"** will appear on the screen. Select **Yes** and press the OK Key.



## RESET ALL ALARM SETTINGS

1. From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 3. Tools, 6. Alarm Clock**.
2. Highlight an **Alarm** (1, 2 or 3), then press the Right Soft Key **[Options]**.
3. Select **3. Reset All**, then press the OK Key.
4. **"RESET ALL ALARMS?"** will appear on the screen. Select **Yes** and press the OK Key.

## STOP WATCH

Simultaneously times up to eight different events. To operate the stop watch:

1. From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 3. Tools, 7. Stop Watch**.
2. To start the stop watch, press the OK Key **[Start]**.
3. To pause it, press the OK Key **[Stop]**.
4. To resume it, press the OK Key **[Start]**.
5. To reset it, press the Right Soft Key **[Reset]**.

## TO TIME UP TO TWENTY EVENTS AT ONCE

1. To start the stop watch, press the OK Key **[Start]**.
2. To stop a time period and continue measuring another one, press the Left Soft Key **[Lap]**.
3. To stop the second and continue measuring a third one, press the Left Soft Key **[Lap]**.
4. To measure up to eight time periods, repeat the above steps.
5. To stop the stop watch, press the OK Key **[Stop]**.
6. To reset it, press the Right Soft Key **[Reset]**, then press the Right Soft Key **[Exit]** to finish using the stop watch and return to the previous menu.


## WORLD CLOCK

To display the time and date in pre-programmed cities:

1. From idle mode, Press the **[OK]** [MENU], then select **9. Settings & Tools, 3. Tools, 8. World Clock**.
2. Press the Left Soft Key **[Cities]** to access the CITIES LIST. Select the desired city, then press the OK Key. Or, press the Directional Key **[Left/Right]** left or right to select the desired continent and press the OK Key. Swipe the Directional Key **[Left/Right]** left or right to select your city.
3. The world map appears with the city, its date and time.
4. Press the OK Key and press the OK Key or CLR Key to return to the previous menu.

## DAYLIGHT SAVING TIME (DST) SETTING

1. From idle mode, Press the **[OK]** [MENU], then press **9. Settings & Tools, 3. Tools, 8. World Clock**.
2. Press the Right Soft Key **[DST]**
3. Press the Directional Key **[Left/Right]** left or right to select a city. Press the Directional Key **[Down]** down.
4. Under DST, press the Directional Key **[Left/Right]** left or right to turn Daylight Savings Time **[DST]** On or Off. Press the Directional Key **[Down]** down.
5. Under Start Date, use the keypad to change or enter the start date and then press the Directional Key down.

 The DST option will adjust clocks forward one hour.

6. Under Start Time, use the keypad to set a start time and press the Left Soft Key **[AM/PM]** to select am or pm and then press the Directional Key **[Down]** down.
7. Under End Date, use the keypad to change or enter the end date and then press the Directional Key **[Down]** down.

01

02


03

04

05

06



07




- Under End Time, use the keypad to set an end time and press the Left Soft Key  to select am or pm.
- To save a DST setting, press the OK Key [SAVE]

## NOTEPAD +

Your phone includes an internal notepad that can be used to compose and store reminders and notes. To create a note:

- From idle mode, press the **OK** [MENU], then select **9. Settings & Tools**, **3. Tools**, **9. Notepad +**.

 **Shortcut:** Phone up and press the Notepad + Key .

- Press the Left Soft Key  [New] to enter a new note.
- To create a note with a picture, or sound, press the Right Soft Key  [Options], press **1. Add**, select **1. Picture**, or **2. Sound**, then press the OK Key. Select your desired picture, or sound and press the OK Key.
- To save the note, press the Right Soft Key  [Options], then select **2. Save**.



## VIEW SAVED MEMO

To view a saved memo:

- From idle mode, press the **OK** [MENU], then select **9. Settings & Tools**, **3. Tools**, **9. Notepad +**.
- Select a note, then press the OK Key [VIEW].

## EDIT SAVED MEMO

To edit a saved memo:

- From idle mode, press the **OK** [MENU], then select **9. Settings & Tools**, **3. Tools**, **9. Notepad +**.
- From idle mode, press the Right Soft Key  [Options], then select **1. Edit**.
- Edit the desired memo.
- To save the note, press the Right Soft Key  [Options], then select **2. Save**.

## SEND SAVED MEMO

To send a saved memo:

- From idle mode, press the **OK** [MENU], then select **9. Settings & Tools**, **3. Tools**, **9. Notepad +**.
- Select a note, press the Right Soft Key  [Options], then press **2. Send**.
- Select **TXT Message**, **Picture Message**, or **Voice Message**, then press the OK Key.




If a note has a picture, or voice attachment, the corresponding message window will be opened automatically.

- Compose the message, then press the OK Key [SEND].


## ERASE SAVED MEMO

To erase a saved memo:

- From idle mode, press the **OK** [MENU], then select **9. Settings & Tools**, **3. Tools**, **9. Notepad +**.
- Select a note, press the Right Soft Key  [Options] then select **3. Erase** and press the OK Key.
- Select **Yes** and press the OK Key.

## ERASE ALL SAVED MEMOS

To erase all saved memos:

- From idle mode, press the **OK** [MENU], then select **9. Settings & Tools**, **3. Tools**, **9. Notepad +**.
- Press the Right Soft Key  [Options], then select **4. Erase All** and press the OK Key.
- Select **Yes** and press the OK Key.

## MY VERIZON


To access your Verizon account information:

1. From idle mode, press the **OK** [MENU], then select **5. My Verizon**.

 Press the OK Key to unlock the Keypad, then Press the Directional Key  left.


## BLUETOOTH

Bluetooth® technology connectivity enables wireless connections between electronic devices. If connected with a Bluetooth handsfree device, you can use your phone more freely. Since devices with Bluetooth connectivity communicate using radio waves, your phone and the other device do not need to be in direct line-of-sight. The two devices only need to be within 10 meters (30 feet) of each other. The connection can be subject to interference from obstructions such as walls or other electronic devices. This device is compliant with Bluetooth specification 2.1, supporting the following profiles: Headset, Handsfree, Stereo, Phonebook Access, Object Push for vCard and File Transfer. To ensure interoperability between other devices supporting Bluetooth technology, use approved enhancements for this model. Check with the manufacturers of other devices to determine their compatibility with this phone. There may be restrictions on using Bluetooth technology in some locations. Check with your local authorities or Verizon Wireless. If you want more information on this function, visit the Bluetooth Technology organization Web site: <https://www.bluetooth.org/>.

 **Important:** Features using Bluetooth technology, or allowing such features to run in the background while using other features, increase the demand on battery power and reduce battery life.


## BLUETOOTH ON/OFF




To toggle Bluetooth power On/Off:

1. From idle mode, press the **OK** [MENU], then select **9. Settings & Tools, 4. Bluetooth**.
2. Press the Left Soft Key  [Turn On/Turn Off]. A confirmation window appears.

## ADD NEW DEVICE

Pairing is the process that allows the handset to locate, establish and register a 1-to-1 connection with the target device.

1. From idle mode, press the **OK** [MENU], then select **9. Settings & Tools, 4. Bluetooth, 1. Add New Device**.
  2. If the Bluetooth® power is switched off, the following message will appear on the LCD screen: **“TURN BLUETOOTH POWER ON?”** Select **Yes** and press the OK Key.
  3. The handset will prompt you with the following message on the LCD screen: **“PLACE DEVICE YOU ARE CONNECTING TO IN DISCOVERABLE MODE.”** Press the OK Key.
  4. The device will appear in the **ADD NEW DEVICE** menu. Select the device you wish to pair to, then press the OK Key [PAIR].
  5. The handset may prompt you for the passkey. Consult the Bluetooth accessory (sold separately) instructions for the appropriate passkey (typically “0000”—4 zeroes). Enter the passkey, then press the OK Key.
-  You do not need to input the passkey for pairing when the passkey of the Bluetooth headset or hands-free kit is 0000.
6. The handset will prompt you with the following message on the LCD screen: **Before Connecting To [Device Name]**. If you would like to always confirm before connecting to the Bluetooth device, select **Always Ask**, then press the OK Key. If you do not wish to confirm every time before connecting to the Bluetooth device, select **Always Connect**, then press the OK Key.
  7. Once connected, you will see the device listed in the Bluetooth menu and the Bluetooth device connected icon will appear at the top of the screen when connected to the Bluetooth device.

 • In the Bluetooth menu, you can turn off the device by pressing the Left Soft Key  [Turn Off]. Conversely, you can turn on by pressing the Left Soft Key  [Turn On].

- If multiple devices are displayed, select the device you want to connect to.

01

02

03

04

05

06

07

## OPTIONS

- From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 4. Bluetooth**.
- Select the paired device.
- Press the Right Soft Key **[Options]**.
- Select one of the following options, then press the OK Key.
  - Remove Device:** Removes a device from the pairing list.
  - Rename Device:** Renames a paired device.
  - Incoming Security:** Sets permissions for connecting an incoming device.
  - Service Discovery:** Searches for the services that the selected device supports.
  - Device Info:** Displays device information.
- Or, press the OK Key to access **1. Send Name Card, 2. Send Picture, 3. Get Name Card, or 4. File Transfer**. Select the desired option and press the OK Key to access the following:
  - Disconnect/Connect:** Disconnects or reconnects the connected device.
  - Send Name Card:** Allows you to send name cards stored in Contacts to a selected device.
    - Press the Directional Key **[Up]** up or down to highlight a desired contact or contacts, then press the OK Key [MARK]. If you want to change your selections, press the OK Key [UNMARK] to deselect your selections.
    - Press the Left Soft Key **[Done]**. If you want to send all the name cards, press the Right Soft Key **[Send All]**.
  - Get Name Card:** Get name cards from the selected device.
  - Send Picture:** Allows you to send photos to a selected device.
    - Press the Directional Key **[Up]** up, down, left or right to highlight a desired photo or photos, then press the OK Key [MARK]. If you want to change your selections, press the OK Key [UNMARK] to deselect your selections.
    - Press the Left Soft Key **[Done]**. If you want to send all the photos, press the Right Soft Key **[Send All]**.
  - File Transfer:** Allows you to get files from the selected device.

## SETTINGS

## MY PHONE NAME

To edit the Bluetooth® name of your phone:

- From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 4. Bluetooth**.
- Press the Right Soft Key **[Options]**.
- Press **1. My Phone Name**.
- Use the QWERTY Keypad to enter a new custom name.
- Press the OK Key **[SET]** to save and exit.

## DISCOVERY MODE

To set whether your device is able to be searched for by other Bluetooth devices in the area:

- From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 4. Bluetooth**.
- Press the Right Soft Key **[Options]**.
- Select **2. Discovery Mode**.



If Bluetooth power is not on, it will be turned on automatically.

- Select **On** or **Off**, then press the OK Key **[SET]**.

## SUPPORTED PROFILES

To view brief descriptions of the profiles supported by the phone:

- From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 4. Bluetooth**.
- Press the Right Soft Key **[Options]**.
- Select **3. Supported Profiles**.
- Select one of the following profiles, then press the OK Key **[VIEW]**.  
**Headset / Handsfree / Phonebook Access / Object Push / File Transfer**

01

02

03

04

05

06

07

## AUTO PAIR HANDSFREE

To set Auto Pair Handsfree On/Off:

1. From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 4. Bluetooth**.
2. Press the Right Soft Key **[Options]**.
3. Select **4. Auto Pair Handsfree**.
4. Select **On** or **Off**, then press the OK Key **[SET]**.

## SOUNDS SETTINGS

### EASY SET - UP

The Easy Set-up menu allows you to set five stages for **Sounds Settings** with simple operation.

1. From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 5. Sounds Settings, 1. Easy Set-up**.
  - **CALL SOUNDS:** Select **Ring Only, Vibrate Only, Ring and Vibrate** or **Be Silent** then press the OK Key **[SET]** to save the setting or press the Right Soft Key **[Skip]** to go to the next setting.
  - **KEYPAD VOLUME:** Adjust the volume by pressing the Directional Key **[Up/Down]**, then press the OK Key **[SET]** to save the setting. Press the Left Soft Key **[Play]** to test the volume level or press the Right Soft Key **[Skip]** to go to the next setting.
  - **TEXT MESSAGE ALERT:** Select **Ring Only, Vibrate Only, Ring and Vibrate** or **Be Silent** then press the OK Key **[SET]** to save the setting or touch the Right Soft Key **[Skip]** to go to the next setting.
  - **MULTIMEDIA MSG ALERT:** Select **Ring Only, Vibrate Only, Ring and Vibrate** or **Be Silent** then press the OK Key **[SET]** to save the setting or press the Right Soft Key **[Skip]** to go to the next setting.
  - **VOICEMAIL MSG ALERT:** Select **Ring Only, Vibrate Only, Ring and Vibrate** or **Be Silent** then press the OK Key **[SET]** to save the setting or press the Right Soft Key **[Skip]** to complete set-up.

## CALL SOUNDS

To set ringtones for types of incoming calls:

### CALL RINGTONE

1. From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 5. Sounds Settings, 2. Call Sounds, 1. Call Ringtone**.
2. Press the Directional Key **[Up/Down]** to select a ringtone, then press the OK Key **[SET]**. To play the ringtone, press the Left Soft Key **[Play]**.

### CALL VIBRATE

1. From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 5. Sounds Settings, 2. Call Sounds, 2. Call Vibrate**.
2. Select **On** or **Off**, then press the OK Key **[SET]**.


### CALLER ID READOUT

1. From idle mode, press the **[OK]** [MENU], then select **9. Settings & Tools, 5. Sounds Settings, 2. Call Sounds, 3. Caller ID Readout**.
2. Select **Ring Only, Caller ID + Ring** or **Name Repeat**, then press the OK Key **[SET]**.


## ALERT SOUNDS

To select the alert type for a new message:





1. From idle mode, press the **[OK]** [MENU], then press **9. Settings & Tools, 5. Sounds Settings, 3. Alert Sounds**.
2. Select **1. TXT Message, 2. Multimedia Message** or **3. Voicemail**, then press the OK Key.
3. Select **Tone, Vibrate** or **Reminder**, then select the OK Key.
  - **Tone:** Press the Directional Key **[Up/Down]** to select a ringer, then press the OK Key **[SET]**. To play the alert tone, press the Left Soft Key **[Play]**.
  - **Vibrate:** Press the Directional Key **[Up/Down]** to select **On** or **Off**, then press the OK Key **[SET]**.

- **Reminder:** Press the Directional Key  up or down to select **Once, Every 2 Minutes, Every 15 Minutes** or **Off**, then press the OK Key [SET].

## EMERGENCY TONE

1. From idle mode, press the **OK** [MENU], then select **9. Settings & Tools, 5. Sounds Settings, 3. Alert Sounds, 4. Emergency Tone**.
2. Select **Alert, Vibrate** or **Off**, then press the OK Key [SET].
3. To view the help for **Emergency Tone**, press the Right Soft Key  [Help].

## MISSED CALL

1. From idle mode, press the **OK** [MENU], then select **9. Settings & Tools, 5. Sounds Settings, 3. Alert Sounds, 5. Missed Call**.
2. Select **Tone, Vibrate** or **Reminder**, then press the OK Key.
  - **Tone:** Press the Directional Key  up or down to select a ringer, then press the OK Key [SET]. To play the alert tone, press the Left Soft Key  [Play].
  - **Vibrate:** Press the Directional Key  up or down to select **On** or **Off**, then press the OK Key [SET].
  - **Reminder:** Press the Directional key  up or down to select **Once, Every 2 Minutes, Every 15 Minutes** or **Off**, then press the OK Key [SET].

## KEYPAD SOUNDS

To select keypad sounds when using the QWERTY Keypad.



1. From idle mode, press the **OK** [MENU], then press **9. Settings & Tools, 5. Sounds Settings, 4. Keypad Sounds**.
2. Select **DTMF, Cloud** or **Simple**, then press the OK Key [SET].

 **DTMF** is the default setting for this device.

## KEYPAD VOLUME

To set the keypad volume:

1. From idle mode, press the **OK** [MENU], then select **9. Settings & Tools, 5. Sounds Settings, 5. Keypad Volume**.

2. Adjust the volume by swiping the Directional Key  up or down, then press the OK Key [SET] to save the setting. To test the volume level, press the Left Soft Key  [Play].

## DIGIT DIAL READOUT

The Digit Dial Readout setting controls if digits are read out loud when you enter a phone number with the QWERTY Keypad.

1. From idle mode, press the **OK** [MENU], then select **9. Settings & Tools, 5. Sounds Settings, 6. Digit Dial Readout**.
2. Select **On** or **Off**, then press the OK Key [SET].

## SERVICE ALERTS

To set any of the three Alert options to either On or Off:

1. From idle mode, press the **OK** [MENU], then select **9. Settings & Tools, 5. Sounds Settings, 7. Service Alerts**.
2. Select one of the following options, then press the OK Key.
  - **ERI:** The Enhanced Roaming Indicator (ERI) feature displays a text banner on the display screen informing the handset user of which systems the wireless device is using as compared to the service plan they purchased. The ERI Banner text changes to tell a customer if they are using the Verizon Wireless Network, Extended Network or Roaming.
    - **Minute Beep:** Alerts you every minute during a call.
    - **Call Connect:** Alerts you when the call is connected.
    - **Software Update:** Alerts you when a software update is available.
3. Select **On** or **Off**, then press the OK Key [SET].

## DEVICE CONNECT

Allows you to turn the Device Connect Alert On or Off:

1. From idle mode, press the **OK** [MENU], then select **9. Settings & Tools, 5. Sounds Settings, 8. Device Connect**.
2. Select **On** or **Off**, then press the OK Key [SET].

## POWER ON/OFF

To set the phone to sound a tone when the phone is powered on or off:

1. From idle mode, press the **[OK] [MENU]**, then select **9. Settings & Tools, 5. Sounds Settings, 9. Power On/Off**.
2. Press **1. Power On** or **2. Power Off**.
3. Select **On** or **Off**, then press the OK Key **[SET]**.

## DISPLAY SETTINGS

Allows you to customize the display.

### EASY SET-UP

Easy Set-up menu allows you to set nine stages for **Display Settings** with simple operation.

1. From idle mode, press the **[OK] [MENU]**, then select **9. Settings & Tools, 6. Display Settings, 1. Easy Set-up**.
  - **PERSONAL BANNER:** Enter the banner text (up to 16 characters) to be displayed on the main screen, then press the OK Key **[SET]** or press the Right Soft Key **[Skip]** to go to the next setting.
  - **DISPLAY BACKLIGHT:** Select **7 Seconds, 15 Seconds, 30 Seconds** or **Always On**, then press the OK Key **[SET]** or press the Right Soft Key **[Skip]** to go to the next setting.
  - **KEYPAD BACKLIGHT:** Select **7 Seconds, 15 Seconds, 30 Seconds** or **Always On**, then press the OK Key **[SET]** or press the Right Soft Key **[Skip]** to go to the next setting.
  - **WALLPAPER:** Select a desired screen, then press the OK Key **[SET]**. Press the Left Soft Key **[Preview]** to view the image, or press the Right Soft Key **[Skip]** to go to the next setting.
  - **DISPLAY THEMES:** Select **White, Modern Olive** or **Amoled**, then press the OK Key **[SET]**. Press the Left Soft Key **[Preview]** to preview the selected display theme, or press the Right Soft Key **[Skip]** to go to the next setting.
  - **MENU LAYOUT:** Select **Tab, List** or **Grid**, then press the OK Key **[SET]**. Press the Left Soft Key **[Preview]** to preview the selected main menu layout, or press the Right Soft Key **[Skip]** to go to the next setting.

- **FONT TYPE:** Select **VZW Font, Sleek Modern Font** or **Dandy Round Font**, then press OK Key **[SET]**. Press the Left Soft Key **[Preview]** to preview the selected font type, or press the Right Soft Key **[Skip]** to go to the next setting.
- **DIAL FONT:** Select **Normal** or **Large Only**, then press OK Key **[SET]**. Press the Left Soft Key **[Preview]** to preview the selected dial fonts, or press the Right Soft Key **[Skip]** to go to the next setting.
- **CLOCK FORMAT:** Select **Analog, Large Analog, Digital 12, Large Digital 12, Digital 24, Large Digital 24** or **Off**, then press the OK Key **[SET]**. Touch the Left Soft Key **[Preview]** to preview the selected clock format, or touch the Right Soft Key **[Skip]** to complete set-up.



This guide gives navigation instructions according to the defaults, Menu Layout is set to List, and Display Themes is set to Oceanic Delight. If other settings are set, navigating the phone's menus may be different.

### BANNER

To set your Personal or ERI banner:

#### PERSONAL BANNER

The Personal Banner can be up to 16 characters and is displayed on your phone's display screen from idle mode.

1. From idle mode, press the **[OK] [MENU]**, then select **9. Settings & Tools, 6. Display Settings, 2. Banner, 1. Personal Banner**.
2. Enter the banner text (up to 16 characters) and press the Directional Key **[Down]** to select a desired font color.
3. Press the Directional Key **[Left]** or **[Right]** to select the desired font color and press the OK Key **[SET]** to save the banner.

#### ERI BANNER

If you use ERI Service, ERI Text is shown on the sub banner.

1. From idle mode, press the **[OK] [MENU]**, then select **9. Settings & Tools, 6. Display Settings, 2. Banner, 2. ERI Banner**.
2. Select **On** or **Off**, then press the OK Key **[SET]**.

## BACKLIGHT

To set the duration for backlight illumination of the Main Screen and Keypad:

1. From idle mode, press the **(OK) [MENU]**, then select **9. Settings & Tools, 6. Display Settings, 3. Backlight**.
2. Press **1. Display** or **2. Keypad**.
3. Select **7 Seconds, 15 Seconds, 30 Seconds** or **Always On**, then press the OK Key **[SET]**.

 Even if **Always On** is selected for the **Backlight** setting, the backlight will turn off when the phone is powered off.

## WALLPAPER

To choose the kind of background to be displayed on the phone:

1. From idle mode, press the **(OK) [MENU]**, then select **9. Settings & Tools, 6. Display Settings, 4. Wallpaper**.
2. Select a desired screen, then press the OK Key **[SET]**. To view the image, press the Left Soft Key **[View]**.
3. To download other available pictures, touch the Right Soft Key **[Get New]**, then press **1. Get New Applications**. Follow the on-screen prompts.

## DISPLAY THEMES

To choose the background screen:


1. From idle mode, press the **(OK) [MENU]**, then select **9. Settings & Tools, 6. Display Settings, 5. Display Themes**.
2. Select **White, Modern Olive** or **Amoled**, then press the OK Key **[SET]**.  
To preview the selected display theme, press the Left Soft Key **[Preview]**.
3. To view the help option for **Display Themes**, press the Right Soft Key **[Help]**.

 **White** is the default setting for this device.

## MAIN MENU SETTINGS

To change Main Menu layout and type:

1. From idle mode, press the **(OK) [MENU]**, then select **9. Settings & Tools, 6. Display Settings, 6. Main Menu Settings**.
  - **Menu Layout:** Allows you to change Main Menu type.
    1. Select **Tab, List** or **Grid**, then press the OK Key **[SET]**.
    2. To preview the selected main menu layout, press the Left Soft Key **[Preview]**.

 **List** is the default setting for this device.

- **Replace Menu Items:** Allows you to replace Main Menu with desired menus.
  1. Select the menu you want to replace then press the OK Key **[EDIT]**.
  2. Select a menu in the list to replace it and then press the OK Key **[SET]**.
  3. Press the Left Soft Key **[Done]** to return to Menu Settings, or press the Right Soft Key **[Help]** to view the help for **Replace Menu Items**.
- **Position Menu Items:** Allows you to move the position of the Main Menu options to a different position.
  1. Select the menu you want to move then press the OK Key **[MOVE]**.
  2. Press the Directional Key up or down to place the menu in a new position and then press the OK Key **[SET]**.
  3. Press the Left Soft Key **[Done]** to return to Menu Settings, or press the Right Soft Key **[Help]** to view the help for **Position Menu Items**.
- **Reset Menu Settings:** Allows you to reset Main Menu Settings.
  1. Select **Menu Layout, Menu Items, Item Positions** or **All**, then press the OK Key.
  2. Press the Left Soft Key **[Done]** to return to Menu Settings, or press the Right Soft Key **[Help]** to view the help for Reset Menu Settings.
    - **Menu Layout:** Reset Menu Layout to the initial Menu Layout.
    - **Menu Items:** Reset Menu Items to the initial content of the Main Menu.
    - **Item Positions:** Reset Menu Items to the initial order of Main Menu.
    - **All:** Reset all Main Menu Settings to the initial Main Menu Settings.

## FONT TYPE

To set the font type:

1. From idle mode, press the **(OK) [MENU]**, then select **9. Settings & Tools, 6. Display Settings, 7. Font Type**.



2. Select **VZW Font**, **Sleek Modern Font** or **Dandy Round Font**, then press the OK Key [SET]. To preview the selected font type, press the Left Soft Key [Preview].

## DIAL FONTS

To set the font size and effects:

1. From idle mode, press the OK [MENU], then select **9. Settings & Tools**, **6. Display Settings**, **8. Dial Fonts**.
2. Press the Directional Key (left or right) to select **Normal** or **Large Only** for **Dial Font**.
3. Press the Left Soft Key [Preview] to preview the selected dial fonts, then press the OK Key [SET].

## MENU FONT SIZE

To set the menu font size:

1. From idle mode, press the OK [MENU], then select **9. Settings & Tools**, **6. Display Settings**, **9. Menu Font Size**.
2. Select **Normal** or **Large**, then press the OK Key [SET].

## CLOCK FORMAT

To choose the kind of clock to be displayed on the LCD screen:

1. From idle mode, press the OK [MENU], then select **9. Settings & Tools**, **6. Display Settings**, **0. Clock Format**.
2. Press the Directional Key (left or right) to select **Analog**, **Large Analog**, **Digital 12**, **Large Digital 12**, **Digital 24**, **Large Digital 24** or **Off**, then press the Directional Key (down).
3. Press the Directional Key (left or right) to select the font color and then press the OK Key [SET].
4. Press the Left Soft Key [Preview] to preview the selected clock format, or press the Right Soft Key [Help] to view the help for **Clock Format**.

 Large Digital 12 is the default setting for this device.

## PHONE SETTINGS

### AIRPLANE MODE


In Airplane Mode, all menu functions can be accessed except making calls, receiving calls, data connection and Bluetooth®. Activating Airplane Mode will disable all wireless communications. Services that support Location On functions are temporarily disabled.

1. From idle mode, press the OK [MENU], then select **9. Settings & Tools**, **7. Phone Settings**, **1. Airplane Mode**.
2. Select **On** or **Off**, then press the OK Key [SET].

### SET SHORTCUTS

Your phone offers you the option of assigning a shortcut key (Directional Key left, right, up, and down) to a favorite or often-used function.

1. From idle mode, press the OK [MENU], then select **9. Settings & Tools**, **7. Phone Settings**, **2. Set Shortcuts**, **1. Set My Shortcuts**.
2. Select **Shortcut 1**, **Shortcut 2**, **Shortcut 3** or **Shortcut 4**, then press the OK Key [SET].
3. Select the desired option, then press the OK Key [SET].

 From idle mode, pressing the Directional Key right will display the MY SHORTCUTS screen. On the MY SHORTCUTS screen, you can select a function and then press the OK Key to access the Function. On the MY SHORTCUTS screen, you can relocate a function by pressing the Right Soft Key [Move], pressing the Directional Key (up or down), and then pressing the OK Key [SAVE]. Or you can press the Left Soft Key [Settings] to access **Set My Shortcuts** or **Set Directional Keys**.

### RESET MY SHORTCUTS

To reset My Shortcuts to their original defaults:

1. From idle mode, press the OK [MENU], then select **9. Settings & Tools**, **7. Phone Settings**, **2. Set Shortcuts**, **1. Set My Shortcuts**.
2. Select **Shortcut 1**, **Shortcut 2**, **Shortcut 3** or **Shortcut 4**, then press the Right Soft Key [Options].

- Press **1. Reset Shortcut (1, 2, 3 or 4)** or **2. Reset My Shortcuts**.
- Select **Yes** and press the OK Key.

### SET DIRECTIONAL KEYS


From idle mode, you can specify the function that is accessed when you press the Directional Key (⊙) up, down, left or right.

- From idle mode, press the **(OK) [MENU]**, then select **9. Settings & Tools, 7. Phone Settings, 2. Set Shortcuts, 2. Set Directional Keys**.
- Select **UP Directional Key, LEFT Directional Key** or **DOWN Directional Key**, then press the OK Key **[SET]**.
- Select the desired option, then press the OK Key **[SET]**.

### RESET DIRECTIONAL KEY SETTINGS

Use the following procedure to specify the default Directional Key settings.

- From idle mode, press the **(OK) [MENU]**, then select **9. Settings & Tools, 7. Phone Settings, 2. Set Shortcuts, 2. Set Directional Keys**.
- Select **UP Directional Key, LEFT Directional Key** or **DOWN Directional Key**, then press the Right Soft Key **[Options]**.
- Press **1. Reset (UP, LEFT or DOWN) Key** or **2. Reset Directional Keys**.

 The RIGHT Directional Key appears in the list, but you can only press the Left Soft Key **[Disable/Enable]** or press the Right Soft Key **[Options]** and select **1. Reset Directional Keys**.

- Select **Yes** and press the OK Key.

### LANGUAGE

To set the bilingual feature to either English or Español:

- From idle mode, press the **(OK) [MENU]**, then select **9. Settings & Tools, 7. Phone Settings, 4. Language**.
- Select either **English** or **Español**, then press the OK Key **[SET]**.

### LOCATION

- From idle mode, press the **(OK) [MENU]**, then select **9. Settings & Tools, 7. Phone Settings, 5. Location**.
- Select one of the following settings, then press the OK Key **[SET]**.
  - On:** Your location is now available to the network.
  - E911 Only:** Your location will be hidden from the network and applications, except for 911.



When **Lock Setting** is set for **Location Setting** under **Restrictions** on the **Security** menu, you will need to enter a lock code. The default lock code is the last 4 digits of your phone number.

### CURRENT COUNTRY

Allows you to set the country of your current location so that your phone works properly while you travel.

- From idle mode, press the **(OK) [MENU]**, then select **9. Settings & Tools, 7. Phone Settings, 6. Current Country**.
- Press the Directional Key (⊙) up or down or input the country name in the **Go To** field to select the desired country, then press the OK Key **[SET]**. To view the help option for **Current Country**, press the Right Soft Key **[Help]**.

### SECURITY

The Security menu allows you to electronically secure the phone.



The default lock code is the last 4 digits of your phone number.

### EDIT CODES

To set a new lock code:

- From idle mode, press the **(OK) [MENU]**, then select **9. Settings & Tools, 7. Phone Settings, 7. Security**.
- Enter the four-digit lock code.
- Select **1. Edit Codes**.
- Select one of the following settings, then press the OK Key.