



ENFORCER One- and Two-Channel 917MHz RF Receivers

Sample Applications:


Individual control each channel

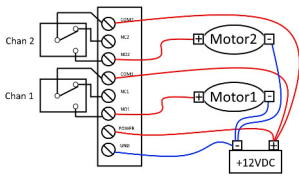

Forward/Reverse, 2 Relays

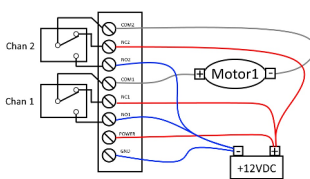

Disable Controller

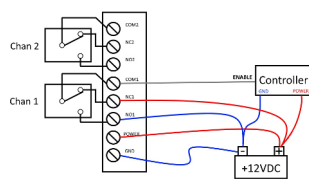

One- and Two-Channel 917MHz RF Receivers Installation Manual



HL-951R2-SQ and HL-951T4-SQ shown

- Flexible operating voltage: 10~24 VAC, 9~48 VDC (3.2~6 VDC low-voltage version also available)
- Independently programmable channels
- Compatible with all SECO-LARM transmitters of the same frequency
- 5 Relay output functions

NOTE: Operating range will vary greatly depending on the installation and operating environment.

Model	Channels	Output	Frequency	Operating Voltage
HL-951R1-SQ	1	10A Form "C" relay	917MHz	10~24 VAC, 9~48 VDC
HL-951R2-SQ	2	10A Form "C" relay	917MHz	10~24 VAC, 9~48 VDC
HL-951R1-LQ	1	10A Form "C" relay	917MHz	3.2~6 VDC battery
HL-951R2-LQ	2	10A Form "C" relay	917MHz	3.2~6 VDC battery

Specifications:

Model	HL-951R1-SQ	HL-951R2-SQ	HL-951R1-LQ	HL-951R2-LQ
Operating frequency	917MHz			
Memory capacity	99 transmitter button codes per channel			
Operating voltage	10~24 VAC, 9~48 VDC		3.2~6 VDC low-voltage	
Operating current	Standby	7mA@12VDC (typical)		
	Active	68mA@12VDC per channel		
Relay Output	Type	Independent, sequence, access control		
	Modes	1~99 sec momentary (default, 1s), 1~99 min momentary, toggle, latch, validity (follow)		
Relay contacts	Number	1	2	1
	Rating	Form C 10A@14VDC		
Digital Display	Signal strength, programming functions, etc.			
Connectors	Screw terminals, +, -, with NO/NC/COM per relay			
Operating temperature	-40°~167° F (-40°~75° C)			
Dimensions	3 7/8" x 2 7/16" x 1 3/16" (99x62x30 mm)			

FCC/IC COMPLIANCE STATEMENTS

FCC ID: K4E951T4

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE: To comply with the FCC RF exposure compliance requirements, no change to the antenna or the device is permitted. Any change to the antenna or the device could result in the device exceeding the RF exposure requirements and void user's authority to operate the device.


WARRANTY: This SECO-LARM product is warranted against defects in material and workmanship while used in normal service for one (1) year from the date of sale to the original customer. SECO-LARM's obligation is limited to the repair or replacement of any defective part if the unit is returned, transportation prepaid, to SECO-LARM. This Warranty is void if damage is caused by or attributed to acts of God, physical or electrical misuse or abuse, neglect, repair or alteration, improper or abnormal usage, or faulty installation, or if for any other reason SECO-LARM determines that such equipment is not operating properly as a result of causes other than defects in material and workmanship. The sole obligation of SECO-LARM and the purchaser's exclusive remedy, shall be limited to the replacement or repair only, at SECO-LARM's option. In no event shall SECO-LARM be liable for any special, collateral, incidental, or consequential personal or property damage of any kind to the purchaser or anyone else.

NOTICE: The SECO-LARM policy is one of continual development and improvement. For that reason, SECO-LARM reserves the right to change specifications without notice. SECO LARM is also not responsible for misprints. All trademarks are the property of SECO-LARM U.S.A., Inc. or their respective owners. Copyright © 2020 SECO-LARM U.S.A., Inc. All rights reserved.

SECO-LARM® U.S.A., Inc.

16842 Millikan Avenue, Irvine, CA 92606
Phone: (949) 261-2999 | (800) 662-0800

 Website: www.seco-larm.com
Email: sales@seco-larm.com



ML_HL-951xx-SQ_191220.docx

Compatible Transmitters:

- HL-951T1-SQ..... 1-Button pocket-sized pendant, CR-2032 coin-type battery
- HL-951T2-SQ..... 2-Button pocket-sized pendant, CR-2032 coin-type battery
- HL-951T3-SQ..... 3-Button pocket-sized pendant, CR-2032 coin-type battery
- HL-951T4-SQ..... 4-Button pocket-sized pendant, CR-2032 coin-type battery

Introduction:

The ENFORCER 917MHz HL-951 series RF transmitters and receivers use digital modulation for improved immunity to interference, better signal penetration in environments with heavy obstructions, and significantly longer range of up to 1,800ft (550m) line of sight. The ultra-low transmission power gives you longer battery life with easy to obtain coin-type batteries.

Installation Notes:

1. Mount the receiver out of sight in a location where it is not exposed to weather or moisture, and where it is not surrounded by metal. Metal will block the RF signal, resulting in a reduced range.

Entering Programming Mode:

1. Press the selector button of for 3 seconds or more. The channel's LED will flash L1, indicating channel 1. To select channel 2, press the selector button again.
2. After 2 seconds, the LED will slow flash with the display showing the number of codes already in storage and enter programming mode.

NOTE: The LED will flash a maximum of 15 seconds. If the selector button or no transmitter button is pressed during this time, the receiver will exit programming mode, and the LED will turn off.

SECO-LARM® SLI®



Code Learning a New Transmitter Button:

1. Enter programming mode and select the desired channel as described on pg. 1.
2. While the LED is flashing, press the desired transmitter button to be learned one time. The three horizontal bars of the receiver's LED indicator will flash three times to indicate the transmitter button has been successfully learned and will automatically exit learning mode. To learn further codes, re-enter programming mode and repeat.

- NOTES:**
- Do not press the selection button again after entering programming mode as this will take you to output mode programming.
 - The indicator LED will flash a maximum of 15 seconds. If no transmitter button is pressed during this time, the receiver will exit code programming mode, and the LED will turn off.
 - If the code has already been learned, the indicator LED will slowly flash two dashes. The code will not be learned a second time.
 - One channel can learn the codes of a maximum of 99 transmitter buttons. If you attempt to learn an additional transmitter code, the earliest code learned will be deleted and the new code will be learned.

Clear Channel Memory:

1. Enter programming mode and select the desired channel as described on pg. 1.
2. While the LED is flashing, press the selector button again for at least 3 seconds or until the channel indicator LED flashes 3 times. This will clear all codes for that channel.
3. To clear codes from the other channel, enter programming mode for the other channel and repeat the above steps.

Display Channel Memory:

1. To see how many codes have been learned by a channel, enter programming mode and select the desired channel as described on pg. 1.
2. The LED will flash for 15 seconds showing number of codes stored in that channel's memory.


Programming Channel Relay Output Mode:

Each channel relay can be programmed to one of five output modes. (HL-951R2-xQ only: Each channel can be independently programmed to operate in a different output mode, depending on the user's application.) The five modes are:

1. **P1 – 1-99 Second Timed Pulse Output** (default, 1 second) – When the transmitter button is pressed, the relay will turn ON for the programmed number of seconds.
 2. **P2 – Toggle Output** – Works much like a toggle switch to turn a device ON & OFF alternately. Press the transmitter button once, and the relay turns ON. Press the transmitter button again, and the relay turns OFF.
 3. **P3 – Latch Output** – Press the transmitter button once, and the relay turns ON and stays ON. The channel relay will remain ON regardless of whether a compatible transmitter button is pressed again or not. To turn the relay OFF, press the selector switch on the receiver once to reset.
 4. **P4 – Validity Output** – The channel will turn the relay ON for as long as the transmitter button is pressed.
- NOTE:** Due to possible interference or drops in transmitter battery power while the transmitter button is continuously pressed (even for short periods of time), the receiver may lose the transmitter's signal and turn the relay OFF.
5. **P5 – 1-99 Minute Timed Pulse Output** – When the transmitter button is pressed, the relay will turn ON for 1 second.


Selecting the relay output mode:

- Enter programming mode and select the desired channel as described on pg. 1.
- Press the selection button again. The LED will display the current output mode (default P1).
- To change a channel's output mode, press the selector button repeatedly to scroll through the 5 output modes until the desired mode appears. Each press moves to the next mode in the sequence as shown in the diagram to the right.
- In modes P1 and P5, long press the selector button to choose the number of seconds or minutes, respectively
- When complete, wait 15 seconds for the receiver to automatically exit programming mode.

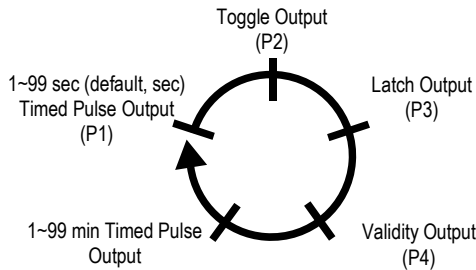

NOTE: For a diagram of the PC board, including the location of the function switch, please see *Overview*, pg. 3.

Overview:

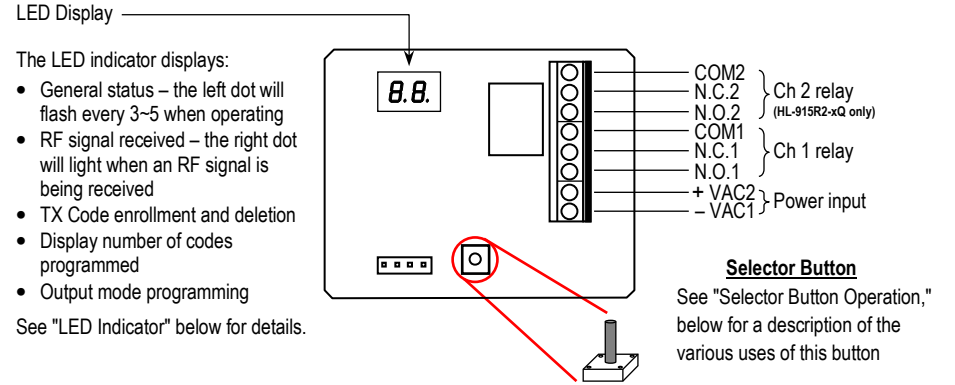

HL-951R2-SQ PC board shown. Remove the front cover of the receiver to access the function switch and terminal block.

Selector Button Operation:

Enter programming mode	Press and hold the selector button for three seconds or more to enter programming mode.
Select channel for programming	Entering programming mode automatically takes you to channel 1. To select channel 2, press the selector button once more.
Learn code	After entering programming mode for the desired channel, the receiver is ready to learn a code, so the selector button is not used again. To learn a code press the desired button on the transmitter.
Delete all codes from a channel	After entering programming mode for the desired channel, wait until the LED begins to flash a number (the number of codes learned for that channel), then press and hold the selector button for at least three seconds or until the LED flashes 3 stripes.
Memory display	After entering programming mode for the desired channel, after 2 seconds the LED will begin to flash a number indicating the number of codes already stored for that channel.
Programming output mode	After entering programming mode for the desired channel, press the selector button again. The display will show the current mode (P1~P5). To change the mode, press again repeatedly until the display shows the desired mode.
Programming timed pulse duration	After following the above steps to program the output mode, when in mode P1 or P5, long press the selector button to change the number of seconds or minutes, respectively.

LED Indicator:

8.8.	Flashing every 3-5 seconds – receiver powered on and in operation
8.8.	A valid RF signal has been received
L.1.	Flashing – number shows current channel to be programmed
≡≡≡	Flash 2 times – new code has been learned or all codes for that channel have been deleted
-.-.	Slow flashing – in programming mode, shows that the attempted code has previously been learned Flash 2 times – exit programming mode
0.0.	Flashing – in programming mode, shows the number of codes (0-99) already learned for the selected channel
P.1.	In output programming mode – number indicates the current mode
0.1.	In output programming mode when either P1 or P5 has been selected – number indicates the output time in seconds or minutes, respectively