


Side A of MAIN-UNIT With VCO Case (VX-451 / VX-454 / VX-459)



Side A of MAIN-UNIT Without VCO Case (VX-451 / VX-454 / VX-459)



Side B of MAIN-UNIT (VX-454 / VX-459)

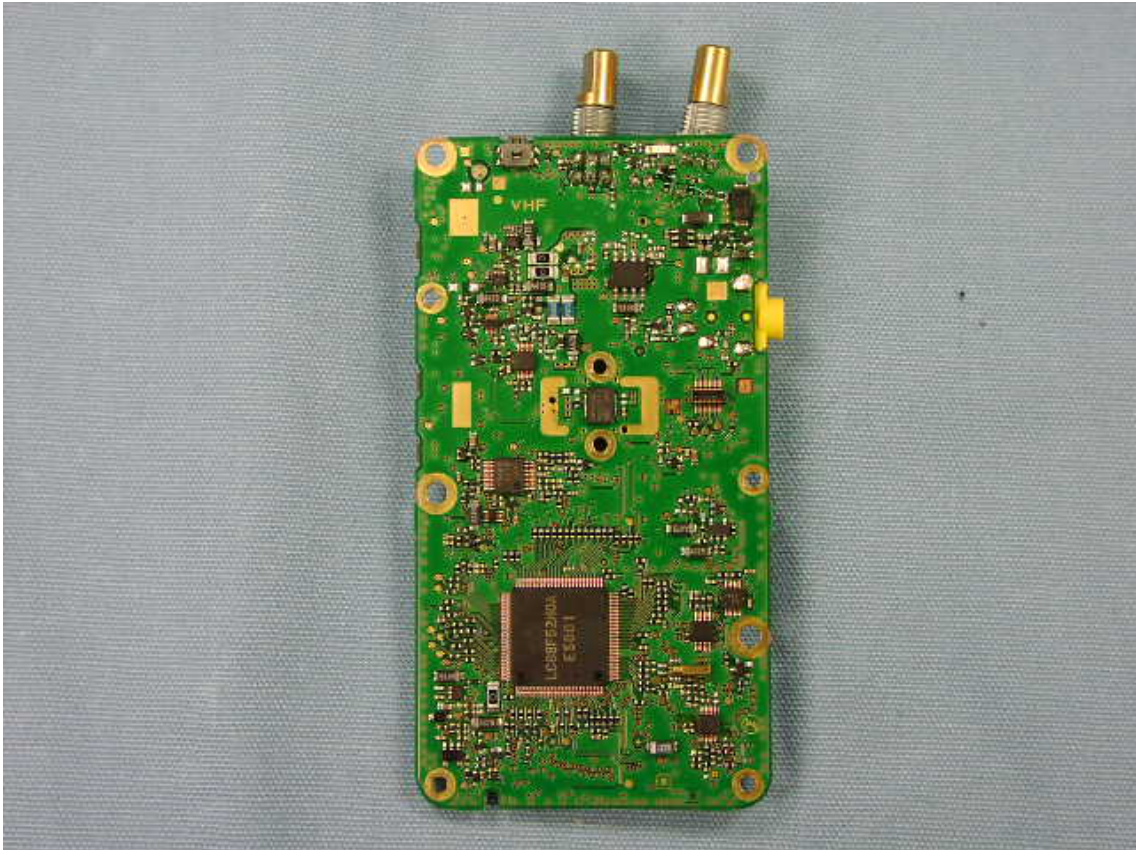


Side B of MAIN-UNIT (VX-451)




Side A of DISPLAY-UNIT (VX-454 / VX-459)



Side A of DISPLAY-UNIT Without LCD-UNIT(VX-454 / VX-459)

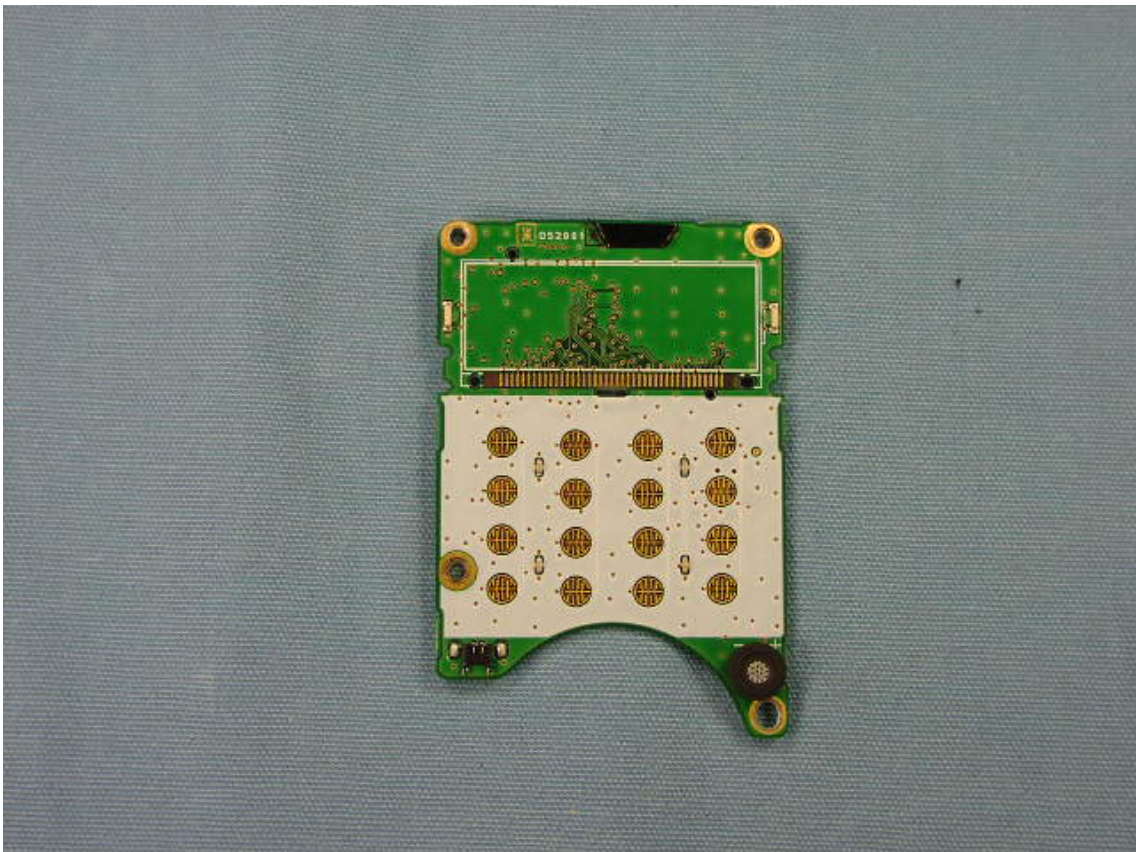


Side A of DISPLAY-UNIT (VX-454 / VX-459)

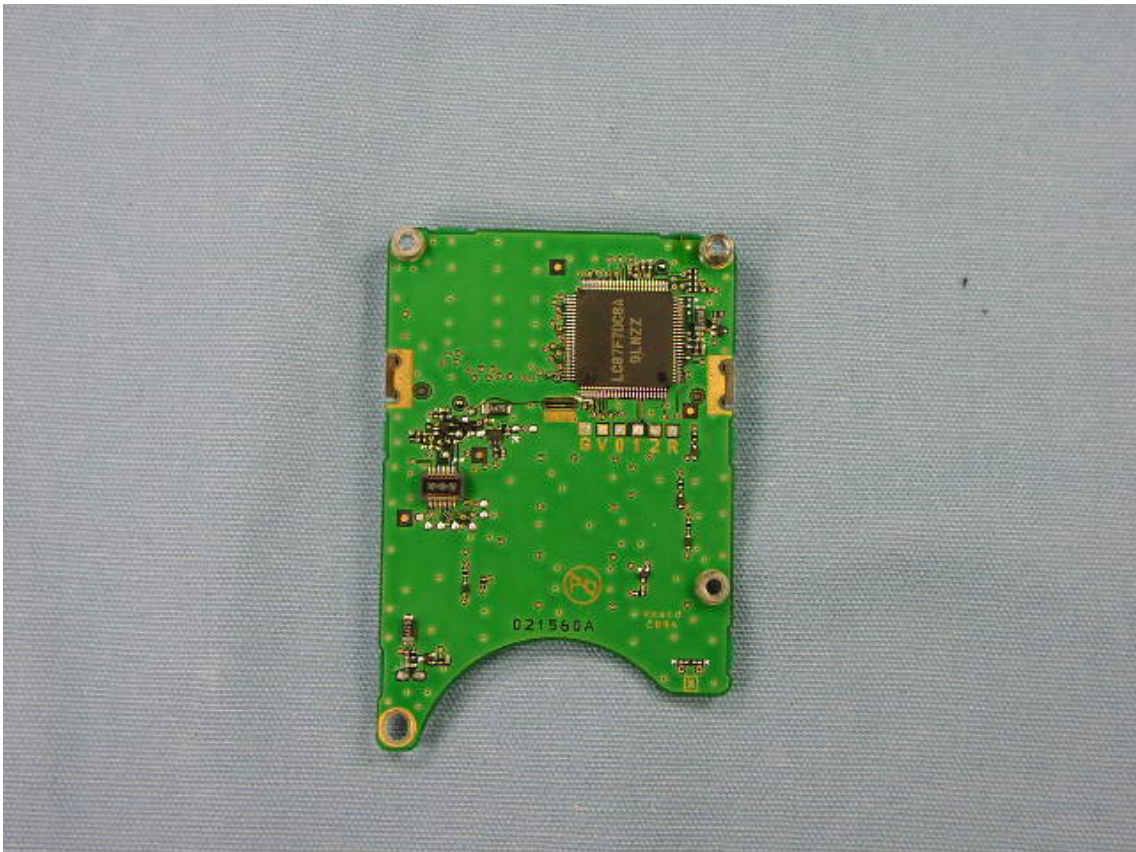


Front of LDD-UNIT (VX-454 / VX-459)



Back of LDD-UNIT (VX-459 / VX-454)

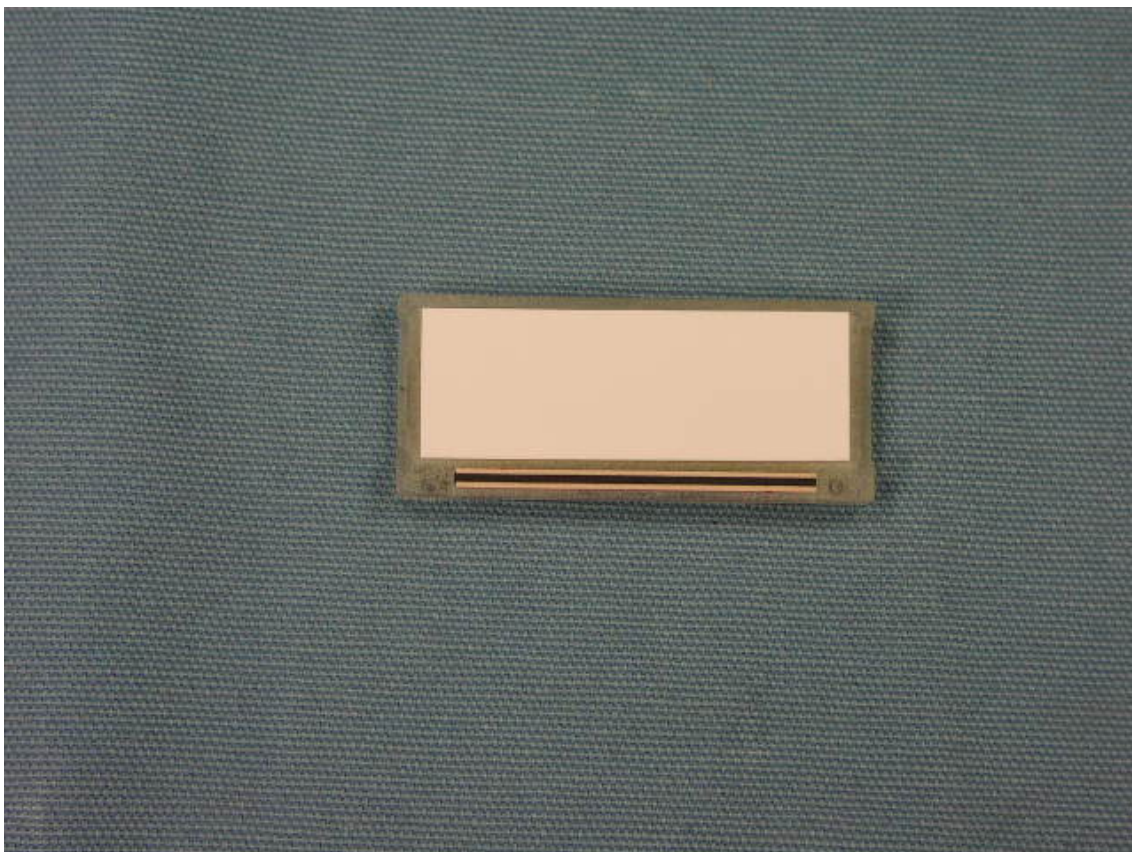

Inside of chassis

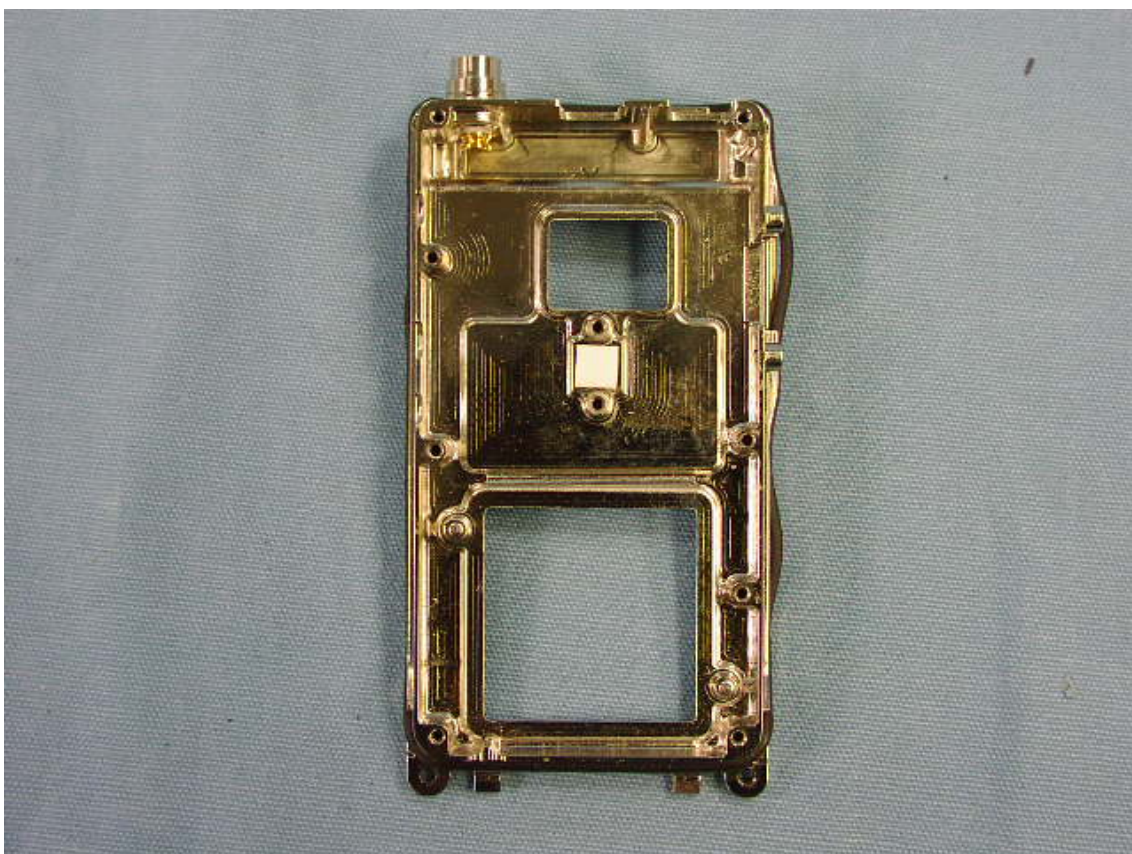

Outside of chassis



Inside of front panel

VX-451-D0-5



VX-454-D0-5



VX-459-D0-5



PWB of Battery Charger

