


Side A of MAIN-UNIT With VCO Case (VX-451 / VX-454 / VX-459)



Side A of MAIN-UNIT Without VCO Case (VX-451 / VX-454 / VX-459)




Side B of MAIN-UNIT (VX-454 / VX-459)

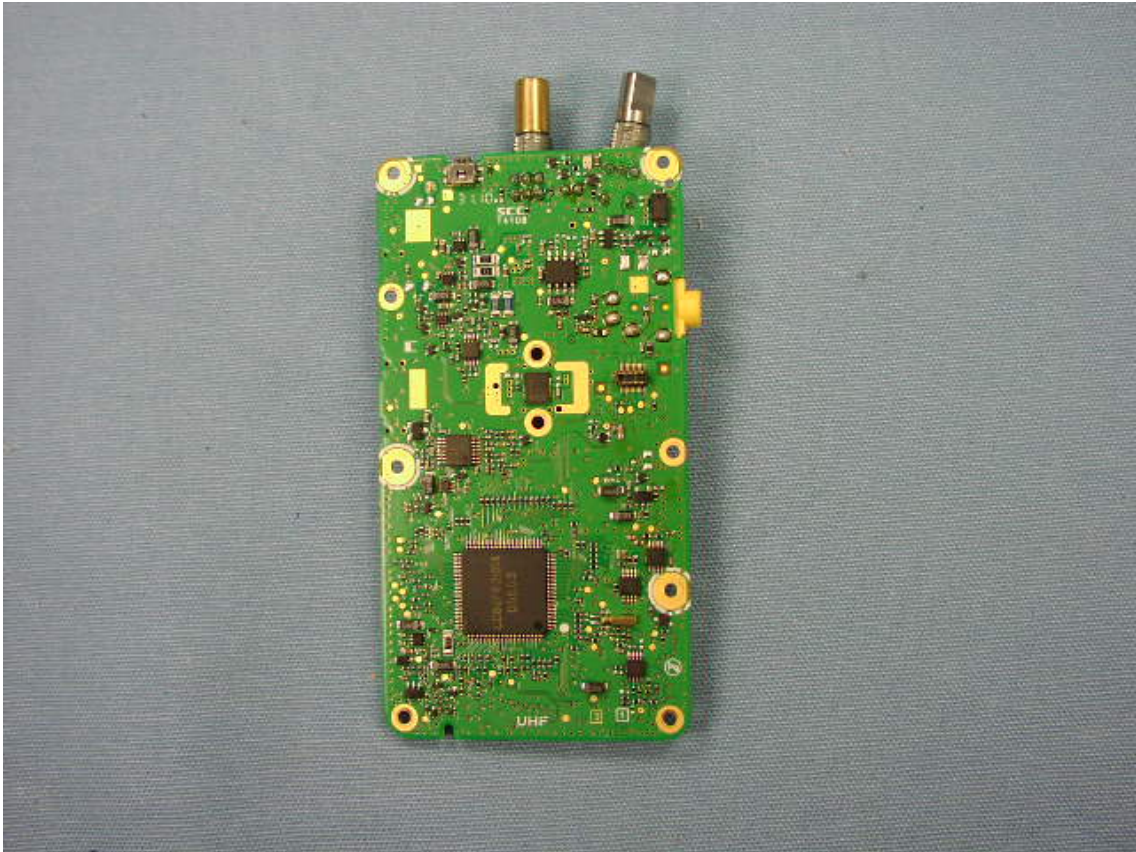


Side B of MAIN-UNIT (VX-451)




Side A of DISPLAY-UNIT(VX-454 / VX-459)

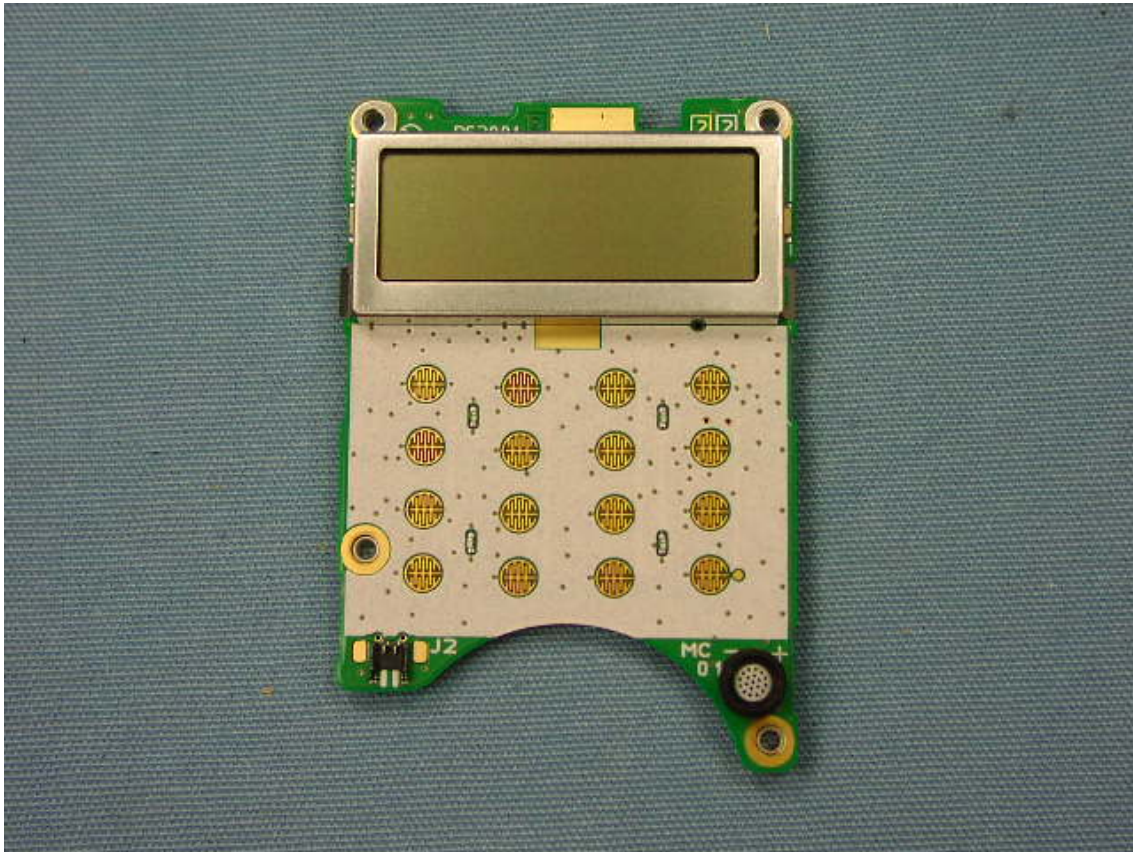

Side A of DISPLAY-UNIT Without LCD-UNIT (VX-454 / VX-459)

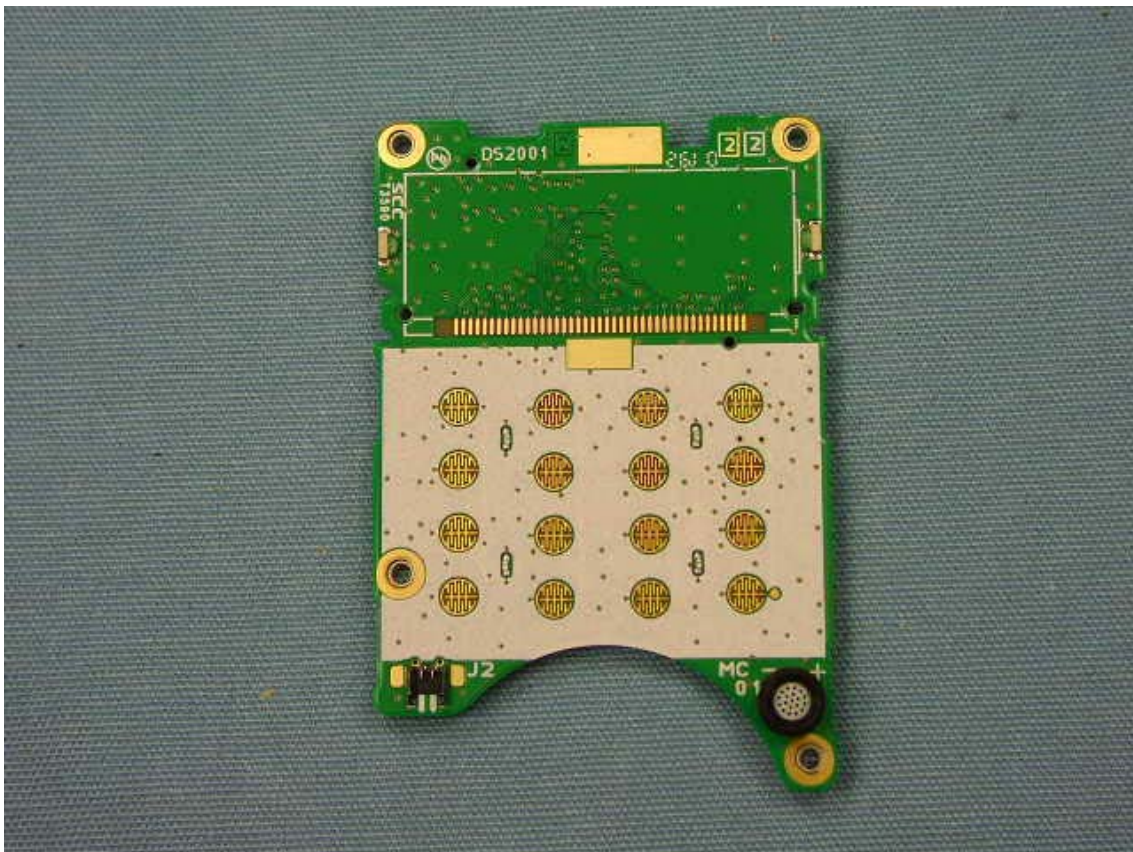


Side B of DISPLAY-UNIT (VX-454 / VX-459)

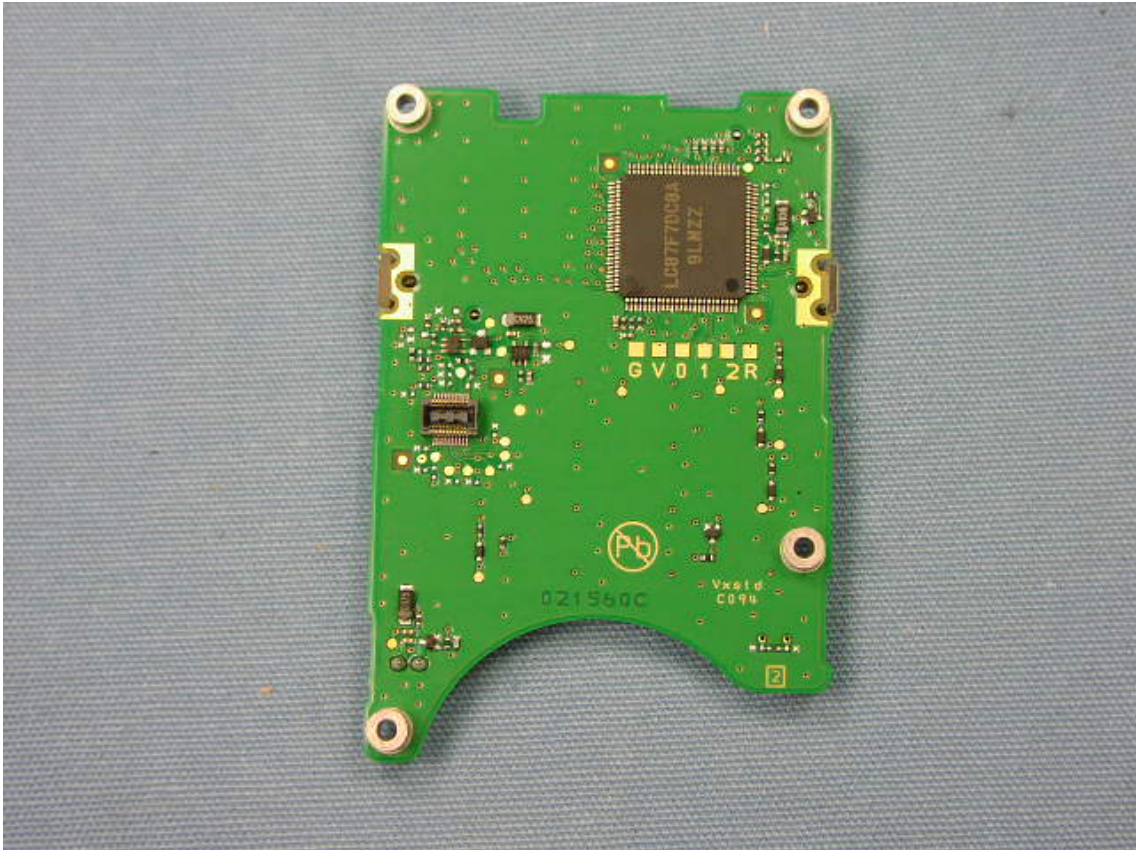

Front of LCD-UNIT (VX-454 / VX-459)



Back of LCD-UNIT (VX-454 / VX-459)

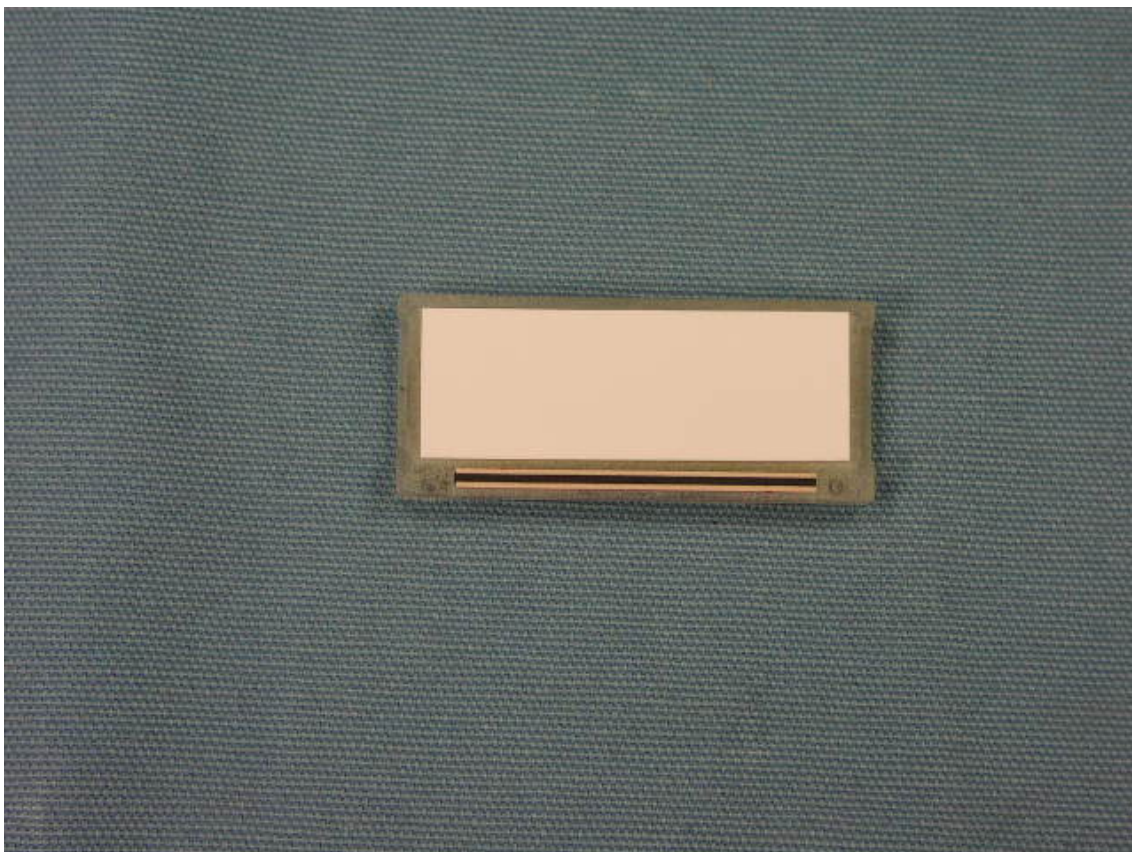

Inside of chassis



Outside of chassis



Inside of front panel

VX-451-G6-5



VX-454-G6-5



VX-459-G6-5



PWB of Battery Charger

