



Explanation for VL-2000 / VP-2000 / FT-2000 Settings (1D000010)

Please see to Operating Manual Page 6

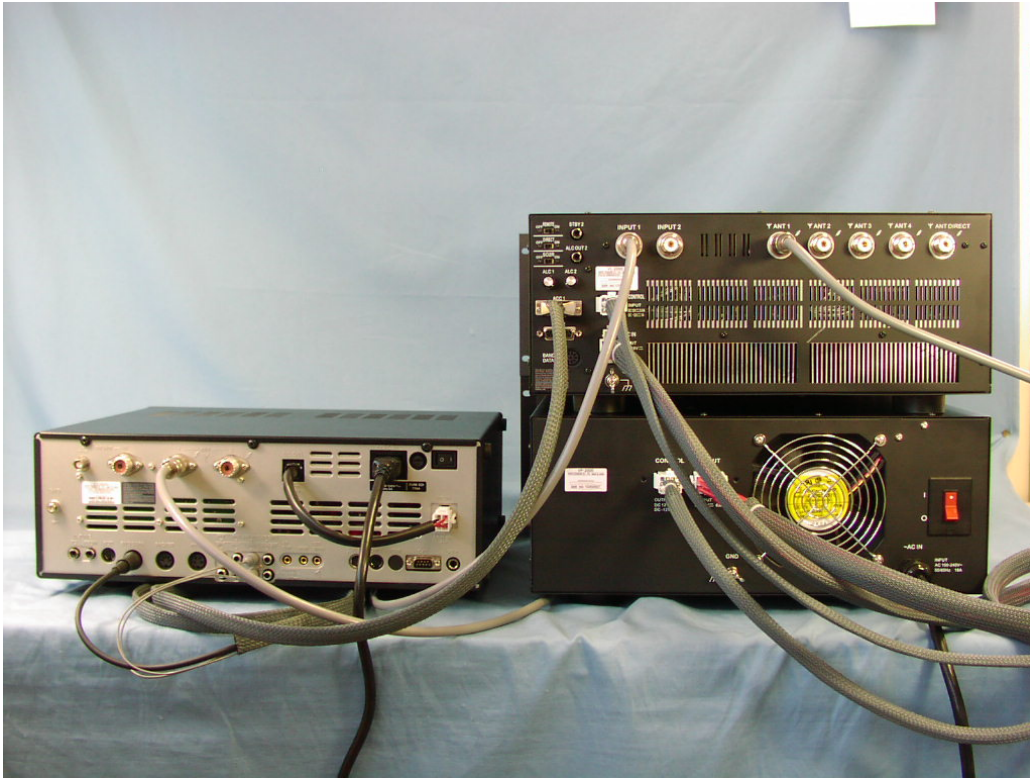


Excitation Transceiver FT-2000 Settings

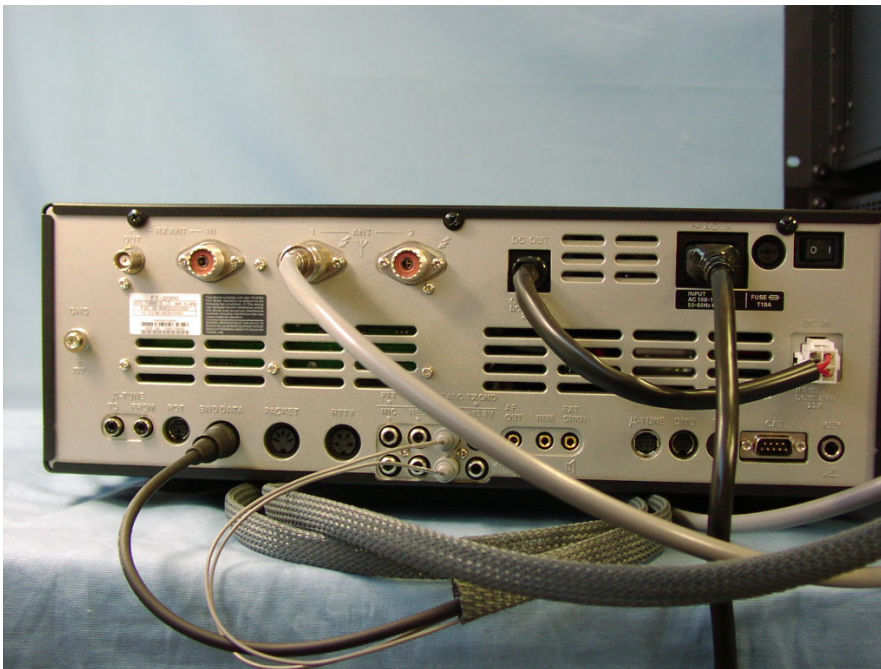

(BAND DATA ,EXT ALC and TX REQ Connection)

Note: This FT-2000 is AC 120V Operation.

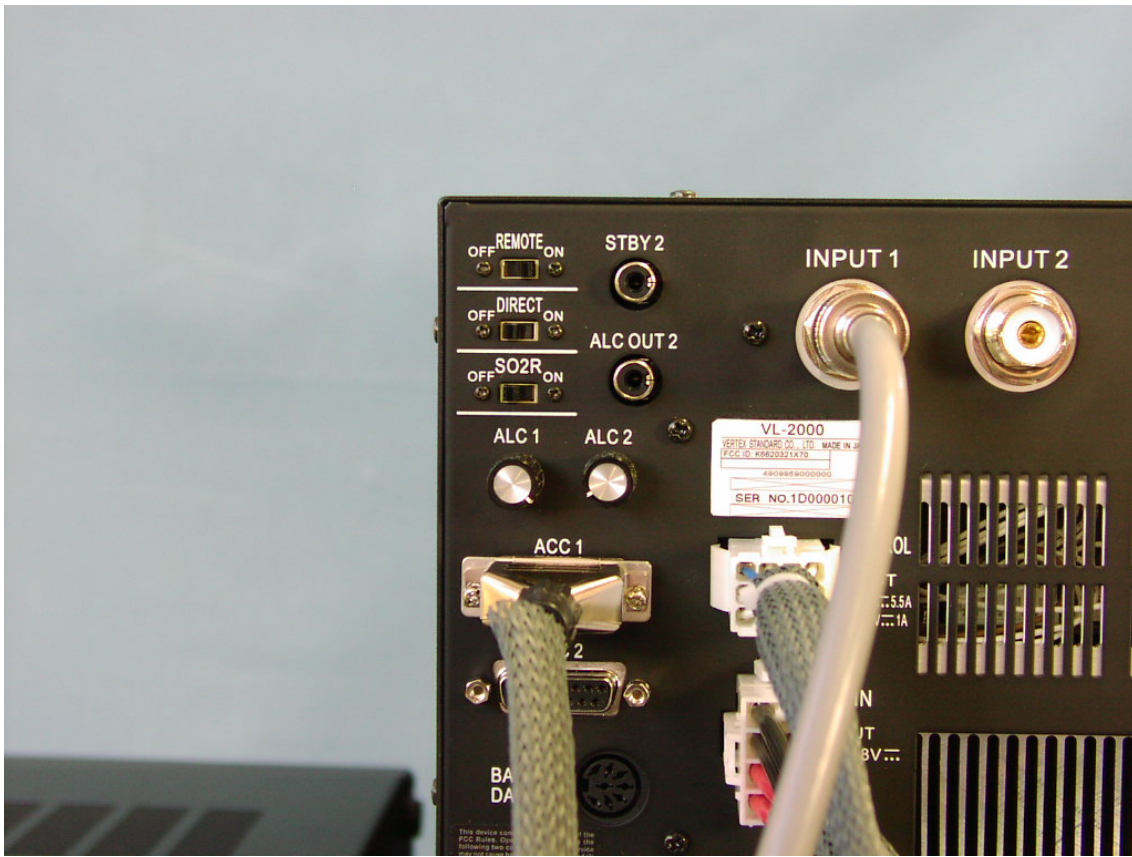

VL-2000 Normally Connection of Rear Panel

BAND DATA to ACC 1

SW SELECT

REMOTE ON
 DIRECT OFF
 SO2R OFF (ALC 2 VR is minimum Position)

Note: Please keep Power ON order operation of VL-2000

- ① TX OPERATE SW OFF (VL-2000 Panel)
- ② POWER SW ON (VL-2000 Panel)

ALC 1 VR is effective (The setting of pre-set position at Vertex Standard)

Note: ALC VR is adjustable for Test. Please refer to Operating Manual Page 16



Please attach a correspond AC plug,

Note: The power supply plug please be careful about ground terminal

