

## INITIAL CONFIGURATION WIZARD

### Configuring your Computer for Windows 98 SE, Me, 2000, and XP

1. Once the installation process is complete, the “Initial *Bluetooth* Configuration Wizard” will prompt you. Follow the prompts as the Wizard guides you through the initial setup of your *Bluetooth* device.
2. Name your computer with a name you can easily remember. This name will appear in reference to your computer when it is discovered by other *Bluetooth* devices.



 
 
## INITIAL CONFIGURATION WIZARD

3. Choose the type of computer you have installed the *Bluetooth* USB Adapter to in the drop-down menu and click “Next”.
4. Continue to use the Wizard to configure the *Bluetooth* services that this computer will allow other *Bluetooth* devices to access. Click “Next”.



## INITIAL CONFIGURATION WIZARD

5. Choose the *Bluetooth* services your computer will offer. The most common service for your computer type will be checked by default and then click “Next”.
6. Congratulations! Your computer is ready to connect to your *Bluetooth* devices.
7. If you have another *Bluetooth* device and you want to configure the way this computer will use its services, click “Next”. Otherwise click “Skip”, and proceed to the “Connecting the *Bluetooth* Mouse” section of this manual on page 23.

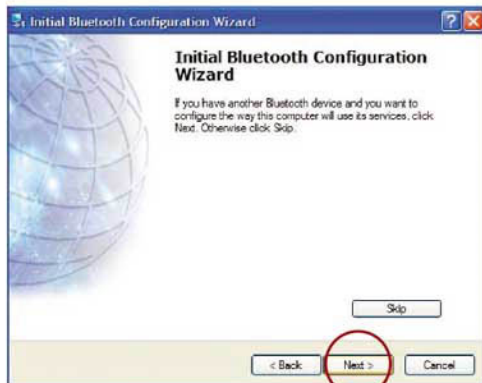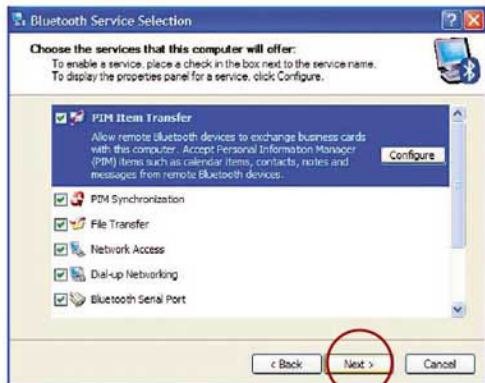


## CONNECTING THE *BLUETOOTH* MOUSE

### Inserting the Batteries

The Mouse requires two AA batteries to run, and two are included in the package. When it becomes necessary, replace them be sure to use new batteries only; we recommend alkaline batteries. Rechargeable batteries may be used as well.

To insert the batteries:

 1. Turn the Mouse upside down, and remove the battery compartment cover.
2. Insert the new batteries. Make sure to properly orient the positive (+) and negative (-) ends as indicated on the battery compartment label.
3. Close the battery compartment cover.

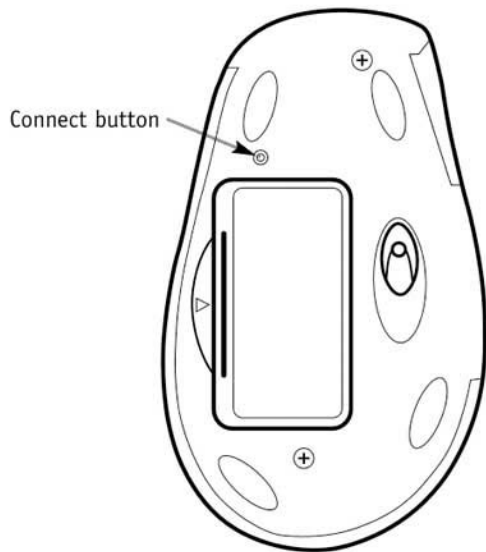

## CONNECTING THE *BLUETOOTH* MOUSE

**Important:** Before boarding any aircraft, remove the batteries from the Wireless Mouse. The Wireless Mouse can transmit radio frequency energy, much like cellular phones, whenever the batteries are installed.

Please refer to the “Battery and Safety Information” section on page 33 for more information regarding the handling and usage of batteries.

 
The following steps will allow you to establish the initial connection between your Mouse and computer. Once a connection is established, your computer will automatically connect to your Mouse every time you reboot. If the Mouse does not reconnect at boot-up, follow the pairing and connection procedures on page 24.

### **Preparing the Mouse**

1. Turn the Mouse upside down, and press the “Connect” button once. You should see the Scroll Wheel LED blink rapidly. This indicates that the Mouse is in pairing mode and is ready to connect to your computer.
2. On your computer, open “My *Bluetooth* Places” by double-clicking on the *Bluetooth* icon.



## CONNECTING THE *BLUETOOTH* MOUSE

- From the menu bar select "*Bluetooth*" then "*Bluetooth Setup Wizard*".
- Select "I want to find a specific *Bluetooth* device and configure how this computer will use its services". Then click "Next".

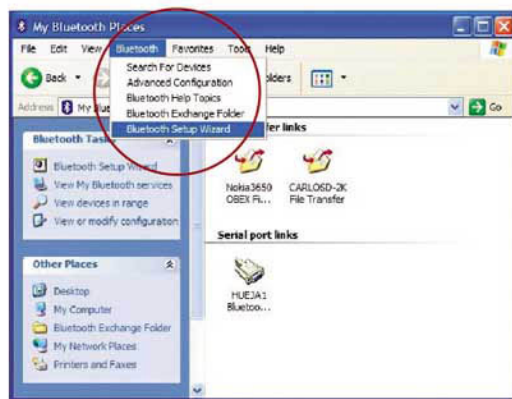


## CONNECTING THE *BLUETOOTH* MOUSE

  - From the drop-down menu, select “Show mice, keyboards and joysticks” then click on the “Search Again” button. Please verify that the Scroll Wheel LED continues to flash rapidly.
- The Belkin Mouse will be discovered. Click on the Belkin Mouse icon then click “Next”.

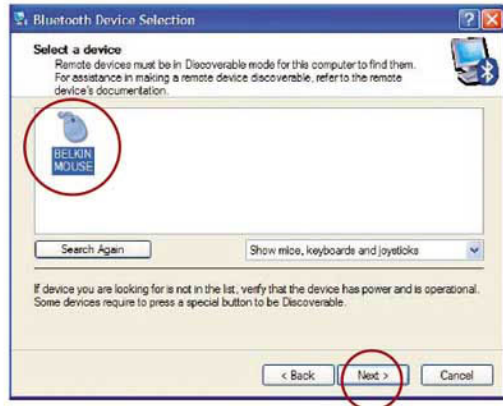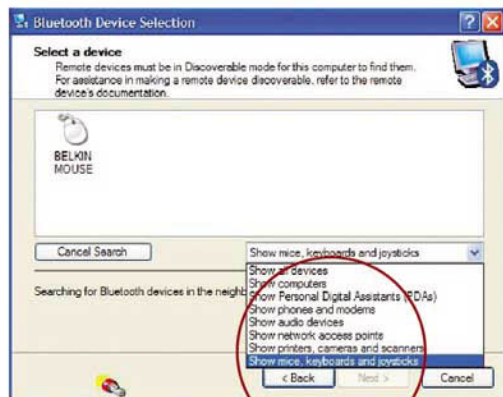

## CONNECTING THE *BLUETOOTH* MOUSE

 7. The services that are available from the device will be listed. Select “*Bluetooth Mouse*” and click “*Finish*”.
8. Wait while the Mouse is installed. This may take several seconds.
9. Your Mouse is now connected. Move your Mouse to verify the connection.

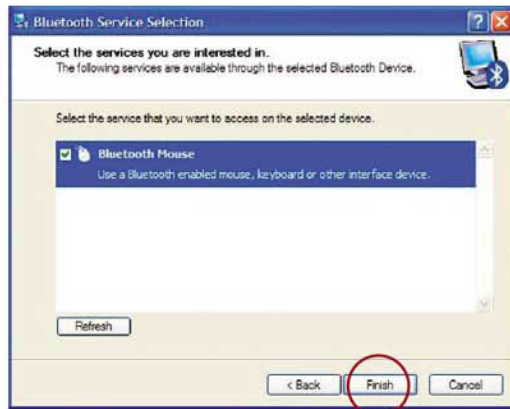



## CONNECTING THE *BLUETOOTH* MOUSE

### Establishing a Manual Connection to your Mouse

You may establish a wireless connection to your Mouse by following these steps.

1. Turn the Mouse upside down, and press the “Connect” button once. You should see the Scroll Wheel LED blink rapidly. This indicates that the Mouse is in pairing mode and is ready to connect to your computer.
2. On your computer, open “My *Bluetooth* Places” by double-clicking on the Bluetooth icon.
3. From the menu bar, select “*Bluetooth*” then “Search for Devices”.
4. The Belkin Mouse will be discovered. Right-click on the Belkin Mouse icon then select “Connect Device”.

## UNINSTALLING THE SOFTWARE

### Uninstalling the Software for Windows 98 SE, Me, 2000, and XP

Follow these instructions to uninstall your *Bluetooth* USB Adapter.

1. Insert the CD-ROM included with your USB Adapter.
2. This "InstallShield Wizard" should automatically load. If it does not load, explore the CD and run the "Setup.exe" file.
3. The "InstallShield" window should now appear. Click "Next" to continue with the uninstall process.

## FAQs

### **Which *Bluetooth* Profiles does the USB Adapter support?**

The included *Bluetooth* USB Adapter supports the most current *Bluetooth* profile set including: Service Discovery, File Transfer, LAN Access, Serial Port, DUN, Generic Object Exchange, Business Card, Push, Pull & Exchange, Fax, Synchronization, PAN, HCRP, Audio Gateway, Headset, and Human Interface Device.

### **Which *Bluetooth* Profiles does the *Bluetooth* Mouse Support?**

The *Bluetooth* Mouse supports the Human Interface Device profile.

### **Will the *Bluetooth* Mouse reconnect after I restart the computer?**

Yes, the *Bluetooth* Mouse will automatically establish a connection with your PC every time Windows restarts.

### **How does the Mouse's side button function?**

The side button allows you to navigate backward through a web browser or a previous window.

## FAQs

### What does the Scroll Wheel LED indicate?

- A slow blink every three seconds indicates normal operation.
- A rapid blink indicates that the Mouse is in connection mode and is ready to be discovered and connected.
- Intermittent rapid blinking (every three seconds) indicates the battery is low.

### Can I connect multiple *Bluetooth* Mice to the same computer?

Yes, you may. *Bluetooth* can support up to seven simultaneous connections. Simply follow the pairing and connection instructions in this User Manual to add *Bluetooth* mouse connections to your computer.

### Can I use rechargeable AA batteries with the *Bluetooth* Mouse?

Yes, you may.

## FAQs

### **Can my *Bluetooth* Mouse connect to other *Bluetooth* devices or adapters?**

Yes, it can, as long as the other *Bluetooth* device supports the Human Interface Device (HID) profile. Check with the device manufacturer to see if your device supports HID Profiles. For WIDCOMM software users, you must have BTW version 1.4 or higher.

### **Can my Microsoft *Bluetooth* Mouse connect to my Belkin *Bluetooth* USB Adapter included with this package?**

Yes, it can. Follow the Mouse connection procedure as described in this User Manual.

### **Can I connect the Belkin *Bluetooth* Mouse and the Microsoft *Bluetooth* Mouse to the same computer at the same time?**

Yes, you can.

## BATTERY AND SAFETY INFORMATION

### General Precautions

- Keep batteries out of reach of children.
- Do not mix old and new batteries or batteries of different types (for example, carbon and alkaline batteries).
- Always remove old, weak, or worn-out batteries promptly and recycle or dispose of them in accordance with local and national disposal regulations.
- If a battery leaks, remove all batteries and recycle or dispose of them in accordance with the battery manufacturer's instructions and local and national disposal regulations. Before inserting new batteries, thoroughly clean the battery compartment with a damp paper towel, or follow the battery manufacturer's recommendations for cleanup. If fluid from the battery comes into contact with skin or clothes, flush skin with water immediately.
- Remove the batteries if your device is to be stored for longer than a month without being used.

## BATTERY AND SAFETY INFORMATION

### Special Precautions

The precautions below are to prevent the sudden release of electrolytes, which these prohibited actions can cause:

- Do not open, puncture, or mutilate the batteries.
- Do not heat batteries.
- Do not use a fire to dispose of batteries.

Released battery electrolyte is corrosive, can cause damage to the eyes and skin, and may be toxic if swallowed.

### Product Disposal Information

Dispose of this product in accordance with local and national disposal regulations.

## INFORMATION

### DECLARATION OF CONFORMITY WITH FCC RULES FOR ELECTROMAGNETIC COMPATIBILITY

We, Belkin Corporation, of 501 West Walnut Street, Compton, CA 90220, declare under our sole responsibility that the product,

F8T041

to which this declaration relates, complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### Caution: Exposure to Radio Frequency Radiation.

The radiated output power of this device is far below the FCC radio frequency exposure limits. Nevertheless, the device shall be used in such manner that the potential for human contact normal operation is minimized.

When connecting an external antenna to the device, the antenna shall be placed in such a manner to minimize the potential for human contact during normal operation. In order to avoid the possibility of exceeding the FCC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm (8 inches) during normal operation.

#### Federal Communications Commission Notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.



## INFORMATION

This equipment generates, uses, and can radiate radio frequency energy. If not installed and used in accordance with the instructions, it may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try and correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Modifications

The FCC requires the user to be notified that any changes or modifications to this device that are not expressly approved by Belkin Corporation may void the users authority to operate the equipment.

### Canada-Industry Canada (IC)

The wireless radio of this device complies with RSS 139 & RSS 210 Industry Canada. This Class B digital complies with Canadian ICES-003.

Cet appareil numérique de la classe B conforme à la norme NMB-003 du Canada.

### Europe-European Union Notice

Radio products with the CE alert marking comply with the R&TTE Directive (1995/5/EC) issued by the Commission of the European Community.



## INFORMATION

Compliance with this directive implies conformity to the following European Norms (in brackets are the equivalent international standards).

- EN 60950 (IEC60950) – Product Safety
- EN 300 328 Technical requirement for radio equipment
- ETS 300 826 General EMC requirements for radio equipment.

To determine the type of transmitter, check the identification label on your Belkin product.



Products with the CE marking comply with the EMC Directive (89/336/EEC) and the Low Voltage Directive (72/23/EEC) issued by the Commission of the European Community. Compliance with these directives implies conformity to the following European Norms (in brackets are the equivalent international standards).

- EN 55022 (CISPR 22) – Electromagnetic Interference
- EN 55024 (IEC61000-4-2,3,4,5,6,8,11)- Electromagnetic Immunity
- EN 61000-3-2 (IEC610000-3-2) - Power Line Harmonics
- EN 61000-3-3 (IEC610000) – Power Line Flicker
- EN 60950 (IEC60950) – Product Safety

Products that contain the radio transmitter are labeled with the CE alert marking and may also carry the CE logo.



## INFORMATION

### Belkin Corporation Limited Two-Year Product Warranty

Belkin Corporation warrants this product against defects in materials and workmanship for its warranty period. If a defect is discovered, Belkin will, at its option, repair or replace the product at no charge provided it is returned during the warranty period, with transportation charges prepaid, to the authorized Belkin dealer from whom you purchased the product. Proof of purchase may be required.

This warranty does not apply if the product has been damaged by accident, abuse, misuse, or misapplication; if the product has been modified without the written permission of Belkin; or if any Belkin serial number has been removed or defaced.

THE WARRANTY AND REMEDIES SET FORTH ABOVE ARE EXCLUSIVE IN LIEU OF ALL OTHERS, WHETHER ORAL OR WRITTEN, EXPRESSED OR IMPLIED. BELKIN SPECIFICALLY DISCLAIMS ANY AND ALL IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

No Belkin dealer, agent, or employee is authorized to make any modification, extension, or addition to this warranty.

BELKIN IS NOT RESPONSIBLE FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING BUT NOT LIMITED TO, LOST PROFITS, DOWNTIME, GOODWILL, DAMAGE TO OR REPROGRAMMING OR REPRODUCING ANY PROGRAM OR DATA STORED IN, OR USED WITH, BELKIN PRODUCTS.

Some states do not allow the exclusion or limitation of incidental or consequential damages or exclusions of implied warranties, so the above limitations of exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.



[belkin.com](http://belkin.com)

**Belkin Corporation**

501 West Walnut Street  
Compton • CA • 90220 • USA  
Tel: 310.898.1100  
Fax: 310.898.1111

**Belkin Components, Ltd.**

Express Business Park • Shipton Way  
Rushden • NN10 6GL • United Kingdom  
Tel: +44 (0) 1933 35 2000  
Fax: +44 (0) 1933 31 2000

**Belkin, Ltd.**

7 Bowen Crescent • West Gosford  
NSW 2250 • Australia  
Tel: +61 (0) 2 4372 8600  
Fax: +61 (0) 2 4372 8603

**Belkin Tech Support**

US: 310.898.1100 ext. 2263  
800.223.5546 ext. 2263  
Europe: 00 800 223 55 460  
Australia: 1800 666 040

P74312

© 2003 Belkin Corporation. All rights reserved. All trade names are registered trademarks of respective manufacturers listed. The *Bluetooth* name and the *Bluetooth* trademarks are owned by *Bluetooth SIG, Inc.*, and are used by Belkin Corporation under license.