

## **Model No. SKY-1001D/G3**

### **Operate instruction**

- (1) Press the up button, LED will be flash, and sent one set codes to control receiver for open.
- (2) Press the down button, LED will be flash, and sent one set codes to control receiver for off.
- (3) Replacement batteries (3V 2032 x 2 pcs), when LED light were disappearing.  
When change the batteries, need open the cover, and push down the ellipse hole by tool.

P.S. Replacement new batteries, “+” must on the up side.

#### **Caution:**

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.