


AF-4000PEWM function manual :

➤ Picture :

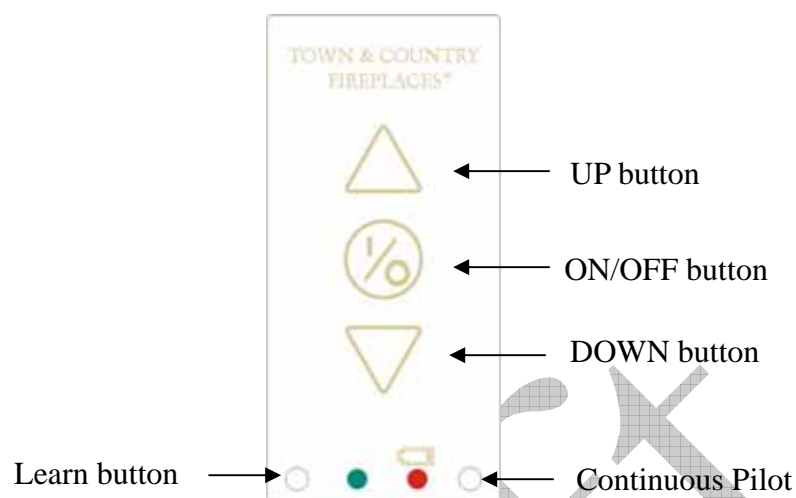

➤ Key :

- ON/OFF button : to main flame ON / to main flame OFF
- UP/DOWN button : Adjust Modulation(DC motor drive) for fire
- Learning button : to learn remote code
- Continuous Pilot : to pilot flame ON / to pilot flame OFF
- ADJ Hole : Adjust RF frequency

## FCC Notice

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: THE MANUFACTURER IS NOT RESPONSIBLE FOR ANY RADIO OR TV INTERFERENCE CAUSED BY UNAUTHORIZED MODIFICATIONS TO THIS EQUIPMENT. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.