

Antenna:



Adjusting method:

Using RF adjusting stick to adjust the frequency, 303.8 Mhz, from adjust hole.

