Networking Basics Assigning a Static IP Address with <u>Macintosh OSX</u>

Go to the Apple Menu and select System Preferences



Click on Network

- Select Built-in Ethernet in the Show pull-down menu
- Select Manually in the Configure pull-down menu

	Location: Automatic	*	
ow: Built-in Ether	net 🔹		
	Manually	oxies	
Configure	Manually Using DHCP Using DHCP Using BootP	Router	nali
IP Address: Subnet Mask:	(Provided by DHCP Server) 255.255.255.0		
Router:	192.168.0.1	Search Domains (Optio	sal)
DHCP Client ID:	(Optional)		
Ethernet Address:		Example: apple.com, earthlink.ne	t

Input the Static IP Address, the Subnet Mask and the Router IP Address in the appropriate fields

Click Apply Now

		Location: Automa	itic 🕴
Show:	Built-in Ethern	net	•
_		TCP/IP PPPoE	AppleTalk Proxies
	Configure:	Manually	•
			Domain Name Servers (Optional)
	IP Address:	192.168.0.2	
	Subnet Mask:	255.255.255.0	
	Router:	192.168.0.1	Search Domains (Optional)
10.00			Example: apple.com, earthlink.net

Networking Basics Selecting a Dynamic IP Address with <u>Macintosh OSX</u>

- Go to the Apple Menu and select System Preferences
 - Click on Network



- Select Built-in Ethernet in the Show pull-down menu
- Select Using DHCP in the Configure pull-down menu

	Location: Automatic	•
w: Built-in Ether	net 🔹	
(Manually Manually using DHCI	'oxies
Configure	✓ Using DHCP	
	Using BOOLP	www.ame Servers (Optional)
IP Address:	(Provided by DHCP Server)	
Subnet Mask:	255.255.255.0	
Router:	192.168.0.1	Search Domains (Optional)
DHCP Client ID:	(Optional)	

- Click Apply Now
- The IP Address, Subnet mask, and the Router's IP Address will appear in a few seconds

		Location: Automatic	
Show:	Built-in Ethen	net 🔹)
_		TCP/IP PPPoE App	pleTalk Proxies
	Configure:	Using DHCP	•
			Domain Name Servers (Optional)
	IP Address:	192.168.0.160 (Provided by DHCP Server)	
	Subnet Mask:	255.255.255.0	
	Router:	192.168.0.1	Search Domains (Optional)
	DHCP Client ID:	(Ontional)	
Eth	ernet Address:	00:06:96:79:de:5a	Example: apple.com, earthlink.net

Networking Basics Checking the Wireless Connection by <u>Pinging in Windows XP and</u> <u>2000</u>

Go to Start > Run > type **cmd**. A window similar to this one will appear. Type ping XXX.XXX.XXX.XXX. where xxx is the IP Address of the Wireless Router or Access Point, A good wireless connection will show four replies from the Wireless Router or Acess Point, as shown.

 cx
 F:WWNDOWSUSystem32/kcmd.exe
 _____X

 Microsoft Uindows XP [Uersion 5.1.26001 (C) Copyright 1985-2001 Microsoft Corp.
 _____X

 F:\Documents and Settings\lab4>ping 192.168.0.50
 _____X

 Finging 192.168.0.50: bytes of data:
 _____X

 Reply from 192.168.0.50: bytes -32 time=5ms TIL-30
 _____X

 Ping tran 192.168.0.50: bytes -32 time=5ms TIL-30
 _____X

 Ping statistics for 192.168.0.50: bytes -32 time=17ms TIL-30
 _____X

 Ping statistics for 192.168.0.50: bytes -32 time=17ms TIL-30
 _____X

 Ping statistics for 192.168.0.50: bytes -32 time=17ms TIL-30
 ______X

 Provinate for e-ound trip times in milli-seconds
 ______X

 Minimum = 3ms, Maximum = 64ms, Average = 22ms
 ______X

 F:\Documents and Settings\lab4>_
 ______X

Checking the Wireless Connection by <u>Pinging in Windows Me</u> and <u>98</u>

Go to Start > Run > type command. A window similar to this will appear. Type **ping** XXX.XXX.XXX.XXX where xxx is the IP Address of the Wireless Router or Access Point. A aood wireless connection will show four replies from the wireless router or access point, as shown.



This Chapter provides solutions to problems that can occur during the installation and operation of the DI-524 Wireless Broadband Router. We cover various aspects of the network setup, including the network adapters. Please read the following if you are having problems.

Note: It is recommended that you use an Ethernet connection to configure the DI-524 Wireless Broadband Router.

1.The computer used to configure the DI-524 cannot access the Configuration menu.

- Check that the Ethernet LED on the DI-524 is ON. If the LED is not ON, check that the cable for the Ethernet connection is securely inserted.
- Check that the Ethernet Adapter is working properly. Please see item 3 (*Check that the drivers for the network adapters are installed properly*) in this **Troubleshooting** section to check that the drivers are loaded properly.
- Check that the IP Address is in the same range and subnet as the DI-524. Please see Checking the IP Address in Windows XP in the Networking Basics section of this manual.

Note: The IP Address of the DI-524 is 192.168.0.1. All the computers on the network must have a unique IP Address in the same range, e.g., 192.168.0.x. Any computers that have identical IP Addresses will not be visible on the network. They must all have the same subnet mask, e.g., 255.255.255.0

Do a Ping test to make sure that the DI-524 is responding. Go to Start>Run>Type Command>Type ping 192.168.0.1. A successful ping will show four replies.

🐼 E:\WINDOWS\System32\cmd.exe	- 🗆 ×
E:>>ping 192.168.0.1	
Pinging 192.168.0.1 with 32 bytes of data:	
Reply from 192.168.0.1: bytes=32 time(1nn TIL=128 Reply from 192.168.0.1: bytes=32 time(1nn TIL=128 Reply from 192.168.0.1: bytes=32 time(1nn TIL=128 Reply from 192.168.0.1: bytes=32 time(1nn TIL=128	
Ping statistics for 192.168.0.1: Packets: Sent = 4, Received = 4, Lost = 0 (0% loss), Approximate round crip times in milli-seconds: Minimum = 0ms, Maximum = 0ms, Nevrage = 0ms	
E:\>	
	-

Note: If you have changed the default IP Address, make sure to ping the correct IP Address assigned to the DI-524.

2. The wireless client cannot access the Internet in the Infrastructure mode.

Make sure the wireless client is associated and joined with the correct Access Point. To check this connection: **Right-click** on the **Local Area Connection icon** in the taskbar> select **View Available Wireless Networks**. The **Connect to Wireless Network** screen will appear. Please make sure you have selected the correct available network, as shown in the illustrations below.

	Connect to Wireless Network
Disable Status Repair	The following network(s) are available. To access a network, select it from the list, and then click Connect. Available networks:
View Available Wireless Networks	👗 alan 🦰
Open Network Connections	This network, requires the use of a network key (WEP). To access this network, type the key, and then click Connect.
	Network key:
	If you are having difficulty connecting to a network, click Advanced.
	Advanced Connect Cancel

Check that the IP Address assigned to the wireless adapter is within the same IP Address range as the access point and gateway. (Since the DI-524 has an IP Address of 192.168.0.1, wireless adapters must have an IP Address in the same range, e.g., 192.168.0.x. Each device must have a unique IP Address; no two devices may have the same IP Address. The subnet mask must be the same for all the computers on the network.) To check the IP Address assigned to the wireless adapter, double-click on the Local Area Connection icon in the taskbar > select the Support tab and the IP Address will be displayed. (Please refer to Checking the IP Address in the Networking Basics section of this manual.)

If it is necessary to assign a Static IP Address to the wireless adapter, please refer to the appropriate section in Networking Basics. If you are entering a DNS Server address you must also enter the Default Gateway Address. (Remember that if you have a DHCP-capable router, you will not need to assign a Static IP Address. See Networking Basics: Assigning a Static IP Address.)

3. Check that the drivers for the network adapters are installed properly.

You may be using different network adapters than those illustrated here, but this procedure will remain the same, regardless of the type of network adapters you are using.



Double-click on Network Adapters.

- Right-click on D-Link AirPlus DWL-G650 Wireless Cardbus Adapter (In this example we use the DWL-G650; you may be using other network adapters, but the procedure will remain the same.)
- Select Properties to check that the drivers are installed properly.
 - Look under **Device** Status to check that the device is working properly.



D-Link Ai	rPlus DWL-0	G650 Wireless Cardbus Adapter	? 🗙
General	Advanced	Settings Driver Resources	
HH:	D-Link AirPl	lus DWL-650 Wireless Cardbus Adapter	
	Device type	e: Network adapters	
	Manufacture	er: D-Link	
	Location:	PCI bus 5, device 0, function 0	
This If you start	e status device is work u are having p the troublesho	king properly. roblems with this device, click Troubleshoot to poter.	3
<u>D</u> evice	usage:		
Use th	is device (ena	ble)	~
		OK Car	ncel

Click OK.

4. What variables may cause my wireless products to lose reception?

D-Link products let you access your network from virtually anywhere you want. However, the positioning of the products within your environment will affect the wireless range. Please refer to **Installation Considerations** in the **Wireless Basics** section of this manual for further information about the most advantageous placement of your D-Link wireless products.

5. Why does my wireless connection keep dropping?

- Antenna Orientation- Try different antenna orientations for the DI-524. Try to keep the antenna at least 6 inches away from the wall or other objects.
- If you are using 2.4GHz cordless phones, X-10 equipment or other home security systems, ceiling fans, and lights, your wireless connection will degrade dramatically or drop altogether. Try changing the Channel on your Router, Access Point and Wireless adapter to a different Channel to avoid interference.
- Keep your product away (at least 3-6 feet) from electrical devices that generate RF noise, like microwaves, Monitors, electric motors, etc.

6. Why can't I get a wireless connection?

If you have enabled Encryption on the DI-524, you must also enable encryption on all wireless clients in order to establish a wireless connection.

- For 802.11g, the Encryption settings are: 64 or 128 bit. Make sure that the encryption bit level is the same on the Router and the Wireless Client.
- Make sure that the SSID on the Router and the Wireless Client are exactly the same. If they are not, wireless connection will not be established.
- Move the DI-524 and the wireless client into the same room and then test the wireless connection.
- Disable all security settings. (WEP, MAC Address Control)

6. Why can't I get a wireless connection? (continued)

- Turn off your DI-524 and the client. Turn the DI-524 back on again, and then turn on the client.
- Make sure that all devices are set to **Infrastructure** mode.
- Check that the LED indicators are indicating normal activity. If not, check that the AC power and Ethernet cables are firmly connected.
- Check that the IP Address, subnet mask, gateway, and DNS settings are correctly entered for the network.
- If you are using 2.4GHz cordless phones, X-10 equipment or other home security systems, ceiling fans, and lights, your wireless connection will degrade dramatically or drop altogether. Try changing the Channel on your DI-524, and on all the devices in your network to avoid interference.
- Keep your product away (at least 3-6 feet) from electrical devices that generate RF noise, like microwaves, Monitors, electric motors, etc.

7. I forgot my encryption key.

Reset the DI-524 to its factory default settings and restore the other devices on your network to their default settings. You may do this by pressing the Reset button on the back of the unit. You will lose the current configuration settings.

8. Resetting the DI-524 to Factory Default Settings

After you have tried other methods for troubleshooting your network, you may choose to **Reset** the DI-524 to the factory default settings. Remember that D-Link *Air*Plus G products network together, out of the box, at the factory default settings.



Reset

To hard-reset the DI-524 to Factory Default Settings, please do the following:

Locate the **Reset** button on the back of the DI-524.

Use a paper clip to press the **Reset** button.

- Hold for about 10 seconds and then release.
- After the DI-524 reboots (this may take a few minutes), it will be reset to the factory **Default** settings.

Technical Specifications

Standards

- IEEE 802.11g
- IEEE 802.11b
- IEEE 802.3
- IEEE 802.3u

VPN Pass Through/ Multi-Sessions

- PPTP
- L2TP
- IPSec

Device Management

- Web-Based- Internet Explorer v6 or later; Netscape Navigator v6 or later; or other Java-enabled browsers
- DHCP Server and Client

Advanced Firewall Features

- NAT with VPN Passthrough (Network Address Translation)
- MAC Filtering
- IP Filtering
- URL Filtering
- Domain Blocking
- Scheduling

Wireless Operating Range

- Indoors up to 328 feet (100 meters)
- Outdoors up to 1312 feet (400 meters)

Operating Temperature

■ 32°F to 131°F (0°C to 55°C)

Humidity:

95% maximum (non-condensing)

Safety and Emissions:

FCC

Wireless Frequency Range:

2.4GHz to 2.462GHz

Technical Specifications

LEDs:

- Power
- WAN
- LAN (10/100)
- WLAN (Wireless Connection)

Physical Dimensions:

- L = 5.6 inches (142mm)
- W = 4.3 inches (109mm)
- H = 1.2 inches (31mm)

Wireless Transmit Power:

15dBm ± 2dB

Security:

- **8**02.1x
- WPA- WiFi Protected Access (WEP with TKIP, MIC, IV Expansion, Shared Key Authentication)

External Antenna Type:

Single detachable reverse SMA

Modulation Technology:

Orthogonal Frequency Division Multiplexing (OFDM)

Power Input:

Ext. Power Supply DC 5V, 2.5A

Weight:

7.8 oz. (0.22kg)

Warranty:

3 year

Technical Specifications

Wireless Data Rates with Automatic Fallback:

- 54 Mbps
- 48 Mbps
- 36 Mbps
- 24 Mbps
- 18 Mbps
- 12 Mbps
- 11 Mbps
- 9 Mbps
- 6 Mbps
- **5.5** Mbps
- 2 Mbps
- 1 Mbps

Receiver Sensitivity:

- 54Mbps OFDM, 10% PER, -68dBm
- 48Mbps OFDM, 10% PER, -68dBm
- **36Mbps OFDM**, 10% PER, -75dBm
- 24Mbps OFDM, 10% PER, -79dBm
- 18Mbps OFDM, 10% PER, -82dBm
- 12Mbps OFDM, 10% PER, -84dBm
- 11Mbps CCK, 8% PER, -82dBm
- 9Mbps OFDM, 10% PER, -87dBm
- 6Mbps OFDM, 10% PER, -88dBm
- 5.5Mbps CCK, 8% PER, -85dBm
- 2Mbps QPSK, 8% PER, -86dBm
- 1Mbps BPSK, 8% PER, -89dBm

Frequently Asked Questions

Why can't I access the web based configuration?

When entering the IP Address of the DI-524 (192.168.0.1), you are not connecting to the Internet or have to be connected to the Internet. The device has the utility built-in to a ROM chip in the device itself. Your computer must be on the same IP subnet to connect to the web-based utility.

To resolve difficulties accessing a web utility, please follow the steps below.

Step 1 Verify physical connectivity by checking for solid link lights on the device. If you do not get a solid link light, try using a different cable or connect to a different port on the device if possible. If the computer is turned off, the link light may not be on.

What type of cable should I be using?

The following connections require a Crossover Cable:

Computer to Computer Computer to Uplink Port Computer to Access Point Computer to Print Server Computer/XBOX/PS2 to DWL-810 Computer/XBOX/PS2 to DWL-900AP+ Uplink Port to Uplink Port (hub/switch) Normal Port to Normal Port (hub/switch)

The following connections require a Straight-through Cable:

Computer to Residential Gateway/Router Computer to Normal Port (hub/switch) Access Point to Normal Port (hub/switch) Print Server to Normal Port (hub/switch) Uplink Port to Normal Port (hub/switch)

Rule of Thumb: "If there is a link light, the cable is right."

What type of cable should I be using? (continued)

What's the difference between a crossover cable and a straight-through cable?

The wiring in crossover and straight-through cables are different. The two types of cable have different purposes for different

LAN configurations. EIA/TIA 568A/568B define the wiring standards and allow for two different wiring color codes as illustrated in the following diagram.

*The wires with colored backgrounds may have white stripes and may be denoted that way in diagrams found elsewhere.

How to tell straight-through cable from a crossover cable:

The main way to tell the difference between the two cable types is to compare the wiring order on the ends of the cable. If the wiring is the same on both sides, it is



568B CABLE END

straight-through cable. If one side has opposite wiring, it is a crossover cable.

All you need to remember to properly configure the cables is the pinout order of the two cable ends and the following rules:

A straight-through cable has identical ends A crossover cable has different ends

It makes no functional difference which standard you follow for straight-through cable ends, as long as both ends are the same. You can start a crossover cable with either standard as long as the other end is the other standard. It makes no functional difference which end is which. The order in which you pin the cable is important. Using a pattern other than what is specified in the above diagram could cause connection problems.

When to use a crossover cable and when to use a straight-through cable:

Computer to Computer – Crossover Computer to an normal port on a Hub/Switch – Straight-through Computer to an uplink port on a Hub/Switch - Crossover Hub/Switch uplink port to another Hub/Switch uplink port – Crossover Hub/Switch uplink port to another Hub/Switch normal port - Straight-through

Step 2 Disable any Internet security software running on the computer. Software firewalls like Zone Alarm, Black Ice, Sygate, Norton Personal Firewall, etc. might block access to the configuration pages. Check the help files included with your firewall software for more information on disabling or configuring it.

Step 3 Configure your Internet settings.

Go to **Start>Settings>Control Panel**. Double click the **Internet Options** Icon. From the **Security** tab, click the button to restore the settings to their defaults.

Click to the **Connection** tab and set the dialup option to **Never Dial a Connection**. Click the **LAN Settings** button.

Nothing should be checked. Click OK.

Go to the **Advanced** tab and click the button to restore these settings to their defaults.

Click **OK**. Go to the desktop and close any open windows.



Step 4 Check your IP Address. Your computer must have an IP Address in the same range of the device you are attempting to configure. Most D-Link devices use the 192.168.0.X range.

How can I find my IP Address in Windows 95, 98, or ME?

Step 1 Click on Start, then click on Run.

Step 2 The Run Dialogue Box will appear. Type **winipcfg** in the window as shown then click **OK**.



Step 3 The IP Configuration window will appear, displaying your Ethernet Adapter Information.

Select your adapter from the drop down menu.

If you do not see your adapter in the drop down menu, your adapter is not properly installed.

P Configuration	
Adapter Address IP Address Subnet Mask	PPP Adapter. PPP Adapter D-Link DFE-550TX 10/100 Adapter 0.0.0.0 0.0.0.0
Default Gateway	
OK Release All Re	new All More Info >>

Step 4 After selecting your adapter, it will display your IP Address, subnet mask, and default gateway.

Step 5 Click OK to close the IP Configuration window.

Step 4 (continued) Check your IP Address. Your computer must have an IP Address in the same range of the device you are attempting to configure. Most D-Link devices use the 192.168.0.X range.

How can I find my IP Address in Windows 2000/XP?

Step 1 Click on Start and select Run.

Step 2 Type cmd then click OK.

Type the name of a program Internet resource, and Wind	n, folder, document, or dows will open it for you.
cmd	
	Type the name of a prograr Internet resource, and Win cmd

Step 3 From the Command Prompt, enter **ipconfig**. It will return your IP Address, subnet mask, and default gateway.



Step 4 Type exit to close the command prompt.

Step 4 (continued) Check your IP Address. Your computer must have an IP Address in the same range of the device you are attempting to configure. Most D-Link devices use the 192.168.0.X range.

Make sure you take note of your computer's Default Gateway IP Address. The Default Gateway is the IP Address of the D-Link router. By default, it should be 192.168.0.1.

How can I assign a Static IP Address in Windows XP?

Step 1

Click on Start > Control Panel > Network and Internet Connections > Network connections.

Step 2 See <u>Step 2</u> for Windows 2000 and continue from there.

How can I assign a Static IP Address in Windows 2000?

Step 1 Right-click on **My Network Places** and select **Properties**.

Step 2 Right-click on the Local Area Connection which represents your network card and select Properties.

Highlight Internet Protocol (TCP/ IP) and click Properties.



How can I assign a Static IP Address in Windows 2000? (continued)

Click Use the following IP Address and

enter an IP Address that is on the same subnet as the LAN IP Address on your router. <u>Example</u>: If the router's LAN IP Address is 192.168.0.1, make your IP Address 192.168.0.X where X = 2-99. Make sure that the number you choose is not in use on the network.

Set **the Default Gateway** to be the same as the LAN IP Address of your router (192.168.0.1).

Set **the Primary DNS** to be the same as the LAN IP address of your router (192.168.0.1).

ternet Protocol (TCP/IP) Prope	rties <u>? X</u>
General	
You can get IP settings assigned at this capability. Otherwise, you need the appropriate IP settings.	utomatically if your network supports to ask your network administrator for
O Dbtain an IP address automat	ically
$_ \textcircled{\bullet} U_{\underline{s}} e \text{ the following IP address:} \\$	
IP address:	192.168.0.65
S <u>u</u> bnet mask:	255 . 255 . 255 . 0
Default gateway:	192.168.0.1
C Obtain DNS server address at Use the following DNS server	utomatically addresses:
Preferred DNS server:	192.168.0.1
Alternate DNS server:	4 . 2 . 2 . 2
I	Advanced
	OK Cancel

The Secondary DNS is not needed or enter a DNS server from your ISP.

Click **OK** twice. You may be asked if you want to reboot your computer. Click **Yes**.

How can I assign a Static IP Address in Windows 98/Me?

Step 1 From the desktop, right-click on the **Network Neigborhood** icon (Win ME - My Network Places) and select **Properties**.

Highlight **TCP/IP** and click the **Properties** button. If you have more than 1 adapter, then there will be a TCP/IP "Binding" for each adapter. Highlight **TCP/IP > (your network adapter)** and then click **Properties**.

Configuration Identification Access Control The following getwork components are installed Configuration United States States
The following getwork components are installed: Client for Microsoft Networks Durink DFE-530TX PCI Fast Ethernet Adapter (Rev A) Client for Microsoft Networks Primary Network_Logon. Client for Microsoft Networks Ele and Print Sharing Description TCP/PP is the protocol you use to connect to the Internet and
The following getwork components are installed:
Clerk for Microsoft Networks Delik KPE-SoftX PCI Fast Ethernet Adapter (Rev A) Add Remove Properties Primary Network_Logon: Clerk for Microsoft Networks Etie and Print Sharing Description TCP/PP is the protocol you use to connect to the Internet and
<u>Add</u> <u>Remove</u> Properties Primary Network Legon: Client for Microsoft Networks Ele and Print Sharing Description TCP://P is the protocol you use to connect to the Internet and
Add Pgmove Pjoperties Primary Network Logon: Clent for Microsoft Networks ▼ Elie and Print Sharing ▼ Description TCPR/Pi is the protocol you use to connect to the Internet and
Add Rgmove Ptoperties Primary Network Logon: Client for Microsoft Networks ▼ Ele and Print Sharing ■ Description TCP/RP is the protocol you use to connect to the Internet and
Primary Network Logon: Client for Microsoft Networks Elle and Print Sharing Description TCP/RP is the protocol you use to connect to the Internet and
Client for Microsoft Networks Ele and Print Sharing Description TCP/RP is the protocol you use to connect to the Internet and
Elle and Print Sharing Description TCP/IP is the protocol you use to connect to the Internet and
Eile and Print Sharing Description TCP/IP is the protocol you use to connect to the Internet and
Description TCP/IP is the protocol you use to connect to the Internet and
TCP/IP is the protocol you use to connect to the Internet and
wide-area networks.
OK Cancel

How can I assign a Static IP Address in Windows 98/Me? (continued)

Step 2 Click Specify an IP Address.

Enter in an IP Address that is on the same subnet as the LAN IP Address on your router. <u>Example</u>: If the router's LAN IP Address is 192.168.0.1, make your IP Address 192.168.0.X where X is between 2-99. Make sure that the number you choose is not in use on the network.

Step 3 Click on the Gateway tab.

Enter the LAN IP Address of your router here (192.168.0.1).

Click Add when finished.

Step 4 Click on the DNS Configuration tab.

Click **Enable DNS**. Type in a **Host** (can be any word). Under DNS server search order, enter the LAN IP Address of your router (192.168.0.1). Click **Add**.

Step 5 Click OK twice.

When prompted to reboot your computer, click **Yes**. After you reboot, the computer will now have a static, private IP Address.

Step 5 Access the web management. Open your web browser and enter the IP Address of your D-Link device in the address bar. This should open the login page for the web

management. Follow instructions to login and complete the configuration.



TCP/IP Properties				? ×
Bindings	l Adv	anced	N	HRIOS Ì
DNS Configuration	Gateway	WINS Confi	guration	IP Address
The first gateway in The address order machines are used	n the Installe in the list wi	ed Gateway lis Il be the order	t will be t in which	he default. these
New gateway:				
192.168.	0.1	∆dd		
Installed gateway	18:	<u>R</u> emov	/e	
		OK		Cancel



How can I setup my router to work with a Cable modem connection?

Dynamic Cable connection

(IE AT&T-BI, Cox, Adelphia, Rogers, Roadrunner, Charter, and Comcast).

Note: Please configure the router with the computer that was last connected directly to the cable modem.

Step 1 Log into the web based configuration by typing in the IP Address of the router (default:192.168.0.1) in your web browser. The username is **admin** (all lowercase) and the password is **blank** (nothing).

Step 2 Click the **Home** tab and click the **WAN** button. Dynamic IP Address is the default value, however, if Dynamic IP Address is not selected as the WAN type, select Dynamic IP Address by clicking on the radio button. Click **Clone Mac Address**. Click on **Apply** and then **Continue** to save the changes.

nter Netv	vork Passwor	d <u>? X</u>
?>>	Please type yo	our user name and password.
3	Site:	192.168.0.1
	Realm	DI-524
	<u>U</u> ser Name	admin
	Password	
	□ <u>S</u> ave this p	password in your password list
		OK Cancel

4 1			
Home Advo	anced Tools	Status	Help
WAN Settings			
Please select the appropria	te option to connect to your IS	SP.	
Oynamic IP Address	Choose this option to ob your ISP. (For most Cab	otain an IP address automa le modem users)	dically from
C Static IP Address	Choose this option to se by your ISP.	et static IP information provi	ded to you
C PPPoE	Choose this option if you users)	ur ISP uses PPPoE. (For m	ost DSL
C Others	PPTP and BigPond Cab	le	
O PPTP	(for Europe use only)		
Dynamic IP			
Host Name	DI-624	(0	ptional)
MAC Address	00 . 80 . C8 .	03 . 70 . DD (or	otional)
	Clone MAC Addr	ess	
		Ø	0
		V	

How can I setup my router to work with a Cable modem connection? (continued)

Step 3 Power cycle the cable modem and router:

Turn the cable modem off (first). Turn the router off Leave them off for 2 minutes.** Turn the cable modem on (first). Wait until you get a solid cable light on the cable modem. Turn the router on. Wait 30 seconds.

** If you have a Motorola (Surf Board) modem, leave off for at least 5 minutes.

Step 4 Follow step 1 again and log back into the web configuration. Click the **Status** tab and click the **Device Info** button. If you do not already have a public IP Address under the **WAN** heading, click on the **DHCP Renew** and **Continue** buttons.

Static Cable Connection

Step 1 Log into the web based configuration by typing in the IP Address of the router (default:192.168.0.1) in your web browser. The username is **admin** (all lowercase) and the password is **blank** (nothing).

Step 2 Click the Home tab and click the WAN button. Select Static IP Address and enter your

static settings obtained from the ISP in the fields provided.

If you do not know your settings, you must contact your ISP.

Step 3 Click on **Apply** and then click **Continue** to save the changes.

Step 4 Click the **Status** tab and click the **Device Info** button. Your IP Address information will be displayed under the **WAN** heading.

Home Ad	vanced To	ale Status H
WAN Settings	vanced 10	
Please select the approp	riate option to connect t	to your ISP.
C Dynamic IP Address	Choose this op your ISP. (For m	tion to obtain an IP address automatic: nost Cable modem users)
Static IP Address	Choose this op by your ISP	tion to set static IP information provider
C PPPoE	Choose this op	tion if your ISP uses PPPoE. (For most
C Others	PPTP and BigP	ond Cable
C PPTP	(for Europe use	only)
Static IP		
IP Address	68.52.12.0	(assigned by your ISP)
Subnet Mask	255.0.0.0	
ISP Gateway Address	68.52.12.2	
Primary DNS Address	0.0.0.0	
Secondary DNS Address	0.0.0.0	(optional)

inter Netv	vork Passwoi	d	٩×
? >	Please type y	our user name and password.	
8	Site:	192.168.0.1	
	Realm	DI-524	
	User Name	admin	
	Password		
	Save this	bassword in your password list	
		OK Can	cel

How can I setup my router to work with Earthlink DSL or any PPPoE connection?

Make sure you disable or uninstall any PPPoE software such as WinPoet or Enternet 300 from your computer or you will not be able to connect to the Internet.

Step 1 Upgrade Firmware if needed.

(Please visit the D-Link tech support website at: http://support.dlink.com for the latest firmware upgrade information.)

Step 2 Take a paperclip and perform a hard reset. With the unit on, use a paperclip and hold down the reset button on the back of the unit for 10 seconds. Release it and the router will recycle, the lights will blink, and then stabilize.

Step 3 After the router stabilizes, open your browser and enter 192.168.0.1 into the address window and hit the **Enter** key. When the password dialog box appears, enter the username **admin** and leave the password blank. Click **OK**.

If the password dialog box does not come up repeat Step 2.

Note: Do not run the Wizard.

Step 4 Click on the WAN tab on left-hand side of the screen. Select PPPoE.

Step 5 Select **Dynamic PPPoE** (unless your ISP supplied you with a static IP Address).

Step 6 In the username field enter **ELN/username@earthlink.net** and your password, where username is your own username.

For SBC Global users, enter **username@sbcglobal.net**. For Ameritech users, enter **username@ameritech.net**. For BellSouth users, enter **username@bellsouth.net**. For Mindspring users, enter **username@mindspring.com**. For most other ISPs, enter **username**.

Step 7 Maximum Idle Time should be set to zero. Set **MTU** to 1492, unless specified by your ISP, and set **Autoreconnect** to **Enabled**.

Note: If you experience problems accessing certain websites and/or email issues, please set the MTU to a lower number such as 1472, 1452, etc. Contact your ISP for more information and the proper MTU setting for your connection.

How can I setup my router to work with Earthlink DSL or any PPPoE connection? (continued)

Step 8 Click **Apply**. When prompted, click **Continue**. Once the screen refreshes, unplug the power to the D-Link router.

Step 9 Turn off your DSL modem for 2-3 minutes. Turn back on. Once the modem has established a link to your ISP, plug the power back into the D-Link router. Wait about 30 seconds and log back into the router.

Step 10 Click on the **Status** tab in the web configuration where you can view the device info. Under **WAN**, click **Connect**. Click **Continue** when prompted. You should now see that the device info will show an IP Address, verifying that the device has connected to a server and has been assigned an IP Address.

Can I use my D-Link Broadband Router to share my Internet connection provided by AOL DSL Plus?

In most cases yes. AOL DSL+ may use PPPoE for authentication bypassing the client software. If this is the case, then our routers will work with this service. Please contact AOL if you are not sure.

To set up your router:

Step 1 Log into the web-based configuration (192.168.0.1) and configure the WAN side to use PPPoE.

Step 2 Enter your screen name followed by @aol.com for the user name. Enter your AOL password in the password box.

Step 3 You will have to set the MTU to 1400. AOL DSL does not allow for anything higher than 1400.

Step 4 Apply settings.

Step 5 Recycle the power to the modem for 1 minute and then recycle power to the router. Allow 1 to 2 minutes to connect.

If you connect to the Internet with a different internet service provider and want to use the AOL software, you can do that without configuring the router's firewall settings. You need to configure the AOL software to connect using TCP/IP.

Go to http://www.aol.com for more specific configuration information of their software.

How do I open ports on my router?

To allow traffic from the internet to enter your local network, you will need to open up ports or the router will block the request.

Step 1 Open your web browser and enter the IP Address of your D-Link router (192.168.0.1). Enter username (admin) and your password (blank by default).

Step 2 Click on **Advanced** on top and then click **Virtual Server** on the left side.

Step 3 Check **Enabled** to activate entry.

Virtual Server	
Virtual Server is	s used to allow Internet users access to LAN services.
Name	pcanywhere1 Clear
Private IP	192.168.0.100
Protocol Type	UDP -
Private Port	22
Public Port	22
Schedule	Always
	C From time 00 • : 00 • AM • to 00 • : 00 • AM •
	day Sun 💌 to Sun 💌

Step 4 Enter a name for your virtual server entry.

Step 5 Next to **Private IP**, enter the IP Address of the computer on your local network that you want to allow the incoming service to.

Step 6 Choose **Protocol Type** - either TCP, UDP, or both. If you are not sure, select both.

Step 7 Enter the port information next to **Private Port** and **Public Port**. The private and public ports are usually the same. The public port is the port seen from the WAN side, and the private port is the port being used by the application on the computer within your local network.

Step 8 Enter the Schedule information.

Step 9 Click Apply and then click Continue.

Note: Make sure DMZ host is disabled. If DMZ is enabled, it will disable all Virtual Server entries.

Because our routers use NAT (Network Address Translation), you can only open a specific port to one computer at a time. For example: If you have 2 web servers on your network, you cannot open port 80 to both computers. You will need to configure 1 of the web servers to use port 81. Now you can open port 80 to the first computer and then open port 81 to the other computer.

What is DMZ?

Demilitarized Zone:

In computer networks, a DMZ (demilitarized zone) is a computer host or small network inserted as a neutral zone between a company's private network and the outside public network. It prevents outside users from getting direct access to a server that has company data. (The term comes from the geographic buffer zone that was set up between North Korea and South Korea following the UN police action in the early 1950s.) A DMZ is an optional and more secure approach to a firewall and effectively acts as a proxy server as well.

In a typical DMZ configuration for a small company, a separate computer (or host in network terms) receives requests from users within the private network for access to Web sites or other companies accessible on the public network. The DMZ host then initiates sessions for these requests on the public network. However, the DMZ host is not able to initiate a session back into the private network. It can only forward packets that have already been requested.

Users of the public network outside the company can access only the DMZ host. The DMZ may typically also have the company's Web pages so these could be served to the outside world. However, the DMZ provides access to no other company data. In the event that an outside user penetrated the DMZ hosts security, the Web pages might be corrupted but no other company information would be exposed. D-Link, a leading maker of routers, is one company that sells products designed for setting up a DMZ

How do I configure the DMZ Host?

The DMZ feature allows you to forward all incoming ports to one computer on the local network. The DMZ, or Demilitarized Zone, will allow the specified computer to be exposed to the Internet. DMZ is useful when a certain application or game does not work through the firewall. The computer that is configured for DMZ will be completely vulnerable on the Internet, so it is suggested that you try opening ports from the Virtual Server or Firewall settings before using DMZ.

Step 1 Find the IP address of the computer you want to use as the DMZ host.

To find out how to locate the IP Address of the computer in Windows XP/2000/ME/9x or Macintosh operating systems please refer to Step 4 of the first question in this section (Frequently Asked Questions).

How do I configure the DMZ Host? (continued)

Step 2 Log into the web based configuration of the router by typing in the IP Address of the router (default:192.168.0.1) in your web browser. The username is **admin** (all lowercase) and the password is **blank** (nothing).

DI-524	2 🛛
	G B
Access Point	
<u>U</u> ser name:	😰 admin 💌
Password:	
	Remember my password
	OK Cancel

Step 3 Click the **Advanced** tab and then click on the **DMZ** button. Select **Enable** and type in the IP Address you found in step 1.



Note: When DMZ is enabled, Virtual Server settings will still be effective. Remember, you cannot forward the same port to multiple IP Addresses, so the Virtual Server settings will take priority over DMZ settings.



How do I open a range of ports on my DI-524 using Firewall rules?

Step 1 Access the router's web configuration by entering the router's IP Address in your web browser. The default IP Address is **192.168.0.1**. Login using your password. The default username is "admin" and the password is blank.

If you are having difficulty accessing web management, please see the first question in this section

Step 2 From the web management Home page, click the Advanced tab then click the Firewall button.

Step 3 Click on Enabled and type in a name for the new rule.

Step 4 Choose WAN as the Source and enter a range of IP Addresses out on the internet that you would like this rule applied to. If you would like this rule to allow all internet users to be able to access these ports, then put an Asterisk in the first box and leave the second box empty.

DI 524		802	2.11g/2.4	GHz Wirele	ess Route
01-52-4	Hom	e Advanced	Tools	Status	Help
	Firewall R Firewall Ru	ules les can be used to allov	v or deny traffic fr	om passing through 1	he DI-624.
Virtual Server	Name	C Enabled C Disab	Clear		
Applications	Action	C Allow C Deny Interface IP Range St	art IP Rance I	End Protocol P	ort Range
	Source	* •			97
Filters	Destination	*		TCP -	_
Firewall	Schedule	C Always C From time 00 ▾ day Sun ▾	: 00 • AM • to Sun •	to 00 • : 00 •	am 🔹 🕄
	Firewall R	ules List		Appl	y Cancel Help
Destaurant	Action	Name	Source	Destination	Protocol
renonnance	Denv	Default	m wan," **	LAN, 192. 168.0.1	IP (0).*
			1 and the second		10 (0) +

Step 5 Select LAN as the Destination and enter the IP Address of the computer on your local network that you want to allow the incoming service to. This will not work with a range of IP Addresses.

Step 6 Enter the port or range of ports that are required to be open for the incoming service.

Step 7 Click Apply and then click Continue.

Note: Make sure DMZ host is disabled.

Because our routers use NAT (Network Address Translation), you can only open a specific port to one computer at a time. For example: If you have 2 web servers on your network, you cannot open port 80 to both computers. You will need to configure 1 of the web servers to use port 81. Now you can open port 80 to the first computer and then open port 81 to the other computer. 79

What are virtual servers?

A Virtual Server is defined as a service port, and all requests to this port will be redirected to the computer specified by the server IP. For example, if you have an FTP Server (port 21) at 192.168.0.5, a Web server (port 80) at 192.168.0.6, and a VPN server at 192.168.0.7, then you need to specify the following virtual server mapping table:

Server Port	Server IP	Enable
21	192.168.0.5	Х
80	192.168.0.6	Х
1723	192.168.0.7	Х

How do I use PC Anywhere with my DI-524 router?

You will need to open 3 ports in the Virtual Server section of your D-Link router.

Step 1 Open your web browser and enter the IP Address of the router (192.168.0.1).

Step 2 Click on Advanced at the top and then click Virtual Server on the left side.

Step 3 Enter the information as seen below. The **Private IP** is the IP Address of the computer on your local network that you want to connect to.

Step 4 The first entry will read as shown here:

Step 5 Click **Apply** and then click **Continue**.

Virtual Server					
Virtual Server is	s used to allow Internet users access to LAN services.				
	• Enabled C Disabled				
Name	pcanywhere1 Clear				
Private IP	192.168.0.100				
Protocol Type					
Private Port	22				
Public Port	22				
Schedule	Always				
	C From time 00 • : 00 • AM • to 00 • : 00 • AM •				
	day Sun 💌 to Sun 💌				

now up i use FC Anywhere with my DF324 (outer : (continueu)

Step 6 Create a second entry as shown here: Step 7 Click	Virtual Server is Virtual Server is Name Private IP Protocol Type Private Port Public Port Schedule	 sused to allow Internet users access to LAN services. Enabled O Disabled pcanywhere2 Clear 192.168.0.100 TCP 5631 5631 Always
	2011000010	
click Continue.		C From time 00 ▼ : 00 ▼ AM ▼ to 00 ▼ : 00 ▼ AM ▼ day Sun ▼ to Sun ▼
Char O Create	Virtual Serve	r
a third and final entry as shown	Virtual Server i	s used to allow Internet users access to LAN services.
here:		• Enabled O Disabled
	Name	pcanywhere3 Clear
	Private IP	192.168.0.100
	Protocol Type	
	Private Port	5632
	Public Port	5632
	Schedule	Always
		C From time 00 • : 00 • AM • to 00 • : 00 • AM • day Sun • to Sun •

Step 9 Click Apply and then click Continue.

Step 10 Run *PCAnywhere* from the remote site and use the WAN IP Address of the router, not your computer's IP Address.

How can I use eDonkey behind my DI-524 router?

You must open ports on your router to allow incoming traffic while using eDonkey.

eDonkey uses three ports (4 if using CLI):

4661 (TCP) To connect with a server

4662 (TCP) To connect with other clients

4665 (UDP) To communicate with servers other than the one you are connected to. 4663 (TCP) *Used with the command line (CLI) client when it is configured to allow remote connections. This is the case when using a Graphical Interface (such as the Java Interface) with the client.

Step 1 Open your web browser and enter the IP Address of your router (192.168.0.1). Enter username (admin) and your password (leave blank).

Step 2 Click on Advanced and then click Firewall.

Step 3 Create a new firewall rule: Click Enabled. Enter a name (edonkey). Click Allow. Next to Source. select WAN under interface. In the first box. enter an *. Leave the second box empty. Next to Destination, select LAN under interface. Enter the IP Address of the computer you are running eDonkey from. Leave the second

D-Link Iding Networks for People		802.1	A ii 1g/2.40	Plus GHz Wireles	G [®] s Router
DI-524	Home	Advanced	Tools	Status	Help
Medual Secure	Firewall Rules Firewall Rules of	an be used to allow or	deny traffic fro	m passing through th	e DI-624.
Applications	Name ed	Enabled C Disabled onkey Allow C Deny	Clear		
Filters	Source W Destination LA	erface IP Range Start AN • • N • 192.168.0.100	IP Range En	d Protocol Port Ra	4665
Firewall	Schedule @	Ahways From time 00 • : 0		to 00 • : 00 • A	AM ·
DMZ	Firewall Rules	List			3 Cancel Help
Performance	Action Na Allow Allow Deny Den	me ow to Ping WAN port fault	Source WAN	Destination LAN,192.168.0.1 LAN,*	Protocol ICMP,8 P IP (0),*
	Allow De	fault	LAN		IP (0),*

box empty. Under Protocol, select *. In the port range boxes, enter **4661** in the first box and then **4665** in the second box. Click **Always** or set a schedule.

Step 4 Click **Apply** and then **Continue**.

How do I set up my DI-524 router for SOCOM on my Playstation 2?

To allow you to play SOCOM and hear audio, you must download the latest firmware for the router (if needed), enable Game Mode, and open port 6869 to the IP Address of your Playstation.

Step 1 Upgrade firmware (follow link above).

Step 2 Open your web browser and enter the IP Address of the router (192.168.0.1). Enter username (admin) and your password (blank by default).

Step 3 Click on the Advanced tab and then click on Virtual Server on the left side.

Step 4 You will now create a new Virtual Server entry. Click **Enabled** and enter a name (socom). Enter the IP Address of your Playstation for **Private IP**.

Step 5 For **Protocol Type** select Both. Enter **6869** for both the **Private Port** and **Public Port**. Click **Always**. Click **Apply** to save changes and then **Continue**.

Home	Advance	d To	ols	Status	Help
Virtual Server	s used to allow int	emet users :	access to LAN	senices	
T HOLE OVITOR IN	E Eastlad C	Disabled		a anne an	
Name	socom	Disabled	0	lear	
Private IP	192.168.0.10)			
Protocol Type	Both -				
Private Port	6869				
Public Port	6869				
Schadula	Courses				
Schedule	C From stored	00 -			AM W
	to rion prej				Ican II
	0491		1		
					-
					63 C
Virtual Server	ni Lint -				3 Cancel He
Virtual Server Name	u List	Private IP	Protocol	Apply C Sched	Cancel He
Virtual Server Name	n List ver FTP	Private IP 0.0.0.0	Protocol TCP 21/21	Apply C Sched always	Cancel He
Virtual Server Name	n List Wr FTP Wr HTTP	Private IP 0.0.0.0 0.0.0.0	Protocol TCP 21/21 TCP 80/80	Apply C Sched always always	Cancel He

Step 6 Click on the Tools tab and then Misc on the left side.

Step 7 Make sure **Gaming Mode** is Enabled. If not, click **Enabled**. Click **Apply** and then **Continue**.

How can I use Gamespy behind my DI-524 router?

Step 1 Open your web browser and enter the IP Address of the router (192.168.0.1). Enter admin for the username and your password (blank by default).

Step 2 Click on the Advanced tab and then click Virtual Server on the left side.

Step 3 You will create 2 entries.

Step 4 Click Enabled and enter Settings:

NAME - Gamespy1

PRIVATE IP - The IP Address of your computer that you are running Gamespy from.

PROTOCOL TYPE - Both

PRIVATE PORT - 3783

PUBLIC PORT - 3783

SCHEDULE - Always.



Click Apply and then continue

Step 5 Enter 2nd entry: Click Enabled

NAME - Gamespy2

PRIVATE IP - The IP Address of your computer that you are running Gamespy from.

PROTOCOL TYPE - Both

PRIVATE PORT - 6500

PUBLIC PORT - 6500

SCHEDULE - Always.

Click **Apply** and then **continue**.



How do I configure my DI-524 router for KaZaA and Grokster?

The following is for KaZaA, Grokster, and others using the FastTrack P2P file sharing system.

In most cases, you do not have to configure anything on the router or on the KaZaA software. If you are having problems, please follow steps below:

Step 1 Enter the IP Address of your router in a web browser (192.168.0.1).

Step 2 Enter your username (admin) and your password (blank by default).

Step 3 Click on Advanced and then click Virtual Server.

Step 4 Click Enabled and then enter a Name (kazaa for example).

Step 5 Enter the IP Address of the computer you are running KaZaA from in the Private IP box. Select TCP for the Protocol Type.

Step 6 Enter 1214 in the Private and Public Port boxes. Click Always under schedule or set a time range. Click Apply.

Home	Advanced	Tools	Status	Help
Virtual Server				_
Virtual Server is	s used to allow Interne	t users access t	o LAN services.	
		abled		
Name	kazaa.		Clear	
Private IP	192.168.0.100			
Protocol Type	TCP 💌			
Private Port	1214			
Public Port	1214			
Schedule	Always			
	C From time 00	• : 00 • AM	💌 to 00 💌 : 00 🕨	- AM -
	day Sun	💌 to Sun 💌		

Make sure that you did not enable proxy/firewall in the KaZaA software.

How do I configure my DI-524 router to play Warcraft 3?

You must open ports on your router to allow incoming traffic while <u>hosting</u> a game in Warcraft 3. To play a game, you do not have to configure your router.

Warcraft 3 (Battlenet) uses port 6112.

For the DI-604, DI-614+, DI-524, DI-754, DI-764, or DI-774:

Step 1 Open your web browser and enter the IP Address of your router (192.168.0.1). Enter username (admin) and your password (leave blank).

Step 2 Click on **Advanced** and then click **Virtual Server**.

Step 3 Create a new entry: Click **Enabled**. Enter a name (warcraft3). Private IP - Enter the IP Address of the computer you want to host the game. Select



Both for Protocol Type Enter **6112** for both Private Port and Public Port Click **Always** or set a schedule.

Step 4 Click **Apply** and then **Continue**.

Note: If you want multiple computers from you LAN to play in the same game that you are hosting, then repeat the steps above and enter the IP Addresses of the other computers. You will need to change ports. Computer #2 can use port 6113, computer #3 can use 6114, and so on.

You will need to change the port information within the Warcraft 3 software for computers #2 and up.

Configure the Game Port information on each computer:

Start Warcraft 3 on each computer, click **Options** > **Gameplay**. Scroll down and you should see **Game Port**. Enter the port number as you entered in the above steps.

How do I use NetMeeting with my DI-524 Router?

Unlike most TCP/IP applications, NetMeeting uses **DYNAMIC PORTS** instead of STATIC PORTS. That means that each NetMeeting connection is somewhat different than the last. For instance, the HTTP web site application uses port 80. NetMeeting can use any of over 60,000 different ports.

All broadband routers using (only) standard NAT and all internet sharing programs like Microsoft ICS that use (only) standard NAT will NOT work with NetMeeting or other h.323 software packages.

The solution is to put the computer in DMZ.

Note: A few hardware manufacturers have taken it on themselves to actually provide H.323 compatibility. This is not an easy task since the router must search each incoming packet for signs that it might be a netmeeting packet. This is a whole lot more work than a router normally does and may actually be a **weak point in the firewall**. D-Link is not one of the manufacturers.

To read more on this visit <u>http://www.HomenetHelp.com</u>

How do I set up my DI-524 router to use iChat? -for Macintosh users-

You must open ports on your router to allow incoming traffic while using iChat.

iChat uses the following ports: 5060 (UDP) 5190 (TCP) File Sharing 16384-16403 (UDP) To video conference with other clients.

Step 1 Open your web browser and enter the IP Address of your router (192.168.0.1). Enter username (admin) and your password (leave blank).

Step 2 Click on Advanced and then click Firewall.

How do I set up my DI-524 router to use iChat? -for Macintosh users-(continued)

Step 3 Create a new firewall rule:

Click Enabled Enter a name (ichat1). Click Allow. Next to Source. select WAN under interface. In the first box. enter an *. Leave the second box empty. Next to Destination. select LAN under interface. Enter the IP Address of the

		802.1	1g/2.4	GHz Wireles	s Router
24	Home	Advanced	Tools	Status	Help
	Firewall Ru Firewall Rule	lles es can be used to allow or	deny traffic fro	m passing through th	te DI-624.
Server		Enabled C Disabled			
	Name	ichat1	Clear		
	Action	Allow C Deny			
		Interface IP Range Start	IP Range En	d Protocol Port R	ange
	Source	WAN 💌 *			
	Destination	LAN 192.168.0.100		UDP - 5060	-
	Schedule	Always			
		C From time 00 . : 0	0 💌 AM 💌	to 00 💌 : 00 💌 .	AM 💌
		day Sun 💌 te	Sun 💌		
		<i>,.</i> _		S	0 0
	Eirowall Du	loc Liet		Annh	Cancel Holo
r	Action	Name	Source	Destination	Protocol
	E Allow	Allow to Ping WAN port	WAN,"	LAN,192.168.0.1	ICMP,8
	🗹 Deny	Default		LAN,*	IP (0),*
	Allow	Default	LAN.*	**	IP (0).*

computer you are running iChat from.

Leave the second box empty. Under Protocol, select **UDP**. In the port range boxes, enter **5060** in the first box and leave the second box empty.

Click **Always** or set a schedule.

Step 4 Click **Apply** and then **Continue**.

Step 5

Repeat steps 3 and 4 enter **ichat2** and open ports **16384-16403** (UDP).

g Networks for People	Air Plus G 802.11g/2.4GHz Wireless Router				
1-524	Home	Advanced	Tools	Status	Help
Artual Server	Firewall Rule Firewall Rules	s can be used to allow o	deny traffic fro	im passing through th	1e DI-624.
	Name id	Enabled C Disabled	Clear		
Applications	Action @	Allow C Deny enface IP Range Start	IP Range En	1 Protocol Port R	ange
Filters	Source W	VAN • *			1640
	Schedule @	Always		1007 11000	. [1940]
Firewall	c	From time 00 - :	00 • AM •	to 00 • : 00 • 1	AM 💌
DMZ		day journ	1.200	S	0 0
	Firewall Rule	s List	0	Apply	Cancel Help
Performance	Action N.	ame low to Pinn WAN not	Source WAN *	LAN 192 168 0 1	ICMP 8
	Denv D	efault	**	LAN,*	IP (0),*
	Allow De	efault	LAN.*	**	IP (0),*

How do I set up my DI-524 router to use iChat? -for Macintosh users-(continued)

For File Sharing: Step 1 Click on Advanced and then Virtual Server

Step 2 Check Enabled to activate entry.

Step 3 Enter a name for your virtual server entry (ichat3).

Step 4 Next to Private IP. enter the IP Address of the computer on your local network that you want to allow the incoming service to.

Step 5 Select **TCP** for Protocol Type.

Step 6 Enter 5190 next to Private Port and Public Port.

Stsp 7 Click Always or configure a schedule.

Step 8 Click Apply and then Continue.

If using Mac OS X Firewall, you may need to temporarily turn off the firewall in the Sharing preference pane on both computers.

To use the Mac OS X Firewall, you must open the same ports as in the router:

- Step 1 Choose Apple menu > System Preferences.
- Step 2 Choose View > Sharing.
- Step 3 Click the Firewall tab.
- Step 4 Click New.
- Step 5 Choose Other from the Port Name pop-up menu.
- Step 6 In the Port Number, Range or Series field, type in: 5060, 16384-16403.
- Step 7 In the Description field type in: iChat AV
- Step 8 Click OK.

	802.11g/2.4GHz Wireless Rout					
-524	Home	Advance	d Too	ls Sto	atus H	lelp
ual Server	Virtual Server Virtual Server is	r s used to allow Int	ernet users ac	cess to LAN ser	rices.	
olications	Name Driveta ID	€ Enabled C ichet3	Disabled	Clear		
Ellore	Protocol Type Private Port	TCP -				
	Public Port	5190				
DMZ	Schedule	C From time	00 🔹 : 00 🔹 Sun 💌 to S	AM 💌 to 00	• : 00 • AM	
formance	Virtual Serve	rs List				
					AND A DESCRIPTION OF A	

How do I send or receive a file via iChat when the Mac OSX firewall is active? -for Macintosh users- Mac OS X 10.2 and later

The following information is from the online Macintosh AppleCare knowledge base:

"iChat cannot send or receive a file when the Mac OS X firewall is active in its default state. If you have opened the AIM port, you may be able to receive a file but not send them.

In its default state, the Mac OS X firewall blocks file transfers using iChat or America Online AIM software. If either the sender or receiver has turned on the Mac OS X firewall, the transfer may be blocked.

The simplest workaround is to temporarily turn off the firewall in the Sharing preference pane on both computers. This is required for the sender. However, the receiver may keep the firewall on if the AIM port is open. To open the AIM port:

Step 1 Choose Apple menu > System Preferences.

Step 2 Choose View > Sharing.

Step 3 Click the Firewall tab.

Step 4 Click New.

Step 5 Choose AOL IM from the Port Name pop-up menu. The number 5190 should already be filled in for you.

Step 6 Click OK.

If you do not want to turn off the firewall at the sending computer, a different file sharing service may be used instead of iChat. The types of file sharing available in Mac OS X are outlined in technical document 106461, "Mac OS X: File Sharing" in the *AppleCare Knowledge base* online.

Note: If you use a file sharing service when the firewall is turned on, be sure to click the Firewall tab and select the service you have chosen in the "Allow" list. If you do not do this, the firewall will also block the file sharing service. "

What is NAT?

NAT stands for **Network Address Translator**. It is proposed and described in RFC-1631 and is used for solving the IP Address depletion problem. Basically, each NAT box has a table consisting of pairs of local IP Addresses and globally unique addresses, by which the box can "translate" the local IP Addresses to global address and vice versa. Simply put, it is a method of connecting multiple computers to the Internet (or any other IP network) using one IP Address.

D-Link's broadband routers (ie: DI-524) support NAT. With proper configuration, multiple users can access the Internet using a single account via the NAT device.

For more information on RFC-1631: The IP Network Address Translator (NAT), visit http://www.faqs.org/rfcs/rfc1631.html

Technical Support

You can find software updates and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States and within Canada for the duration of the warranty period on this product.

U.S. and Canadian customers can contact D-Link technical support through our web site, or by phone.

Tech Support for customers within the United States:

D-Link Technical Support over the Telephone: (877) 453-5465 24 hours a day, seven days a week.

D-Link Technical Support over the Internet: http://support.dlink.com email:support@dlink.com

Tech Support for customers within Canada:

D-Link Technical Support over the Telephone: (800) 361-5265 Monday to Friday 7:30am to 12:00am EST

D-Link Technical Support over the Internet:

http://support.dlink.ca email:support@dlink.ca

When contacting technical support, please provide the following information:

- Serial number of the unit
- Model number or product name
- Software type and version number



Subject to the terms and conditions set forth herein, D-Link Systems, Inc. ("D-Link") provides this Limited warranty for its product only to the person or entity that originally purchased the product from:

- D-Link or its authorized reseller or distributor and
- Products purchased and delivered within the fifty states of the United States, the District of Columbia, U.S. Possessions or Protectorates, U.S. Military Installations, addresses with an APO or FPO.

Limited Warranty: D-Link warrants that the hardware portion of the D-Link products described below will be free from material defects in workmanship and materials from the date of original retail purchase of the product, for the period set forth below applicable to the product type ("Warranty Period"), except as otherwise stated herein.

3-Year Limited Warranty for the Product(s) is defined as follows:

- Hardware (excluding power supplies and fans) Three (3) Years
- Power Supplies and Fans One (1) Year
- Spare parts and spare kits Ninety (90) days

D-Link's sole obligation shall be to repair or replace the defective Hardware during the Warranty Period at no charge to the original owner or to refund at D-Link's sole discretion. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or have an identical make, model or part. D-Link may in its sole discretion replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. Repaired or replacement Hardware will be warranted for the remainder of the original Warranty Period from the date of original retail purchase. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty: D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original retail purchase of the Software for a period of ninety (90) days ("Warranty Period"), provided that the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link's sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software or to refund at D-Link's sole discretion. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. Software will be warranted for the remainder of the original Warranty Period from the date or original retail purchase. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the nonconforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

Non-Applicability of Warranty: The Limited Warranty provided hereunder for hardware and software of D-Link's products will not be applied to and does not cover any refurbished product and any product purchased through the inventory clearance or liquidation sale or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product and in that case, the product is being sold "As-Is" without any warranty whatsoever including, without limitation, the Limited Warranty as described herein, notwithstanding anything stated herein to the contrary.

Submitting A Claim: The customer shall return the product to the original purchase point based on its return policy. In case the return policy period has expired and the product is within warranty, the customer shall submit a claim to D-Link as outlined below:

- The customer must submit with the product as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same.
- The original product owner must obtain a Return Material Authorization ("RMA") number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided.
- After an RMA number is issued, the defective product must be packaged securely in the
 original or other suitable shipping package to ensure that it will not be damaged in transit, and
 the RMA number must be prominently marked on the outside of the package. Do not include any
 manuals or accessories in the shipping package. D-Link will only replace the defective portion
 of the Product and will not ship back any accessories.
- The customer is responsible for all in-bound shipping charges to D-Link. No Cash on Delivery ("COD") is allowed. Products sent COD will either be rejected by D-Link or become the property of D-Link. Products shall be fully insured by the customer. D-Link will not be held responsible for any packages that are lost in transit to D-Link. The repaired or replaced packages will be shipped to the customer via UPS Ground or any common carrier selected by D-Link, with shipping charges prepaid. Expedited shipping is available if shipping charges are prepaid by the customer and upon request.
- Return Merchandise Ship-To Address

USA: 17595 Mt. Herrmann, Fountain Valley, CA 92708

Canada: 2180 Winston Park Drive, Oakville, ON, L6H 5W1 (Visit <u>http://www.dlink.ca</u> for detailed warranty information within Canada)

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered: This limited warranty provided by D-Link does not cover: Products, if in D-Link's judgment, have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; Any hardware, software, firmware or other products or services provided by anyone other than D-Link; Products that have been purchased from inventory clearance or liquidation sales or other sales in which D-Link, the sellers, or the liquidators expressly disclaim their warranty obligation pertaining to the product. Repair by anyone other than D-Link or an Authorized D-Link Service Office will void this Warranty.

Disclaimer of Other Warranties: EXCEPT FOR THE LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND WHATSOEVER INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, LOSS OF REVENUE OR PROFIT, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, FAILURE OF OTHER EQUIPMENT OR COMPUTER PROGRAMS TO WHICH D-LINK'S PRODUCT IS CONNECTED WITH, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT. THE MAXIMUM LIABILITY OF D-LINK UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY. THE FOREGOING EXPRESS WRITTEN WARRANTIES AND REMEDIES ARE EXCLUSIVE AND ARE IN LIEU OF ANY OTHER WARRANTIES OR REMEDIES, EXPRESS, IMPLIED OR STATUTORY.

Governing Law: This Limited Warranty shall be governed by the laws of the State of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state.

Trademarks: D-Link is a registered trademark of D-Link Systems, Inc. Other trademarks or registered trademarks are the property of their respective manufacturers or owners.

Copyright Statement: No part of this publication or documentation accompanying this Product may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems, Inc., as stipulated by the United States Copyright Act of 1976. Contents are subject to change without prior notice. Copyright[®] 2002 by D-Link Corporation/D-Link Systems, Inc., All rights reserved.

CE Mark Warning: This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

For detailed warranty outside the United States, please contact corresponding local D-Link office.

FCC Caution:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment; such modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. To maintain compliance with FCC RF exposure compliance requirements, please avoid direct contact to the transmitting antenna during transmitting. This transmitter must not be co-located or operation in conjunction with any other antenna or transmitter. D-Link declares that the DI-524 (FCC ID: KA2DI524D1) is limited in CH1~CH11 by specified firmware controlled in the USA.

This equipment must not be operated in conjunction with any other antenna.

Registration

Register your D-Link product online at http://support.dlink.com/register/